Colour Television

Chassis
L04E
AA

Service
Service
Service

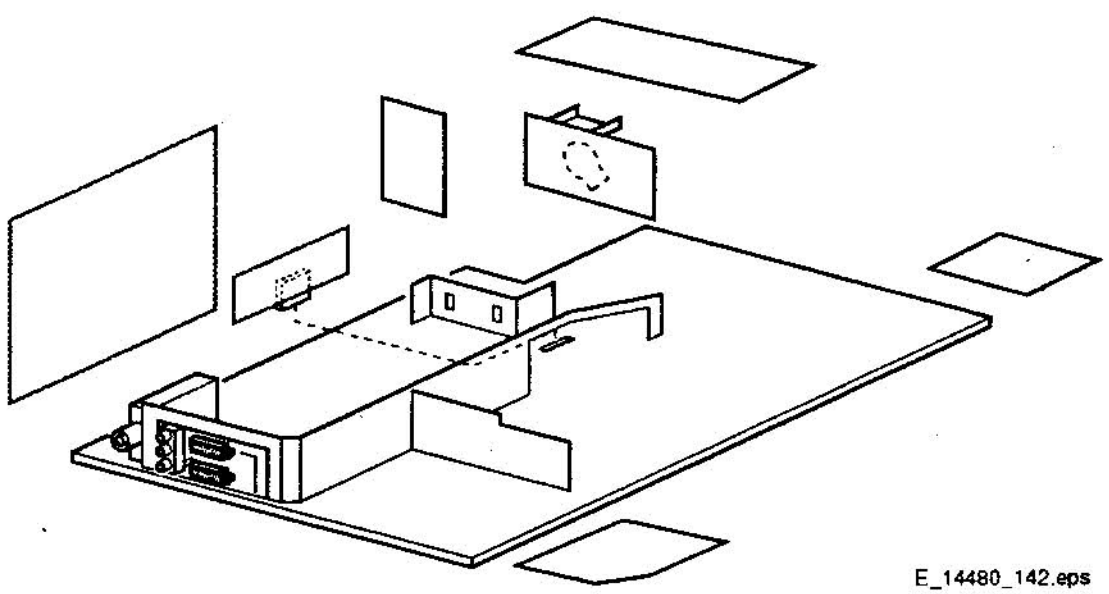

Service Manual

Contents **Page**

1. Technical Specifications, Connections, and Chassis Overview 2
2. Safety and Maintenance Instructions, Warnings, and Notes 4
3. Directions for Use 6
4. Mechanical Instructions 7
5. Service Modes, Error Codes, and Faultfinding 9
6. *Block Diagrams, Testpoint Overviews, and Waveforms*
   - Wiring Diagram 19
   - Block Diagram Supply and Deflection 20
   - Testpoint Overview Mono Carrier 21
   - Block Diagram Video 22
   - Testpoint Overview CRT, LTI & PIP Panel 23
   - Block Diagram Audio/Control 24
   - I2C and Supply Voltage Overview 25
7. *Circuit Diagrams and PWB Layouts* *Diagram* *PWB*
   - Power Supply (Diagram A1) 26 38-43
   - Diversity Table for A1 (Power Supply) 27 38-43
   - Deflection (Diagram A2) 28 38-43
   - Diversity Table for A2 (Deflection) 29 38-43
   - Tuner IF (Diagram A3) 30 38-43
   - Hercules (Diagram A4) 31 38-43
   - Features & Connectivities (Diagram A5) 32 38-43
   - Class D - Audio Amplifier (Diagram A6) 33 38-43
   - Audio Amplifier (Diagram A7) 34 38-43
   - Rear I/O Scart (Diagram A8) 35 38-43
   - Front Control (Diagram A9) 36 38-43
   - DVD Power Supply (Diagram A10) 37 38-43
   - CRT Panel (Diagram B1) 44 46-47
   - ECO Scavem Panel (Diagram B2) 45 46-47
   - Side AV + HP Panel (PV2) (Diagram D) 48 49
   - Side AV + HP Panel (FL-13) (Diagram D) 50 51
   - Top Control Panel (PV2) (Diagram E) 52 52

Contents **Page**

   - Top Control Panel (FL-13) (Diagram E) 53 53
   - Power Supply PIP Panel (Diagram F1) 54 56-57
   - Tuner IF and Demodulator PIP (Diagram F2) 55 56-57
   - Linearity & Panorama Panel (Diagram G) 58 58
   - LTI/CTI Interface Panel (Diagram H) 59 60
   - Front Interface Panel (FL-13) (Diagram J) 61 61
   - Front Interface Panel (PV2) (Diagram J) 62 62
   - Front Interface and Keyb. Panel (Diagram J) 63 64
8. Alignments 65
9. Circuit Descriptions 73
   - Abbreviation List 82
   - IC Data Sheets 84
10 Spare Parts List 86
11 Revision List 90

©Copyright 2004 Philips Consumer Electronics B.V. Eindhoven, The Netherlands. All rights reserved. No part of this publication may be reproduced, stored in a retrieval system or transmitted, in any form or by any means, electronic, mechanical, photocopying, or otherwise without the prior permission of Philips.

Published by BB 0466 Service PaCE Printed in the Netherlands Subject to modification EN 3122 785 14480

PHILIPS

1. Technical Specifications, Connections, and Chassis Overview

Notes:

- Described specifications are valid for the *whole* product range.
- Figures below can deviate slightly from the actual situation, due to different set executions.

1.1 Technical Specifications

1.1.1 Vision

Display type	: DV-CRT-RF
	: DV-CRT-FSQ
	: DV-CRT-SF
Screen size	: 21" (55 cm), 4:3
	: 24" (61 cm), 16:9
	: 25" (63 cm), 4:3
	: 28" (70 cm), 4:3
	: 29" (72 cm), 4:3
	: 32" (82 cm), 16:9
Tuning system	: PLL
TV Colour systems	: PAL B/G, B/H, D/K, I
	: SECAM
	: SECAM B/G, D/K, L/L'
Video playback	: NTSC
Channel selections	: 100 presets
	: UVSH
Aerial input	: 75 ohm, Coax
	: IEC-type

1.1.2 Sound

Sound systems	: NICAM Stereo
Maximum power	: 2x10/ 2x5 W_rms (int.)

1.1.3 Miscellaneous

Power supply:	
- Mains voltage	: 220 - 240 V_ac
- Mains frequency	: 50/60 Hz
Ambient conditions:	
- Temperature range	: +5 to +40 deg. C
- Maximum humidity	: 90 % R.H.
Power consumption	
- Normal operation	: from 60 W (21")
	: to 91 W (32")
- Standby	: < 1 W

1.2 Connections

Note: The following connector colour abbreviations are used (acc. to DIN/IEC 757): Bk= Black, Bu= Blue, Gn= Green, Gy= Grey, Rd= Red, Wh= White, Ye= Yellow.

1.2.1 Side Connections

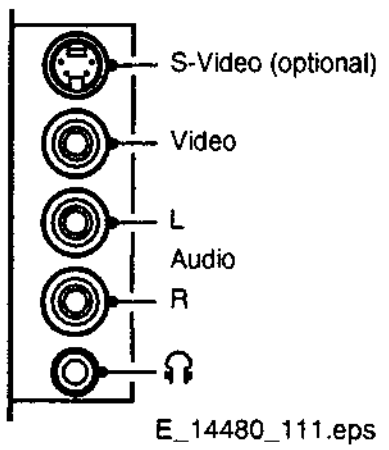

E_14480_111.eps
060504

Figure 1-1 Side I/O

SVHS: Y/C - In (Hosiden) (optional)

1	- Ground	Gnd	⏚
2	- Ground	Gnd	⏚
3	-Y	1 V_pp / 75 ohm	→○
4	-C	0.3 V_pp / 75 ohm	→○

Audio / Video In

Ye	-Video (CVBS)	1 V_pp / 75 ohm	→◎
Wh	-Audio - L	0.5 V_rms / 10 kohm	→◎
Rd	-Audio - R	0.5 V_rms / 10 kohm	→◎
Bk	-Headphone	8 - 600 Ohm / 4 mW	◎/🎧

1.2.2 Rear Connections

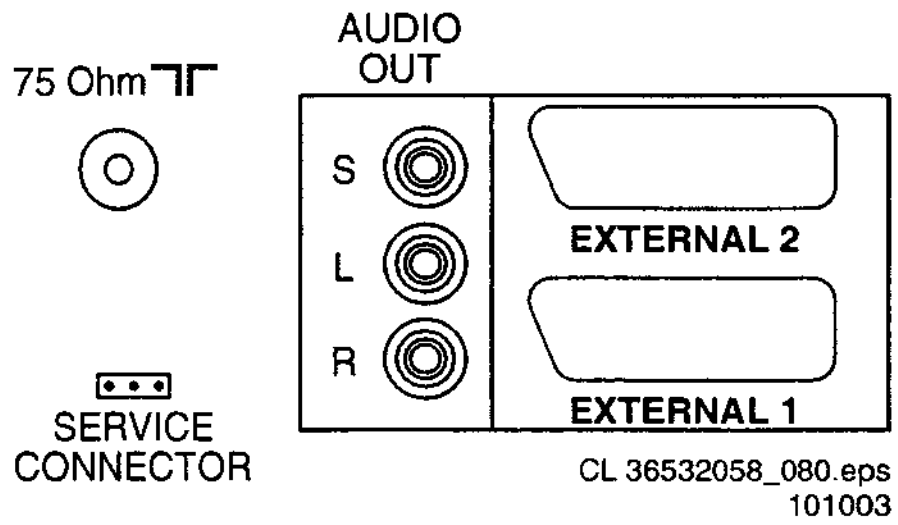

CL 36532058_080.eps
101003

Figure 1-2 Rear connections

Aerial In

	- F-type	Coax, 75 ohm	⊤

Audio Out

1	- Subwoofer	Var. level (optional)	○→◎
Wh	- Audio - L	0.5 V_rms / 1 kohm	○→◎
Rd	- Audio - R	0.5 V_rms / 1 kohm	○→◎

External 1: RGB/YUV - In and CVBS - In/Out


20
2
21
1
E_06532_001.eps
050404

Figure 1-3 SCART connector

1	- Audio - R	0.5 V_rms / 1 kohm	⊖→
2	- Audio - R	0.5 V_rms / 10 kohm	⊕
3	- Audio - L	0.5 V_rms / 1 kohm	⊖→
4	- Audio - gnd	Ground	⏚
5	- Blue - gnd	Ground	⏚
6	- Audio - L	0.5 V_rms / 10 kohm	⊕
7	- Blue/U - in	0.7 V_pp / 75 ohm	⊕
8	- CVBS - status	0 - 2 V: INT 4.5 - 7 V: EXT 16:9 9.5 - 12 V: EXT 4:3	
9	- Green - gnd	Ground	⏚
10	- n.c.		
11	- Green/Y - in	0.7 V_pp / 75 ohm	⊕
12	- n.c.		
13	- Red - gnd	Ground	⏚
14	- FBL - gnd	Ground	⏚
15	- Red/V - in	0.7 V_pp / 75 ohm	⊕
16	- Status/FBL	0 - 0.4 V: INT 1 - 3 V: EXT / 75 ohm	⊕
17	- Video	Ground	⏚
18	- Video	Ground	⏚
19	- CVBS - out	1 V_pp / 75 ohm	⊖→
20	- CVBS - in	1 V_pp / 75 ohm	⊕
21	- Shielding	Ground	⏚

External 2: CVBS- In and SVHS - In


20
2
21
1
E_06532_001.eps
050404

Figure 1-4 SCART connector

1	- Audio - R	0.5 V_rms / 1 kohm	⊖→
2	- Audio - R	0.5 V_rms / 10 kohm	⊕
3	- Audio - L	0.5 V_rms / 1 kohm	⊖→
4	- Audio - gnd	Ground	⏚
5	- Blue - gnd	Ground	⏚
6	- Audio - L	0.5 V_rms / 10 kohm	⊕
7	- n.c.		
8	- CVBS - status	0 - 2 V: INT 4.5 - 7 V: EXT 16:9 9.5 - 12 V: EXT 4:3	
9	- Green - gnd	Ground	⏚
10	- n.c.		
11	- n.c.		
12	- n.c.		
13	- Red - gnd	Ground	⏚
14	- FBL - gnd	Ground	⏚
15	- YC-C - in	0.7 V_pp / 75 ohm	⊕
16	- n.c.		
17	- Video	Ground	⏚
18	- Video	Ground	⏚
19	- CVBS - out	1 V_pp / 75 ohm	⊖→
20	- Y/CVBS - in	1 V_pp / 75 ohm	⊕
21	- Shielding	Ground	⏚

1.3 Chassis Overview

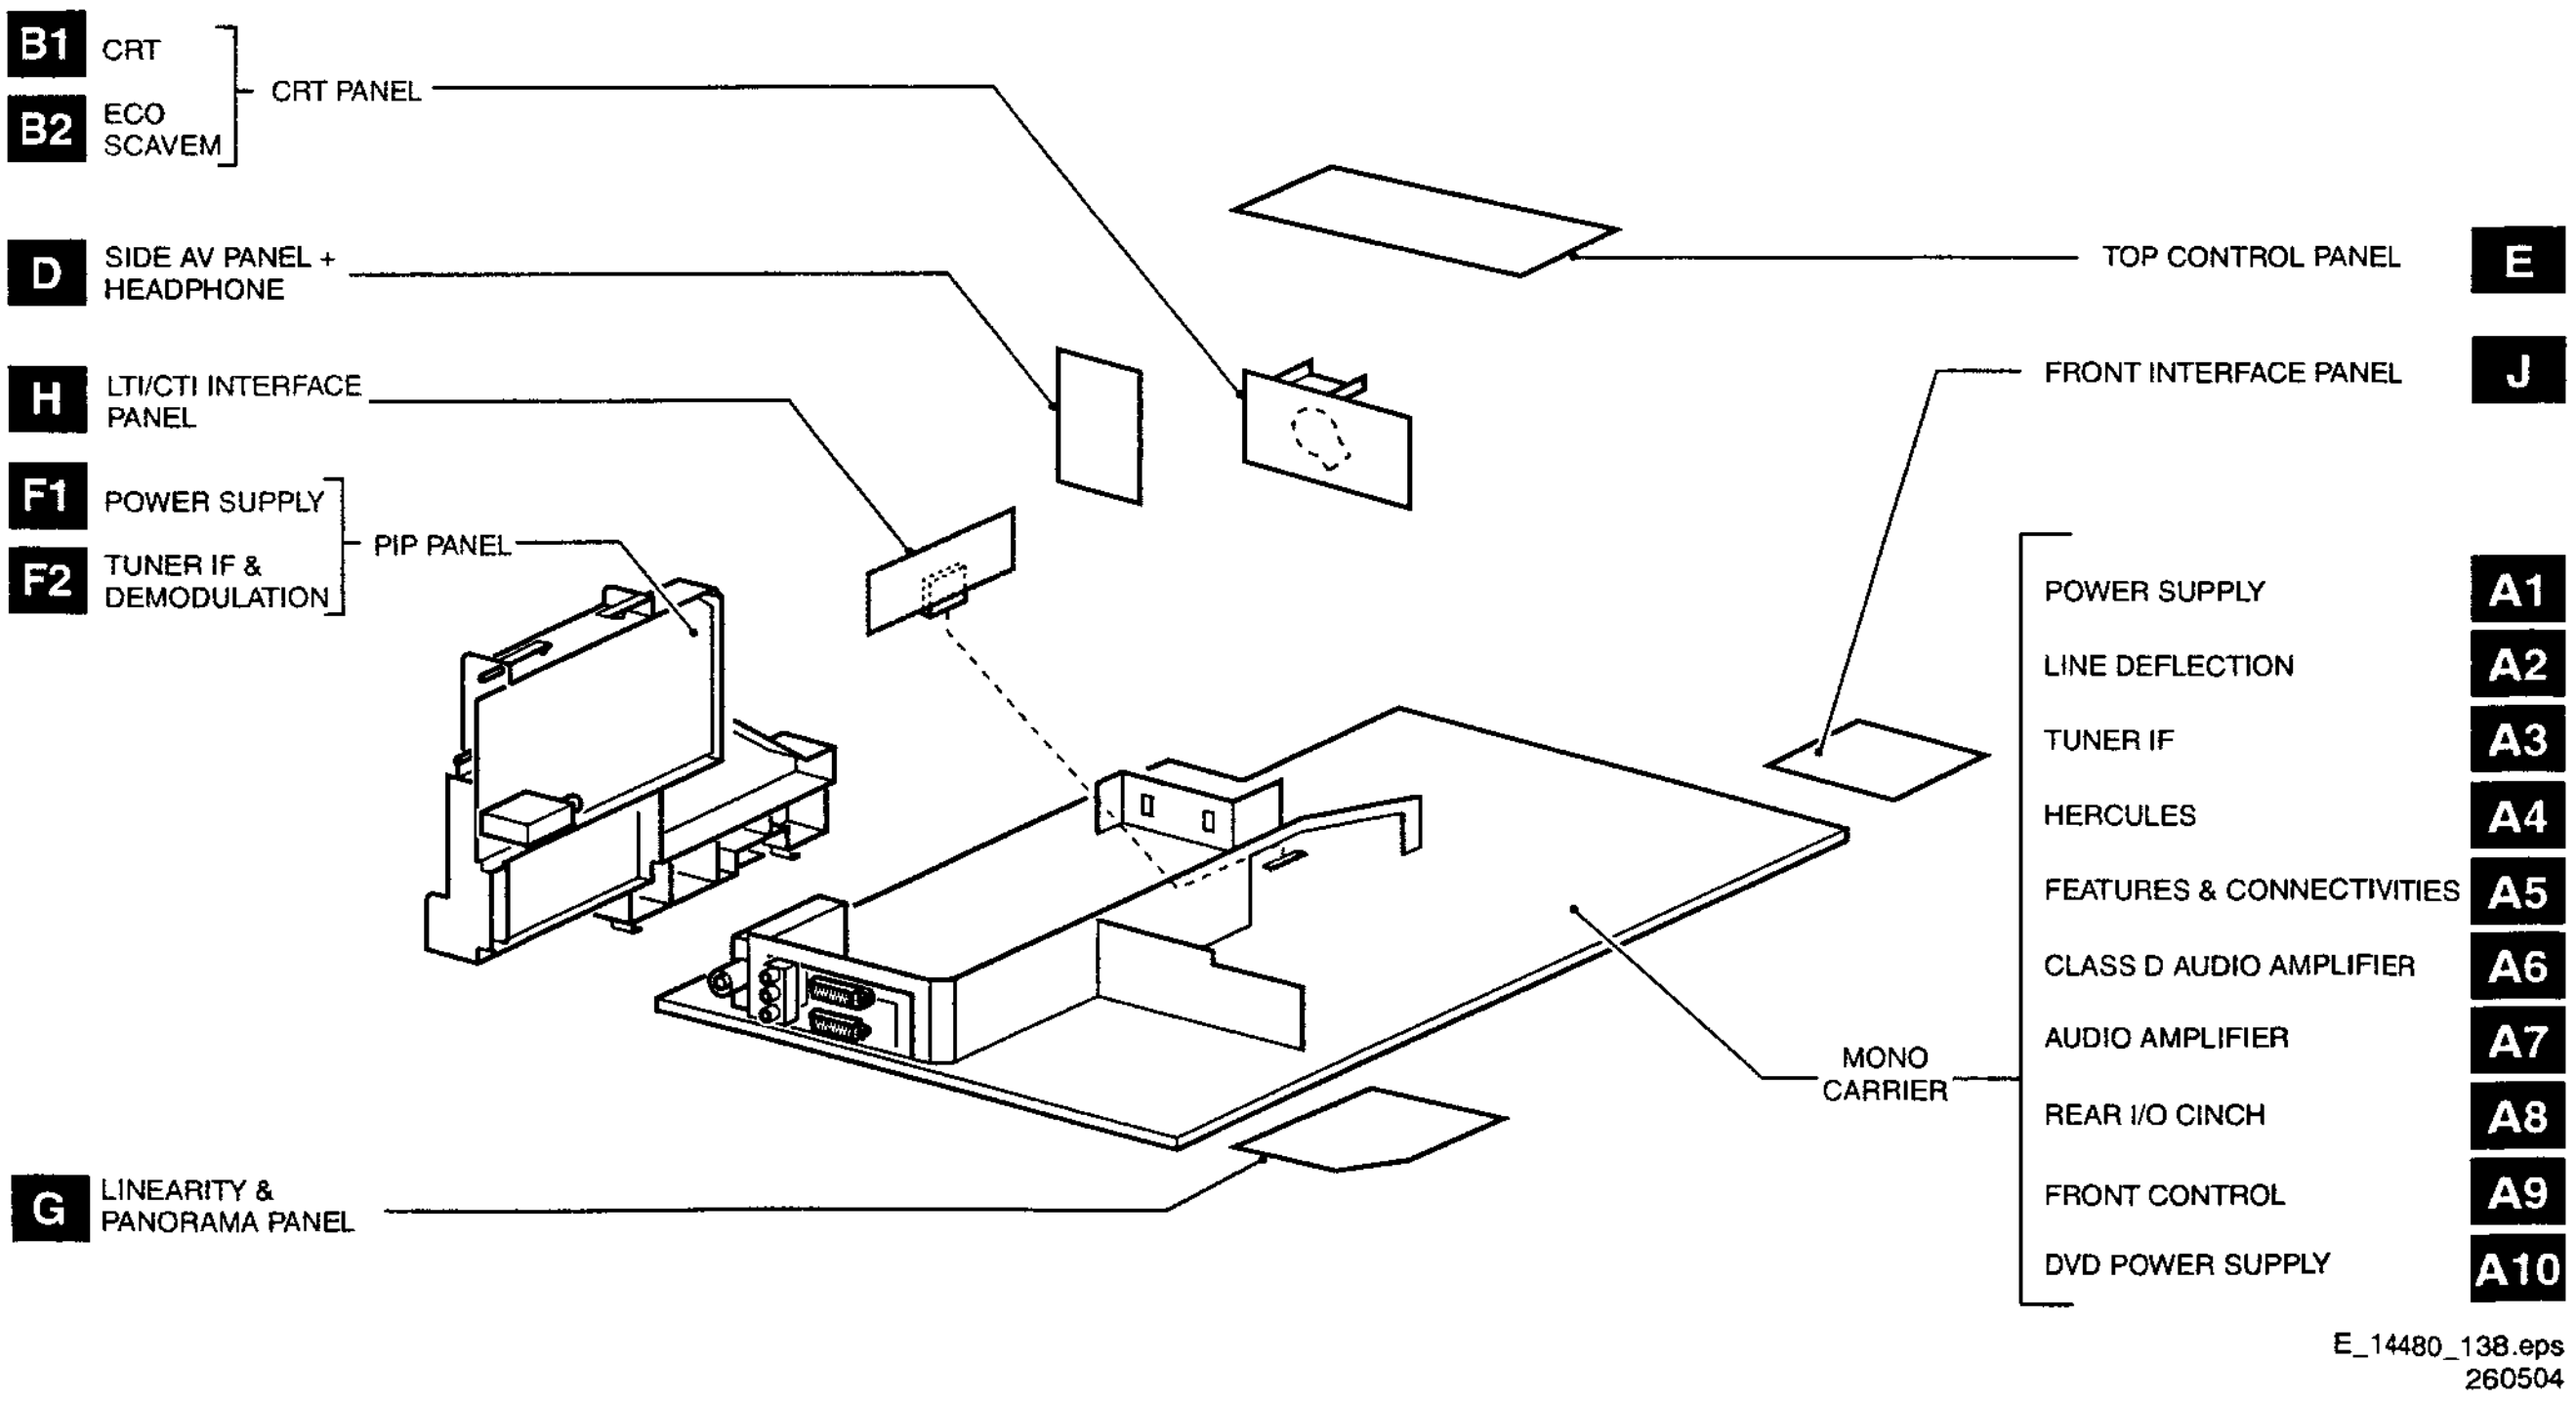
B1 CRT
B2 ECO SCAVEM
CRT PANEL
D SIDE AV PANEL + HEADPHONE
H LTI/CTI INTERFACE PANEL
F1 POWER SUPPLY
F2 TUNER IF & DEMODULATION
PIP PANEL
G LINEARITY & PANORAMA PANEL
TOP CONTROL PANEL E
FRONT INTERFACE PANEL J
POWER SUPPLY A1
LINE DEFLECTION A2
TUNER IF A3
HERCULES A4
FEATURES & CONNECTIVITIES A5
CLASS D AUDIO AMPLIFIER A6
AUDIO AMPLIFIER A7
REAR I/O CINCH A8
FRONT CONTROL A9
DVD POWER SUPPLY A10
MONO CARRIER
E_14480_138.eps
260504

Figure 1-5 PWB location

2. Safety and Maintenance Instructions, Warnings, and Notes

2.1 Safety Instructions

Safety regulations require that **during** a repair:

- Due to the chassis concept, a very large part of the circuitry (incl. deflection) is 'hot'. Therefore, connect the set to the mains via an isolation transformer.
- Replace safety components, indicated by the symbol ⚠, only by components identical to the original ones. Any other component substitution (other than original type) may increase risk of fire or electrical shock hazard.
- Wear safety goggles when you replace the CRT.

Safety regulations require that **after** a repair, you must return the set in its original condition. Pay, in particular, attention to the following points:

- General repair instruction: as a strict precaution, we advise you to re-solder the solder connections through which the horizontal deflection current is flowing. In particular this is valid for the:
  1. Pins of the line output transformer (LOT).
  2. Fly-back capacitor(s).
  3. S-correction capacitor(s).
  4. Line output transistor.
  5. Pins of the connector with wires to the deflection coil.
  6. Other components through which the deflection current flows.

Note: This re-soldering is advised to prevent bad connections due to metal fatigue in solder connections, and is therefore only necessary for television sets more than two years old.

- Route the wire trees and EHT cable correctly and secure them with the mounted cable clamps.
- Check the insulation of the mains cord for external damage.
- Check the strain relief of the mains cord for proper function, to prevent the cord from touching the CRT, hot components, or heat sinks.
- Check the electrical DC resistance between the mains plug and the secondary side (only for sets that have an isolated power supply). Do this as follows:
  1. Unplug the mains cord and connect a wire between the two pins of the mains plug.
  2. Turn on the main power switch (keep the mains cord unplugged!).
  3. Measure the resistance value between the pins of the mains plug and the metal shielding of the tuner or the aerial connection of the set. The reading should be between 4.5 MΩ and 12 MΩ.
  4. Switch the TV 'off' and remove the wire between the two pins of the mains plug.
- Check the cabinet for defects, to prevent the possibility of the customer touching any internal parts.

2.2 Maintenance Instructions

We recommend a maintenance inspection carried out by qualified service personnel. The interval depends on the usage conditions:

- When a customer uses the set under normal circumstances, for example in a living room, the recommended interval is three to five years.
- When a customer uses the set in an environment with higher dust, grease, or moisture levels, for example in a kitchen, the recommended interval is one year.
- The maintenance inspection includes the following actions:
  1. Perform the 'general repair instruction' noted above.
  2. Clean the power supply and deflection circuitry on the chassis.
  3. Clean the picture tube panel and the neck of the picture tube.

2.3 Warnings

- In order to prevent damage to ICs and transistors, avoid all high voltage flashovers. In order to prevent damage to the picture tube, use the method shown in Fig. 2-1, to discharge the picture tube. Use a high voltage probe and a multi-meter (position V_dc). Discharge until the meter reading is 0 V (after approx. 30 s).

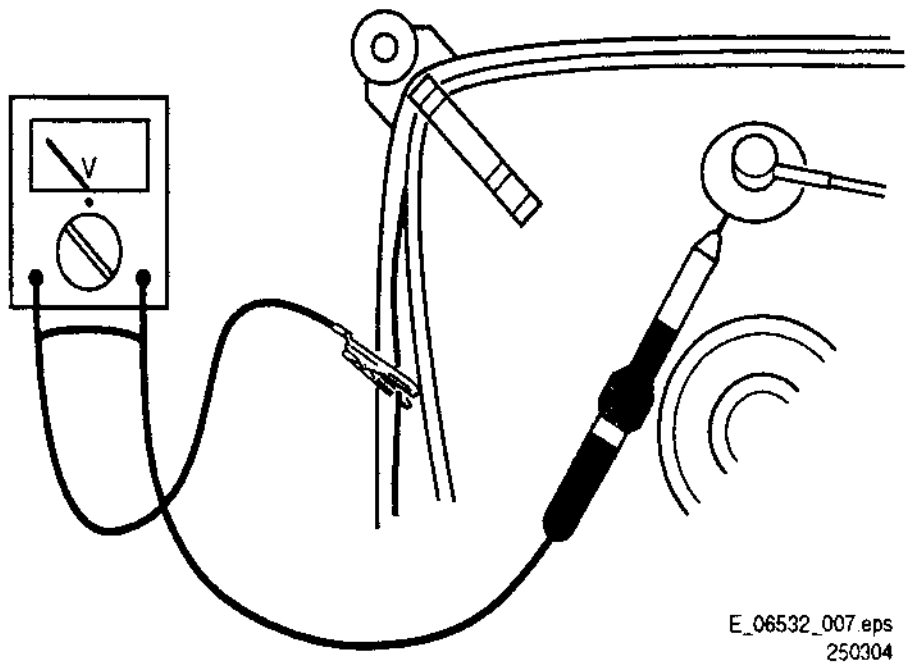

Figure 2-1 Discharge picture tube

- All ICs and many other semiconductors are susceptible to electrostatic discharges (ESD, ⚠). Careless handling during repair can reduce life drastically. Make sure that, during repair, you are connected with the same potential as the mass of the set by a wristband with resistance. Keep components and tools also at this potential. Available ESD protection equipment:
  - Complete kit ESD3 (small tablemat, wristband, connection box, extension cable and ground cable) 4822 310 10671.
  - Wristband tester 4822 344 13999.
- Together with the deflection unit and any multi-pole unit, flat square picture tubes form an integrated unit. The deflection and the multi-pole units are set optimally at the factory. We do not recommend adjusting this unit during repair.
- Be careful during measurements in the high voltage section and on the picture tube.
- Never replace modules or other components while the unit is 'on'.
- When you align the set, use plastic rather than metal tools. This will prevent any short circuits and the danger of a circuit becoming unstable.

2.4 Notes

2.4.1 General

- Measure the voltages and waveforms with regard to the chassis (= tuner) ground (⏚), or hot ground (⏚), depending on the tested area of circuitry.
- The voltages and waveforms shown in the diagrams are indicative. Measure them in the Service Default Mode (see chapter 5) with a color bar signal and stereo sound (L: 3 kHz, R: 1 kHz unless stated otherwise) and picture carrier at 475.25 MHz for PAL, or 61.25 MHz for NTSC (channel 3).
- Where necessary, measure the waveforms and voltages with (⊓) and without (⊗) aerial signal. Measure the voltages in the power supply section both in normal operation (①) and in standby (⏻). These values are indicated by means of the appropriate symbols.

- The picture tube panel has printed spark gaps. Each spark gap is connected between an electrode of the picture tube and the Aquadag coating.
- The semiconductors indicated in the circuit diagram and in the parts lists, are interchangeable per position with the semiconductors in the unit, irrespective of the type indication on these semiconductors.

2.4.2 Schematic Notes

- All resistor values are in ohms and the value multiplier is often used to indicate the decimal point location (e.g. 2K2 indicates 2.2 kohm).
- Resistor values with no multiplier may be indicated with either an "E" or an "R" (e.g. 220E or 220R indicates 220 ohm).
- All capacitor values are expressed in micro-farads (μ= x 10^-6), nano-farads (n= x 10^-9), or pico-farads (p= x 10^-12).
- Capacitor values may also use the value multiplier as the decimal point indication (e.g. 2p2 indicates 2.2 pF).
- An "asterisk" (*) indicates component usage varies. Refer to the diversity tables for the correct values.
- The correct component values are listed in the Electrical Replacement Parts List. Therefore, always check this list when there is any doubt.

2.4.3 Practical Service Precautions

- **It makes sense to avoid exposure to electrical shock.** While some sources are expected to have a possible dangerous impact, others of quite high potential are of limited current and are sometimes held in less regard.
- **Always respect voltages**. While some may not be dangerous in themselves, they can cause unexpected reactions - reactions that are best avoided. Before reaching into a powered TV set, it is best to test the high voltage insulation. It is easy to do, and is a good service precaution.
- **Before powering up the TV set with the back cover off** (or on a test fixture), attach a clip lead to the CRT DAG ground and to a screwdriver blade that has a well insulated handle. After the TV is powered "on" and high voltage has developed, probe the anode lead with the blade, starting at the case of the High Voltage Transformer (flyback - IFT). Move the blade to within two inches of the connector of the CRT. **If there is an arc, you found it the easy way, without getting a shock!** If there is an arc to the screwdriver blade, replace the part that is causing the problem: the High Voltage Transformer or the lead (if it is removable).

2.4.4 Lead Free Solder

This set is manufactured with lead-free production technology. This is also indicated on the PWB by the PHILIPS lead-free logo (either by a service-printing or by a sticker).

Figure 2-2 Lead-free logo

This set is produced with lead-free solder alloy as well as with lead-free sub-parts. It can be considered as lead-free.
Due to this fact, some rules have to be respected by the workshop during a repair:

- Use only lead-free soldering tin Philips SAC305 with order code 0622 149 00106. If lead-free solder paste is required, please contact the manufacturer of your soldering equipment.
- Use only adequate solder tools applicable for lead-free soldering tin.
- Adjust your solder tool so that a temperature around 217 - 220 deg. C is reached at the solder joint.
- Do not mix lead-free soldering tin with leaded soldering tin; this will lead to unreliable solder joints!
- Use only original spare parts listed in this manual. These are lead-free parts!
- On the website *www.atyourservice.ce.philips.com* you can find more information on:
  - Aspects of lead-free technology.
  - BGA (de-)soldering, heating-profiles of BGAs used in Philips sets, and others

3. Directions for Use

You can download this information from the following website:
http://www.philips.com/support

1. Click on "Downloads and Troubleshooting" [1].
2. Fill in the TV model/type number in the field "Which Model/Type?" [2] and click on "Search" [3].
   Note: The correct model/typenumber can be found on the rear cover of the set. If you do not have the complete model/typenumber, just fill in e.g. "32PW95" or "PW95" (do not use wildcards).
3. When results are returned, click on the desired model/typenumber under "Model" [4].
4. Now, click on the "Owner's manual" [5] in the desired language. To read/open the PDF files you can download and install the free Acrobat Reader http://www.adobe.com/products/acrobat/readstep2.html

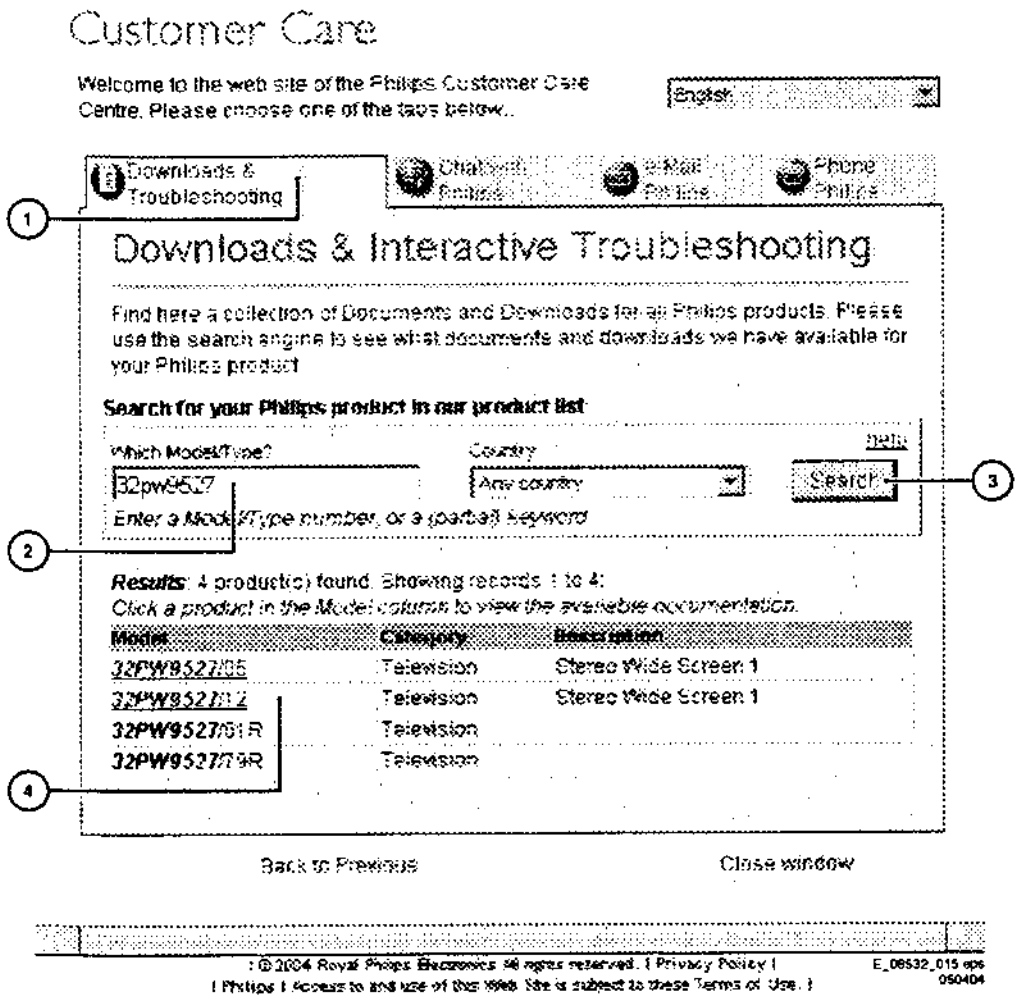

Welcome to the web site of the Philips Customer Care Centre. Please choose one of the tabs below..

Downloads & Interactive Troubleshooting

Find here a collection of Documents and Downloads for all Philips products. Please use the search engine to see what documents and downloads we have available for your Philips product

Search for your Philips product in our product list

Which Model/Type? 32pw9527

Country: Any country

Enter a Model/Type number, or a (partial) keyword

Results: 4 product(s) found. Showing records 1 to 4:
Click a product in the Model column to view the available documentation.

Model	Category	Description
32PW9527/05	Television	Stereo Wide Screen 1
32PW9527/12	Television	Stereo Wide Screen 1
32PW9527/01R	Television	
32PW9527/79R	Television	

| © 2004 Royal Philips Electronics All rights reserved. | Privacy Policy |
| Philips | Access to and use of this Web Site is subject to these Terms of Use. |

E_06532_015.eps
050404

Figure 3-1 Screenshot DFU website (1)

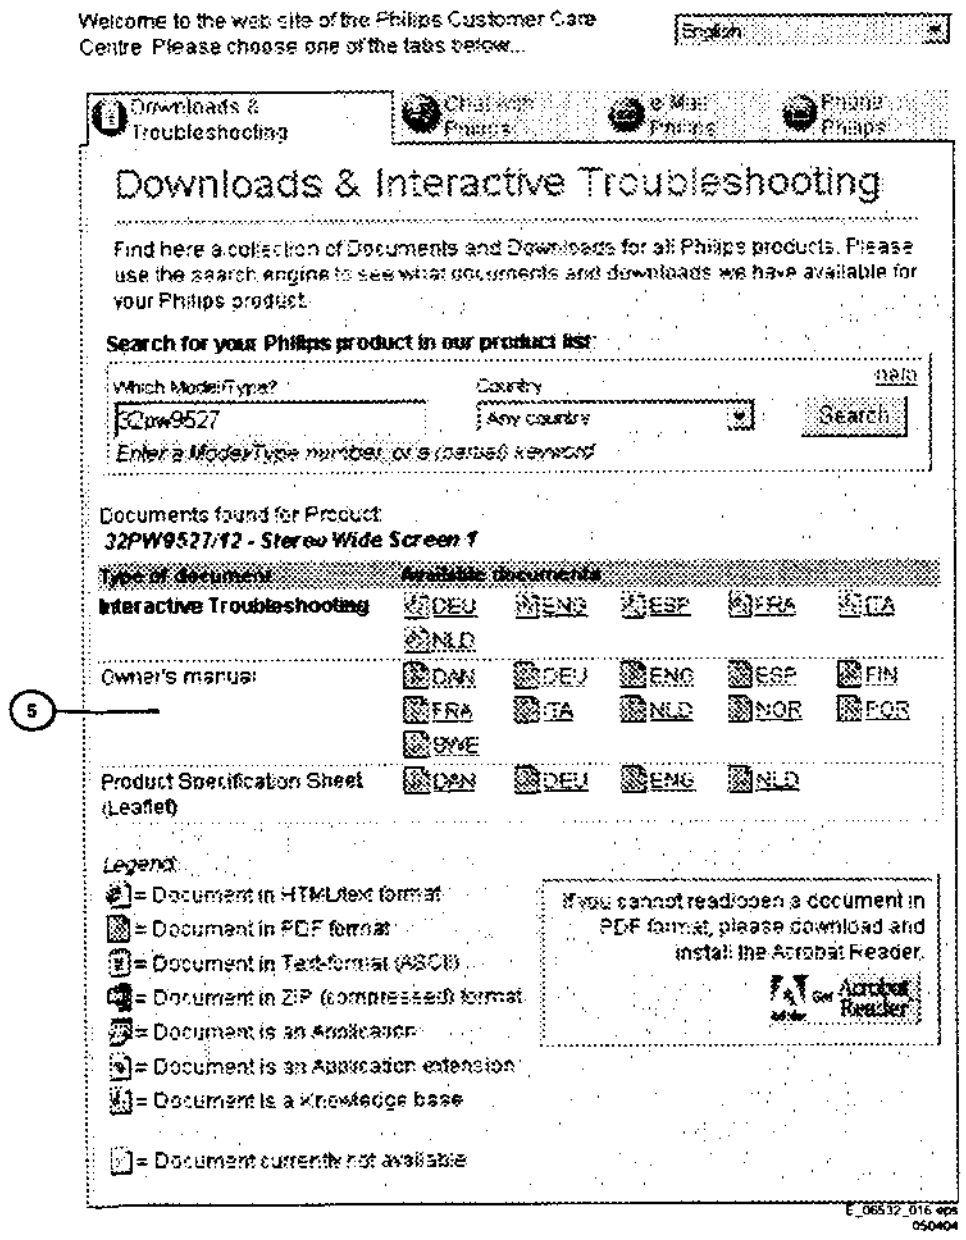

Welcome to the web site of the Philips Customer Care Centre. Please choose one of the tabs below...

Downloads & Interactive Troubleshooting

Find here a collection of Documents and Downloads for all Philips products. Please use the search engine to see what documents and downloads we have available for your Philips product.

Search for your Philips product in our product list

Which Model/Type? 32pw9527

Country: Any country

Enter a Model/Type number, or a (partial) keyword

Documents found for Product:
32PW9527/12 - Stereo Wide Screen 1

Type of document	Available documents
Interactive Troubleshooting	DEU ENG ESP FRA ITA NLD
Owner's manual	DAN DEU ENG ESP FIN FRA ITA NLD NOR POR SWE
Product Specification Sheet (Leaflet)	DAN DEU ENG NLD

Legend:
= Document in HTML/text format
= Document in PDF format
= Document in Text-format (ASCII)
= Document in ZIP (compressed) format
= Document is an Application
= Document is an Application extension
= Document is a Knowledge base

= Document currently not available

If you cannot read/open a document in PDF format, please download and install the Acrobat Reader.

E_06532_016.eps
050404

Figure 3-2 Screenshot DFU website (2)

4. Mechanical Instructions

Index of this chapter:
1. Set Disassembly
2. Service Position
3. Assies/Panels Removal
4. Set Re-assembly

Note: Figures below can deviate slightly from the actual situation, due to different set executions.

4.1 Set Disassembly

Warning: Be sure to disconnect the AC power from the set before opening it.

4.1.1 Rear Cover

1. Remove all fixation screws of the rear cover (do not forget the screws that hold the rear connection panel).
2. Pull the rear cover backwards to remove it.

4.2 Service Position

Before placing the Mono Carrier in its service position, remove the Front Interface assy/panel (see paragraph "Front Interface Assy/Panel removal"), the Side AV assy/panel (see paragraph "Side AV Assy/Panel removal") and the PIP assy/panel (if exists) (see paragraph "PIP Assy/Panel removal").

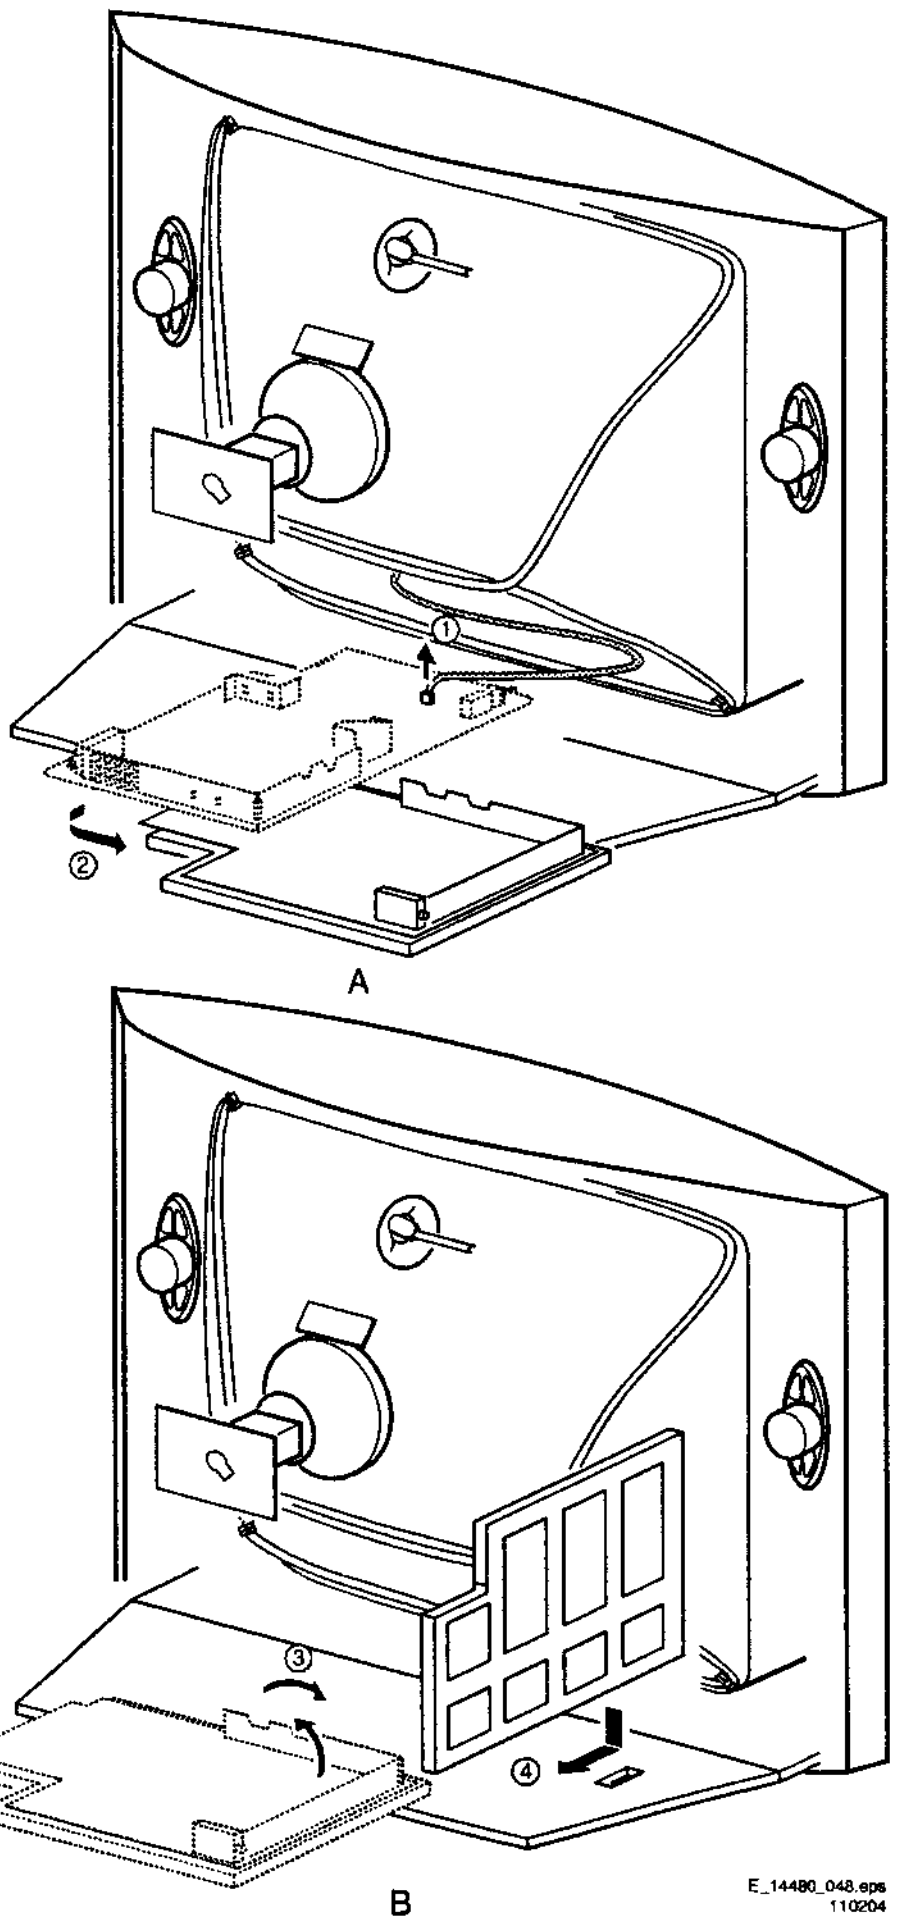

Figure 4-1 Service position Mono Carrier

1. Disconnect the degaussing coil [1].
2. Release the two fixation clamps (at the mid left and mid right side of the bracket), and remove the bracket from the bottom tray, by pulling it backwards [2].
3. Turn the chassis tray 90 degrees counter clockwise.
4. Move the panel bracket somewhat to the left and flip it 90 degrees [3], with the components towards the CRT.
5. Turn the panel bracket with the rear I/O toward the CRT.
6. Place the hook of the tray in the fixation hole of the cabinet bottom [4] and secure it.

4.3 Assies/Panels Removal

4.3.1 Front Interface Assy/Panel Removal

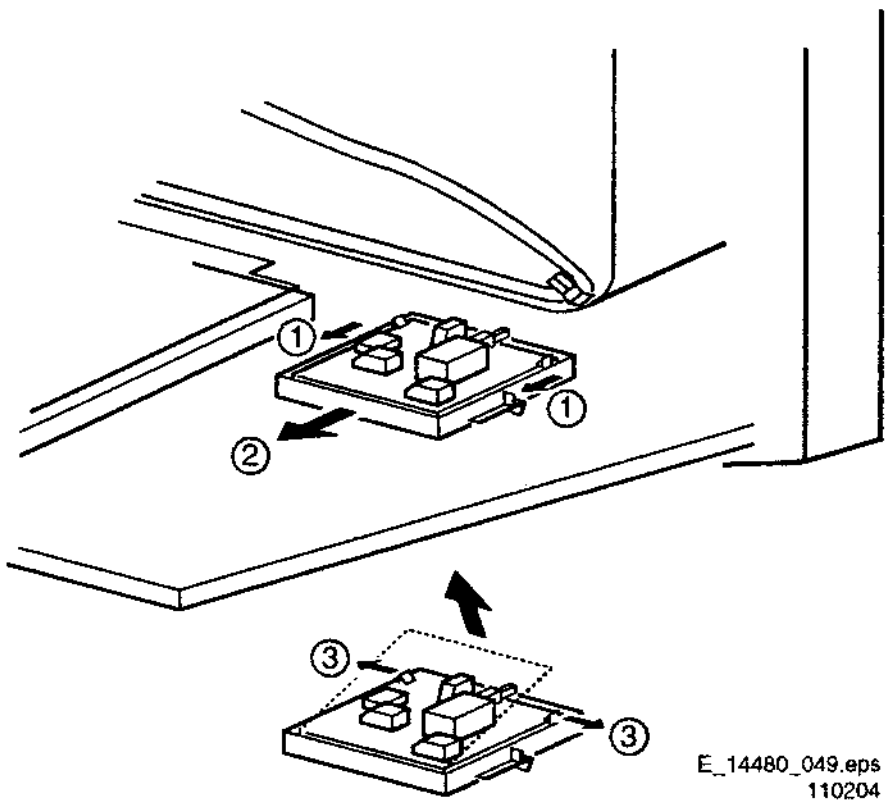

Figure 4-2 Front interface assy/panel removal

1. Remove the complete module from the bottom plate, by pulling the two fixation clamps upward [1], while sliding the module away from the CRT [2].
   Note: these clamps are difficult to access.
2. Release the two fixation clamps [3] at the side of the bracket, and lift the panel out of the bracket (it hinges at one side).

4.3.2 Side AV Assy/Panel Removal

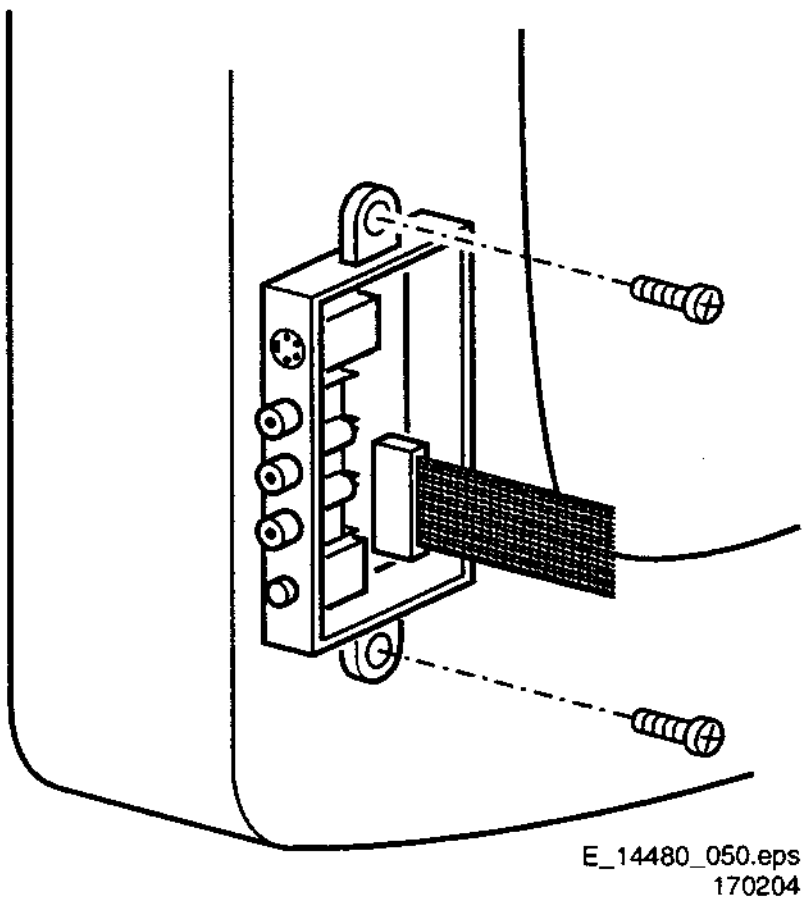

Figure 4-3 Side AV assy/panel removal

1. Remove the two fixation screws, and remove the complete Side AV assembly.
2. Release the two fixation clamps, and lift the panel out of the bracket.

4.3.3 LTI/CTI Interface Panel Removal

Remove the LTI/CTI Interface panel from the Mono Carrier, by disconnecting it from connector 1212.

4.3.4 Top Control Assy/Panel Removal

Notes:

- PV02 styling: assy is mounted in the front cabinet;
- FL13B styling: assy is mounted in the rear cover.

1. Remove the two fixation screws.
2. Push the assy a little bit upwards, and then pull it backwards to release it from the front hinge.
3. Lift the panel from its bracket, while releasing the four fixation clamps.

4.3.5 Linearity Assy/Panel Removal

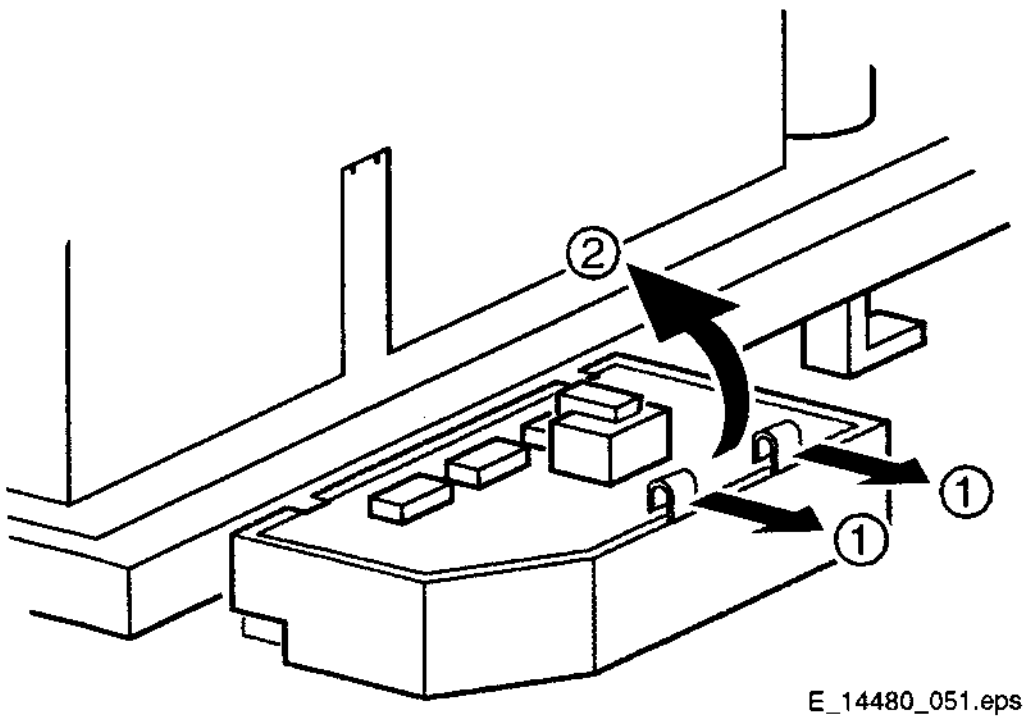

E_14480_051.eps
270204

Figure 4-4 Linearity assy/panel removal

1. Release the two fixation clamps [1] to lift the panel out of the bracket [2].

4.3.6 PIP Assy/Panel Removal

1. Release the two fixation clamps to lift the panel out of the bracket.

4.4 Set Re-assembly

To re-assemble the whole set, do all processes in reverse order.

Note: before you mount the rear cover, perform the following checks:

1. Check whether the AC power cord is mounted correctly in its guiding brackets.
2. Check whether all cables are replaced in their original position

5. Service Modes, Error Codes, and Fault Finding

Index:

1. Test Points.
2. Service Modes.
3. Problems and Solving Tips (related to CSM).
4. ComPair.
5. Error Codes.
6. The Blinking LED Procedure.
7. Protections.
8. Repair Tips.

5.1 Test Points

The chassis is equipped with test points printed on the circuit board assemblies. These test points refer to the functional blocks:

Table 5-1 Test point overview

Test point	Circuit	Diagram
F508, F535, F536, F537, F552, F561, F563, F573, F664,I513, I518, I519, I524, I531, I533, I546	Power supply	A1
F401, F412, F413, F414, F418, F452, F453, F455, F456, F458, F459, F460, F461, I408, I416, I417, I420, I462, I468	Line + Frame Deflection	A2
F003, F004, I001, I002	Tuner IF	A3
F201, F203, F205, F206	Hercules	A4
F240, F241, F242	Features & Connectivities	A5
F952, F955, I951, I952	Audio Amplifier	A7
F692	Front Control	A9
F331, F332, F333, F338, F339, F341, F351, F353, F354	CRT Panel	B1
F361, F362, F381, F382	ECO Scavem	B2

Perform measurements under the following conditions:

- Television set in Service Default Alignment Mode.
- Video input: Colour bar signal.
- Audio input: 3 kHz left channel, 1 kHz right channel.

5.2 Service Modes

Service Default mode (SDM) & Service Alignment Mode (SAM) offers several features for the service technician, while the Customer Service Mode (CSM) is used for communication between the call centre and the customer.

This chassis also offers the option of using ComPair, a hardware interface between a computer and the TV chassis. It offers the abilities of structured troubleshooting, error code reading, and software version readout for all these chassis. *Minimum requirements for ComPair:* a Pentium processor, a Windows OS, and a CD-ROM drive (see "ComPair" section).

Table 5-2 Software cluster overview

SW Clusters	SW Version	First Mask	Remarks
L4LEF1	L04EF11.0	TDA12020H1/N1B11	Western Europe
		TDA12021H1/N1B11	Radio 4:3 set only.
L4LEF2	L04EF21.0	TDA12020H1/N1B11	Eastern Europe
		TDA12021H1/N1B11	Radio 4:3 set only.
L4LEF3	L04EF31.0	TDA12020H1/N1B11	Western Europe
		TDA12021H1/N1B11	PIP
L4LEF4	L04EF41.0	TDA12020H1/N1B11	Eastern Europe
		TDA12021H1/N1B11	PIP
L4LEF5	L04EF51.0	TDA12020H1/N1B11	Western Europe
		TDA12021H1/N1B11	Radio & PIP.
L4LEF6	L04EF61.0	TDA12020H1/N1B11	Eastern Europe
		TDA12021H1/N1B11	Radio & PIP.
L4LEF7	L04EF71.0	TDA12020H1/N1B11	ICON UI

5.2.1 Service Default Mode (SDM)

Purpose

- To create a predefined setting for measurements to be made.
- To override software protections.
- To start the blinking LED procedure.

Specifications

- Tuning frequency: 475.25 MHz.
- Colour system: PAL/SECAM.
- All picture settings at 50% (brightness, colour contrast, hue).
- Bass, treble and balance at 50 %; volume at 25 %.
- All service-unfriendly modes (if present) are disabled. The service unfriendly modes are:
  - Timer / Sleep timer.
  - Child / parental lock.
  - Blue mute.
  - Hotel / hospital mode.
  - Auto shut off (when no 'IDENT' video signal is received for 15 minutes).
  - Skipping of non-favourite presets / channels.
  - Auto-storage of personal presets.
  - Auto user menu time-out.
  - Auto Volume Levelling (AVL).

How to enter

To enter SDM, use one of the following methods:

- Press the following key sequence on the remote control transmitter: **'0 6 2 5 9 6'** directly followed by the **'MENU'** button (do not allow the display to time out between entries while keying the sequence).
- Short jumper wires 9252 and 9275 on the family board (see Fig. 8-1) and apply mains. Then press the power button (remove the short after start-up).
  Caution: Entering SDM by shorting wires 9252 and 9275 will override the +8V-protection. Do this only for a short period. When doing this, the service-technician must know exactly what he is doing, as it could damage the television set.
- Or via ComPair (with the ComPair 'Tools', it should be possible to enter SDM via the ComPair interface).

After entering SDM, the following screen is visible, with SDM in the upper right corner of the screen to indicate that the television is in Service Default Alignment Mode.

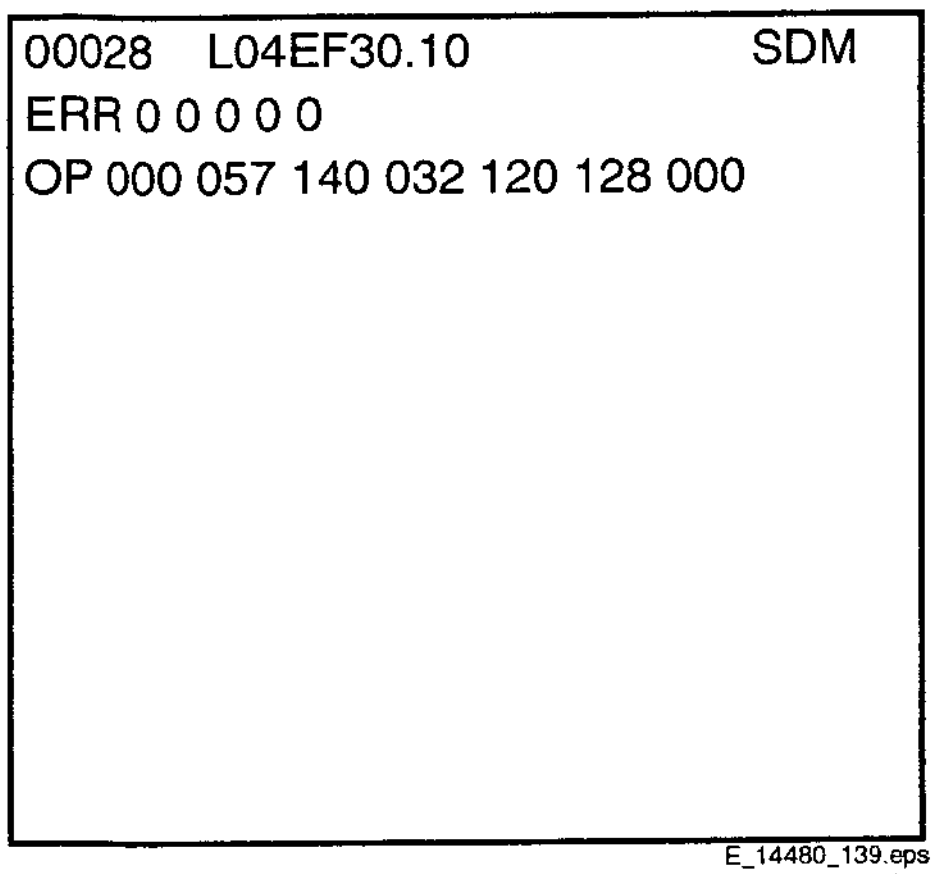

```
00028   L04EF30.10              SDM
ERR 0 0 0 0 0
OP 000 057 140 032 120 128 000
```

E_14480_139.eps
250504

Figure 5-1 SDM menu

How to navigate
Use one of the following methods:

- When you press the MENU button on the remote control, the set will switch on the normal user menu in the SDM mode.
- On the TV, press and hold the 'VOLUME down' and press the 'CHANNEL down' for a few seconds, to switch from SDM to SAM and reverse.

How to exit
Switch the set to STANDBY by pressing the POWER button on the remote control transmitter or the television set.
If you turn the television set off by removing the Mains (i.e., unplugging the television) without using the POWER button, the television set will remain in SDM when mains is re-applied, and the error buffer is not cleared.

5.2.2 Service Alignment Mode (SAM)

Purpose

- To change option settings.
- To display / clear the error code buffer.
- To perform alignments.

Specifications

- Run timer (maximum five digits displayed)
- Software version, Error & Option Bytes display
- Clear error buffer.
- Option settings
- AKB switching
- Software alignments (Tuner, 2 Tuner PIP, White Tone, Geometry & Audio)
- NVM Editor
- ComPair Mode switching

How to enter
To enter SAM, use one of the following methods:

- Press the following key sequence on the remote control transmitter: '**0 6 2 5 9 6**' directly followed by the "On Screen Display icon "i +" button (do not allow the display to time out between entries while keying the sequence).
- Or via ComPair.

After entering SAM, the following screen is visible, with SAM in the upper right corner of the screen to indicate that the television is in Service Alignment Mode.

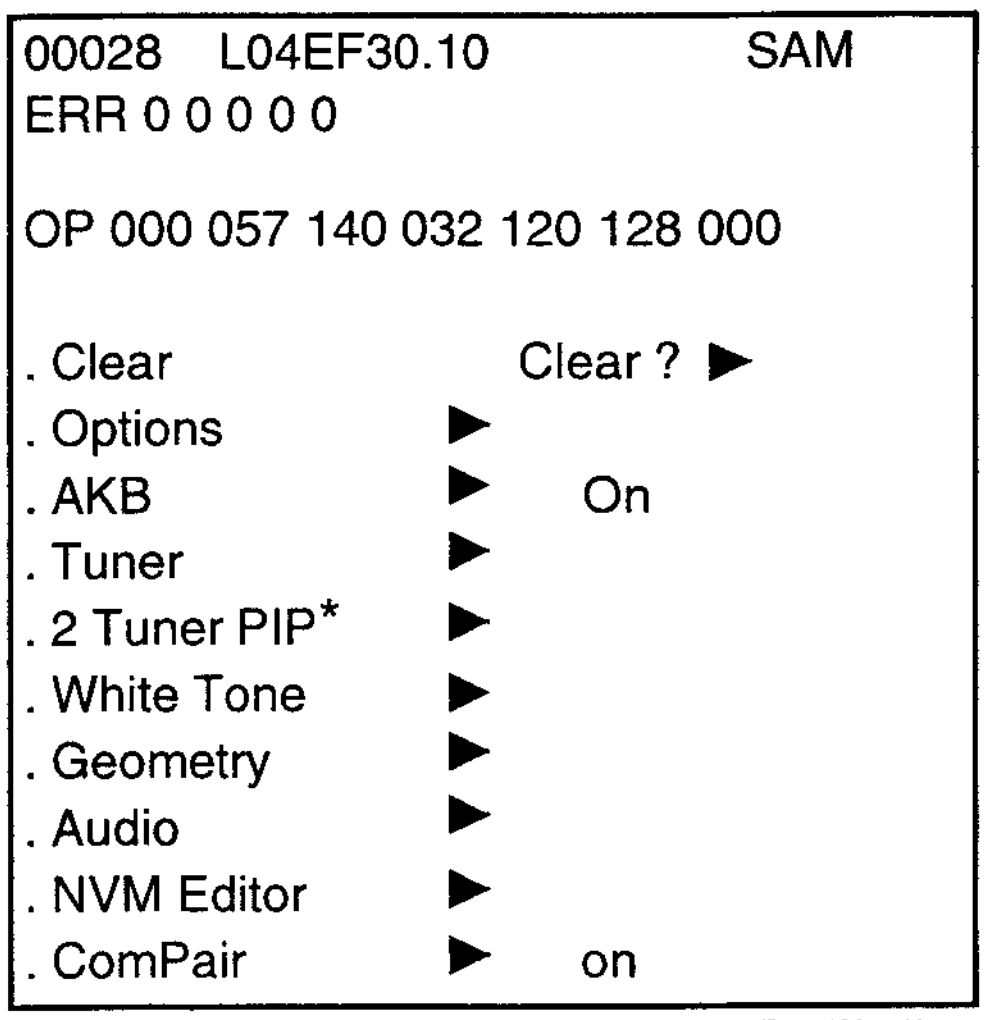

```
00028   L04EF30.10              SAM
ERR 0 0 0 0 0

OP 000 057 140 032 120 128 000

. Clear               Clear ? ▶
. Options         ▶
. AKB             ▶     On
. Tuner           ▶
. 2 Tuner PIP*    ▶
. White Tone      ▶
. Geometry        ▶
. Audio           ▶
. NVM Editor      ▶
. ComPair         ▶     on
```

* optional

E_14480_140.eps
260504

Figure 5-2 SAM menu

Menu explanation

1. **LLLLL.** This represents the run timer. The run timer counts normal operation hours, but does not count standby hours (maximum four digits displayed).
2. **AAABCD-X.Y.** This is the software identification of the main microprocessor:
   - **A** = the project name (L04).
   - **B** = the region: E= Europe, A= Asia Pacific, U= NAFTA, L= LATAM.
   - **C** = the software diversity:
     - **Europe:** T = 1 page TXT, F = Full TXT, V = Voice control.
     - **LATAM and NAFTA:** N = Stereo non-dBx, S = Stereo dBx.
     - **Asian Pacific:** F = Full TXT, N = non TXT, C = NTSC.
     - **ALL regions:** M = mono, D = DVD, Q = Mk2.
   - **D** = the language cluster number.
   - **X** = the main software version number (updated with a major change that is incompatible with previous versions).
   - **Y** = the sub software version number (updated with a minor change that is compatible with previous versions).
3. **SAM.** Indication of the Service Alignment Mode.
4. **Error Buffer.** Shows all errors detected since the last time the buffer was erased. Five errors possible.
5. **Option Bytes.** Used to set the option bytes. See 'Options' in the Alignments section for a detailed description. Seven codes are possible.
6. **Clear.** Erases the contents of the error buffer. Select the CLEAR menu item and press the MENU RIGHT key. The content of the error buffer is cleared.
7. **Options.** Used to set the option bits. See 'Options' in the Alignments section for a detailed description.
8. **AKB.** Used to disable (Off) or enable (On) the 'black current loop' (AKB = Auto Kine Bias).
9. **Tuner.** Used to align the tuner. See 'Tuner' in the Alignments section for a detailed description.
10. **2 Tuner PIP.** Used to align the tuner PIP (optional)
11. **White Tone.** Used to align the white tone. See 'White Tone' in the Alignments section for a detailed description.
12. **Geometry.** Used to align the geometry settings of the television. See 'Geometry' in the Alignments section for a detailed description.
13. **Audio.** No audio alignment is necessary for this television set.

14. **NVM Editor.** Used to change the NVM data in the television set.
15. **ComPair Mode.** Used to switch on the television to ISP mode (for uploading software)

How to navigate

- In SAM, select menu items with the MENU UP/DOWN keys on the remote control transmitter. The selected item will be highlighted. When not all menu items fit on the screen, use the MENU UP/DOWN keys to display the next / previous menu items.
- With the MENU LEFT/RIGHT keys, it is possible to:
  - Activate the selected menu item.
  - Change the value of the selected menu item.
  - Activate the selected submenu.
- In SAM, when you press the MENU button twice, the set will switch to the normal user menus (with the SAM mode still active in the background). To return to the SAM menu press the MENU or STATUS/EXIT button.
- When you press the MENU key in while in an SDAM submenu, you will return to the previous menu.

How to store SAM settings

To store settings changed in SAM leave the top level SAM menu by using the POWER button on the remote control transmitter or the television set.

How to exit

Switch the set to STANDBY by pressing the POWER button on the remote control transmitter or the television set.
If you turn the television set off by removing the mains (i.e., unplugging the television) without using the POWER button, the television set will remain in SAM when mains is re-applied, and the error buffer is not cleared.

5.2.3 Customer Service Mode (CSM)

Purpose

The Customer Service Mode shows error codes and information on the TV operation settings. The call centre can instruct the customer to enter CSM by telephone and read off the information displayed. This helps the call centre to diagnose problems and failures in the TV set before making a service call.
The CSM is a read-only mode; therefore, modifications are not possible in this mode.

How to enter

To enter CSM, press the following key sequence on the remote control transmitter: '**1 2 3 6 5 4**' (do not allow the display to time out between entries while keying the sequence).

Upon entering the Customer Service Mode, the following screen will appear:

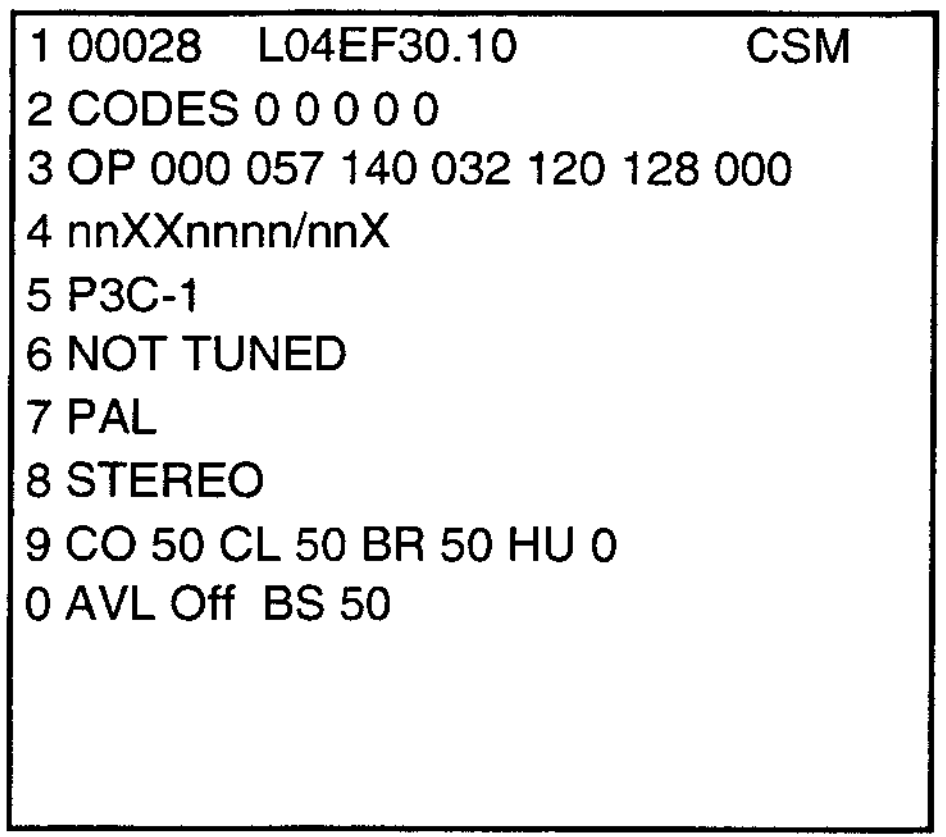

```
1 00028   L04EF30.10            CSM
2 CODES 0 0 0 0 0
3 OP 000 057 140 032 120 128 000
4 nnXXnnnn/nnX
5 P3C-1
6 NOT TUNED
7 PAL
8 STEREO
9 CO 50 CL 50 BR 50 HU 0
0 AVL Off  BS 50
```

E_14480_141.eps
250504

Figure 5-3 CSM menu

Menu explanation

1. Indication of the service mode (CSM = Customer Service Mode).
2. Reserved item.
3. Software identification of the main microprocessor (see 'Service Default Alignment Mode' for an explanation)
4. Reserved item for P3C call centres (AKBS stands for Advanced Knowledge Base System).
5. Indicates the type of TV system or whether or not the television is receiving an 'IDENT' signal on the selected source. If no 'IDENT' signal is detected, the display will read 'NOT TUNED'
6. Displays the last five errors detected in the error code buffer.

How to exit

To exit CSM, use one of the following methods:

- Press the MENU, STATUS/EXIT, or POWER button on the remote control transmitter.
- Press the POWER button on the television set.

5.3 Problems and Solving Tips Related to CSM

5.3.1 Picture Problems

Note: The problems described below are all related to the TV settings. The procedures used to change the value (or status) of the different settings are described.

Picture too dark or too bright

If:

- The picture improves when you have press the AUTO PICTURE button on the remote control transmitter, or
- The picture improves when you enter the Customer Service Mode

Then:

1. Press the AUTO PICTURE button on the remote control transmitter repeatedly (if necessary) to choose PERSONAL picture mode.
2. Press the MENU button on the remote control transmitter. This brings up the normal user menu.
3. In the normal user menu, use the MENU UP/DOWN keys to highlight the PICTURE sub menu (if necessary).
4. Press the MENU LEFT/RIGHT keys to enter the PICTURE sub menu.
5. Use the MENU UP/DOWN keys (if necessary) to select BRIGHTNESS.
6. Press the MENU LEFT/RIGHT keys to increase or decrease the BRIGHTNESS value.
7. Use the MENU UP/DOWN keys to select PICTURE.

8. Press the MENU LEFT/RIGHT keys to increase or decrease the PICTURE value.
9. Press the MENU button on the remote control transmitter twice to exit the user menu.
10. The new PERSONAL preference values are automatically stored.

White line around picture elements and text

If:

The picture improves after you have pressed the AUTO PICTURE button on the remote control transmitter

Then:

1. Press the AUTO PICTURE button on the remote control transmitter repeatedly (if necessary) to choose PERSONAL picture mode.
2. Press the MENU button on the remote control transmitter. This brings up the normal user menu.
3. In the normal user menu, use the MENU UP/DOWN keys to highlight the PICTURE sub menu (if necessary).
4. Press the MENU LEFT/RIGHT keys to enter the PICTURE sub menu.
5. Use the MENU UP/DOWN keys to select SHARPNESS.
6. Press the MENU LEFT key to decrease the SHARPNESS value.
7. Press the MENU button on the remote control transmitter twice to exit the user menu.
8. The new PERSONAL preference value is automatically stored.

Snowy picture

To enter CSM, press the following key sequence on the remote control transmitter: '**123654**' (do not allow the display to time out between entries while keying the sequence).

Check CSM line 5. If this line reads 'Not Tuned,' check the following:

- Antenna not connected. Connect the antenna.
- No antenna signal or bad antenna signal. Connect a proper antenna signal.
- The tuner is faulty (in this case line 6, the Error Buffer line, will contain error number 10). Check the tuner and replace/ repair the tuner if necessary.

Black and white picture

If:

- The picture improves after you have pressed the AUTO PICTURE button on the remote control transmitter

Then:

1. Press the AUTO PICTURE button on the remote control transmitter repeatedly (if necessary) to choose PERSONAL picture mode.
2. Press the MENU button on the remote control transmitter. This brings up the normal user menu.
3. In the normal user menu, use the MENU UP/DOWN keys to highlight the PICTURE sub menu (if necessary).
4. Press the MENU LEFT/RIGHT keys to enter the PICTURE sub menu.
5. Use the MENU UP/DOWN keys to select COLOR.
6. Press the MENU RIGHT key to increase the COLOR value.
7. Press the MENU button on the remote control transmitter twice to exit the user menu.
8. The new PERSONAL preference value is automatically stored.

Menu text not sharp enough

If:

- The picture improves after you have pressed the AUTO PICTURE button on the remote control transmitter.

Then:

1. Press the AUTO PICTURE button on the remote control transmitter repeatedly (if necessary) to choose PERSONAL picture mode.
2. Press the MENU button on the remote control transmitter. This brings up the normal user menu.
3. In the normal user menu, use the MENU UP/DOWN keys to highlight the PICTURE sub menu (if necessary).
4. Press the MENU LEFT/RIGHT keys to enter the PICTURE sub menu.
5. Use the MENU UP/DOWN keys to select PICTURE.
6. Press the MENU LEFT key to decrease the PICTURE value.
7. Press the MENU button on the remote control transmitter twice to exit the user menu.
8. The new PERSONAL preference value is automatically stored.

5.4 ComPair

5.4.1 Introduction

ComPair (Computer Aided Repair) is a service tool for Philips Consumer Electronics products. ComPair is a further development on the European DST (service remote control), which allows faster and more accurate diagnostics. ComPair has three big advantages:

- ComPair helps you to quickly get an understanding on how to repair the chassis in a short time by guiding you systematically through the repair procedures.
- ComPair allows very detailed diagnostics (on I2C level) and is therefore capable of accurately indicating problem areas. You do not have to know anything about I2C commands yourself because ComPair takes care of this.
- ComPair speeds up the repair time since it can automatically communicate with the chassis (when the microprocessor is working) and all repair information is directly available. When ComPair is installed together with the SearchMan electronic manual of the defective chassis, schematics and PWBs are only a mouse click away.

5.4.2 Specifications

ComPair consists of a Windows based faultfinding program and an interface box between PC and the (defective) product. The ComPair interface box is connected to the PC via a serial or RS232 cable.
In this chassis, the ComPair interface box and the TV communicate via a bi-directional service cable via the service connector.

The ComPair faultfinding program is able to determine the problem of the defective television. ComPair can gather diagnostic information in two ways:

- **Automatic** (by communication with the television): ComPair can automatically read out the contents of the entire error buffer. Diagnosis is done on I2C level. ComPair can access the I2C bus of the television. ComPair can send and receive I2C commands to the micro controller of the television. In this way, it is possible for ComPair to communicate (read and write) to devices on the I2C busses of the TV-set.
- **Manually** (by asking questions to you): Automatic diagnosis is only possible if the micro controller of the television is working correctly and only to a certain extend. When this is not the case, ComPair will guide you through the faultfinding tree by asking you questions (e.g. *Does the screen give a picture? Click on the correct answer: YES/*

NO) and showing you examples (e.g. *Measure test-point I7 and click on the correct waveform you see on the oscilloscope*). You can answer by clicking on a link (e.g. text or a waveform picture) that will bring you to the next step in the faultfinding process.

By a combination of automatic diagnostics and an interactive question / answer procedure, ComPair will enable you to find most problems in a fast and effective way.

Beside fault finding, ComPair provides some **additional features** like:

- Up- or downloading of pre-sets.
- Managing of pre-set lists.
- Emulation of the Dealer Service Tool (DST).
- If both ComPair and SearchMan (Electronic Service Manual) are installed, all the schematics and the PWBs of the set are available by clicking on the appropriate hyperlink. **Example**: *Measure the DC-voltage on capacitor C2568 (Schematic/Panel) at the Mono-carrier.*
  - Click on the 'Panel' hyperlink to automatically show the PWB with a highlighted capacitor C2568.
  - Click on the 'Schematic' hyperlink to automatically show the position of the highlighted capacitor.

5.4.3 How To Connect ComPair

1. First, install the ComPair Browser software (see the Quick Reference Card for installation instructions).
2. Connect the RS232 interface cable between a free serial (COM) port of your PC and the PC connector (marked with 'PC') of the ComPair interface.
3. Connect the mains adapter to the supply connector (marked with 'POWER 9V DC') of the ComPair interface.
4. Switch the ComPair interface "off".
5. Switch the television set "off" with the mains switch.
6. Connect the ComPair interface cable between the connector on the rear side of the ComPair interface (marked with 'I2C') and the ComPair (or *Service*) connector at the rear side of the TV (for its location see figure 8-1 in chapter "Alignments").
7. Plug the mains adapter in a mains outlet, and switch the interface "on". The green and red LEDs light up together. The red LED extinguishes after approx. 1 second while the green LED remains lit.
8. Start the ComPair program and read the 'Introduction' chapter.

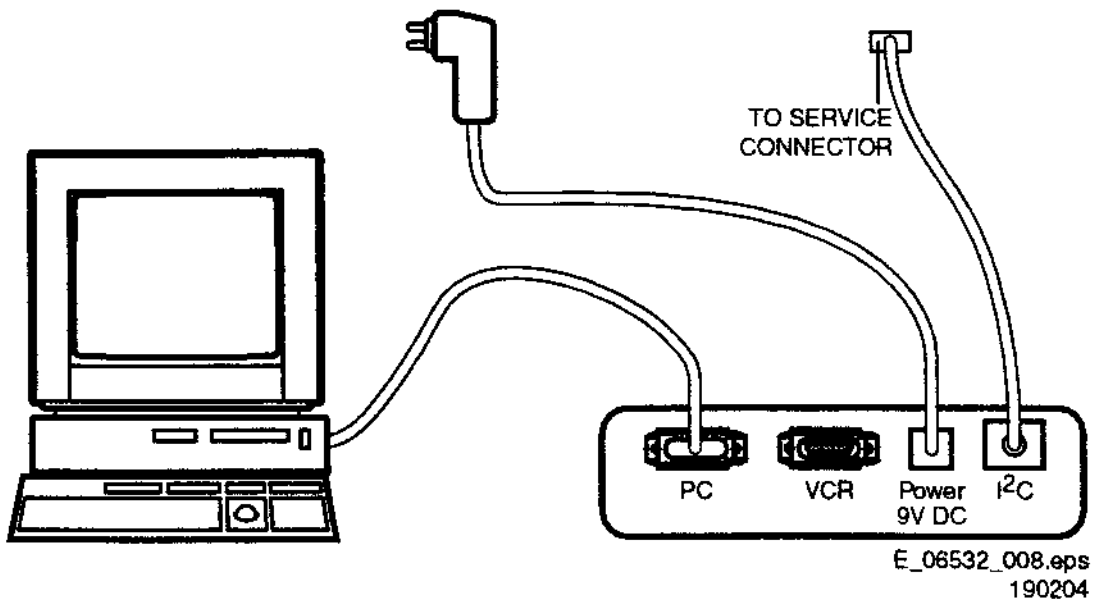

Figure 5-4 ComPair connection

5.4.4 How To Order

ComPair order codes:

- Starter kit ComPair32/SearchMan32 software and ComPair interface (excl. transformer): 3122 785 90450.
- ComPair interface (excluding transformer): 4822 727 21631.
- Starter kit ComPair32 software (registration version): 3122 785 60040.
- Starter kit SearchMan32 software: 3122 785 60050.
- ComPair32 CD (update): 3122 785 60070 (year 2002, 3122 785 60110 (year 2003).
- SearchMan32 CD (update): 3122 785 60080 (year 2002), 3122 785 60120 (year 2003).
- ComPair interface cable: 3122 785 90004.
- Transformer (non-UK): 4822 727 21632.
- Transformer UK: 4822 727 21633.

Note: If you encounter any problems, contact your local support desk.

5.5 Error Codes

The error code buffer contains all errors detected since the last time the buffer was erased. The buffer is written from left to right. When an error occurs that is not yet in the error code buffer, it is displayed at the left side and all other errors shift one position to the right.

5.5.1 How To Read The Error Buffer

You can read the error buffer in 3 ways:

- On screen via the SDAM (if you have a picture).
  Examples:
  - ERROR: 0 0 0 0 0 : No errors detected
  - ERROR: 6 0 0 0 0 : Error code 6 is the last and only detected error
  - ERROR: 9 6 0 0 0 : Error code 6 was detected first and error code 9 is the last detected (newest) error
- Via the blinking LED procedure (when you have no picture). See 'The Blinking LED Procedure'.
- Via ComPair.

5.5.2 How To Clear The Error Buffer

The error code buffer is cleared in the following cases:

- By using the CLEAR command in the SDAM menu:
  - To enter SAM, press the following key sequence on the remote control transmitter: '062596' directly followed by the "OSD" icon button (do not allow the display to time out between entries while keying the sequence).
  - Make sure the menu item CLEAR is highlighted. Use the MENU UP/DOWN buttons, if necessary.
  - Press the MENU RIGHT button to clear the error buffer. The text on the right side of the 'CLEAR' line will change from 'CLEAR?' to 'CLEARED'
- If the contents of the error buffer have not changed for 50 hours, the error buffer resets automatically.

Note: If you exit SAM by disconnecting the Mains from the television set, the error buffer is not reset.

5.5.3 Error Codes

In case of non-intermittent faults, write down the errors present in the error buffer and clear the error buffer before you begin the repair. This ensures that old error codes are no longer present.

If possible, check the entire contents of the error buffer. In some situations, an error code is only the result of another error and not the actual cause of the problem (for example, a fault in the protection detection circuitry can also lead to a protection).

Table 5-3 Error codes overview

Error	Device	Error description	Check item	Diagram
0	Not applicable	No Error		
1	Not applicable	X-Ray / over-voltage protection (US only)	2411, 2412, 2413, 6404, 6411, 6412.	A2
2	Not applicable	High beam (BCI) protection	3404, 7405	A2
3	Not applicable	Vertical guard protection	3466, 7451, 7452, 7453, 7454	A2
4	Tuner UA1316/A	I2C error while communicating with 2nd tuner	1000, 5010 (PIP Module)	F2
5	Not applicable	+5v protection	7604, 7605	A5
6	I2C bus	General I2C error	7200, 3207, 3214	A4
7	Not applicable	-	-	-
8	Not applicable	-	-	-
9	24C16	I2C error while communicating with the EEPROM	7601, 3604, 3605	A5
10	Tuner	= I2C error while communicating with the PLL tuner	1000, 5001	A3
11	TDA6107/A	Black current loop instability protection	7330, 3351, CRT	B1
12	SDA9488X	I2C error while communicating with the PIP processor	7242 (PIP Module)	F1
13	Not applicable	-	-	-
14	DVD Loader	I2C error while communicating with the DVD Interface module	DVD Interface module	DVD Loader
15	TDA9178T/N1	I2C error while communicating with LTI module	7610	H
16	TDA9887	I2C error while communicating with PIP_Demodulator	7201	F2
17	Not applicable	-	-	-
18	Not applicable	-	-	-
19	TDA1200	I2C error while communicating with SSD stereo sound decoder	7200	A4
20	TDA1200	I2C error while communicating with video cosmic in Hercules IC	7200	A4

Note: Errors 7, 8, 13, 17, 18 are not applicable.

5.6 The Blinking LED Procedure

Using this procedure, you can make the contents of the error buffer visible via the front LED. This is especially useful when there is no picture.

When the SDM is entered, the LED will blink the contents of the error-buffer:

- When all the error-codes are displayed, the sequence finishes with an 'on' LED blink of 1.5 seconds,
- The sequence starts again.

Example of error buffer: **12 9 6 0 0**
After entering SDM, the following occurs:

- 1 long 'on' blink of 5 seconds to start the sequence,
- 12 short blinks followed by a pause of 1.5 seconds,
- 9 short blinks followed by a pause of 1.5 seconds,
- 6 short blinks followed by a pause of 1.5 seconds,
- 1 long 'on' blink of 1.5 seconds to finish the sequence,
- The sequence starts again at 12 short blinks.

5.7 Protections

If a fault situation is detected, an error code will be generated; and, if necessary, the television set will go into protection mode. Blinking of the red LED at a frequency of 3 Hz indicates the protection mode. In some error cases, the microprocessor does not put the set in protection mode. The error codes of the error buffer and the blinking LED procedure can be read via the Service Default Menu (SDM), or via ComPair.
To get a quick diagnosis the chassis has three service modes implemented:

- The Customer Service Mode (CSM).
- The Service Default Mode (SDM).
- The Service Alignment Mode (SAM).

For a detailed description, see the "Customer Service Mode, Service Default mode" and "Service Alignment Mode" sections.

5.8 Fault Finding and Repair Tips

Notes:

- It is assumed that the components are mounted correctly with correct values and no bad solder joints.
- Before any fault finding actions, check if the correct options are set.

5.8.1 NVM Editor

In some cases, it can be handy if one directly can change the NVM contents. This can be done with the "NVM Editor" in SAM mode. In the next table, the default NVM values are given.

Table 5-4 NVM default values

	Address (dec)	Value (hex)
EW (EW width)	19	25
PW (EW parabola width)	20	0A
HS (Horizontal shift)	21	1A
HP (Horizontal parallelogram)	22	1F
HB (Horizontal Bow)	23	1F
UCP (EW upper corner parabola)	24	1E
LCP (EW lower corner parabola)	25	28
TC (EW trapezium)	26	1A
VS (Vertical slope)	27	25
VA (Vertical amplitude)	28	1E
SC (S-Correction)	29	1C
VSH (Vertical Shift)	30	1A
VX (Vertical Zoom)	31	19
VSL (Vertical scroll)	32	20
VL (Vertical linearity)	33	20
AGC (AGC Takeover)	36	1E
OIF (IF-PLL Offset)	37	20
AGC10 (AGC 10)	38	1
H60 (60 Hz Horizontal Shift)	39	9
PF_SC_PWL (Peaking Frequency, Soft Clipper, Peak White Limit)	40	0A
COR (Phase 1 time constant, Video Dependant Coring, Ratio & White stretch)	41	0F
60 Hz Vertical amplitude	42	40
YD & CL	43	2
RGB amplitude for full teletext mode	46	0C
NVM_TABLE_VERSION	60	26
OPTION_TABLE_VERSION	61	11
CVI_BLOR	62	1E
CVI_BLOG	63	1C
TXT Brightness	64	0F
V60 offset (60Hz Vertical Amplitude)	66	FE
FOAB, CHSE	139	3
SPR, WS	140	0
VMA, SVM	141	31
NVM_SOC_SMD	142	33
CCC_Preset_Gain_Red	143	1F
CCC_Preset_Gain_Green	144	1F
CCC_Preset_Gain_Blue	145	1F
NVM_FMWS	149	2
NVM_ASD_SC1_THR	150	10
NVM_CRYSTAL_ALIGN	208	4F
Last Brightness (VID PP others)	264	34
Last Color (VID PP others)	265	2C
Last Contrast (VID PP others)	266	4B
Last Sharpness (VID PP others)	267	37
Last Hue (VID PP others)	268	32
Last Colour Temperature (VID PP others)	269	0D
White-D Cool Red	294	FD
White-D Cool Blue	296	8
White-D Normal Red	297	22
White-D Normal Green	298	20
White-D Normal Blue	299	1B
White-D Warm Red	300	2
White-D Warm Blue	302	FA
Last Volume	343	19
Last Balance	344	32
Last Treble (AUD PP others)	345	32
Last Bass (AUD PP others)	346	32

5.8.2 Power Supply

Set Not Working

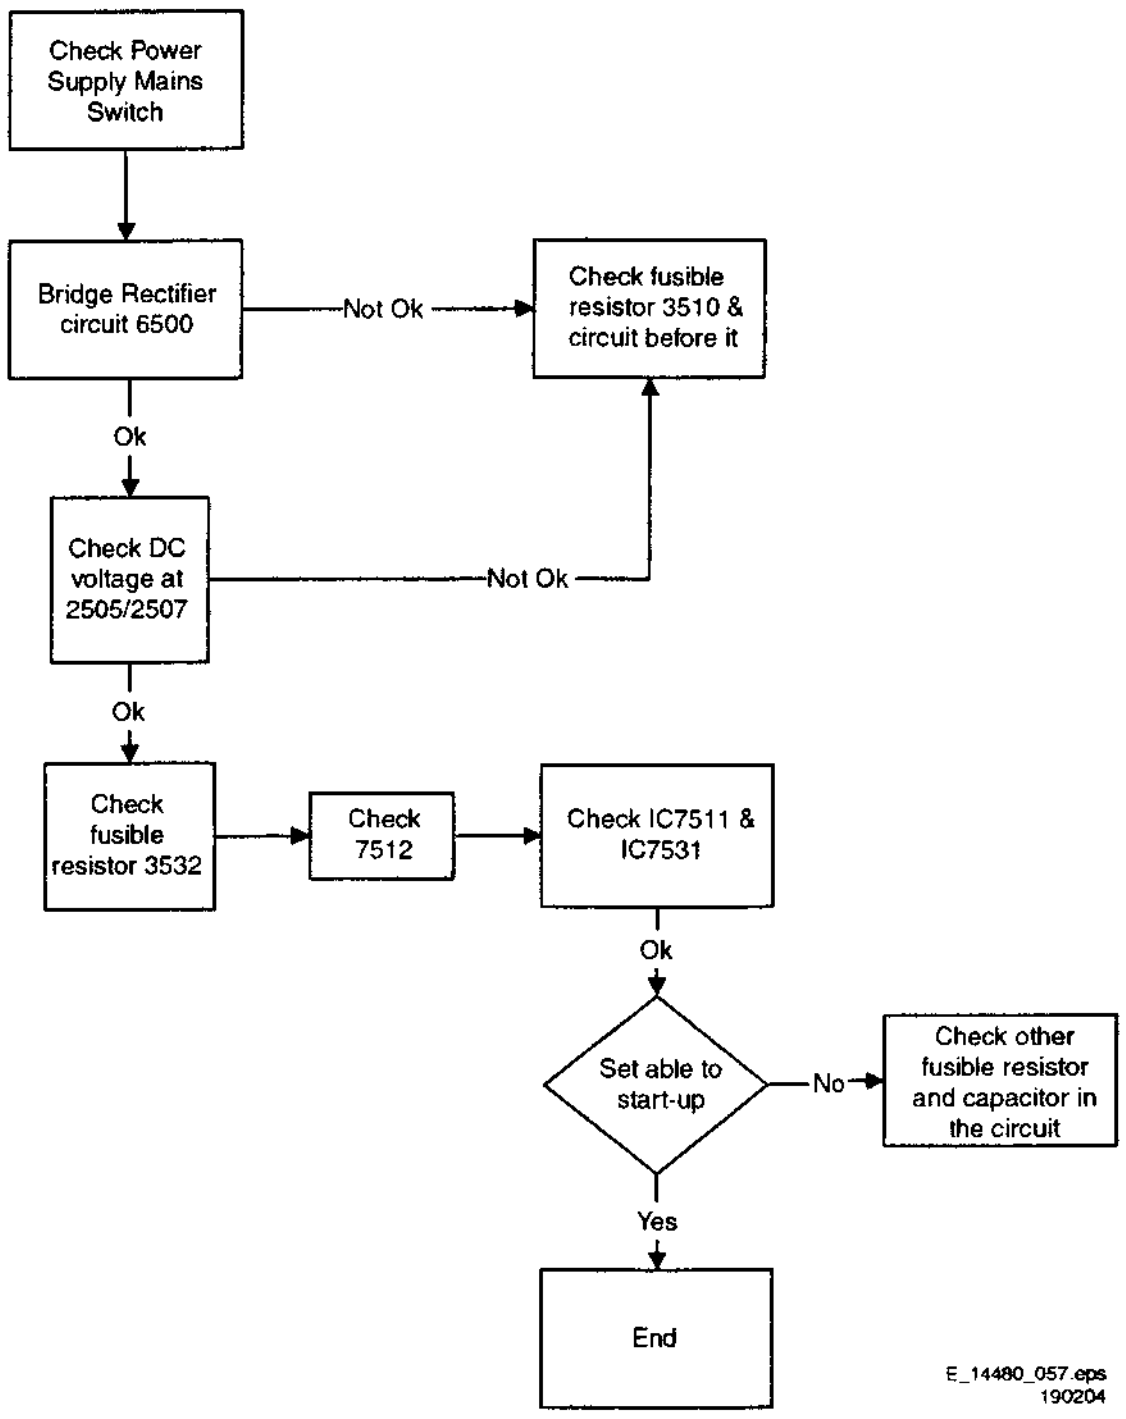
Check Power Supply Mains Switch
Bridge Rectifier circuit 6500
Not Ok
Check fusible resistor 3510 & circuit before it
Ok
Check DC voltage at 2505/2507
Not Ok
Ok
Check fusible resistor 3532
Check 7512
Check IC7511 & IC7531
Ok
Set able to start-up
No
Check other fusible resistor and capacitor in the circuit
Yes
End
E_14480_057.eps
190204

Figure 5-5 Fault finding tree "Set not working"

Set Does Not Start Up

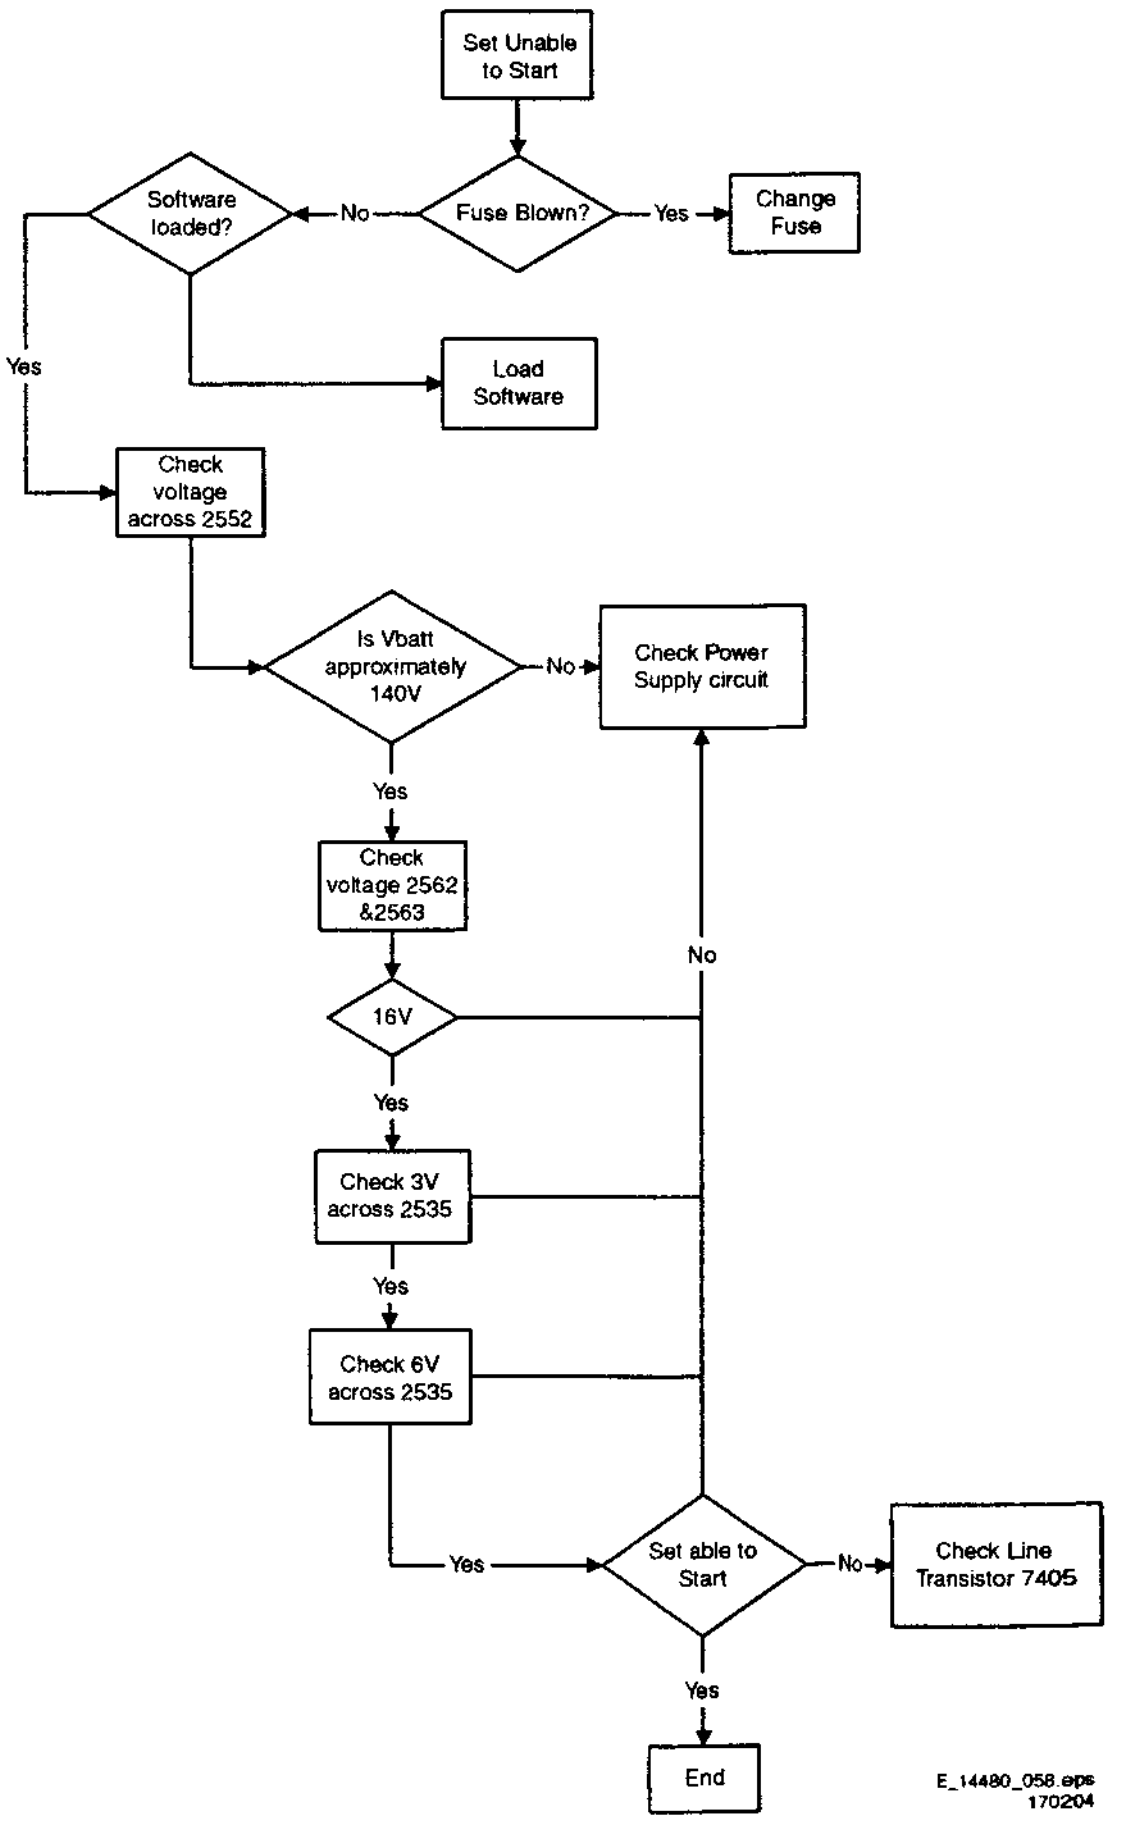
Set Unable to Start
Software loaded?
No
Fuse Blown?
Yes
Change Fuse
Yes
Load Software
Check voltage across 2552
Is Vbatt approximately 140V
No
Check Power Supply circuit
Yes
Check voltage 2562 &2563
No
16V
Yes
Check 3V across 2535
Yes
Check 6V across 2535
Yes
Set able to Start
No
Check Line Transistor 7405
Yes
End
E_14480_058.eps
170204

Figure 5-6 Fault finding tree "Set does not start up"

5.8.3 Deflection

One Thin Vertical Line

Quick check:

- Set in protection mode.
- LED blinking with error “3”.

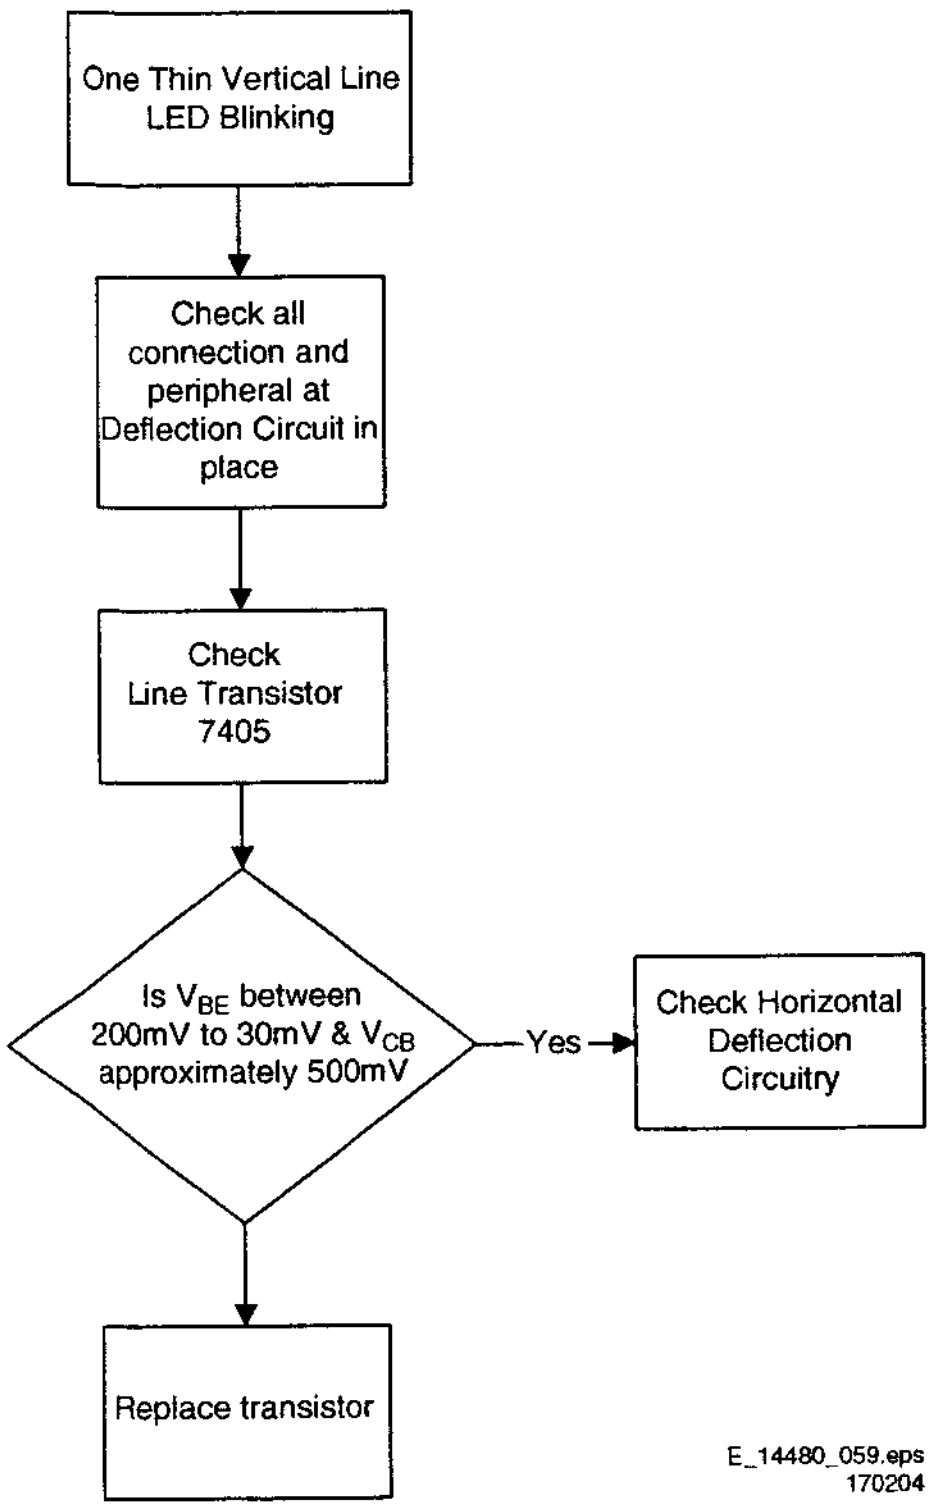
One Thin Vertical Line
LED Blinking
Check all connection and peripheral at Deflection Circuit in place
Check Line Transistor 7405
Is V_{BE} between 200mV to 30mV & V_{CB} approximately 500mV
Yes
Check Horizontal Deflection Circuitry
Replace transistor
E_14480_059.eps
170204

Figure 5-7 Fault finding tree “One thin vertical line”

One Thin Horizontal Line

Quick check:

- Set in protection mode.
- LED blinking with error “2”.

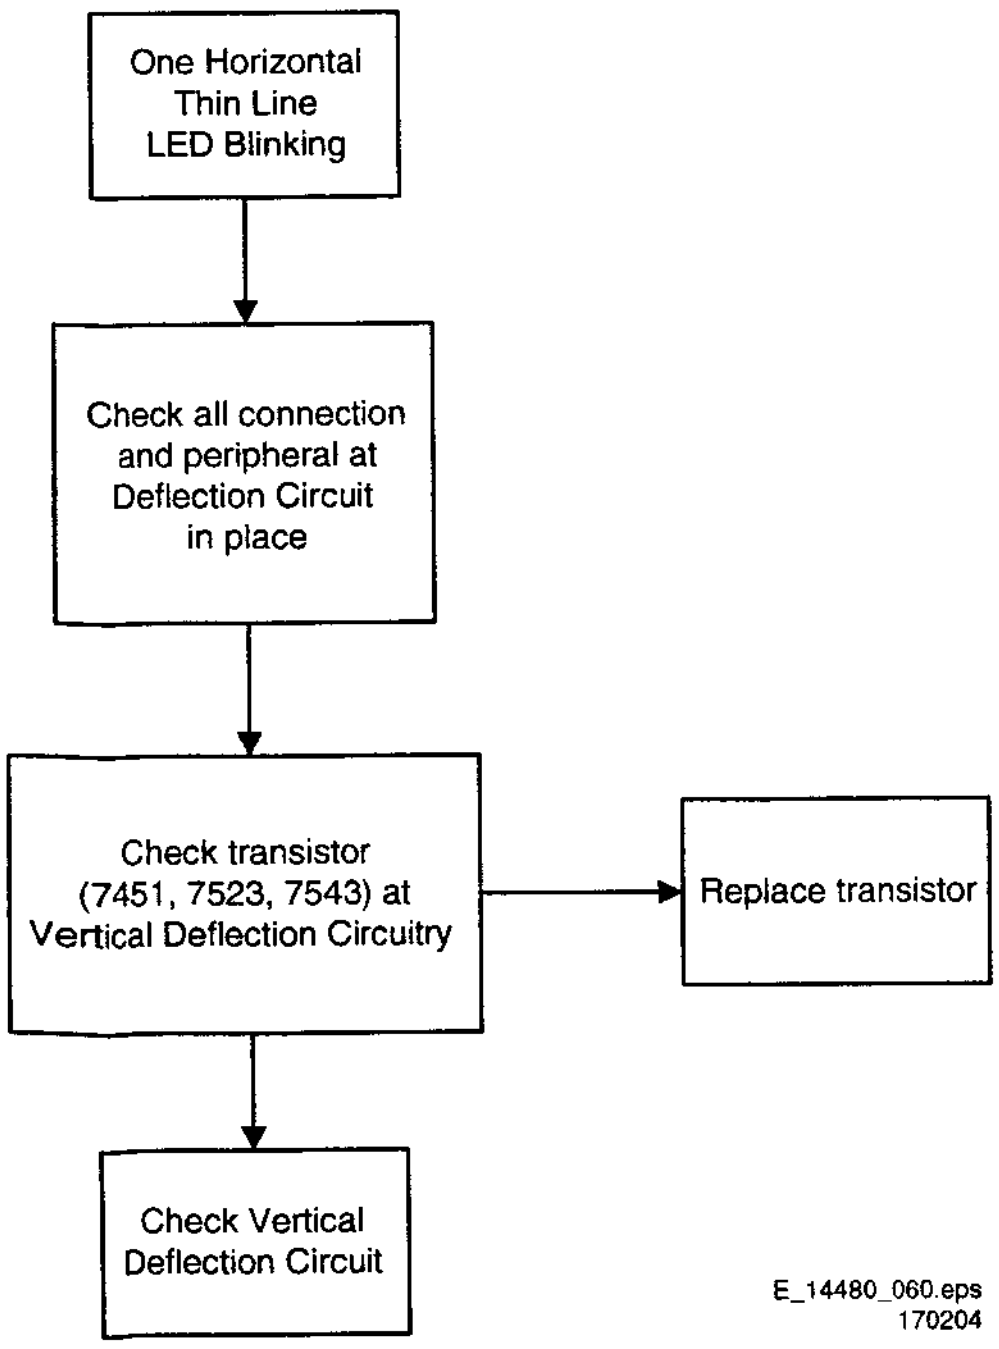
One Horizontal Thin Line
LED Blinking
Check all connection and peripheral at Deflection Circuit in place
Check transistor (7451, 7523, 7543) at Vertical Deflection Circuitry
Replace transistor
Check Vertical Deflection Circuit
E_14480_060.eps
170204

Figure 5-8 Fault finding tree “One thin horizontal line”

Blank Screen

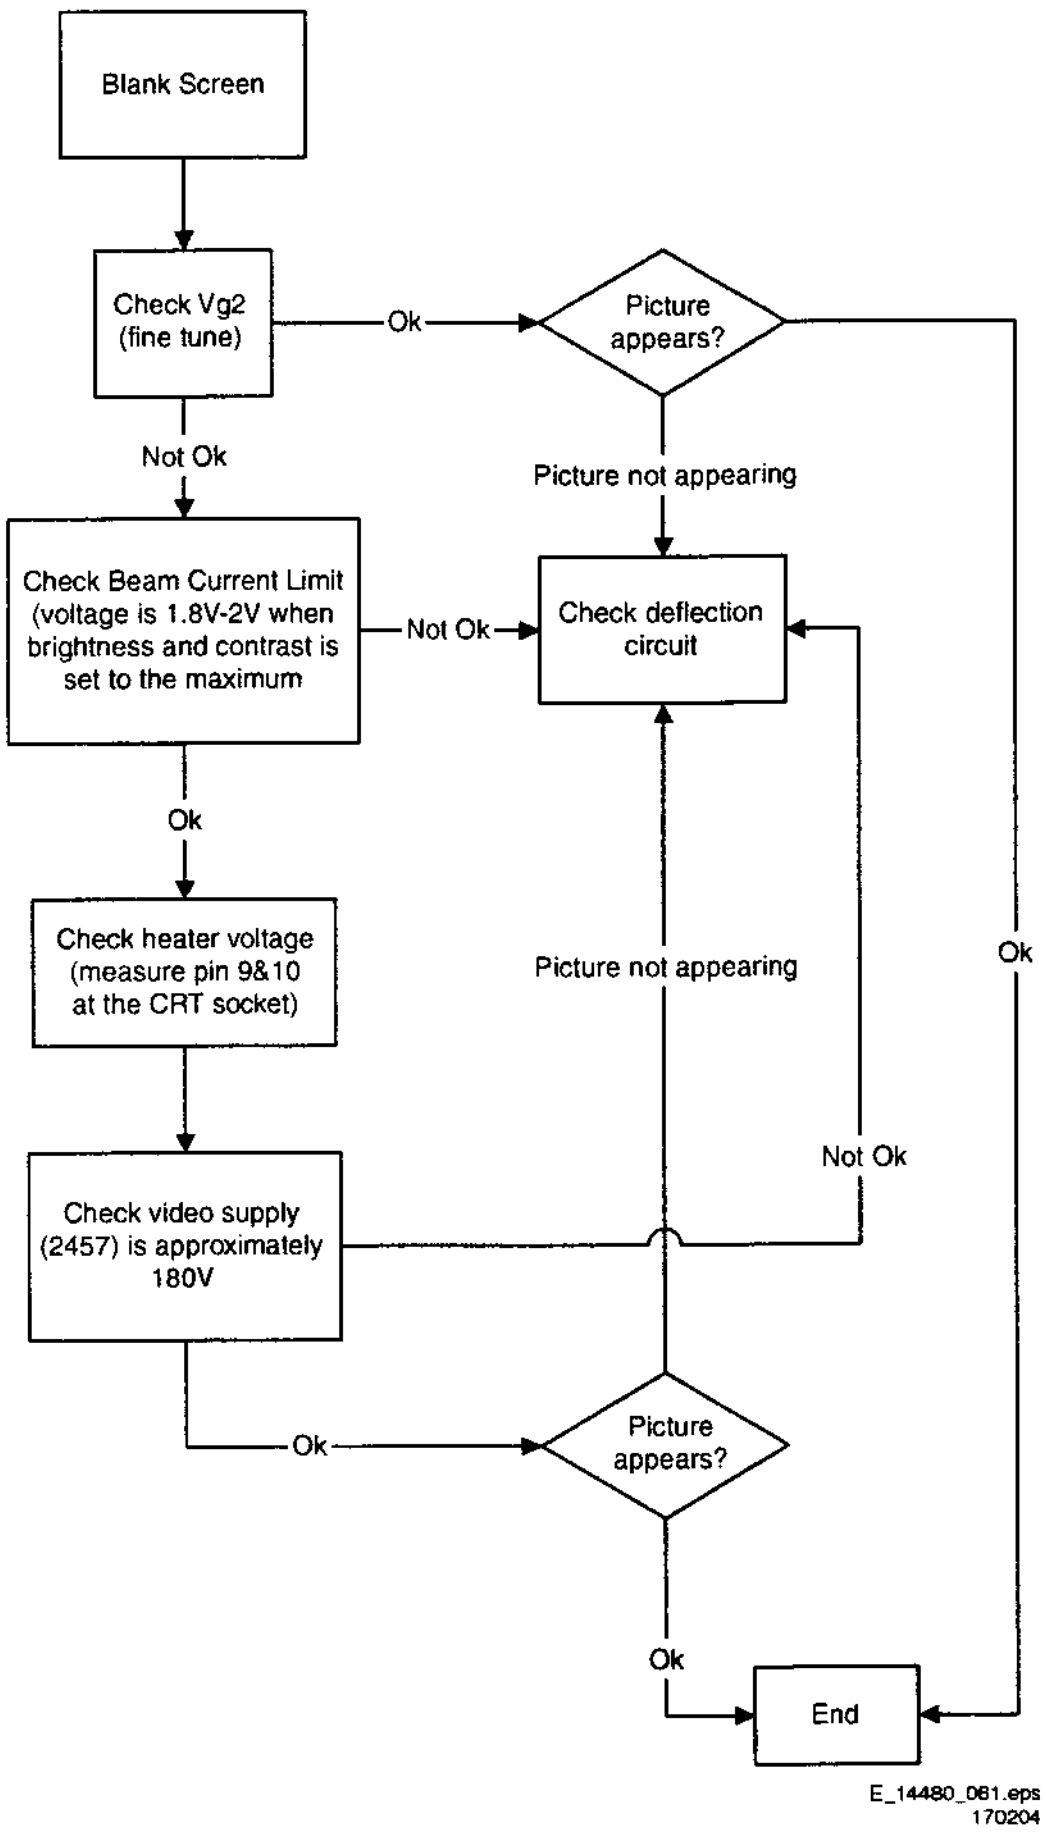
Blank Screen
Check Vg2 (fine tune)
Ok
Picture appears?
Not Ok
Picture not appearing
Check Beam Current Limit (voltage is 1.8V-2V when brightness and contrast is set to the maximum
Not Ok
Check deflection circuit
Ok
Check heater voltage (measure pin 9&10 at the CRT socket)
Picture not appearing
Ok
Not Ok
Check video supply (2457) is approximately 180V
Ok
Picture appears?
Ok
End
E_14480_061.eps
170204

Figure 5-9 Fault finding tree “Blank screen”

5.8.4 Source Selection

Set is not able to go into AV or any missing AV is encountered

E.g. AV1 is available but not able to enter to AV1: Check if the option setting is correct.

Set is able to go to AV, but no audio is heard.

1. Check that continuity of signal is there from the SCART/ Cinch input to the input of the Hercules.
2. If continuity is there and still no audio, check that option settings are correct.
3. If logic setting is correct and still no audio, proceed to Audio Decoder/Processor troubleshooting section.

Set is able to go into AV but no video is available:

1. Check continuity from AV input to HERCULES depending on the input.
2. If continuity is available and yet no video, proceed to Video Processor troubleshooting section.

5.8.5 Tuner and IF

No Picture

1. Check that the Option settings are correct.
2. If correct, check that supply voltages are there.
3. If supply voltages are present, check whether picture is present in AV.
4. If picture is present in AV, check with the scope the Tuner IF output signal by manual storage to a known channel.

5. If IF output is present, Tuner is working fine. If no IF output, I2C data lines may be open, check continuity of I2C lines. If I2C lines are ok, Tuner may be defect, replaced Tuner.
6. If Tuner IF is present and yet still no picture in RF mode, go to Video Processing troubleshooting section.

No Picture, No Sound

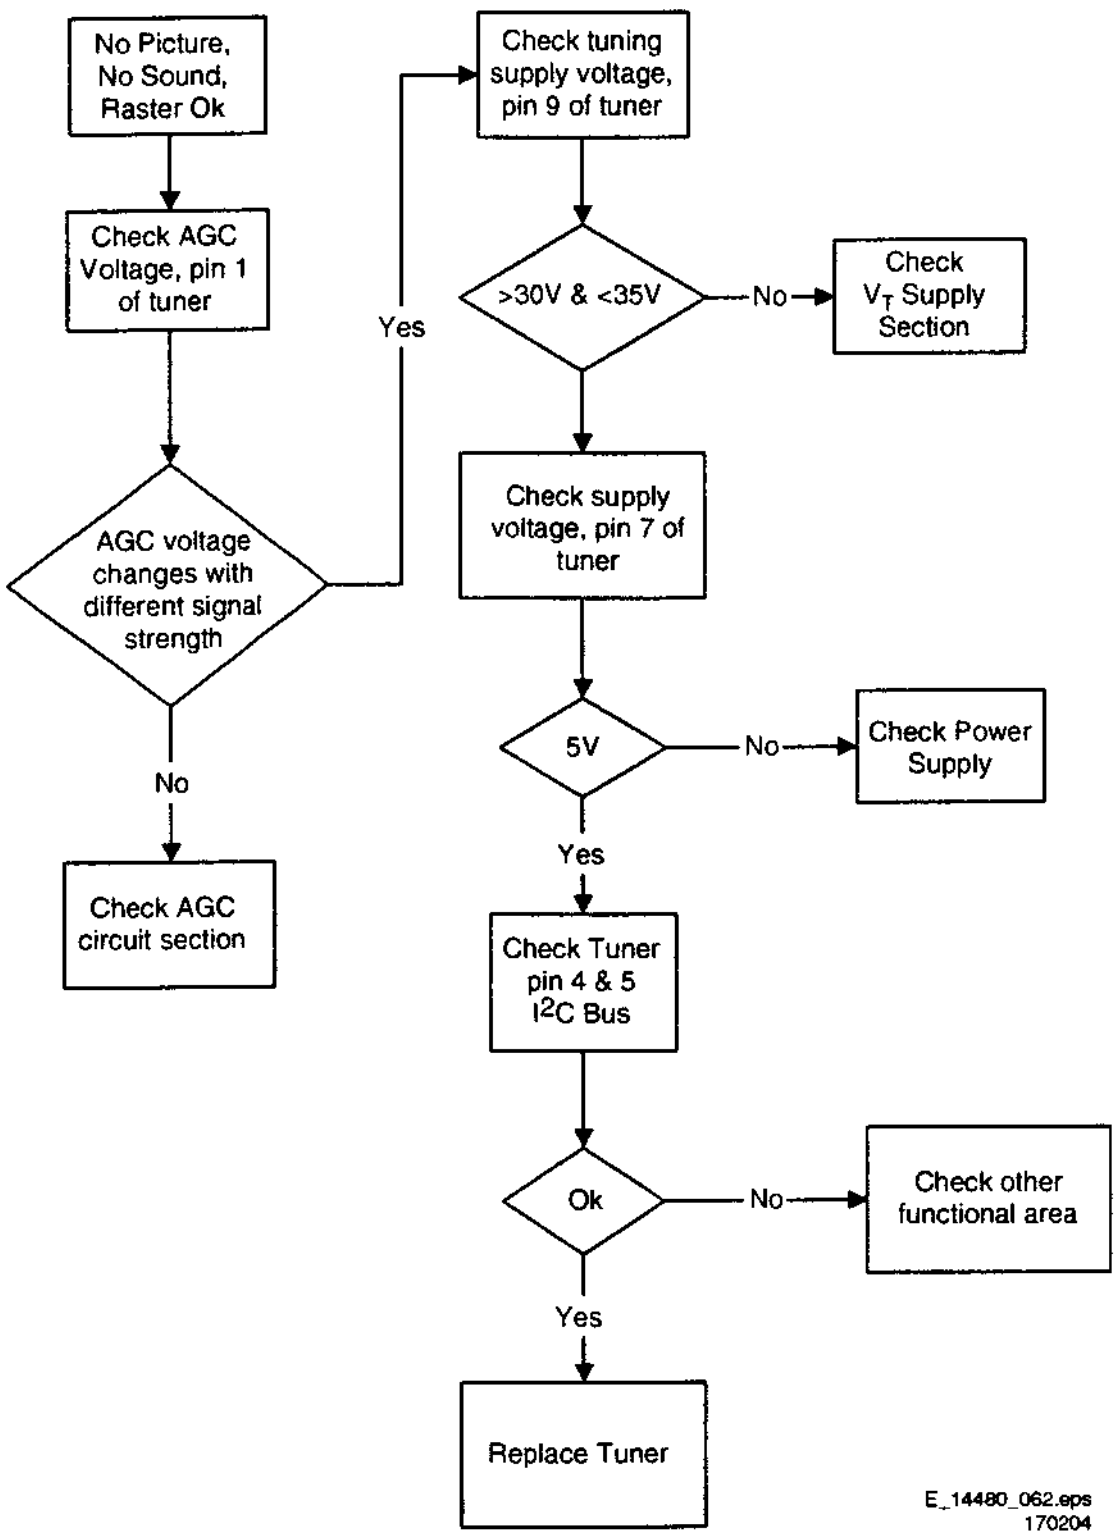
No Picture, No Sound, Raster Ok
Check AGC Voltage, pin 1 of tuner
AGC voltage changes with different signal strength
Yes
No
Check AGC circuit section
Check tuning supply voltage, pin 9 of tuner
>30V & <35V
No
Check V_T Supply Section
Check supply voltage, pin 7 of tuner
5V
No
Check Power Supply
Yes
Check Tuner pin 4 & 5 I²C Bus
Ok
No
Check other functional area
Yes
Replace Tuner
E_14480_062.eps 170204

Figure 5-10 Fault finding tree "No picture, no sound"

Picture Ok, No Sound

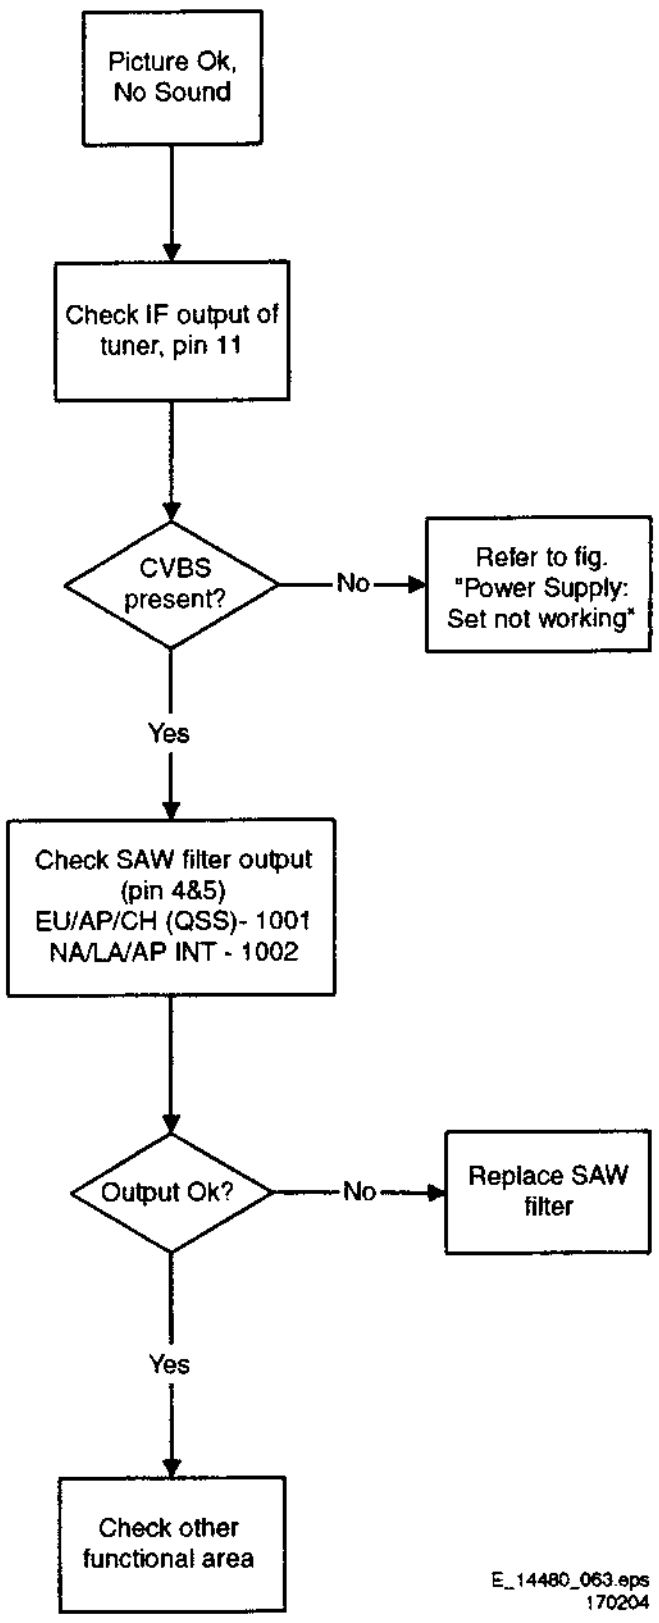
Picture Ok, No Sound
Check IF output of tuner, pin 11
CVBS present?
No
Refer to fig. "Power Supply: Set not working"
Yes
Check SAW filter output (pin 4&5) EU/AP/CH (QSS)- 1001 NA/LA/AP INT - 1002
Output Ok?
No
Replace SAW filter
Yes
Check other functional area
E_14480_063.eps 170204

Figure 5-11 Fault finding tree "Picture ok, no sound"

Unable To Perform Tuning

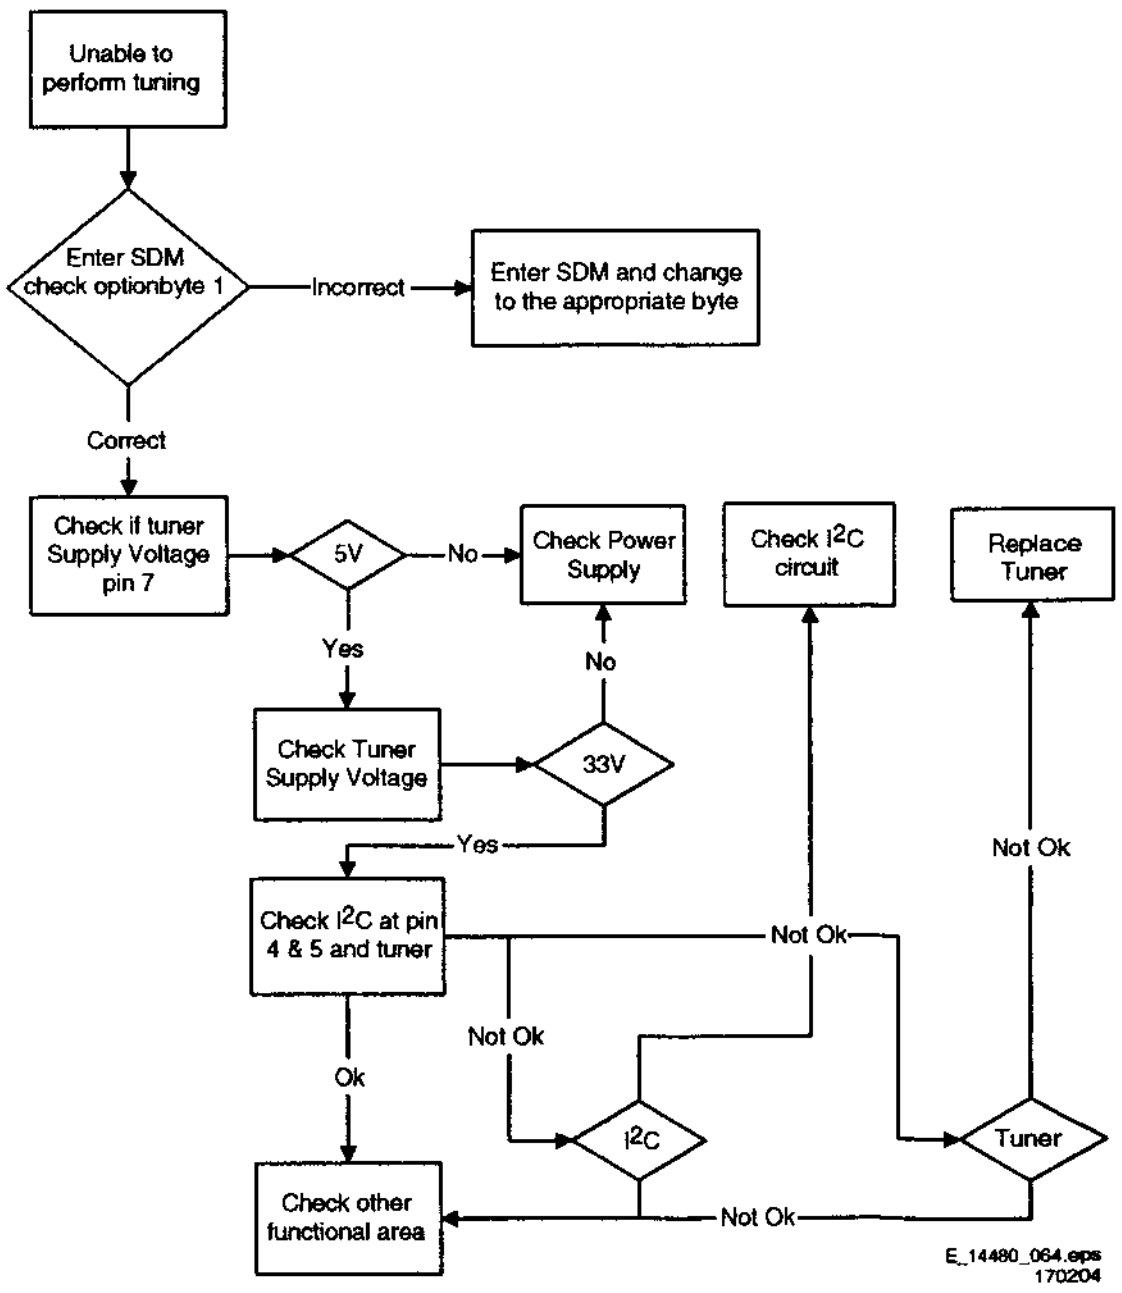
Unable to perform tuning
Enter SDM check optionbyte 1
Incorrect
Enter SDM and change to the appropriate byte
Correct
Check if tuner Supply Voltage pin 7
5V
No
Check Power Supply
Check I²C circuit
Replace Tuner
Yes
No
Check Tuner Supply Voltage
33V
Yes
Not Ok
Check I²C at pin 4 & 5 and tuner
Not Ok
Not Ok
Ok
I²C
Tuner
Check other functional area
Not Ok
E_14480_064.eps 170204

Figure 5-12 Fault finding tree "Unable to perform tuning"

5.8.6 Controller

Below are some guidelines for troubleshooting of the Micro Controller function. Normally Micro Controller should be checked when there is a problem of startup.

1. Check that both +3.3 V_dc and +1.8 V_dc are present.
2. Check that crystal oscillator is working.

3. Check that Power Good signal is at "high" logic, normal operation.
4. Check that HERCULES is not in standby mode. Pin 15 of HERCULES should be 0 V_dc.
5. Make sure H-drive pulse is there. This can be checked at resistor R3239. If H-drive does not exist, remove resistor R3239 to check if there is loading.

Note: When the set shuts down after a few second after power "on", the main cause is that Vg2 not aligned properly, try adjusting Vg2 during the few seconds of power "on".

5.8.7 Video Processing

No Picture

When "no picture in RF", first check if the microprocessor is functioning ok in section "Controller". If that is ok, follow the next steps.
When "no picture in AV", first check if the video source selection is functioning ok in section "Source Selection". If that is ok, follow the next steps.

1. Check that normal operating conditions are met.
2. Check that there is video signal at pin 81. If no video, demodulator part of the HERCULES is faulty, replace with new HERCULES.
3. If video signal is available at pin 81, check pin 56, 57, and 58 for the RGB signal.
4. If signal is not available, try checking the BRIGHTNESS and/or CONTRAST control, and make sure it is not at zero.
5. If still with the correct settings and no video is available, proceed to the CRT/RGB amplifier diagram.

For sets with TDA9178, follow steps below:
1. Put Option Byte 2 bit 4 to "0"; if video signal is not available, then check fault finding section "Controller", Section "Source Selection", and steps above.
2. If video is available but not correct, put Option Byte 2 bit 4 to "1", then check if LTI panel is present. If not, put LTI panel in the main chassis (connector 1221).
3. If LTI panel is in main chassis, check cable between LTI panel and main chassis (position is 1206). If it is connected, then the LTI panel is faulty, replace it.

For sets with Scavem, and Scavem does not work, follow steps below:
1. Check Scavem coil connector (position is 1361) if connected; if not, connect it.
2. If connected, check NVM "bit storage" byte 1 bit 7; if it is not "1", set it to "1".
3. If it is "1", then check the data of the NVM addresses as in the next table. If the data is not correct, then set these addresses to diagram values.
4. If it still not works, track Scavem output from pin64 of HERCULES to CRT panel.

Table 5-5 NVM default values for Scavem

Description	Address (dec)	Address (hex)	Value (hex)
SPR, WS	140	8C	00
VMA, SVM	141	8D	31
NVM_SOC_SMD	142	8E	33

5.8.8 Audio Processing

No Sound

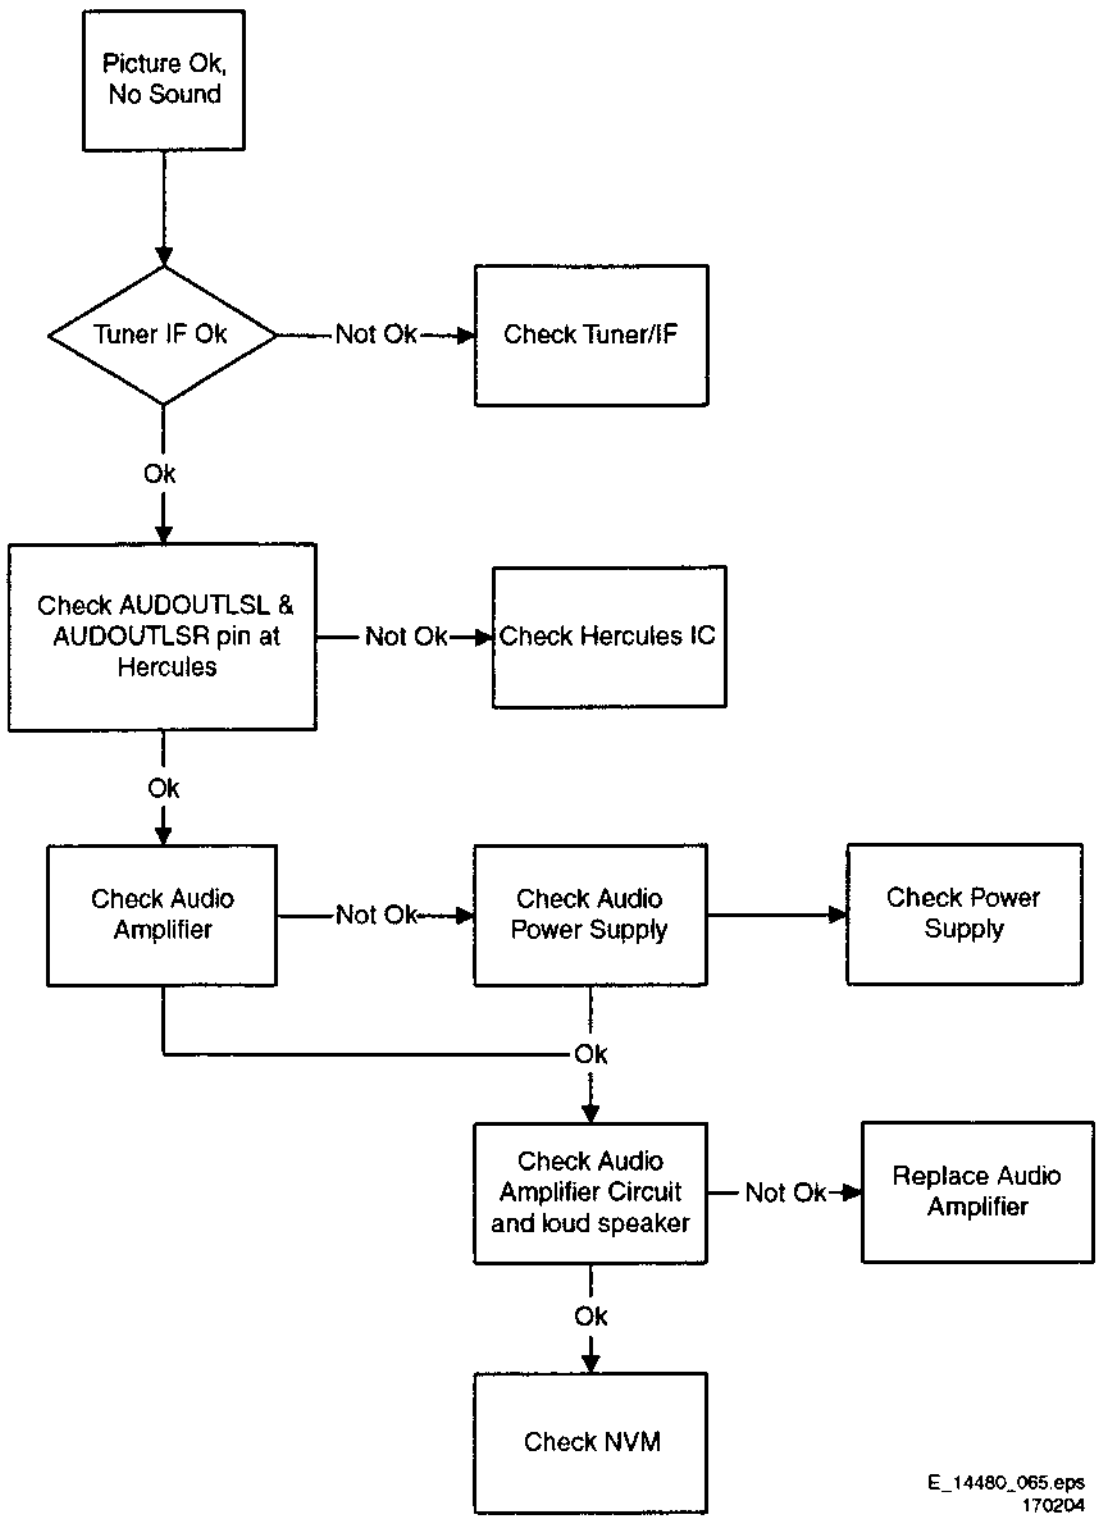

Figure 5-13 Fault finding tree "No sound"

No RF audio for QSS/Inter-Carrier stereo sets.
1. Check pin 99 and 100 for SIF signal (for QSS) or pin 104 and 105 for video with SIF (for Inter-Carrier)
2. If signal is not present, check for the QSS/FMI bit settings. Check also the NVM data.
3. If signals are present and still no audio, check the audio supply voltage +8V are present.
4. If still no audio signal at Hercules output, Hercules is faulty.

No AV audio.
1. Check troubleshooting methods in section "Source Selection".
2. Check the output of the Hercules to see if there is signal available. If no, check the normal operating condition and also the NVM data.
3. If still no audio signal at Hercules output, Hercules is faulty.

Note: If there is audio signal at Hercules output and no audio at loudspeaker, proceed to Audio Amplifier troubleshooting methods.

5.8.9 Audio Amplifier

No RF as well as AV audio at the loudspeaker:
1. Check that the normal operation condition of the amplifier is met.
2. If normal operation conditions are met, check the continuity from Hercules output to input of the amplifier.
3. If continuity is there and still no audio, check speaker wire connections. If still no audio, amplifier IC might be faulty.

6. Block Diagrams, Testpoint Overviews, and Waveforms

Wiring Diagram

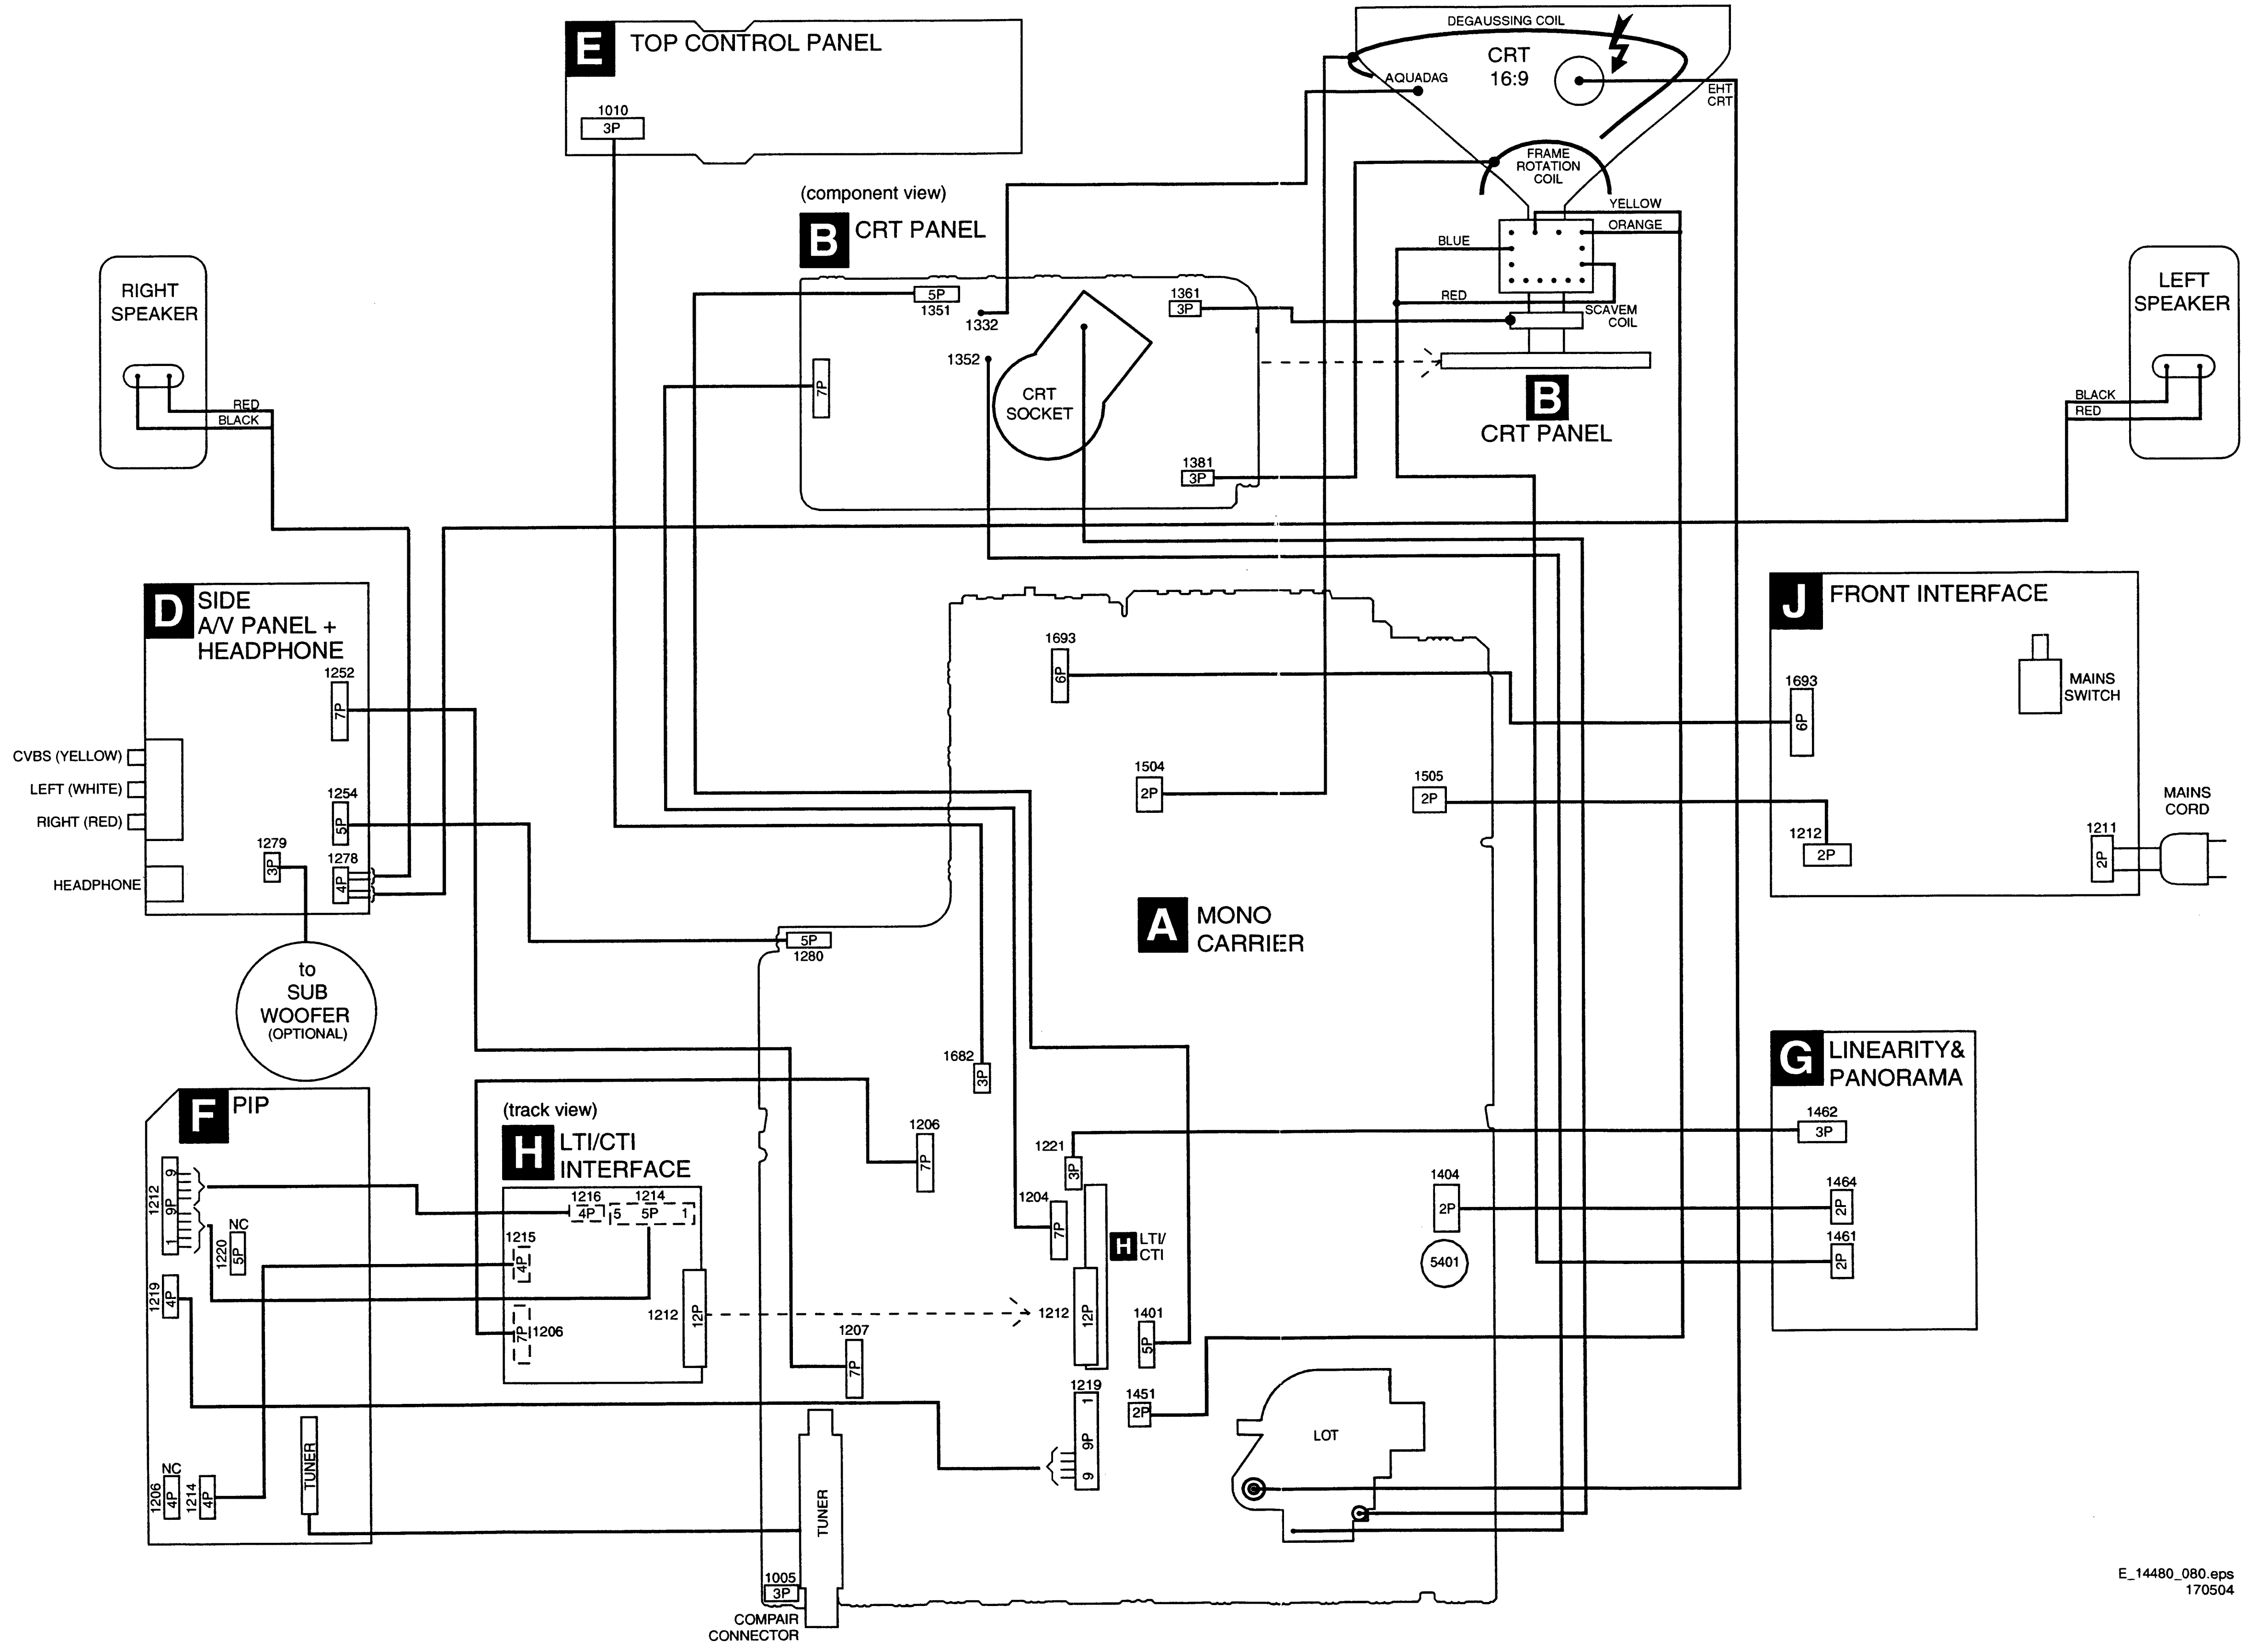
E
TOP CONTROL PANEL
1010
3P
DEGAUSSING COIL
CRT
16:9
AQUADAG
EHT
CRT
FRAME
ROTATION
COIL
YELLOW
ORANGE
BLUE
RED
SCAVEM
COIL
(component view)
B
CRT PANEL
5P
1351
1332
1361
3P
7P
1352
CRT
SOCKET
1381
3P
B
CRT PANEL
RIGHT
SPEAKER
RED
BLACK
LEFT
SPEAKER
BLACK
RED
D
SIDE
A/V PANEL +
HEADPHONE
1252
7P
CVBS (YELLOW)
LEFT (WHITE)
RIGHT (RED)
1254
5P
1279
3P
1278
4P
HEADPHONE
to
SUB
WOOFER
(OPTIONAL)
1693
6P
1504
2P
1505
2P
5P
1280
A
MONO
CARRIER
J
FRONT INTERFACE
1693
6P
MAINS
SWITCH
1212
2P
1211
2P
MAINS
CORD
G
LINEARITY&
PANORAMA
1462
3P
1464
2P
1461
2P
1682
3P
1206
7P
1221
3P
1204
7P
H
LTI/
CTI
1404
2P
5401
1212
12P
1401
5P
1451
2P
1219
1
9P
9
LOT
1207
7P
TUNER
1005
3P
COMPAIR
CONNECTOR
F
PIP
1212
9P
9
1
NC
1220
5P
1219
4P
NC
1206
4P
1214
4P
TUNER
(track view)
H
LTI/CTI
INTERFACE
1216
4P
1214
5
5P
1
1215
4P
7P
1206
1212
12P

E_14480_080.eps
170504

Block Diagram Supply and Deflection

SUPPLY AND DEFLECTION

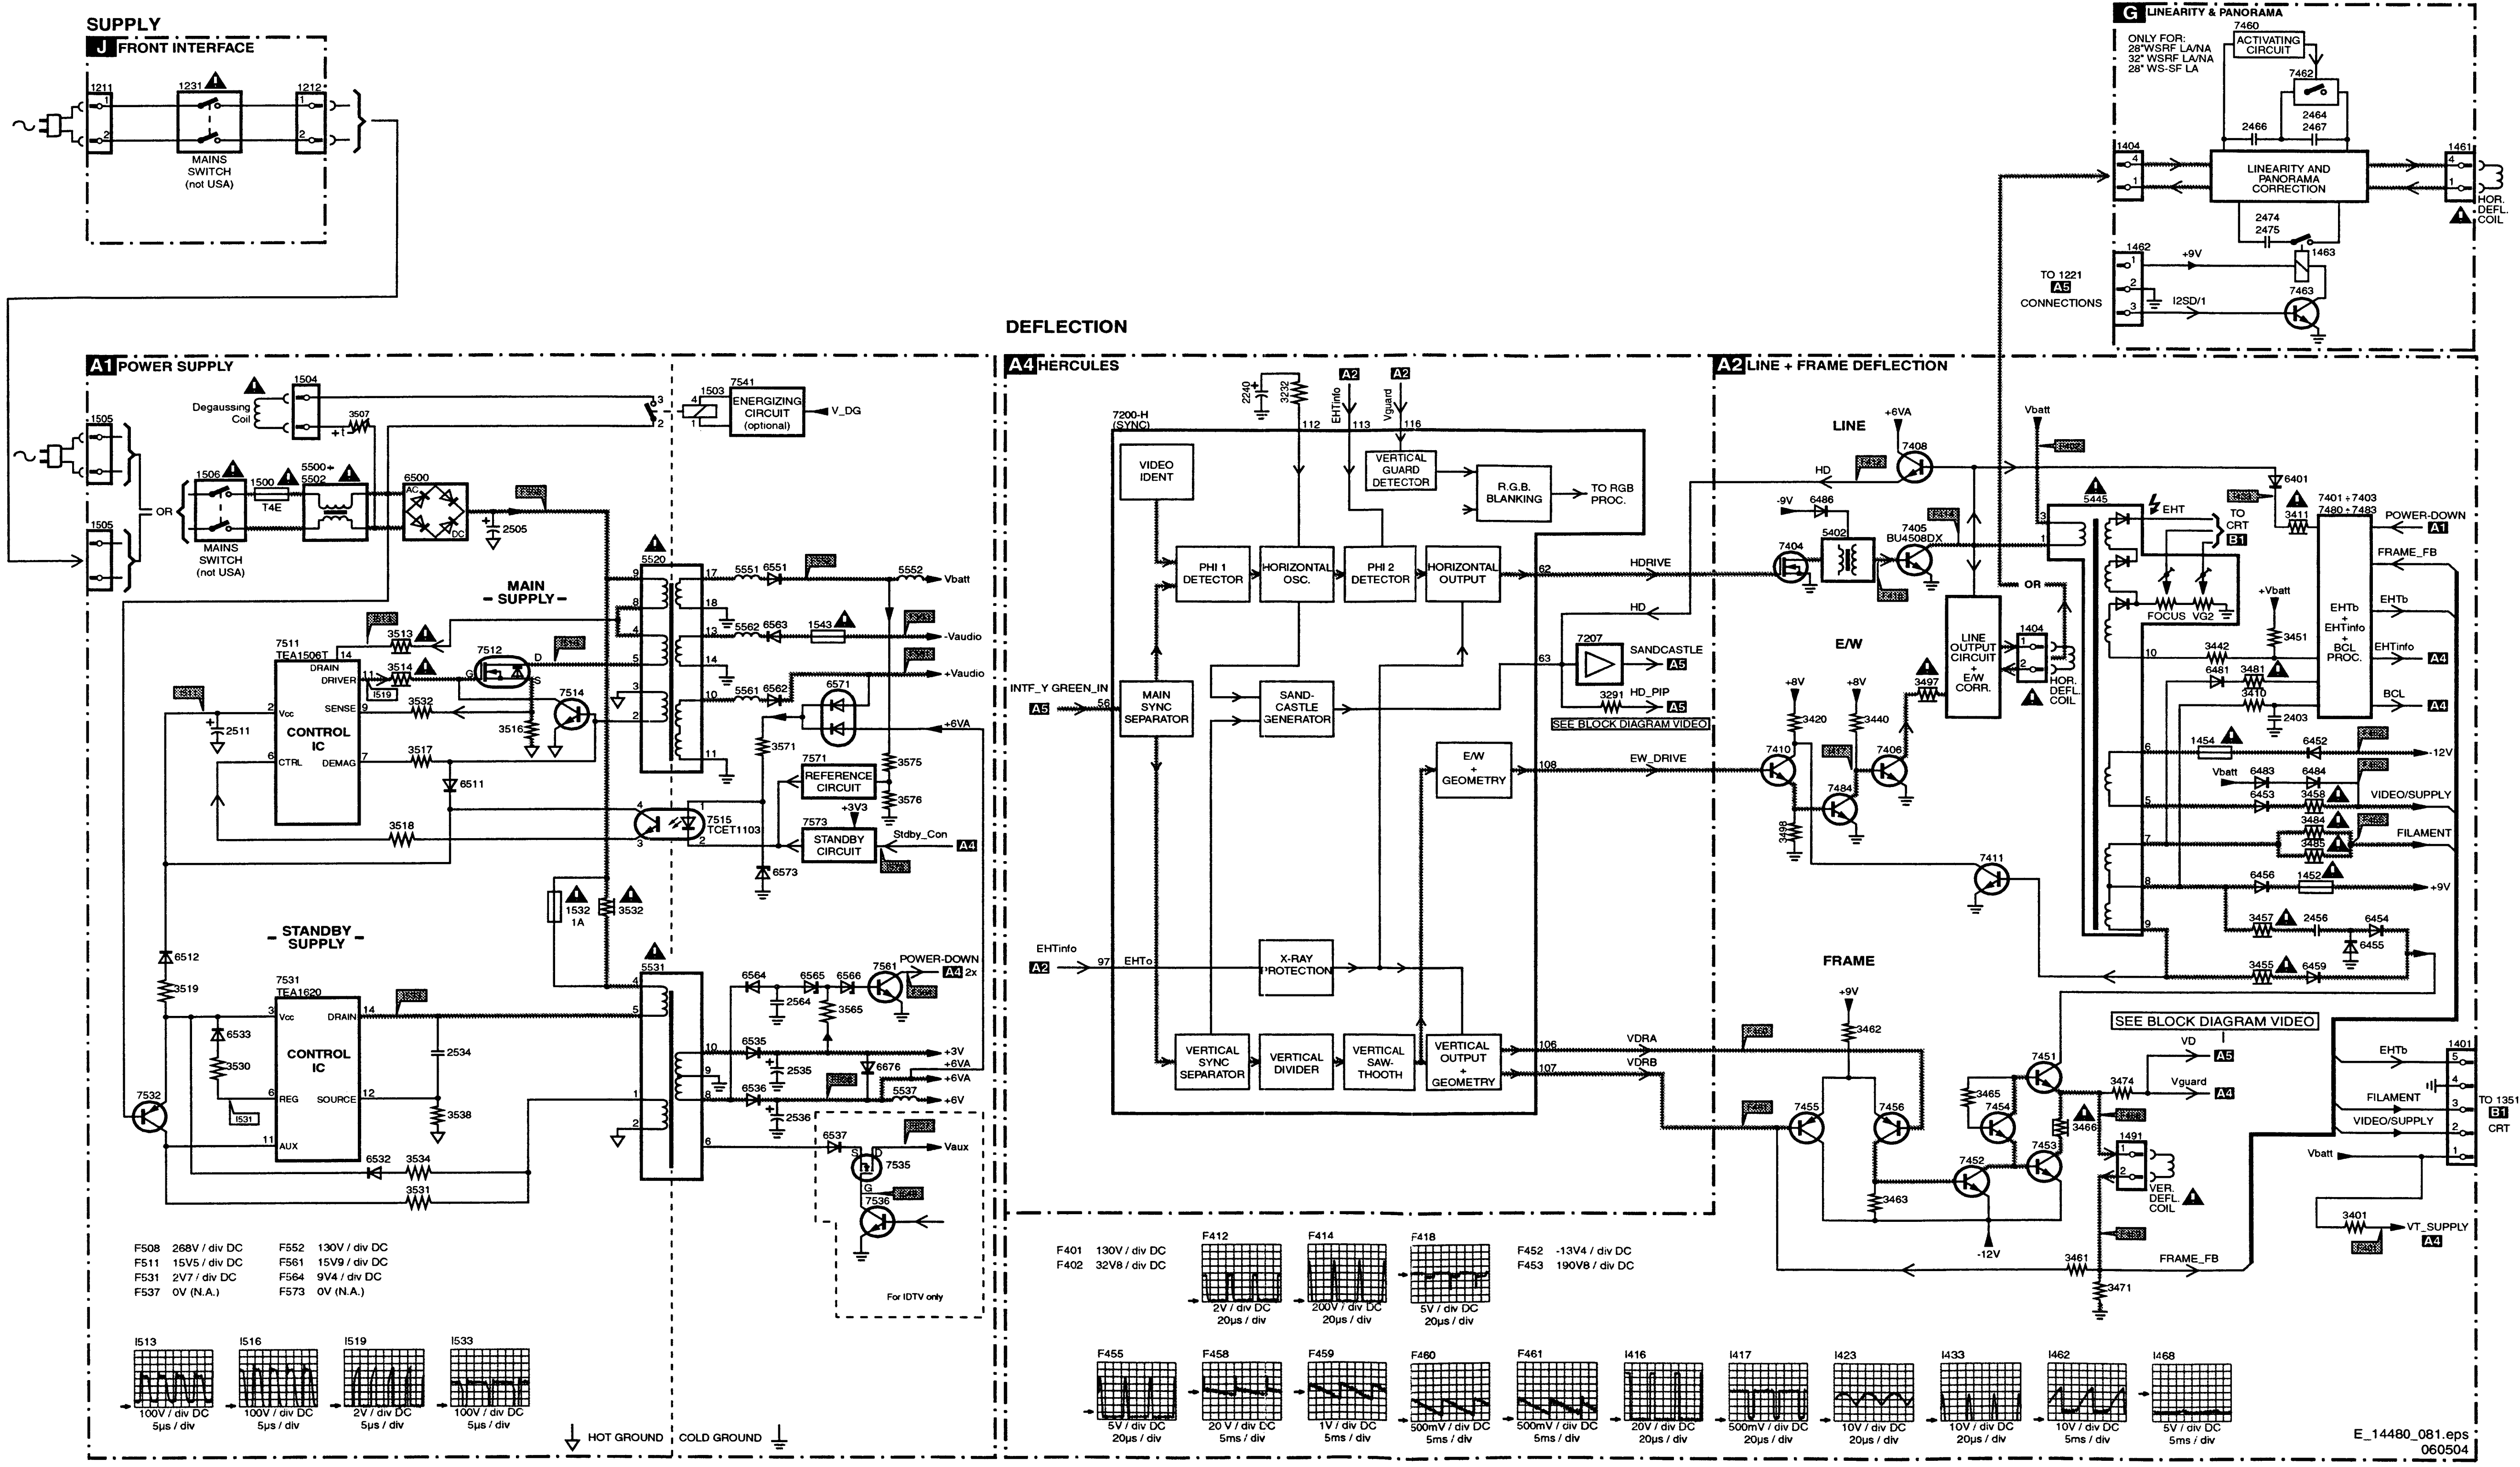
SUPPLY
J FRONT INTERFACE
1211
1231
1212
MAINS SWITCH (not USA)
A1 POWER SUPPLY
Degaussing Coil
1504
3507
1505
1506
1500 T4E
5500+ 5502
6500
2505
OR
MAINS SWITCH (not USA)
1503
7541
ENERGIZING CIRCUIT (optional)
V_DG
MAIN - SUPPLY -
5520
5551 6551
5552
Vbatt
5562 6563
1543
-Vaudio
+Vaudio
5561 6562
6571
+6VA
7571 REFERENCE CIRCUIT
3575
3576
+3V3
7573 STANDBY CIRCUIT
Stdby_Con
A4
6573
7511 TEA1506T
CONTROL IC
DRAIN
DRIVER
SENSE
Vcc
CTRL
DEMAG
3513
3514
7512
3532
3516
7514
2511
3517
6511
3518
7515 TCET1103
1532 1A
3532
- STANDBY - SUPPLY
7531 TEA1620
CONTROL IC
Vcc
DRAIN
REG
SOURCE
AUX
6512
3519
6533
3530
2534
3538
7532
6532 3534
3531
5531
6564
6565 6566
7561
POWER-DOWN
A4 2x
2564
3565
6535
2535
6676
+3V
+6VA
+6VA
5537
+6V
6536
2536
6537
7535
Vaux
7536
For IDTV only
F508 268V / div DC
F511 15V5 / div DC
F531 2V7 / div DC
F537 0V (N.A.)
F552 130V / div DC
F561 15V9 / div DC
F564 9V4 / div DC
F573 0V (N.A.)
I513
I516
I519
I533
100V / div DC 5µs / div
100V / div DC 5µs / div
2V / div DC 5µs / div
100V / div DC 5µs / div
HOT GROUND
COLD GROUND
DEFLECTION
A4 HERCULES
2240
3232
A2
EHTinfo
A2
Vguard
7200-H (SYNC)
VIDEO IDENT
VERTICAL GUARD DETECTOR
R.G.B. BLANKING
TO RGB PROC.
PHI 1 DETECTOR
HORIZONTAL OSC.
PHI 2 DETECTOR
HORIZONTAL OUTPUT
HDRIVE
HD
7207
SANDCASTLE
A5
3291 HD_PIP
A5
SEE BLOCK DIAGRAM VIDEO
INTF_Y GREEN_IN
A5
MAIN SYNC SEPARATOR
SAND-CASTLE GENERATOR
E/W + GEOMETRY
EW_DRIVE
EHTinfo
A2
EHTo
X-RAY PROTECTION
VERTICAL SYNC SEPARATOR
VERTICAL DIVIDER
VERTICAL SAW-THOOTH
VERTICAL OUTPUT + GEOMETRY
VDRA
VDRB
F401 130V / div DC
F402 32V8 / div DC
F412
F414
F418
2V / div DC 20µs / div
200V / div DC 20µs / div
5V / div DC 20µs / div
F452 -13V4 / div DC
F453 190V8 / div DC
A2 LINE + FRAME DEFLECTION
LINE
+6VA
7408
HD
-9V 6486
5402
7404
7405 BU4508DX
Vbatt
5445
EHT
TO CRT B1
FOCUS VG2
6401
7401÷7403 7480÷7483
POWER-DOWN A1
FRAME_FB
EHTb
EHTb + EHTinfo + BCL PROC.
EHTinfo A4
BCL A4
LINE OUTPUT CIRCUIT + E/W CORR.
OR
1404
HOR. DEFL. COIL
E/W
+8V
+8V
3420
3440
3497
7410
7406
7484
3498
3442
6481
3481
3410
2403
3451
+Vbatt
1454
6452
-12V
6483 6484
6453 3458
VIDEO/SUPPLY
3484
3485
FILAMENT
7411
6456
1452
+9V
3457
2456
6454
6455
3455
6459
FRAME
+9V
3462
SEE BLOCK DIAGRAM VIDEO
VD
A5
3474
Vguard
A4
7451
7455
7456
3465
7454
3466
7453
7452
3463
1491
VER. DEFL. COIL
-12V
3461
3471
FRAME_FB
EHTb
FILAMENT
VIDEO/SUPPLY
Vbatt
1401
TO 1351 B1 CRT
3401
VT_SUPPLY
A4
G LINEARITY & PANORAMA
ONLY FOR: 28"WSRF LA/NA 32" WSRF LA/NA 28" WS-SF LA
7460 ACTIVATING CIRCUIT
7462
2466
2464
2467
1404
LINEARITY AND PANORAMA CORRECTION
1461
HOR. DEFL. COIL
2474
2475
1463
1462
+9V
TO 1221 A5 CONNECTIONS
I2SD/1
7463
F455
F458
F459
F460
F461
I416
I417
I423
I433
I462
I468
5V / div DC 20µs / div
20 V / div DC 5ms / div
1V / div DC 5ms / div
500mV / div DC 5ms / div
500mV / div DC 5ms / div
20V / div DC 20µs / div
500mV / div DC 20µs / div
10V / div DC 20µs / div
10V / div DC 20µs / div
10V / div DC 5ms / div
5V / div DC 5ms / div
E_14480_081.eps 060504

Testpoint Overview Mono Carrier

F001	A8
F002	A7
F003	A7
F004	A7
F005	A8
F006	A6
F007	A8
F008	A8
F009	B4
F010	A7
F011	A8
F200	B4
F201	C5
F202	B5
F203	B5
F204	C5
F205	C5
F206	C6
F207	B5
F208	B6
F209	A5
F210	A4
F211	A4
F212	A5
F213	A5
F214	B5
F215	B6
F216	C6
F217	C6
F218	C6
F219	B7
F220	B7
F221	B7
F222	C7
F223	B7
F224	C6
F225	C6
F226	B6
F227	A4
F228	C5
F229	C5
F230	B5
F232	B5
F233	B5
F237	B5
F238	B4
F239	B5
F240	C5
F241	C6
F242	B6
F243	C6
F244	B5
F245	C6
F247	A6
F248	A6
F249	A7
F250	C6
F251	B5
F270	B5
F401	C4
F402	D6
F404	D6
F407	D6
F412	C6
F414	E7
F415	E6
F416	E6
F417	E5
F418	D6
F419	D6
F420	D7
F451	C8
F452	C7
F453	D7
F454	C7
F455	D7
F456	E7
F457	E7
F458	C7
F459	C7
F460	C7
F461	C7
F462	E7
F463	D8
F464	E5
F465	E5
F466	E8
F500	C2
F501	D2
F502	D2
F503	E2
F504	E2
F505	E2
F506	E2
F507	E2
F508	E3
F509	E4
F510	D5
F535	C4
F536	C5
F537	C3
F541	C3
F542	C3
F551	C5
F552	D5
F561	C4
F562	D4
F563	C4
F564	C5
F573	C5
F581	B3
F582	B4
F583	C4
F682	B1
F683	B1
F685	B1
F691	C1
F692	D1
F693	E1
F694	C1
F695	C1
F696	D1
F697	E1
F698	C1
F699	D1
F701	C8
F702	C8
F703	C8
F704	C8
F705	B8
F706	C8
F707	B8
F708	B8
F709	B8
F710	B8
F711	C8
F712	B8
F713	B8
F714	B8
F715	B7
F716	A8
F717	A8
F718	A8
F719	B8
F731	C8
F732	C8
F733	C8
F734	C8
F735	B8
F736	B7
F737	B8
F738	B7
F739	B8
F751	A7
F752	A7
F901	B3
F903	B2
F904	B1
F905	B2
F910	B3
F911	B3
F950	B3
F951	B3
F952	A3
F953	A3
F955	A3
I001	A8
I002	A8
I003	A7
I004	A7
I005	A5
I006	A5
I007	A7
I008	A5
I009	A5
I010	A5
I011	A7
I012	A7
I013	A6
I014	A8
I015	A8
I016	A7
I017	B5
I201	A5
I203	A5
I204	A5
I205	A5
I206	A5
I207	B6
I208	C5
I209	B6
I210	B6
I211	B6
I212	B6
I213	A5
I214	A5
I215	A6
I216	B6
I217	B7
I218	B6
I219	B6
I222	B5
I223	B5
I224	B4
I225	B5
I226	B6
I227	A5
I228	B5
I229	C5
I230	B5
I231	B5
I232	A7
I233	B7
I234	A4
I235	B5
I236	B5
I240	A4
I241	A4
I401	E7
I402	E6
I403	E7
I404	E7
I405	E7
I406	E7
I407	E8
I409	E8
I410	E6
I412	E6
I413	C6
I414	D6
I415	C6
I416	C5
I417	D5
I418	D6
I419	C6
I421	D7
I422	D7
I423	D5
I424	E8
I425	C6
I426	D7
I427	D5
I428	D6
I429	E8
I430	E6
I431	C7
I432	D6
I433	E6
I434	C5
I443	E7
I444	E7
I445	E7
I446	C5
I448	E7
I449	D8
I451	D7
I452	E8
I453	D7
I455	D7
I456	D8
I457	D7
I458	D7
I459	D7
I460	C8
I461	C8
I462	C8
I463	D8
I464	C8
I465	E7
I466	D7
I467	E8
I468	D7
I469	E8
I470	D8
I471	C8
I472	C7
I473	E5
I474	E6
I475	D8
I501	E3
I502	E3
I503	E2
I504	E2
I505	D1
I506	E3
I507	D3
I511	E5
I513	E5
I514	D4
I515	E4
I516	E4
I517	E4
I518	E5
I519	E5
I520	E5
I521	E4
I523	E5
I524	E5
I527	E5
I529	D3
I531	D3
I532	D3
I533	D3
I535	D3
I536	D3
I537	C4
I538	C3
I539	D3
I540	D4
I541	D4
I542	C3
I543	C2
I544	D3
I545	C3
I546	C3
I547	C3
I548	C3
I551	D5
I552	D5
I553	D3
I554	D4
I555	D4
I556	D4
I557	D3
I561	D4
I562	D4
I565	C4
I571	D5
I572	C5
I573	D5
I574	D5
I575	D5
I576	D5
I577	D5
I578	D5
I579	D4
I582	B4
I583	B4
I584	B4
I585	B4
I587	C4
I588	B4
I681	E1
I682	B1
I683	B1
I686	C1
I687	D1
I688	C1
I689	D1
I691	E1
I693	D1
I701	C7
I702	C8
I704	C8
I705	B8
I707	C8
I709	B7
I710	B7
I711	B8
I713	A7
I714	B7
I715	C7
I716	C8
I717	C7
I718	C7
I719	B7
I720	A7
I721	B8
I722	B7
I727	A7
I728	B7
I729	C7
I730	C7
I731	C7
I732	B7
I733	B7
I734	C7
I735	B7
I736	B7
I739	B7
I909	B3
I910	C3
I911	C3
I913	C3
I914	C2
I915	C3
I916	C2
I918	C3
I919	C2
I920	B3
I921	C2
I922	C2
I924	B3
I925	B3
I926	B2
I927	C2
I928	B1
I930	C2
I934	B2
I935	B1
I936	B2
I937	C2
I938	B2
I939	B2
I940	B2
I941	B2
I942	C3
I943	B2
I944	C3
I945	C2
I946	B3
I948	B3
I951	B3
I952	A3
I953	A3
I954	A3
I955	B3
I956	A3
I957	A3
I958	B4
I959	B4

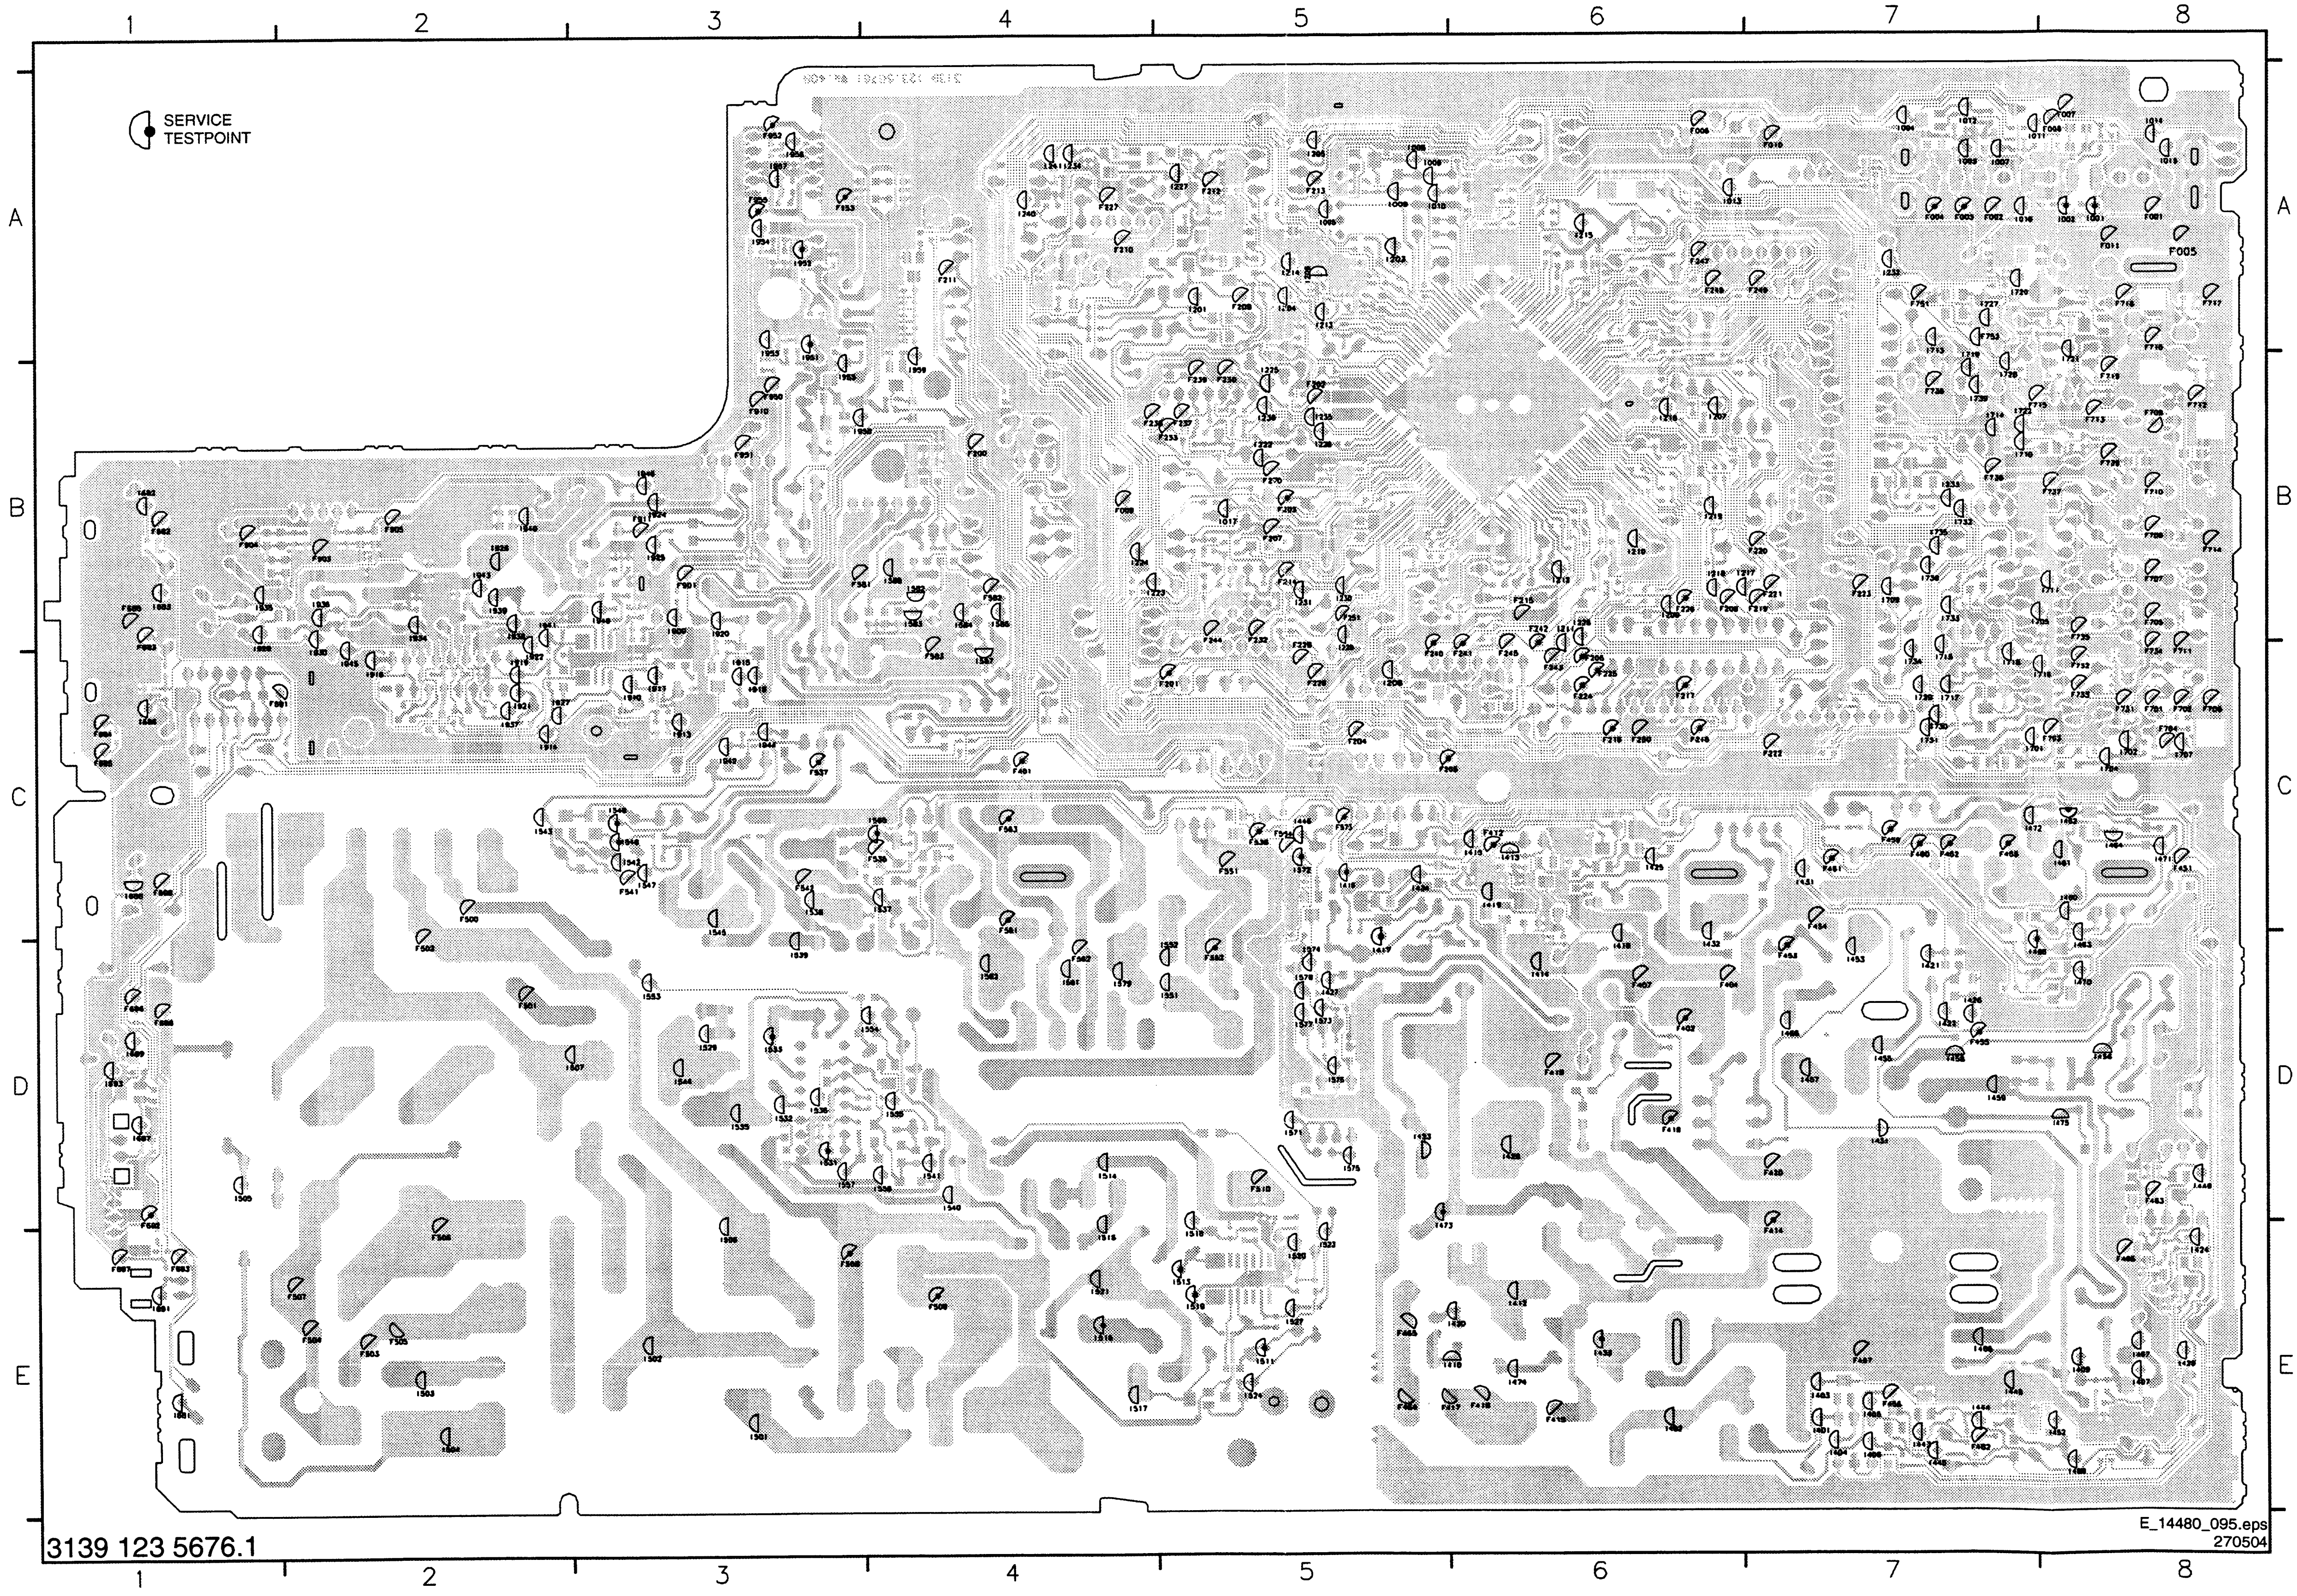

Block Diagram Video

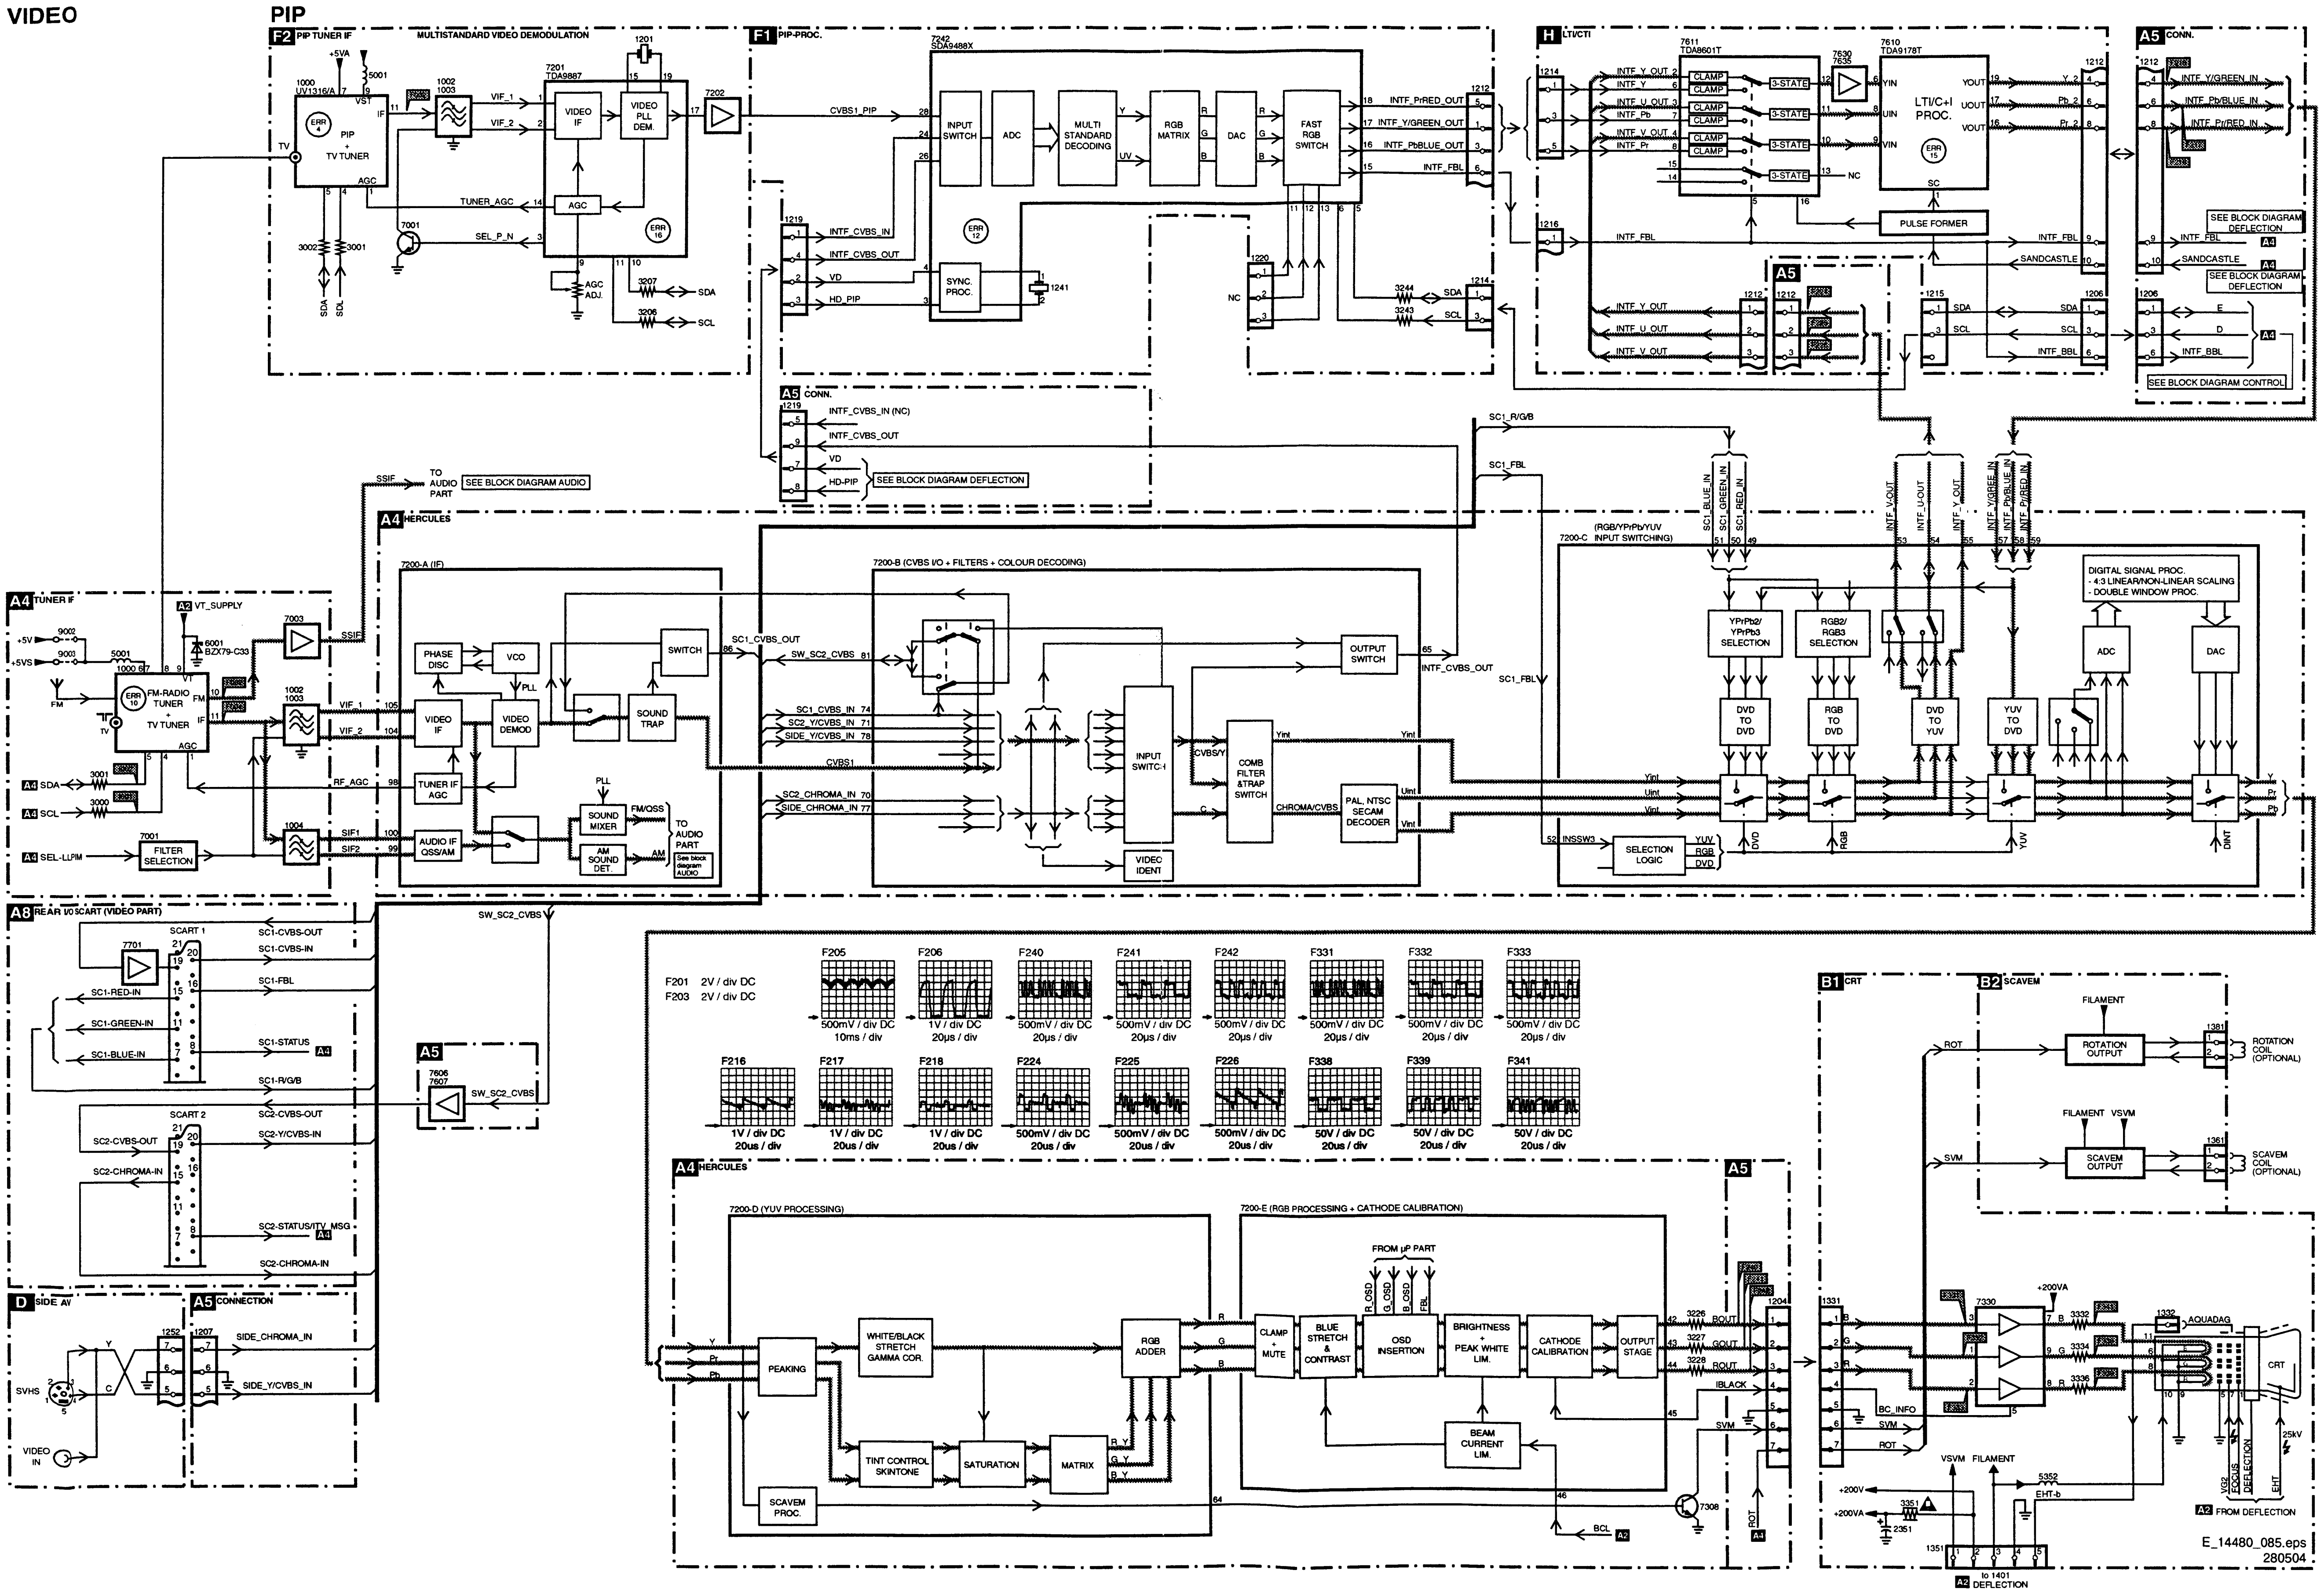
VIDEO
PIP
F2 PIP TUNER IF
MULTISTANDARD VIDEO DEMODULATION
1000 UV1316/A
PIP + TV TUNER
TV
VIF_1
VIF_2
7201 TDA9887
VIDEO IF
VIDEO PLL DEM.
AGC
TUNER_AGC
SEL_P_N
7001
7202
SDA
SCL
AGC ADJ.
F1 PIP-PROC.
7242 SDA9488X
CVBS1_PIP
INPUT SWITCH
ADC
MULTI STANDARD DECODING
RGB MATRIX
DAC
FAST RGB SWITCH
SYNC. PROC.
INTF_PrRED_OUT
INTF_Y/GREEN_OUT
INTF_PbBLUE_OUT
INTF_FBL
INTF_CVBS_IN
INTF_CVBS_OUT
VD
HD_PIP
1241
A5 CONN.
INTF_CVBS_IN (NC)
SEE BLOCK DIAGRAM DEFLECTION
H LTI/CTI
7611 TDA8601T
CLAMP
3-STATE
7630 7635
7610 TDA9178T
LTI/C+I PROC.
YIN
UIN
VIN
YOUT
UOUT
VOUT
PULSE FORMER
INTF_Y_OUT
INTF_U_OUT
INTF_V_OUT
SANDCASTLE
A5 CONN.
INTF_Y/GREEN_IN
INTF_PbBLUE_IN
INTF_PrRED_IN
SEE BLOCK DIAGRAM CONTROL
SC1_R/G/B
SC1_FBL
SSIF
TO AUDIO PART
SEE BLOCK DIAGRAM AUDIO
A4 HERCULES
A4 TUNER IF
VT_SUPPLY
6001 BZX79-C33
7003
FM-RADIO TUNER + TV TUNER
FM
1002 1003
1004
RF_AGC
SIF1
SIF2
FILTER SELECTION
SEL-LL/M
7200-A (IF)
PHASE DISC
VCO
SWITCH
VIDEO IF
VIDEO DEMOD
SOUND TRAP
TUNER IF AGC
AUDIO IF QSS/AM
SOUND MIXER
AM SOUND DET.
FM/QSS
7200-B (CVBS I/O + FILTERS + COLOUR DECODING)
SC1_CVBS_OUT
SW_SC2_CVBS
SC1_CVBS_IN
SC2_Y/CVBS_IN
SIDE_Y/CVBS_IN
SC2_CHROMA_IN
SIDE_CHROMA_IN
OUTPUT SWITCH
INPUT SWITCH-I
COMB FILTER &TRAP SWITCH
PAL, NTSC SECAM DECODER
VIDEO IDENT
INTF_CVBS_OUT
7200-C INPUT SWITCHING
(RGB/YPrPb/YUV)
SC1_BLUE_IN
SC1_GREEN_IN
SC1_RED_IN
DIGITAL SIGNAL PROC. - 4:3 LINEAR/NON-LINEAR SCALING - DOUBLE WINDOW PROC.
YPrPb2/ YPrPb3 SELECTION
RGB2/ RGB3 SELECTION
ADC
DAC
DVD TO DVD
RGB TO DVD
DVD TO YUV
YUV TO DVD
INSSW3
SELECTION LOGIC
A8 REAR I/O SCART (VIDEO PART)
SCART 1
SC1-CVBS-OUT
SC1-CVBS-IN
SC1-FBL
SC1-RED-IN
SC1-GREEN-IN
SC1-BLUE-IN
SC1-STATUS
SC1-R/G/B
SCART 2
SC2-CVBS-OUT
SC2-Y/CVBS-IN
SC2-CHROMA-IN
SC2-STATUS/ITV_MSG
SC2-CHROMA-IN
A5 7606 7607 SW_SC2_CVBS
D SIDE AV
SVHS
VIDEO IN
A5 CONNECTION
SIDE_CHROMA_IN
SIDE_Y/CVBS_IN
F201 2V / div DC
F203 2V / div DC
F205 500mV / div DC 10ms / div
F206 1V / div DC 20µs / div
F240 500mV / div DC 20µs / div
F241 500mV / div DC 20µs / div
F242 500mV / div DC 20µs / div
F331 500mV / div DC 20µs / div
F332 500mV / div DC 20µs / div
F333 500mV / div DC 20µs / div
F216 1V / div DC 20us / div
F217 1V / div DC 20us / div
F218 1V / div DC 20us / div
F224 500mV / div DC 20us / div
F225 500mV / div DC 20us / div
F226 500mV / div DC 20us / div
F338 50V / div DC 20us / div
F339 50V / div DC 20us / div
F341 50V / div DC 20us / div
A4 HERCULES
7200-D (YUV PROCESSING)
PEAKING
WHITE/BLACK STRETCH GAMMA COR.
TINT CONTROL SKINTONE
SATURATION
MATRIX
RGB ADDER
SCAVEM PROC.
7200-E (RGB PROCESSING + CATHODE CALIBRATION)
FROM µP PART
CLAMP + MUTE
BLUE STRETCH & CONTRAST
OSD INSERTION
BRIGHTNESS + PEAK WHITE LIM.
CATHODE CALIBRATION
OUTPUT STAGE
BEAM CURRENT LIM.
BOUT
GOUT
ROUT
IBLACK
SVM
BCL
7308
A5
B1 CRT
B2 SCAVEM
FILAMENT
ROTATION OUTPUT
ROTATION COIL (OPTIONAL)
SCAVEM OUTPUT
SCAVEM COIL (OPTIONAL)
ROT
7330
+200VA
AQUADAG
CRT
BC_INFO
VSVM
+200V
EHT-b
FOCUS
DEFLECTION
EHT
25kV
FROM DEFLECTION
to 1401 DEFLECTION
E_14480_085.eps 280504

Testpoint Overview CRT, LTI & PIP Panel

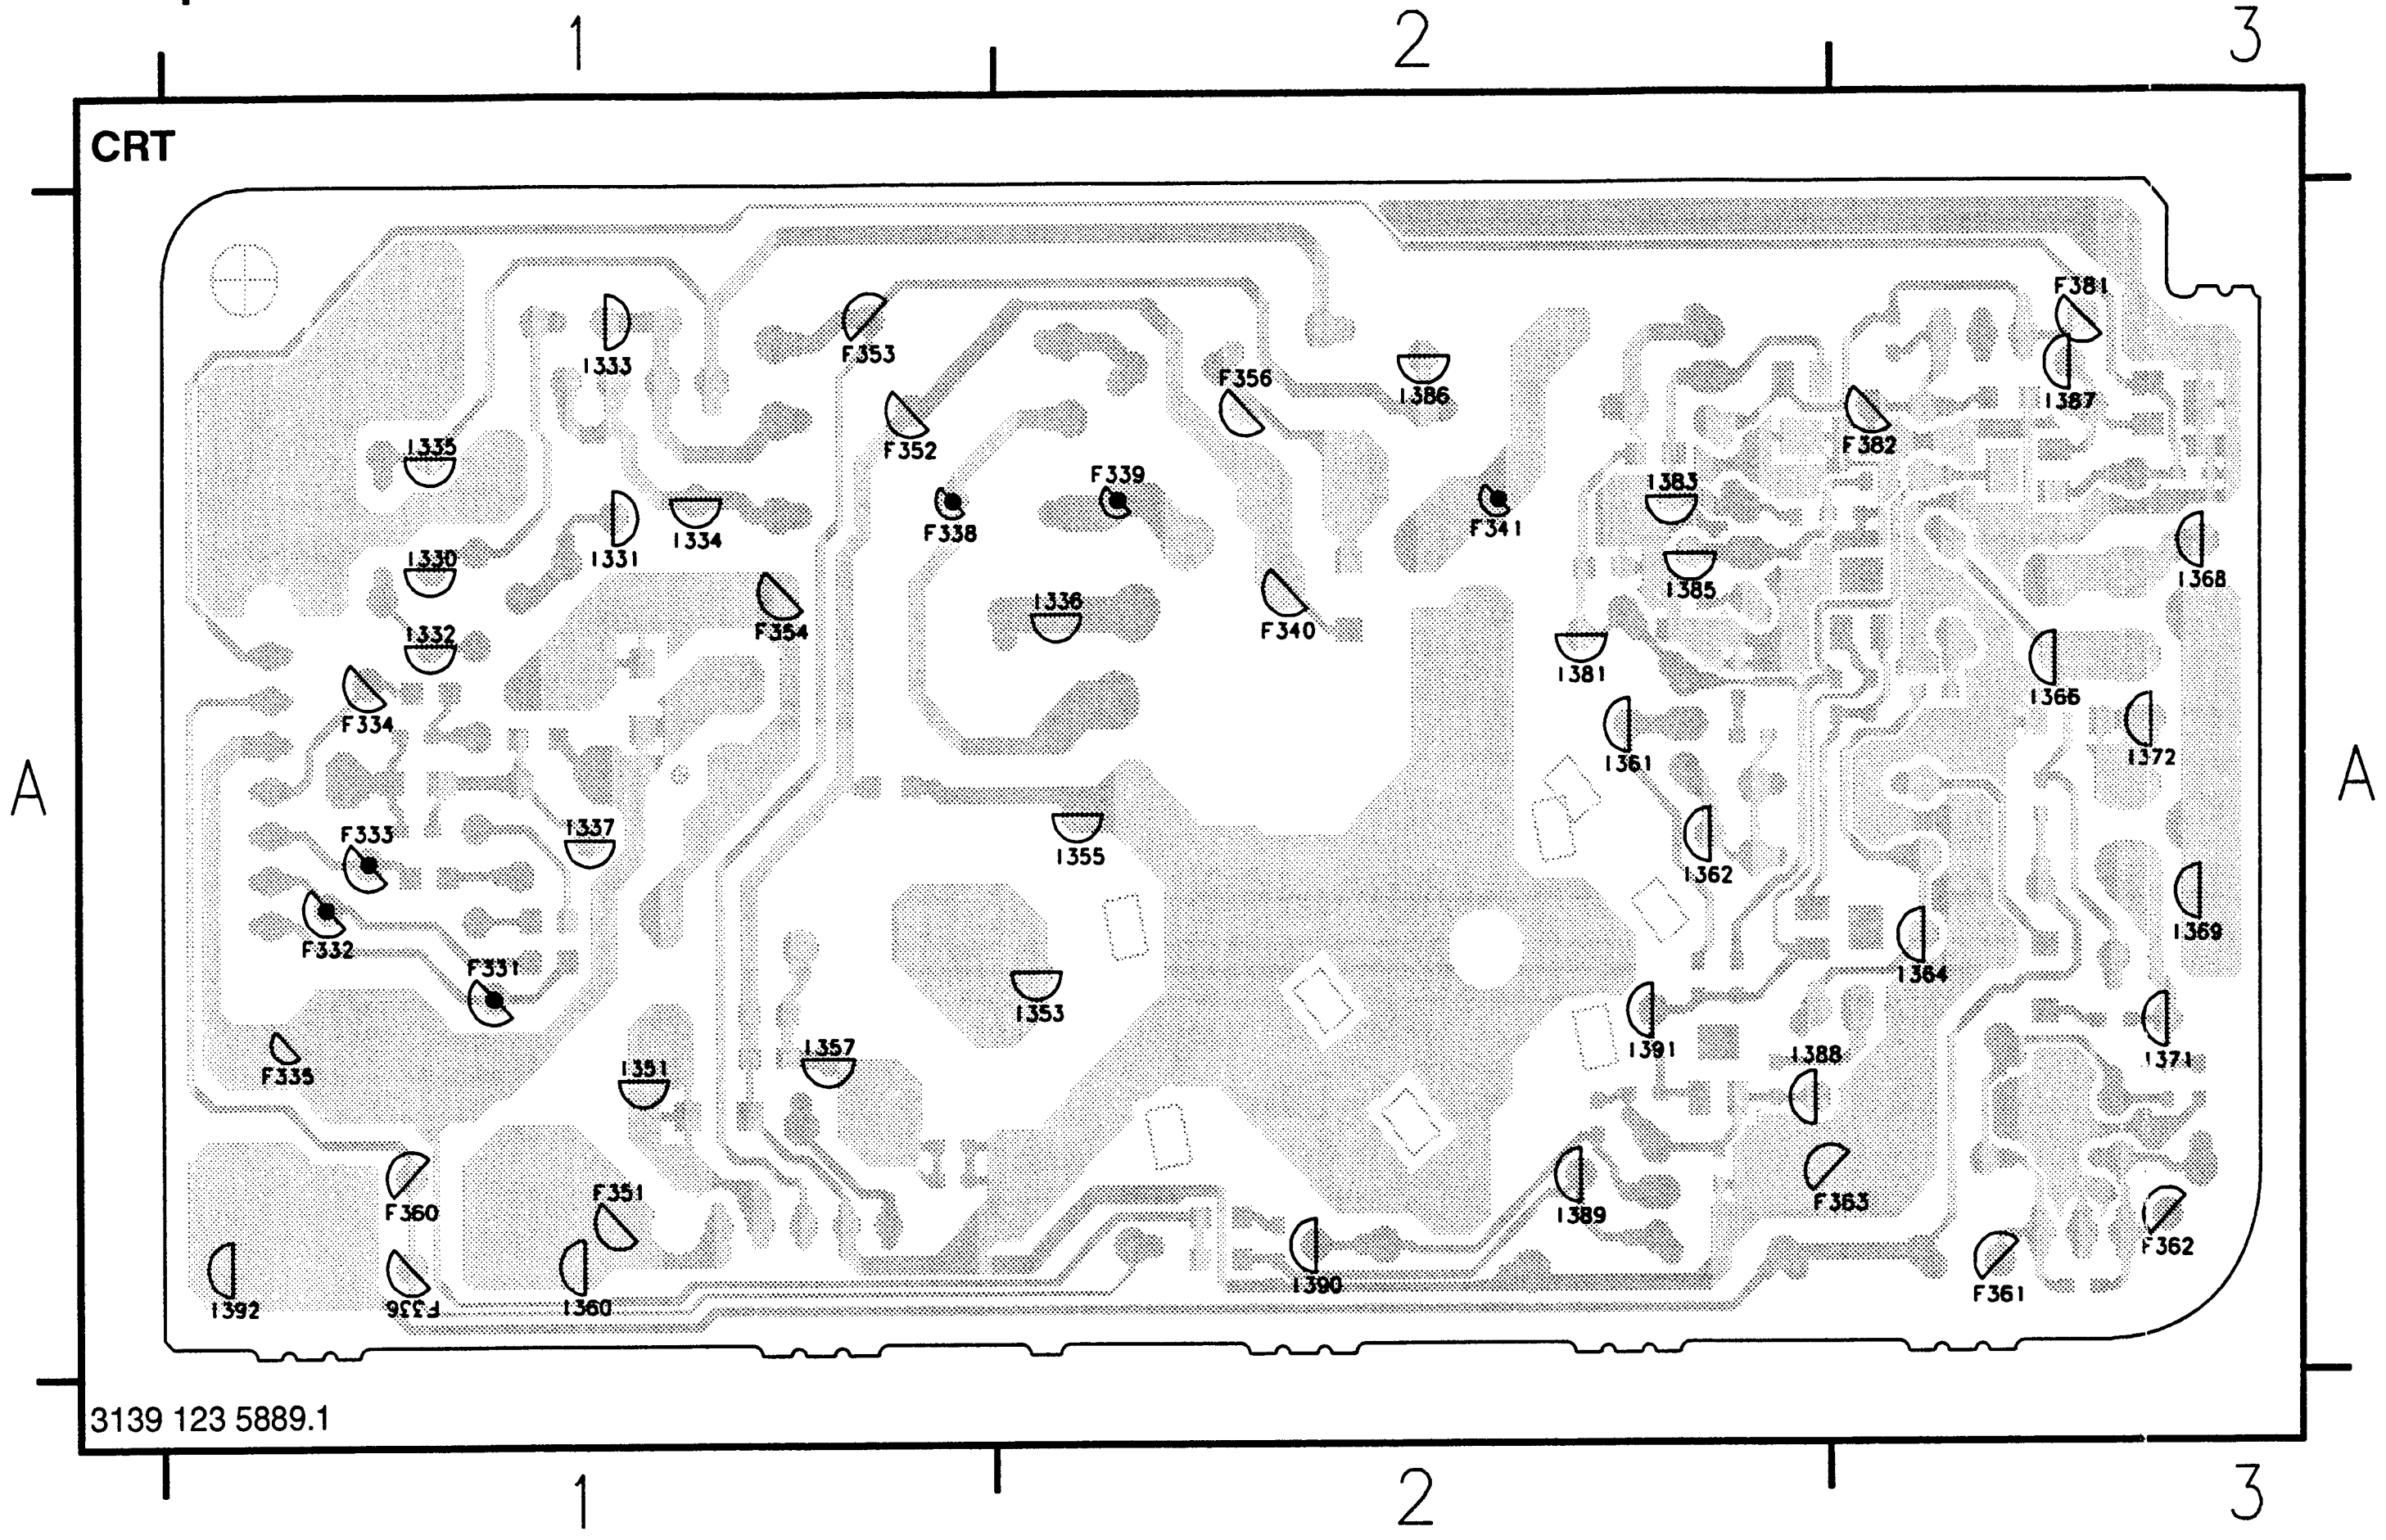

F331	A1
F332	A1
F333	A1
F334	A1
F335	A1
F336	A1
F338	A1
F339	A2
F340	A2
F341	A2
F351	A1
F352	A1
F353	A1
F354	A1
F356	A2
F360	A1
F361	A3
F362	A3
F363	A3
F381	A3
F382	A3
I330	A1
I331	A1
I332	A1
I333	A1
I334	A1
I335	A1
I336	A2
I337	A1
I351	A1
I353	A2
I355	A2
I357	A1
I360	A1
I361	A2
I362	A2
I364	A3
I366	A3
I368	A3
I369	A3
I371	A3
I372	A3
I381	A2
I383	A2
I385	A2
I386	A2
I387	A3
I388	A2
I389	A2
I390	A2
I391	A2
I392	A1

1610	A2
1611	A2
1612	A1
1613	A2
1614	A1
1616	A1
1617	A2
1618	A1
1619	A2
1620	A1
1621	A2
1622	A1
1623	A1
1624	A2
1626	A2
1627	A1
1628	A1
1633	A2

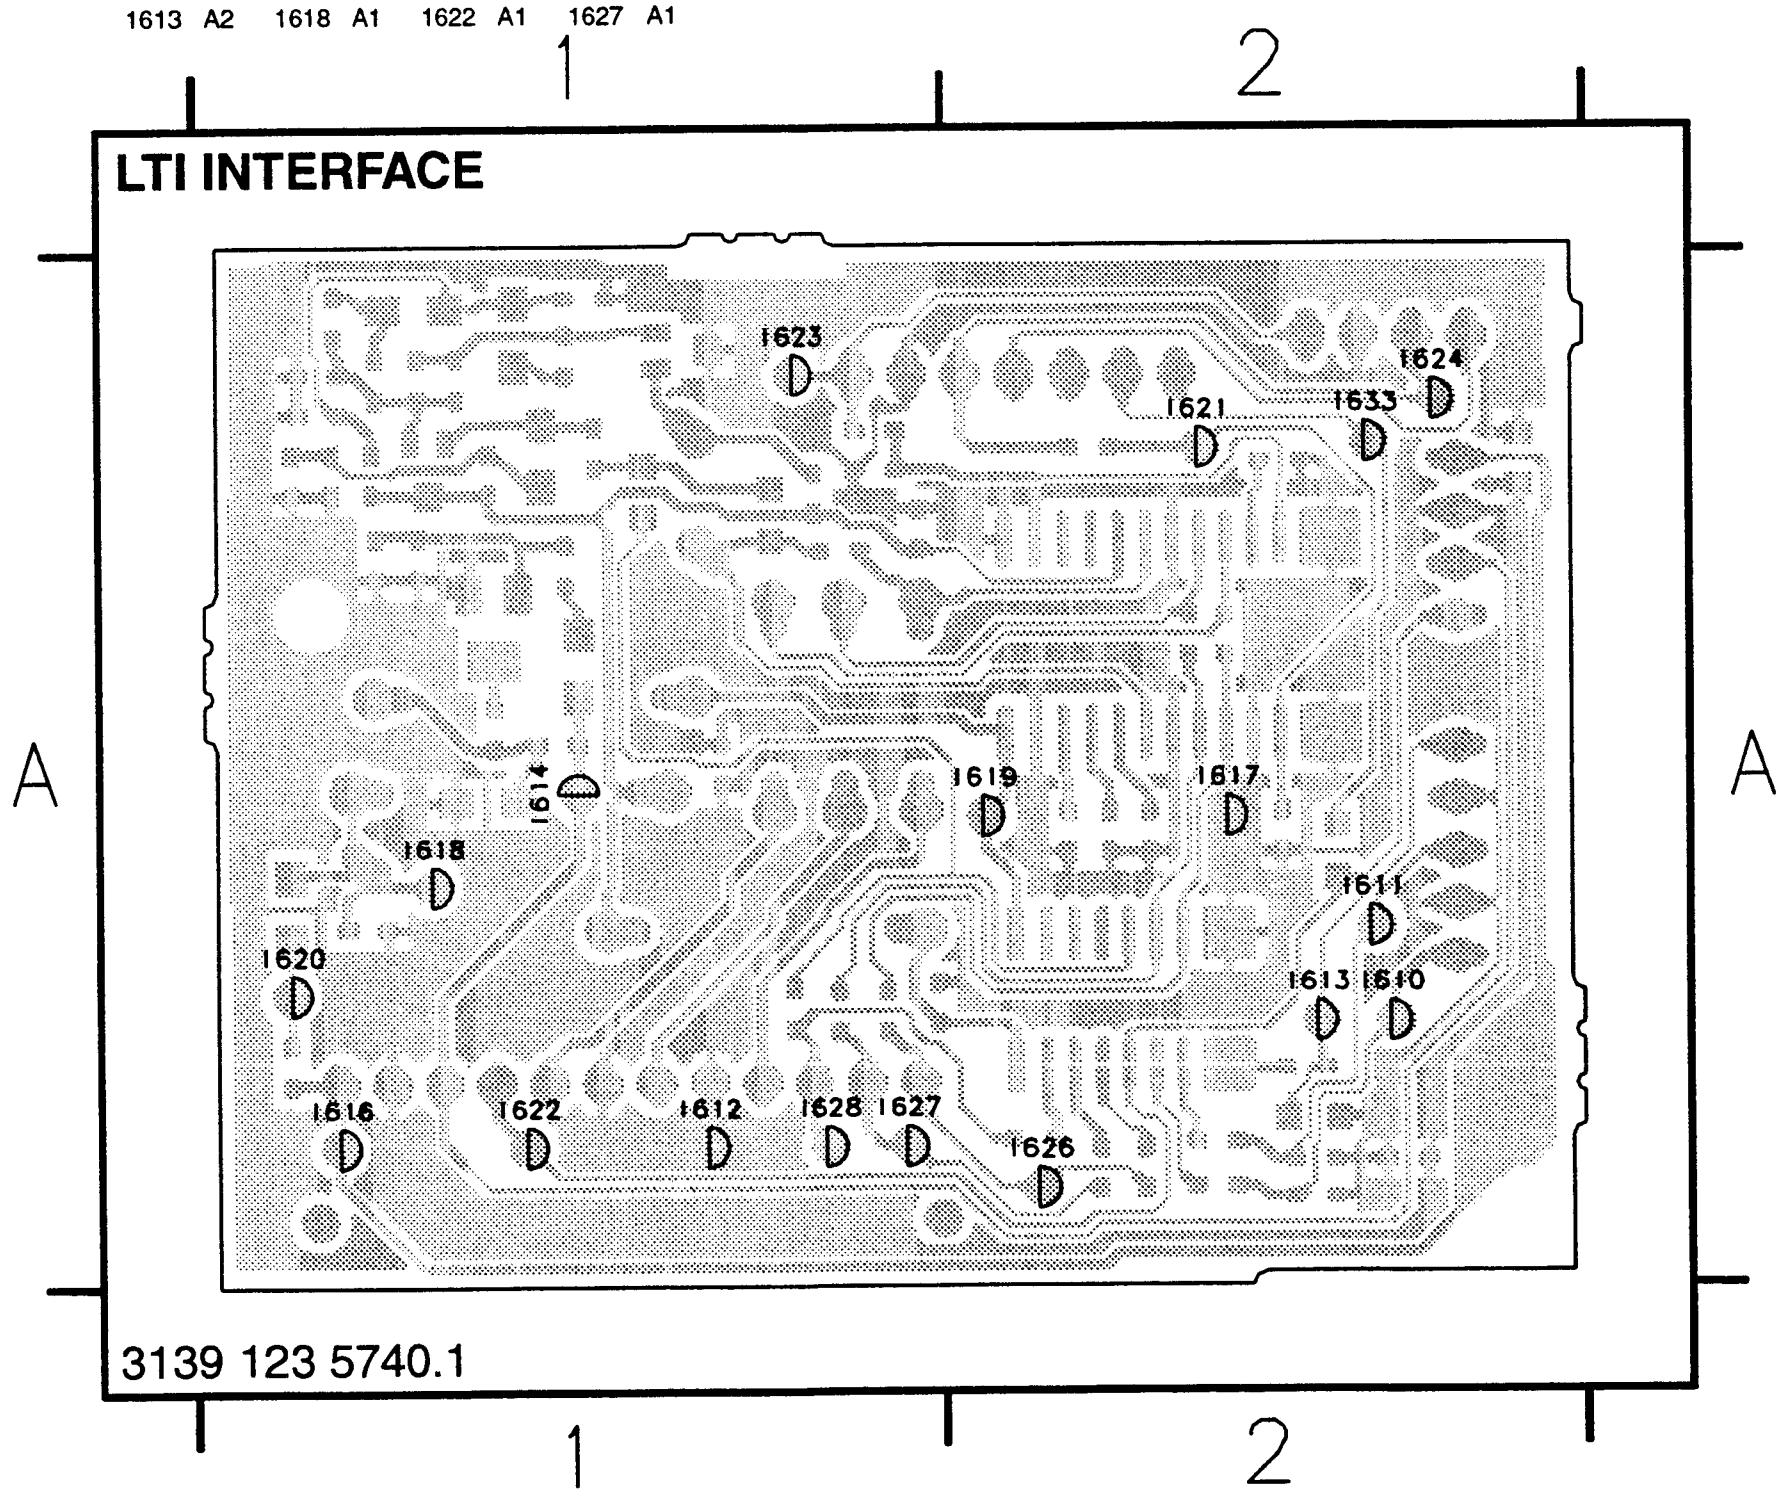

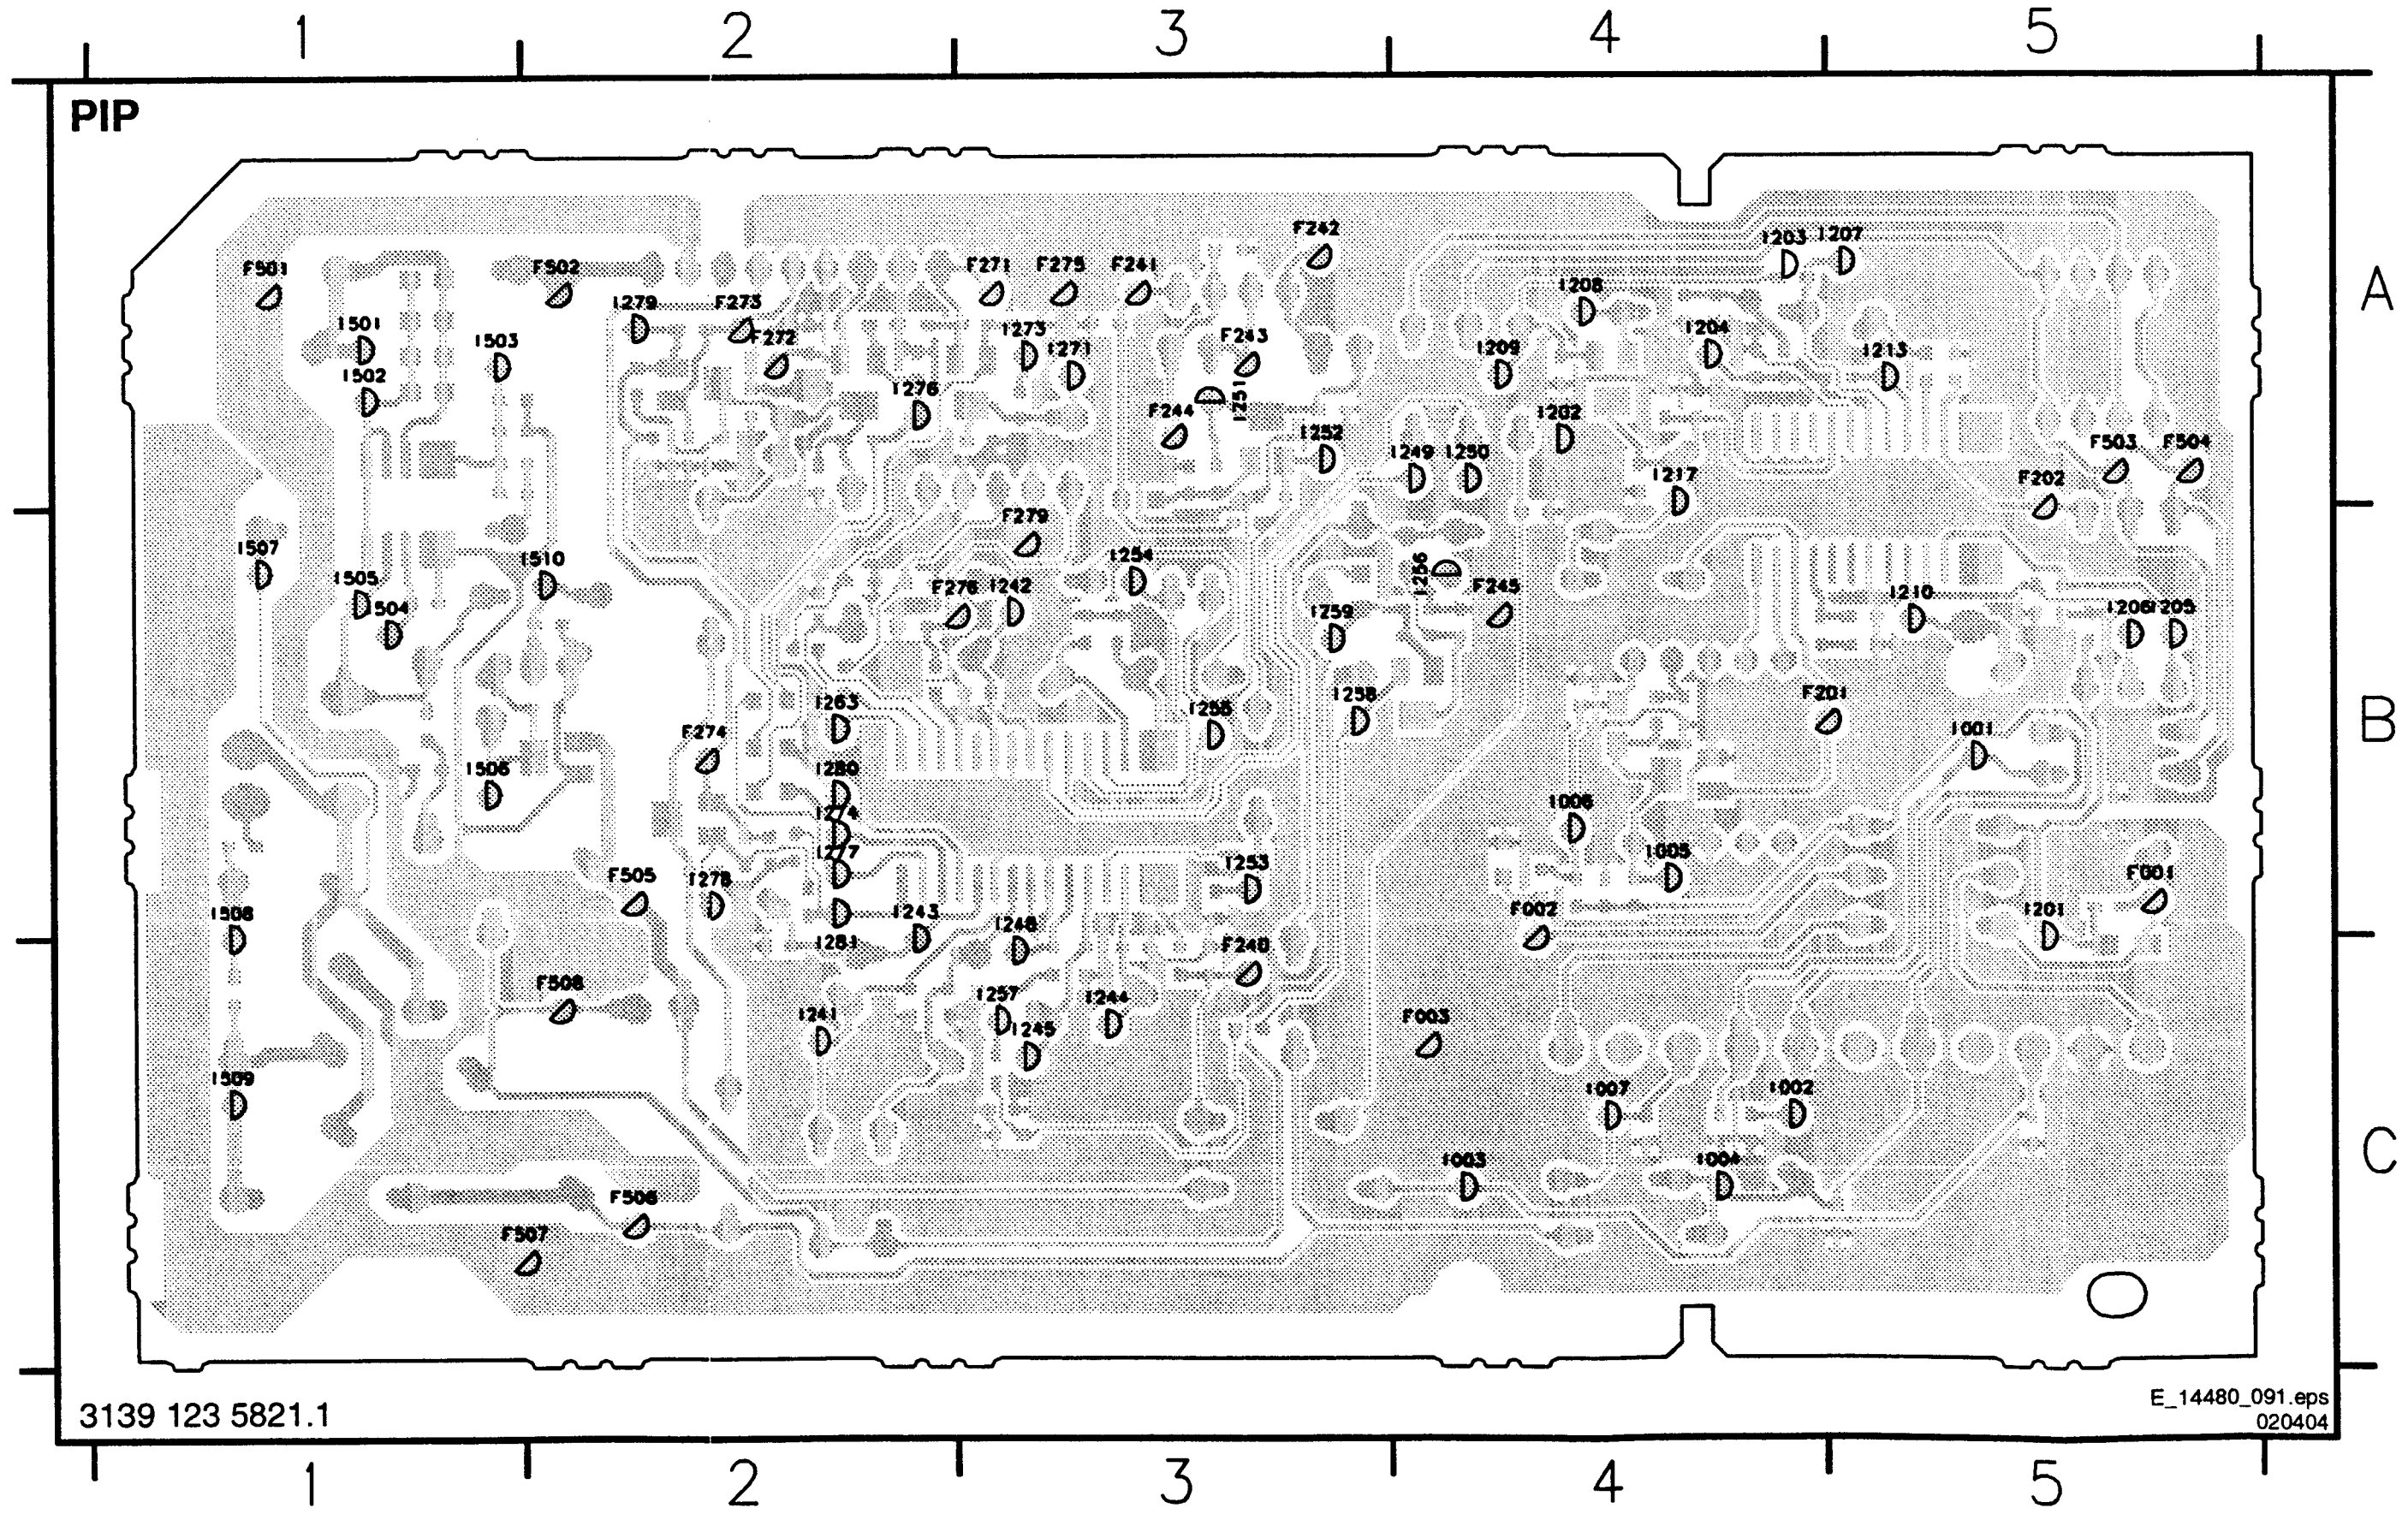

F001	B5
F002	B4
F003	C4
F201	B4
F202	A5
F240	C3
F241	A3
F242	A3
F243	A3
F244	A3
F245	B4
F271	A3
F272	A2
F273	A2
F274	B2
F275	A3
F276	B2
F279	B3
F501	A1
F502	A2
F503	A5
F504	A5
F505	B2
F506	C2
F507	C1
F508	C2
I001	B5
I002	C4
I003	C4
I004	C4
I005	B4
I006	B4
I007	C4
I201	B5
I202	A4
I203	A4
I204	A4
I205	B5
I206	B5
I207	A5
I208	A4
I209	A4
I210	B5
I213	A5
I217	A4
I241	C2
I242	B3
I243	B2
I244	C3
I245	C3
I248	B3
I249	A4
I250	A4
I251	A3
I252	A3
I253	B3
I254	B3
I255	B3
I256	B4
I257	C3
I258	B3
I259	B3
I263	B2
I271	A3
I273	A3
I274	B2
I276	A2
I277	B2
I278	B2
I279	A2
I280	B2
I281	C2
I501	A1
I502	A1
I503	A1
I504	B1
I505	B1
I506	B1
I507	B1
I508	B1

Block Diagram Audio/Control

AUDIO

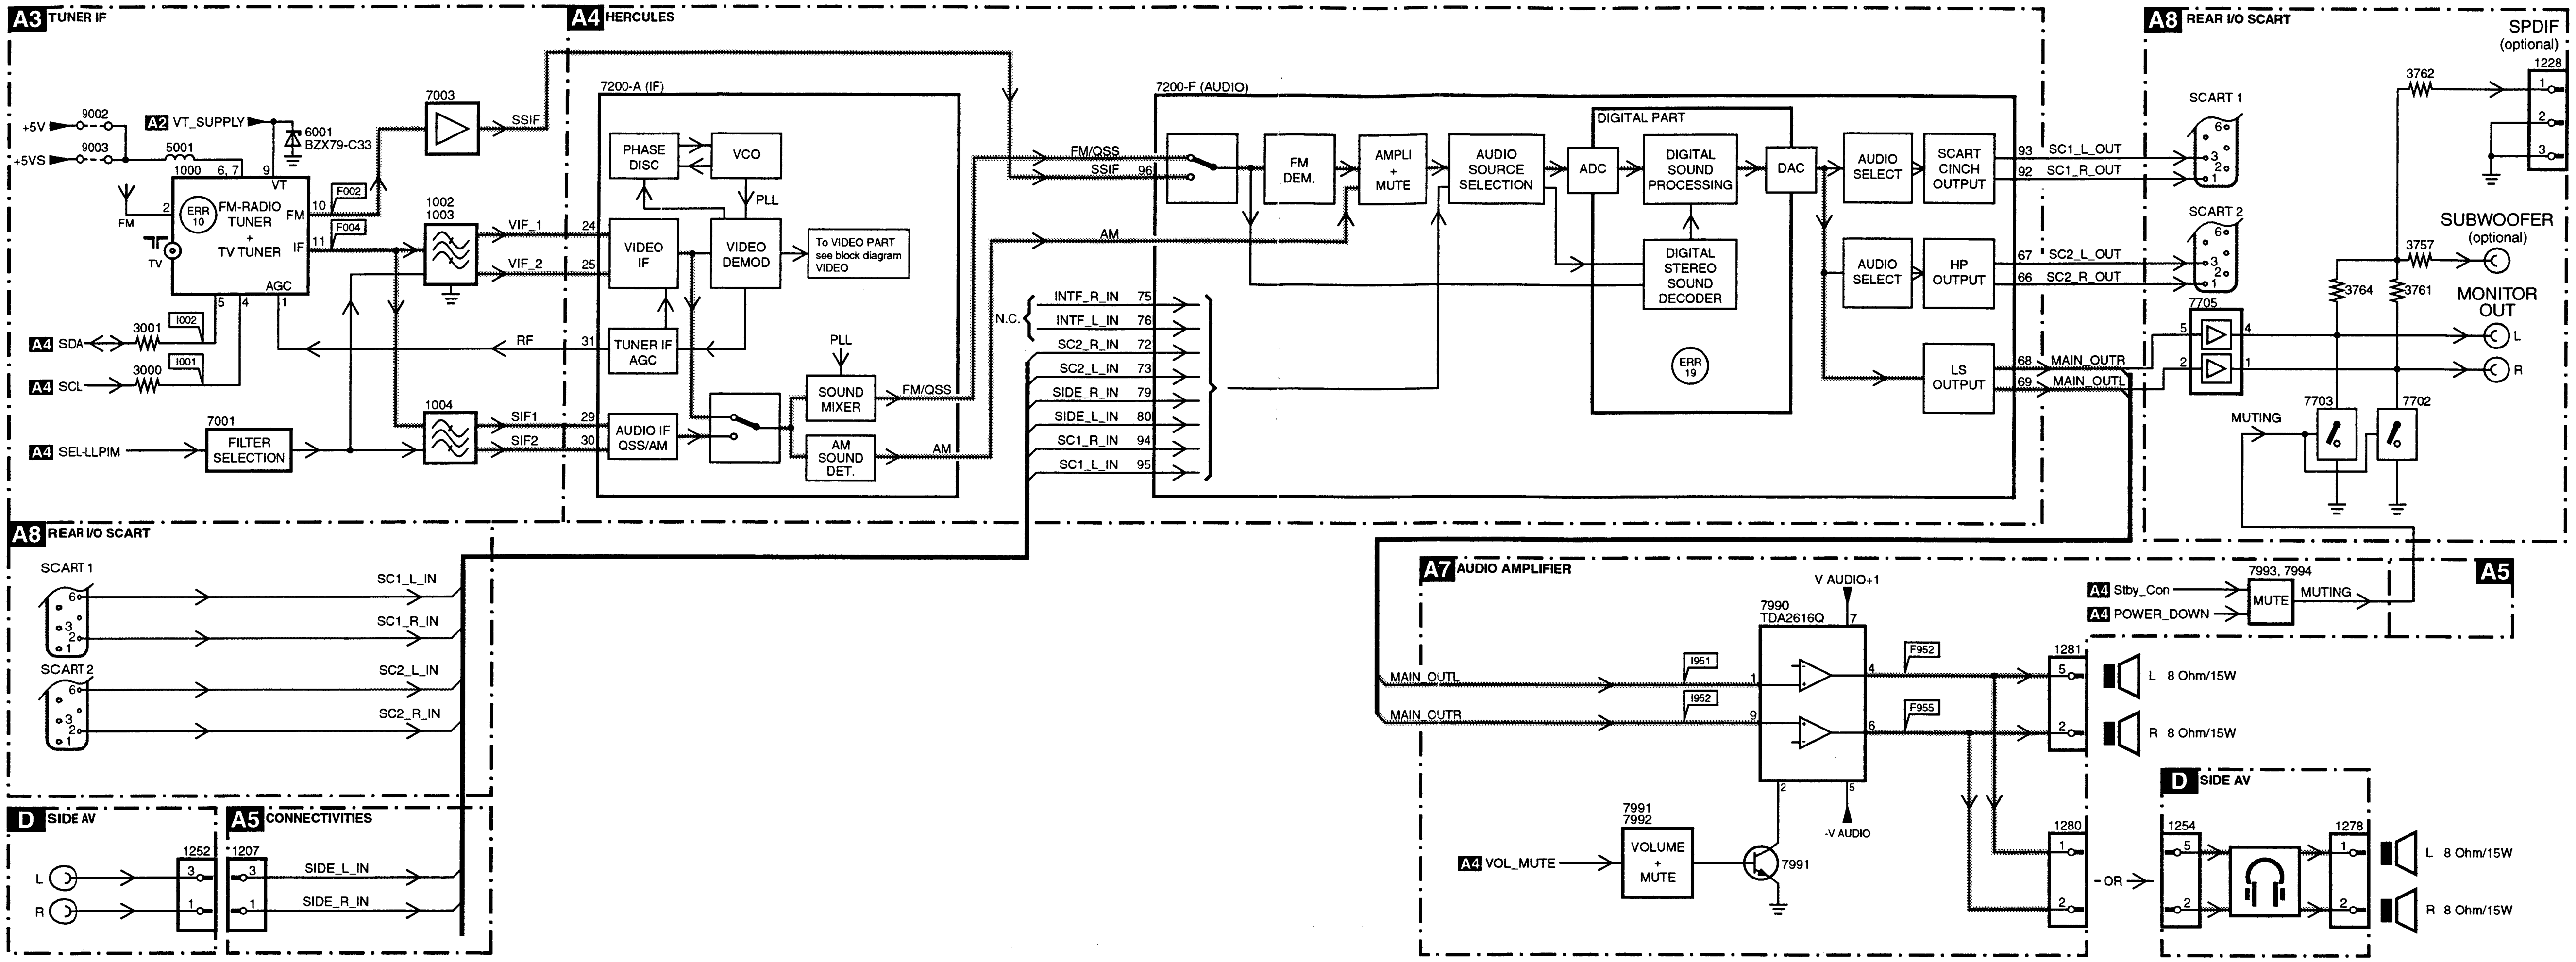
A3 TUNER IF
A4 HERCULES
A8 REAR I/O SCART
+5V 9002
+5VS 9003
A2 VT_SUPPLY
5001
6001 BZX79-C33
1000 6, 7 9 VT
FM-RADIO TUNER + TV TUNER
ERR 10
FM
TV
AGC
F002
F004
7003
SSIF
1002 1003
VIF_1
VIF_2
A4 SDA 3001 I002
A4 SCL 3000 I001
RF
7001
A4 SEL-LLPIM
FILTER SELECTION
1004
SIF1
SIF2
7200-A (IF)
PHASE DISC
VCO
PLL
VIDEO IF
VIDEO DEMOD
To VIDEO PART see block diagram VIDEO
TUNER IF AGC
AUDIO IF QSS/AM
SOUND MIXER
FM/QSS
AM SOUND DET.
AM
7200-F (AUDIO)
FM/QSS
SSIF 96
FM DEM.
AMPLI + MUTE
AUDIO SOURCE SELECTION
DIGITAL PART
ADC
DIGITAL SOUND PROCESSING
DAC
DIGITAL STEREO SOUND DECODER
ERR 19
AUDIO SELECT
SCART CINCH OUTPUT
AUDIO SELECT
HP OUTPUT
LS OUTPUT
N.C.
INTF_R_IN 75
INTF_L_IN 76
SC2_R_IN 72
SC2_L_IN 73
SIDE_R_IN 79
SIDE_L_IN 80
SC1_R_IN 94
SC1_L_IN 95
93 SC1_L_OUT
92 SC1_R_OUT
67 SC2_L_OUT
66 SC2_R_OUT
68 MAIN_OUTR
69 MAIN_OUTL
SCART 1
SCART 2
SPDIF (optional)
3762
1228
SUBWOOFER (optional)
3757
3764
3761
MONITOR OUT
L
R
7705
MUTING
7703
7702
A8 REAR I/O SCART
SCART 1
SC1_L_IN
SC1_R_IN
SCART 2
SC2_L_IN
SC2_R_IN
D SIDE AV
L
R
1252
A5 CONNECTIVITIES
1207
SIDE_L_IN
SIDE_R_IN
A7 AUDIO AMPLIFIER
V AUDIO+1
7990 TDA2616Q
MAIN_OUTL
MAIN_OUTR
I951
I952
F952
F955
1281
L 8 Ohm/15W
R 8 Ohm/15W
-V AUDIO
7991 7992
A4 VOL_MUTE
VOLUME + MUTE
7991
1280
- OR -
A4 Stby_Con
A4 POWER_DOWN
7993, 7994
MUTE
MUTING
A5
D SIDE AV
1254
1278
L 8 Ohm/15W
R 8 Ohm/15W

CONTROL

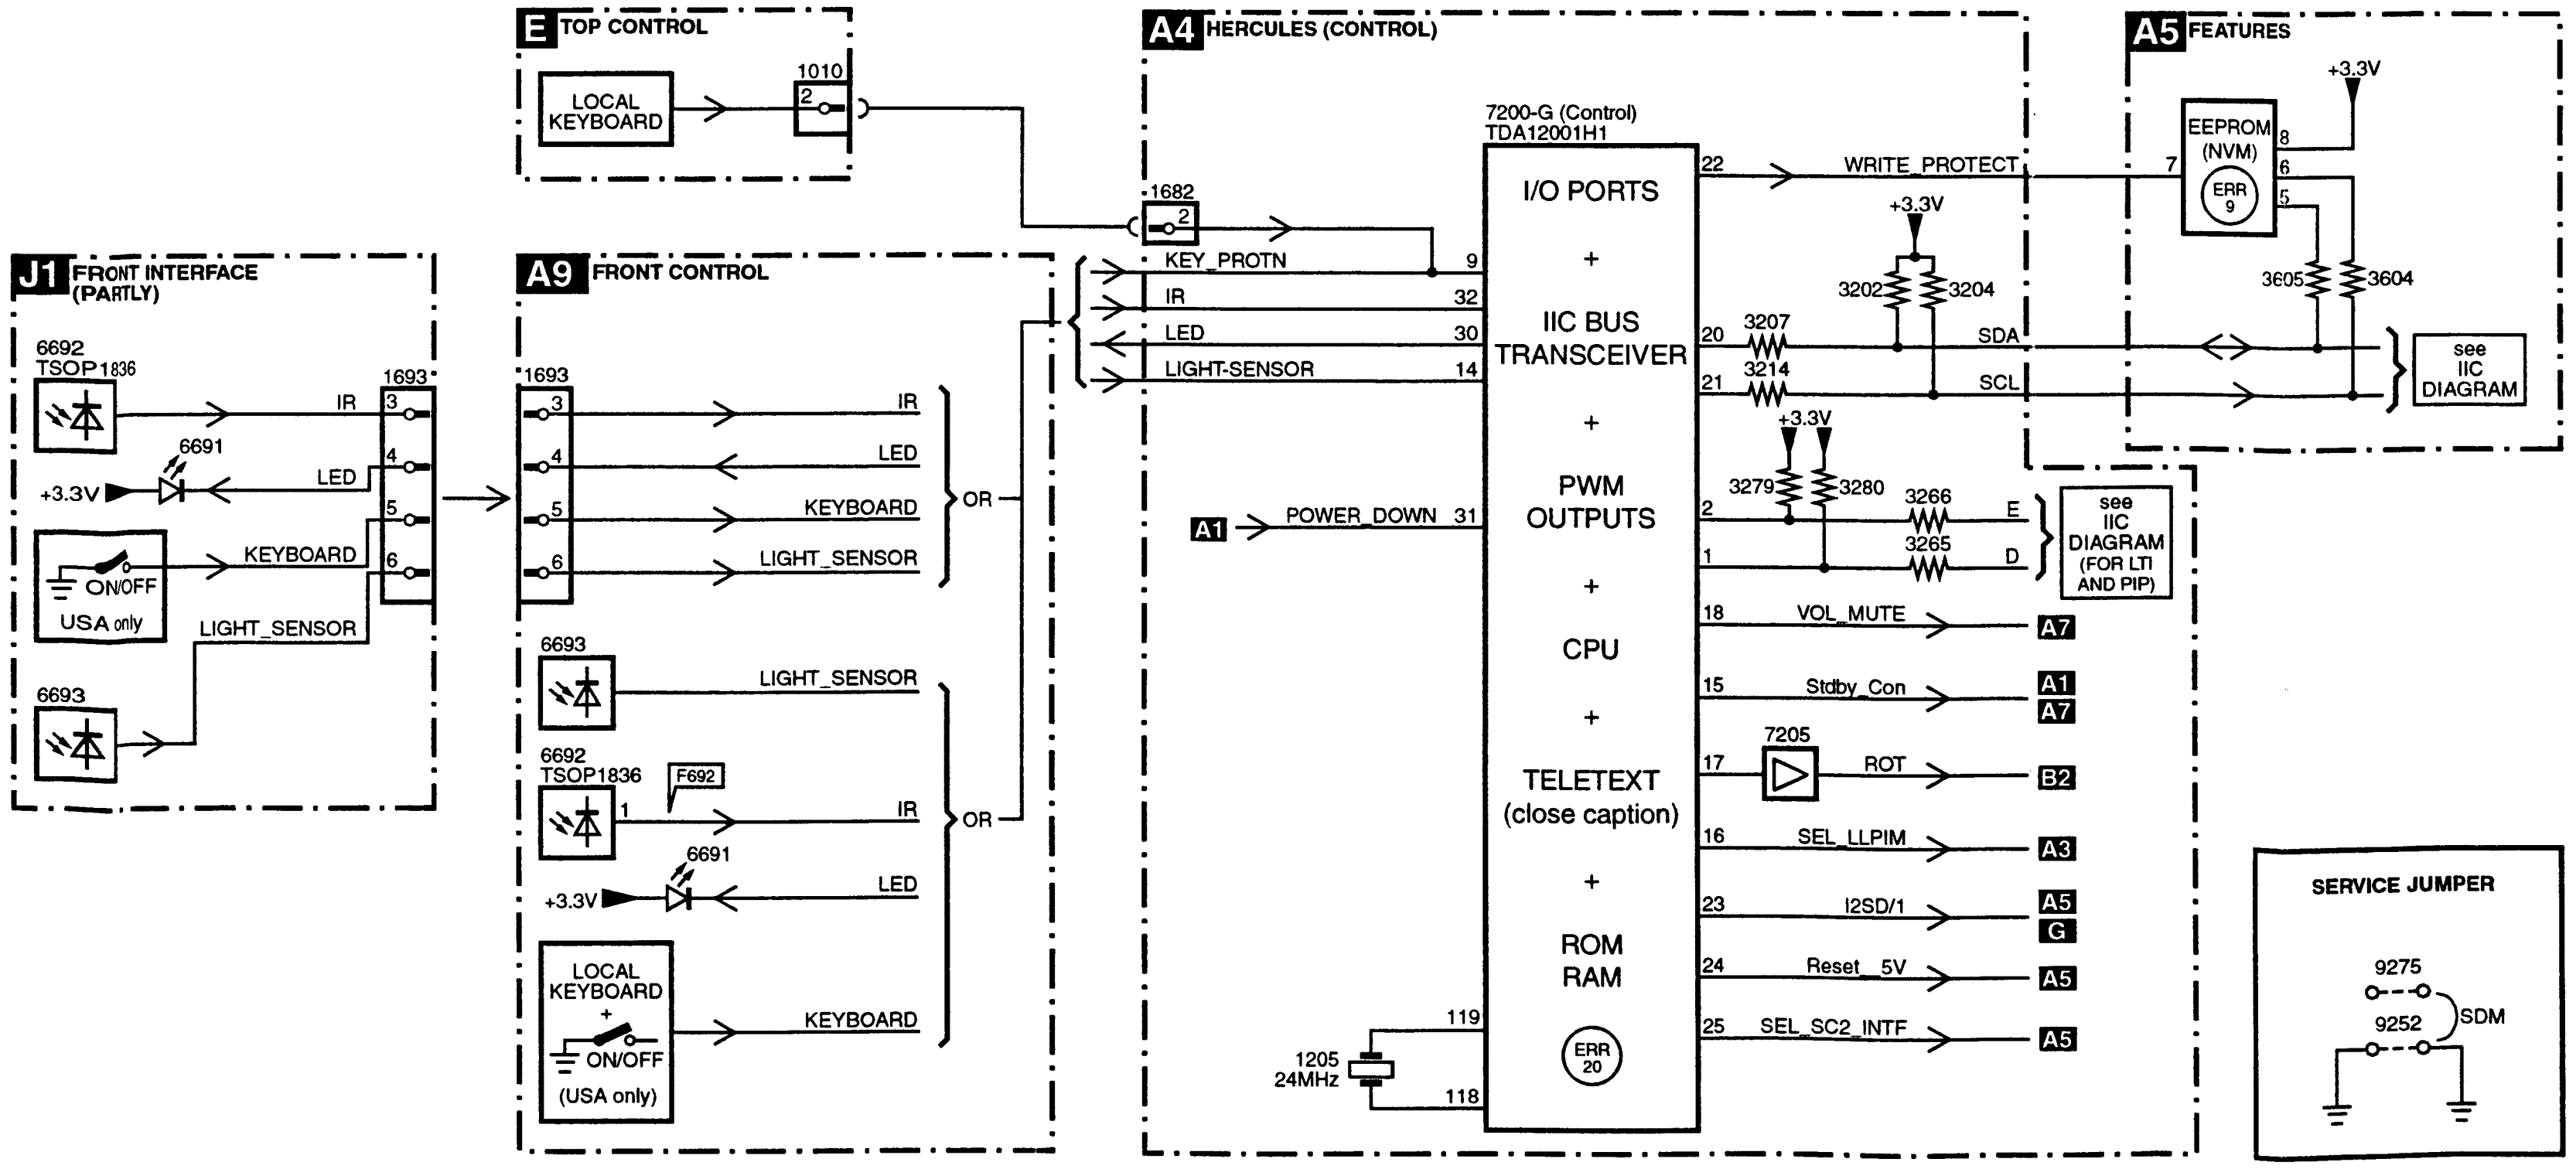
E TOP CONTROL
LOCAL KEYBOARD
1010
A4 HERCULES (CONTROL)
1682
7200-G (Control) TDA12001H1
I/O PORTS + IIC BUS TRANSCEIVER + PWM OUTPUTS + CPU + TELETEXT (close caption) + ROM RAM
ERR 20
KEY_PROTN 9
IR 32
LED 30
LIGHT-SENSOR 14
A1 POWER_DOWN 31
1205 24MHz
119
118
22 WRITE_PROTECT
+3.3V
3202 3204
3207
3214
SDA
SCL
+3.3V
3279 3280
3266
3265
E
D
see IIC DIAGRAM (FOR LTI AND PIP)
18 VOL_MUTE A7
15 Stdby_Con A1 A7
7205
17 ROT B2
16 SEL_LLPIM A3
23 I2SD/1 A5 G
24 Reset_5V A5
25 SEL_SC2_INTF A5
A5 FEATURES
+3.3V
EEPROM (NVM)
ERR 9
3605 3604
see IIC DIAGRAM
J1 FRONT INTERFACE (PARTLY)
6692 TSOP1836
IR
6691
+3.3V
LED
1693
KEYBOARD
ON/OFF
USA only
LIGHT_SENSOR
6693
A9 FRONT CONTROL
1693
IR
LED
KEYBOARD
LIGHT_SENSOR
OR
6693
LIGHT_SENSOR
6692 TSOP1836
F692
IR
6691
+3.3V
LED
OR
LOCAL KEYBOARD + ON/OFF (USA only)
KEYBOARD
SERVICE JUMPER
9275
9252
SDM

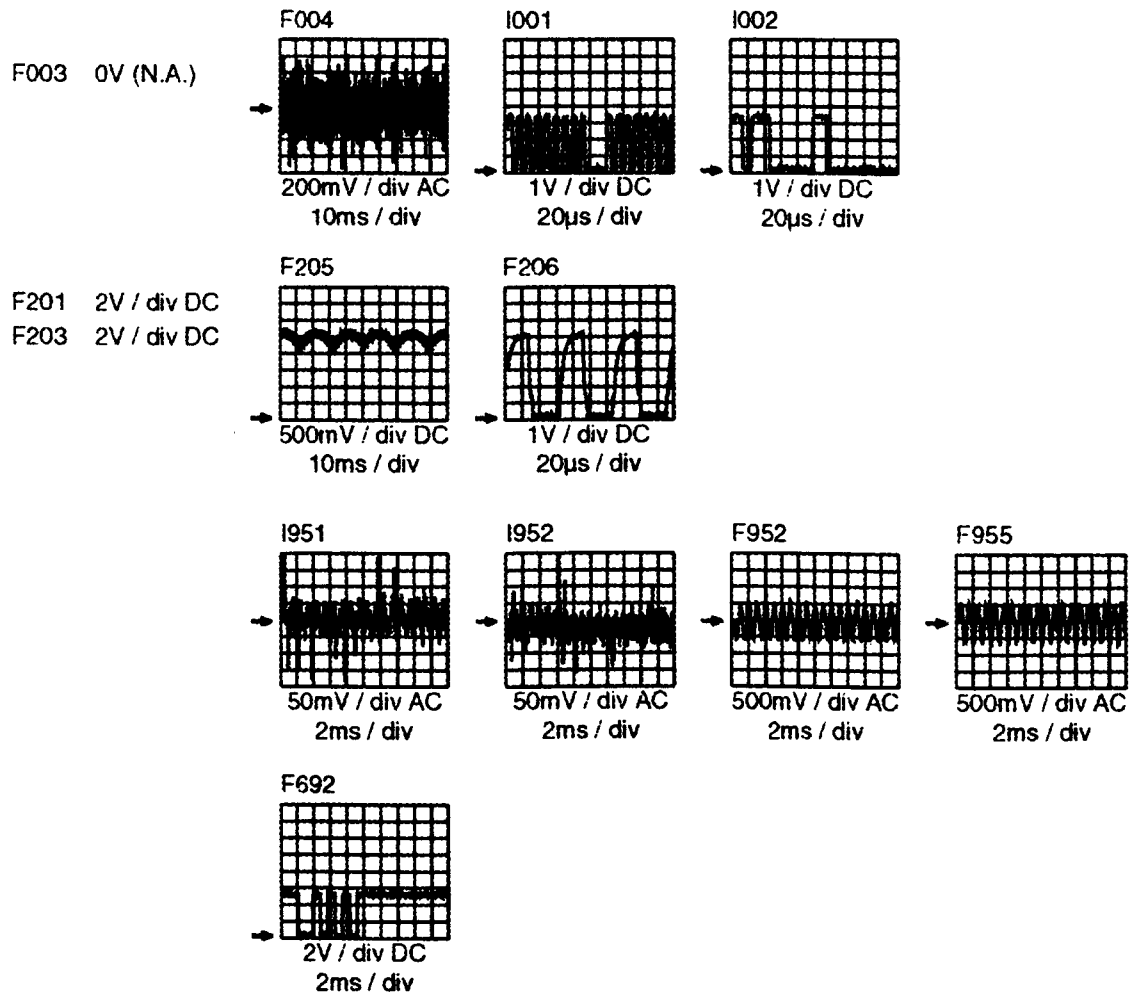

E_14480_087.eps
280504

I2C and Supply Voltage Overview

SUPPLY LINES DIAGRAM

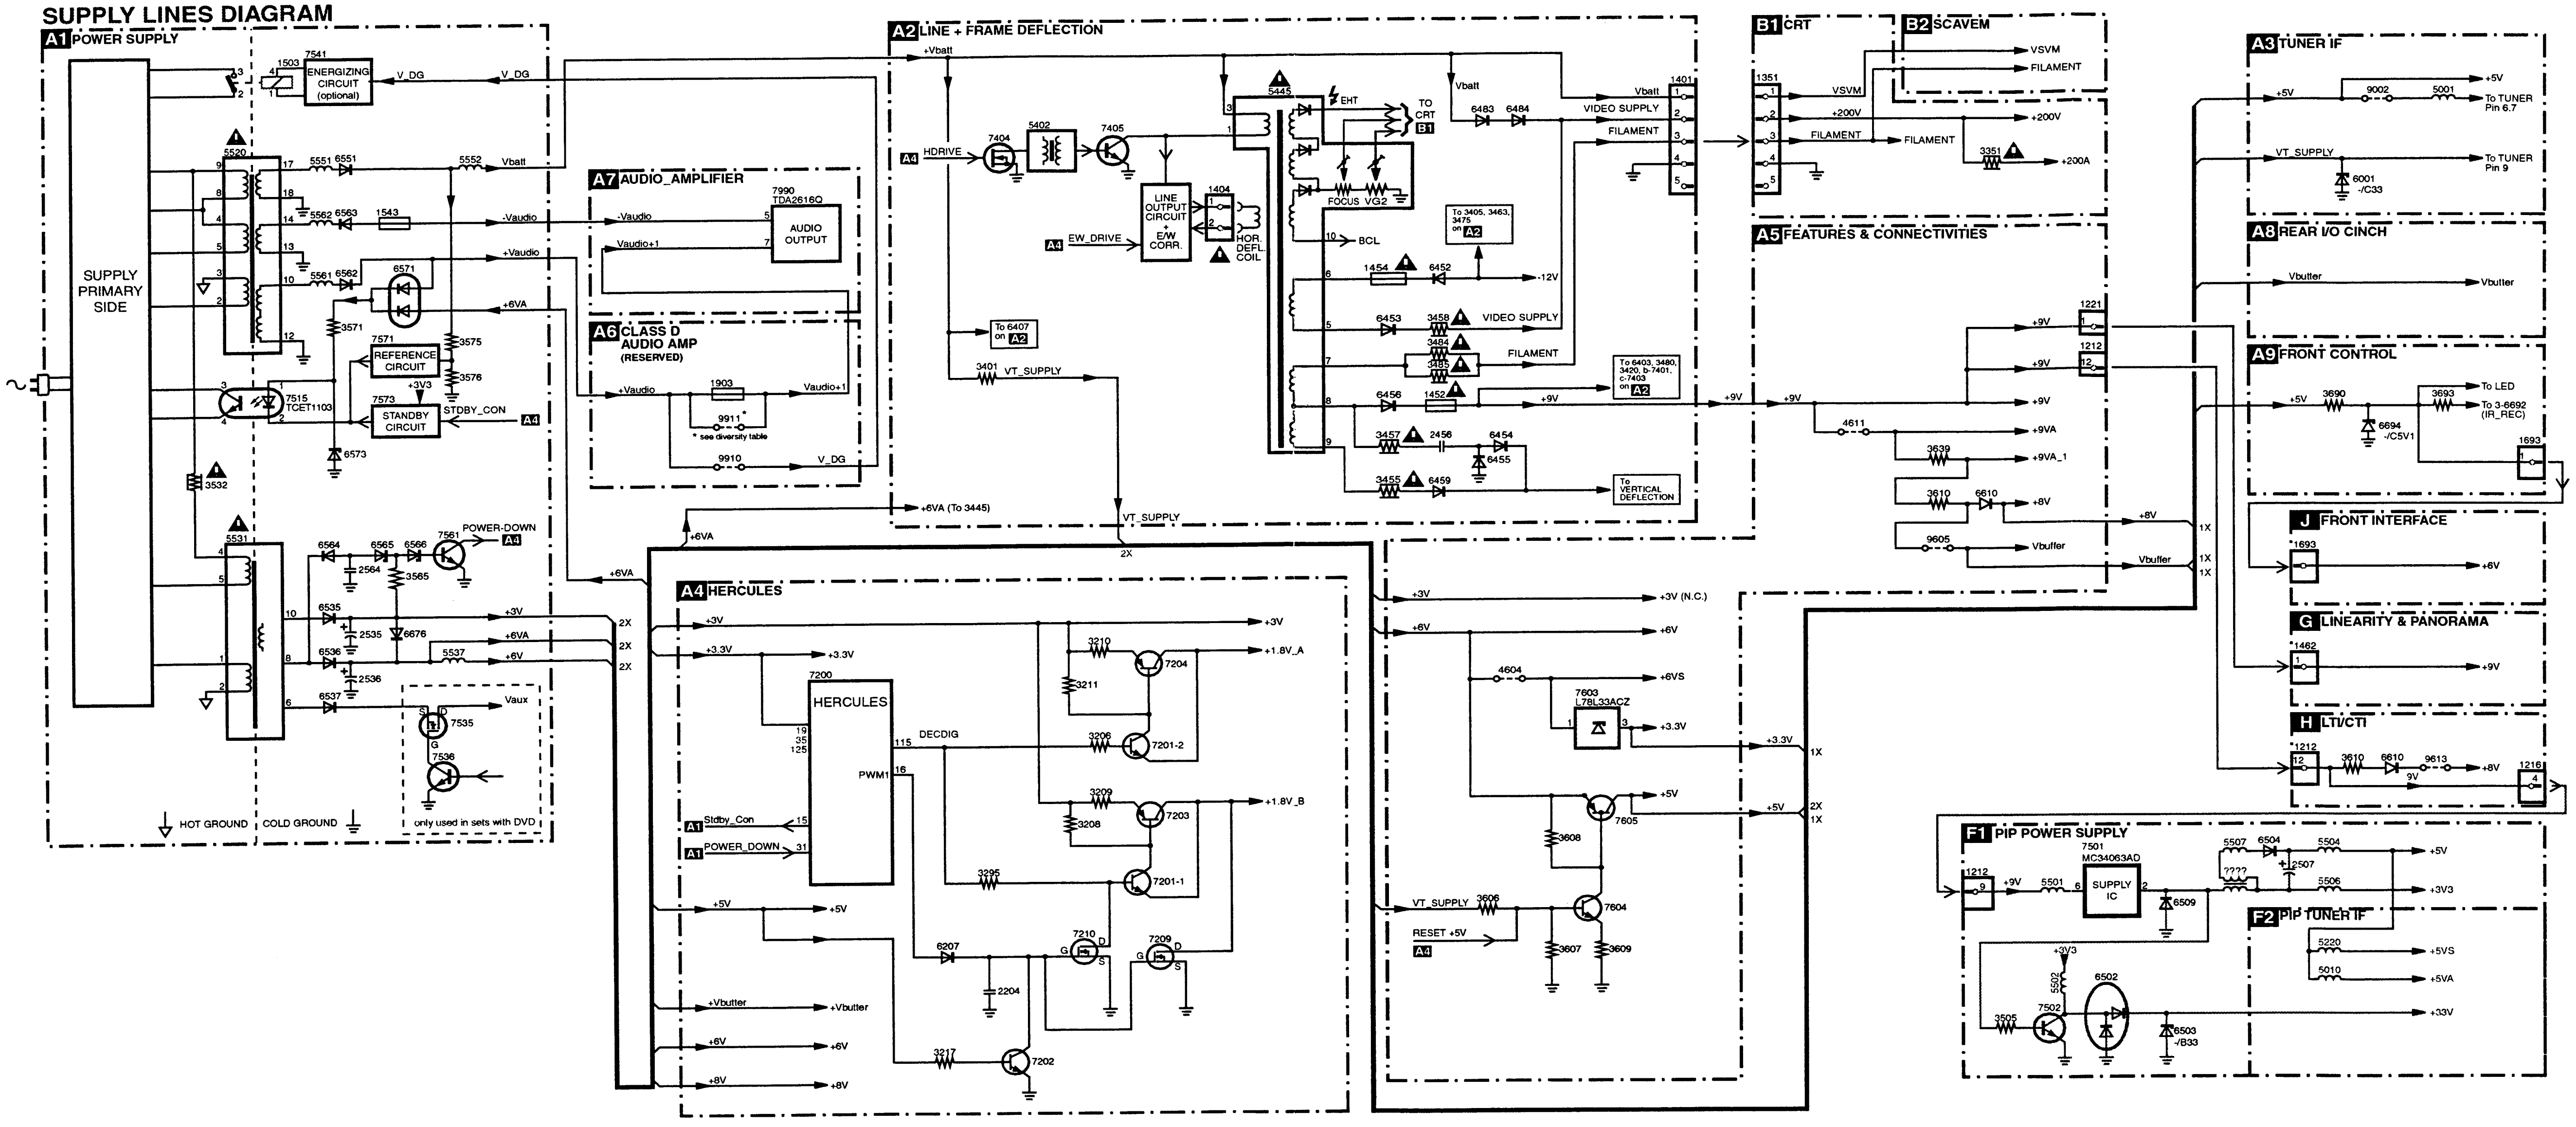
A1 POWER SUPPLY
SUPPLY PRIMARY SIDE
ENERGIZING CIRCUIT (optional)
REFERENCE CIRCUIT
STANDBY CIRCUIT
STDBY_CON
POWER-DOWN
HOT GROUND
COLD GROUND
only used in sets with DVD
A7 AUDIO_AMPLIFIER
TDA2616Q
AUDIO OUTPUT
A6 CLASS D AUDIO AMP (RESERVED)
* see diversity table
A2 LINE + FRAME DEFLECTION
HDRIVE
EW_DRIVE
LINE OUTPUT CIRCUIT + E/W CORR.
HOR. DEFL. COIL
EHT
TO CRT B1
FOCUS VG2
BCL
VIDEO SUPPLY
FILAMENT
VT_SUPPLY
To VERTICAL DEFLECTION
A4 HERCULES
HERCULES
DECDIG
PWM1
Stdby_Con
POWER_DOWN
B1 CRT
B2 SCAVEM
VSVM
A5 FEATURES & CONNECTIVITIES
L78L33ACZ
RESET +5V
A3 TUNER IF
To TUNER Pin 6,7
To TUNER Pin 9
A8 REAR I/O CINCH
A9 FRONT CONTROL
To LED
To 3-6692 (IR_REC)
J FRONT INTERFACE
G LINEARITY & PANORAMA
H LTI/CTI
F1 PIP POWER SUPPLY
MC34063AD
SUPPLY IC
F2 PIP TUNER IF

I2C BUS INTERCONNECTION DIAGRAM

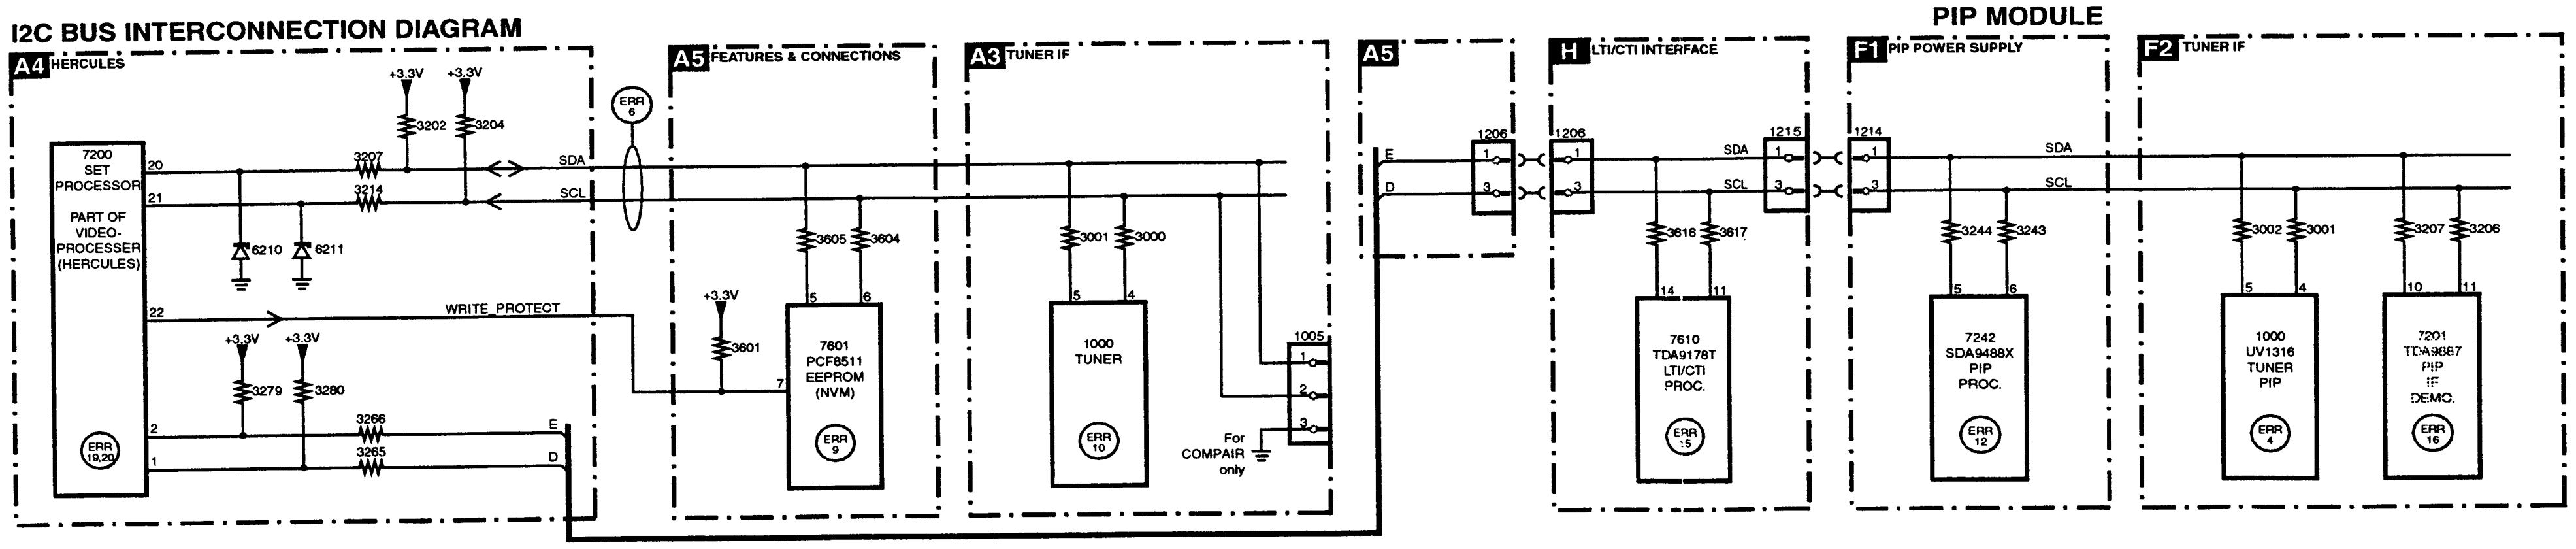
PIP MODULE
A4 HERCULES
7200 SET PROCESSOR
PART OF VIDEO-PROCESSER (HERCULES)
SDA
SCL
WRITE_PROTECT
ERR 6
ERR 19,20
A5 FEATURES & CONNECTIONS
7601 PCF8511 EEPROM (NVM)
ERR 9
A3 TUNER IF
1000 TUNER
ERR 10
For COMPAIR only
A5
H LTI/CTI INTERFACE
7610 TDA9178T LTI/CTI PROC.
ERR 15
F1 PIP POWER SUPPLY
7242 SDA9488X PIP PROC.
ERR 12
F2 TUNER IF
1000 UV1316 TUNER PIP
ERR 4
7201 TDA9887 PIP IF DEMO.
ERR 16

ERROR CODE LIST

ERROR	Device	Error description	Check item	Diagram
0	Not applicable	No Error		
1	Not applicable	X-Ray / over-voltage protection (US only)	2411, 2412, 2413, 6404, 6411, 6412.	A2
2	Not applicable	High beam (BCI) protection	3404, 7405	A2
3	Not applicable	Vertical guard protection	3466, 7451, 7452, 7453, 7454	A2
4	Tuner UA1316/A	I^2C error while communicating with 2nd tuner	1000, 5010 (PIP Module)	F2
5	Not applicable	+5v protection	7604, 7605	A5
6	I2C bus	General I^2C error	7200, 3207, 3214	A4
7	Not applicable	-	-	-
8	Not applicable	-	-	-
9	24C16	I^2C error while communicating with the EEPROM	7601, 3604, 3605	A5
10	Tuner	= I^2C error while communicating with the PLL tuner	1000, 5001	A3
11	TDA6107/A	Black current loop instability protection	7330, 3351, CRT	B1
12	SDA9488X	I^2C error while communicating with the PIP processor	7242 (PIP Module)	F1
13	Not applicable	-	-	-
14	DVD Loader	I2C error while communicating with the DVD Interface module	DVD Interface module	DVD Loader
15	TDA9178T/N1	I2C error while communicating with LTI module	7610	H
16	TDA9887	I2C error while communicating with PIP_Demodulator	7201	F2
17	Not applicable	-	-	-
18	Not applicable	-	-	-
19	TDA1200	I2C error while communicating with SSD stereo sound decoder	7200	A4
20	TDA1200	I2C error while communicating with video cosmic in Hercules IC	7200	A4

E_14480_084.eps
060504

7. Circuit Diagrams and PWB Layouts

Mono Carrier: Power Supply

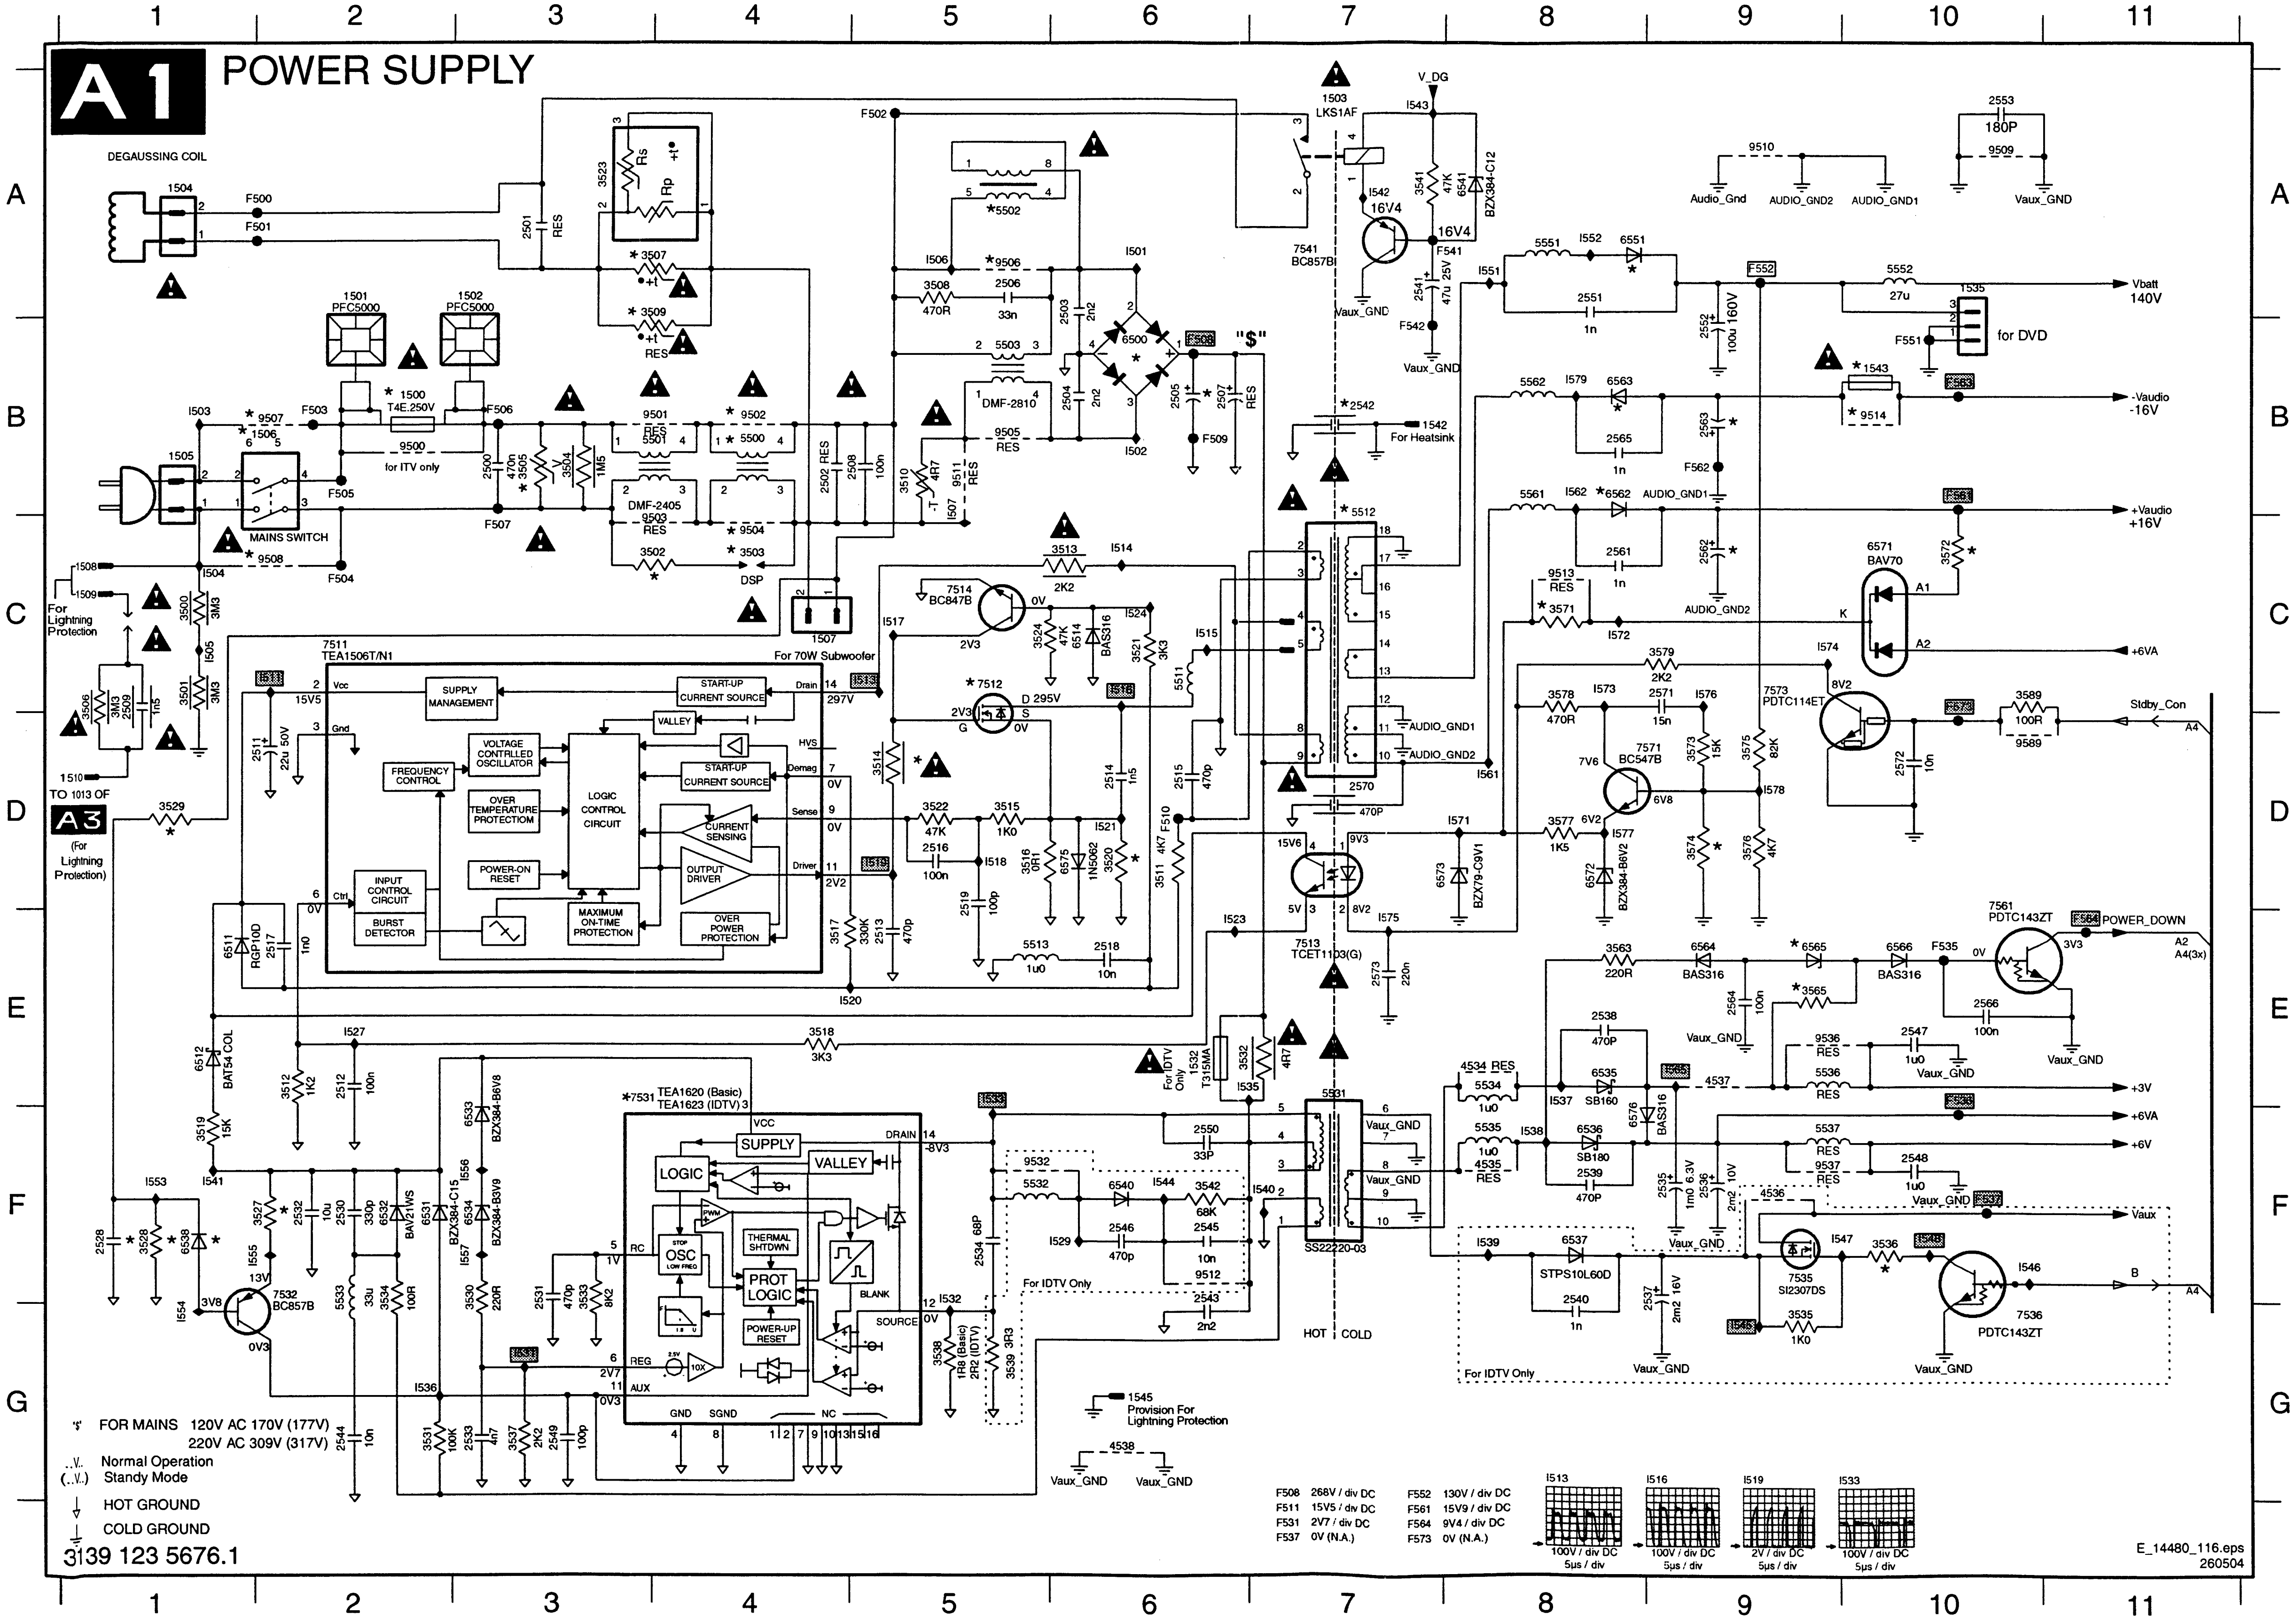
1
2
3
4
5
6
7
8
9
10
11
A
B
C
D
E
F
G
A1
POWER SUPPLY
DEGAUSSING COIL
1504
F500
F501
2501
RES
3523
Rs
Rp
*3507
*3509
RES
1501
PFC5000
1502
PFC5000
*1500
T4E.250V
F503
F506
1503
*9507
*1506
1505
MAINS SWITCH
*9508
F504
F505
9500
for ITV only
2500
470n
3505
3504
1M5
F507
9501
RES
5501
*9502
5500
DMF-2405
9503
RES
*9504
3502
*3503
DSP
2502 RES
2508
100n
3510
4R7
9511 RES
1507
For 70W Subwoofer
F502
5502
1506
*9506
3508
470R
2506
33n
5503
DMF-2810
9505
RES
2503
2n2
2504
2n2
1501
6500
F508
"$"
2505
2507
RES
F509
1502
1503
LKS1AF
V_DG
1543
1542
16V4
3541
47K
6541
BZX384-C12
7541
BC857B
Vaux_GND
16V4
F541
2541
47u 25V
F542
*2542
1542
For Heatsink
9510
Audio_Gnd
AUDIO_GND2
AUDIO_GND1
2553
180P
9509
Vaux_GND
5551
1552
6551
F552
5552
27u
1535
Vbatt
140V
2551
1n
2552
100u 160V
F551
for DVD
*1543
*9514
F563
5562
1579
6563
2565
1n
2563
F562
-Vaudio
-16V
5561
1562
*6562
AUDIO_GND1
2561
1n
2562
F561
+Vaudio
+16V
*5512
9513
RES
*3571
1572
AUDIO_GND2
6571
BAV70
3572
A1
A2
K
+6VA
1508
1509
For Lightning Protection
3500
3M3
3506
3M3
2509
1n5
1505
3501
3M3
1510
TO 1013 OF
A3
(For Lightning Protection)
3529
7514
BC847B
2V3
0V
3513
2K2
1514
3524
47K
6514
BAS316
1524
3521
3K3
1515
5511
1517
*7512
D 295V
2V3
G
S
0V
1516
7511
TEA1506T/N1
1511
Vcc
15V5
Gnd
2511
22u 50V
SUPPLY MANAGEMENT
START-UP CURRENT SOURCE
Drain
14
1513
297V
VALLEY
HVS
VOLTAGE CONTROLLED OSCILLATOR
FREQUENCY CONTROL
LOGIC CONTROL CIRCUIT
START-UP CURRENT SOURCE
Demag
OVER TEMPERATURE PROTECTION
CURRENT SENSING
Sense
POWER-ON RESET
OUTPUT DRIVER
Driver
1519
2V2
INPUT CONTROL CIRCUIT
Ctrl
BURST DETECTOR
MAXIMUM ON-TIME PROTECTION
OVER POWER PROTECTION
3514
3522
47K
3515
1K0
2516
100n
1518
1521
2514
1n5
2515
470p
3516
0R1
6575
6R62
1N5062
3520
F510
3511
4R7
2519
100p
3517
330K
2513
470p
1520
5513
1u0
2518
10n
6511
RGP10D
2517
1n0
1527
3518
3K3
1523
2570
470P
1561
AUDIO_GND1
AUDIO_GND2
15V6
9V3
5V
8V2
1575
7513
TCET1103(G)
2573
220n
1571
6573
BZX79-C9V1
3579
2K2
3578
470R
1573
2571
15n
1576
7573
PDTC114ET
8V2
1574
3589
100R
9589
Stdby_Con
F573
2572
10n
7V6
7571
BC547B
6V8
3573
15K
3575
82K
1578
3577
1K5
6V2
1577
6572
BZX384-B6V2
3574
3576
4K7
7561
PDTC143ZT
F564
POWER_DOWN
3V3
3563
220R
6564
BAS316
*6565
6566
BAS316
F535
0V
2564
100n
*3565
2566
100n
Vaux_GND
2538
470P
9536
RES
2547
1u0
6512
BAT54 COL
3512
1K2
2512
100n
3519
15K
1553
1541
2528
3528
6538
1555
13V
3527
2532
10u
2530
330p
6532
BAV21WS
6531
BZX384-C15
1556
6533
BZX384-B6V8
1557
6534
BZX384-B3V9
7532
BC857B
1554
3V8
0V3
5533
33u
3534
100R
3530
220R
*7531
TEA1620 (Basic)
TEA1623 (IDTV)
VCC
SUPPLY
DRAIN
8V3
VALLEY
LOGIC
RC
OSC
STOP
LOW FREQ
THERMAL SHTDWN
PROT LOGIC
BLANK
POWER-UP RESET
SOURCE
REG
AUX
GND
SGND
NC
2531
470p
3533
8K2
1531
2V7
0V3
1536
3531
100K
2533
4n7
3537
2K2
2549
100p
2544
10n
2534
68P
3538
1R8 (Basic)
2R2 (IDTV)
3539
3R3
1532
1533
9532
5532
6540
1544
3542
68K
1529
2546
470p
2545
10n
9512
For IDTV Only
2543
2n2
2550
33P
1540
1532
T315MA
For IDTV Only
1535
3532
4R7
5531
Vaux_GND
SS22220-03
HOT
COLD
1545
Provision For Lightning Protection
4538
Vaux_GND
Vaux_GND
4534
RES
5534
1u0
1537
6535
SB160
6576
BAS316
4537
9536
RES
5536
RES
+3V
+6VA
+6V
5535
1u0
4535
RES
1538
6536
SB180
2539
470P
5537
RES
9537
RES
2548
1u0
2535
1m0 6.3V
2536
2m2 10V
4536
F537
Vaux
1539
6537
STPS10L60D
2540
1n
2537
2m2 16V
7535
SI2307DS
1547
3536
1548
3535
1K0
1546
7536
PDTC143ZT
B
A4
A2
A4(3x)
For IDTV Only
F536
FOR MAINS 120V AC 170V (177V)
220V AC 309V (317V)
Normal Operation
Standy Mode
HOT GROUND
COLD GROUND
3139 123 5676.1
F508 268V / div DC
F511 15V5 / div DC
F531 2V7 / div DC
F537 0V (N.A.)
F552 130V / div DC
F561 15V9 / div DC
F564 9V4 / div DC
F573 0V (N.A.)
I513
100V / div DC
5µs / div
I516
100V / div DC
5µs / div
I519
2V / div DC
5µs / div
I533
100V / div DC
5µs / div
E_14480_116.eps
260504

1500	B2
1501	A2
1502	A3
1503	A7
1504	A1
1505	B1
1506	B1
1507	C4
1508	C1
1509	C1
1510	D1
1532	E6
1535	A10
1542	B8
1543	B10
1545	G6
2500	B3
2501	A3
2502	B4
2503	A6
2504	B6
2505	B6
2506	A5
2507	B6
2508	B5
2509	C1
2511	D2
2512	E2
2513	E5
2514	D6
2515	D6
2516	D5
2517	E2
2518	E6
2519	D5
2528	F1
2530	F2
2531	F3
2532	F2
2533	G3
2534	F5
2535	F9
2536	F9
2537	F9
2538	E8
2539	F8
2540	G8
2541	A7
2542	B7
2543	F6
2544	G2
2545	F6
2546	F6
2547	E10
2548	F10
2549	G3
2550	F6
2551	A8
2552	B9
2553	A10
2561	C8
2562	C9
2563	B9
2564	E9
2565	B8
2566	E10
2570	D7
2571	C9
2572	D10
2573	E7
3500	C1
3501	C1
3502	C4
3503	C4
3504	B3
3505	B3
3506	C1
3507	A4
3508	A5
3509	A4
3510	B5
3511	D6
3512	E2
3513	C6
3514	D5
3515	D5
3516	D5
3517	E4
3518	E4
3519	F1
3520	D6
3521	C6
3522	D5
3523	A3
3524	C5
3527	F2
3528	F1
3529	D1
3530	F3
3531	G2
3532	E6
3533	F3
3534	F2
3535	G9
3536	F10
3537	G3
3538	G5
3539	G5
3541	A7
3542	F6
3563	E8
3565	E9
3571	C8
3572	C10
3573	D9
3574	D9
3575	D9
3576	D9
3577	D8
3578	C8
3579	C9
3589	C10
4534	E8
4535	F8
4536	F9
4537	E9
4538	G6
5500	B4
5501	B4
5502	A5
5503	B5
5511	C6
5512	C7
5513	E5
5531	E7
5532	F5
5533	F2
5534	E8
5535	F8
5536	E9
5537	F9
5551	A8
5552	A10
5561	B8
5562	B8
6500	B6
6511	E1
6512	E1
6514	C6
6531	F2
6532	F2
6533	F3
6534	F3
6535	E8
6536	F8
6537	F8
6538	F1
6540	F6
6541	A8
6551	A8
6562	B8
6563	B8
6564	E9
6565	E9
6566	E10
6571	C10
6572	D8
6573	D8
6575	D6
6576	F8
7511	C2
7512	C5
7513	E7
7514	C5
7531	E3
7532	F2
7535	F9
7536	G10
7541	A7
7561	E10
7571	D9
7573	C9
9500	B2
9501	B4
9502	B4
9503	C4
9504	C4
9505	B5
9506	A5
9507	B2
9508	C2
9509	A10
9510	A9
9511	B5
9512	F6
9513	C8
9514	B10
9532	F5
9536	E9
9537	F9
9589	D10
F500	A2
F501	A2
F502	A5
F503	B2
F504	C2
F505	B2
F506	B3
F507	C3
F508	B6
F509	B6
F510	D6
F535	E10
F536	E10
F537	F10
F541	A8
F542	B7
F551	B10
F552	A9
F561	B10
F562	B9
F563	B10
F564	E11
F573	C10
I501	A6
I502	B6
I503	B1
I504	C1
I505	C1
I506	A5
I507	B5
I511	C2
I513	C5
I514	C6
I515	C6
I516	C6
I517	C5
I518	D5
I519	D5
I520	E5
I521	D6
I523	E6
I524	C6
I527	E2
I529	F6
I531	G3
I532	F5
I533	E5
I535	E6
I536	G2
I537	E8
I538	F8
I539	F8
I540	F7
I541	F1
I542	A7
I543	A7
I544	F6
I545	G9
I546	F10
I547	F10
I548	F10
I551	A8
I552	A8
I553	F1
I554	G1
I555	F1
I556	F3
I557	F3
I561	D8
I562	B8
I565	E9
I571	D8
I572	C8
I573	C8
I574	C9
I575	E7
I576	C9
I577	D8
I578	D9
I579	B8

Mono Carrier: Diversity Table for A1 (Power Supply)

DIVERSITY TABLE FOR A 1 POWER SUPPLY

REGION	NAFTA			LATAM / AP						CHINA			INDIA		EUROPE					
MAIN RANGE	LR			FR						HR			HR		HR					
SET	27RF 27FSQ	32RF	26WSRF 30WSRF 32FSQ	21RF	25RF 29FSQ	29RF	29RF	28WSSF	28WSRF 32WSRF	21/25RF	29RF	34RF	21/29RF	21/29RF 29FSQ	21RF	29RF 28WSSF	29RF	24WR 25/28BLD	28WSRF	32WSRF
VBATT	130V	130V	143V	130V	130V	130V	130V	143V	143V	130V	130V	130V	130V	130V	130V	130V	130V	143V	143V	143V
AUDIO OUTPUT	2X5W 2X10W	2X5W 2X10W	2X5W 2X10W	2X10W	2X5W 2X10W	2X5W	2X10W	2X5W	2X10W	2X10W	2X5W 2X10W	2X10W	2X5W 2X10+20W	2X15W	2X5W 2X10W	2X5W	2X10W	2X5W 2X10W	2X5W 2X10W	2X5W 2X10W
1508	---	---	---	WIRE SIN 180 SIN 18ST BK	WIRE SIN 180 SIN 18ST BK	WIRE SIN 180 SIN 18ST BK	WIRE SIN 180 SIN 18ST BK	WIRE SIN 180 SIN 18ST BK	WIRE SIN 180 SIN 18ST BK	WIRE SIN 180 SIN 18ST BK	WIRE SIN 180 SIN 18ST BK	WIRE SIN 180 SIN 18ST BK	WIRE SIN 180 SIN 18ST BK	WIRE SIN 180 SIN 18ST BK	WIRE SIN 180 SIN 18ST BK	WIRE SIN 180 SIN 18ST BK	WIRE SIN 180 SIN 18ST BK	WIRE SIN 180 SIN 18ST BK	WIRE SIN 180 SIN 18ST BK	WIRE SIN 180 SIN 18ST BK
1510	---	---	---	WIRE SIN 400 SIN 18ST BK	WIRE SIN 400 SIN 18ST BK	WIRE SIN 400 SIN 18ST BK	WIRE SIN 400 SIN 18ST BK	WIRE SIN 400 SIN 18ST BK	WIRE SIN 400 SIN 18ST BK	WIRE SIN 400 SIN 18ST BK	WIRE SIN 400 SIN 18ST BK	WIRE SIN 400 SIN 18ST BK	WIRE SIN 400 SIN 18ST BK	WIRE SIN 400 SIN 18ST BK	WIRE SIN 400 SIN 18ST BK	WIRE SIN 400 SIN 18ST BK	WIRE SIN 400 SIN 18ST BK	WIRE SIN 400 SIN 18ST BK	WIRE SIN 400 SIN 18ST BK	WIRE SIN 400 SIN 18ST BK
2505	200V 470U	200V 470U	200V 470U	400V 330U	400V 330U	400V 330U	400V 330U	400V 330U	400V 330U	450V 220U	450V 220U	450V 220U	450V 220U	450V 220U	400V 220U	400V 220U	400V 220U	400V 220U	400V 220U	400V 220U
2506	---	---	---	---	---	---	---	---	---	---	400V 33N	400V 33N	---	---	---	---	400V 33N	---	400V 33N	400V 33N
2508	---	---	---	275V 100N	275V 100N	275V 100N	275V 100N	275V 100N	275V 100N	275V 100N	275V 100N	275V 100N	---	---	275V 100N	275V 100N	275V 100N	275V 100N	275V 100N	275V 100N
2509	---	---	---	250V 1N5	250V 1N5	250V 1N5	250V 1N5	250V 1N5	250V 1N5	250V 1N5	250V 1N5	250V 1N5	250V 1N5	250V 1N5	250V 1N5	250V 1N5	250V 1N5	250V 1N5	250V 1N5	250V 1N5
2528	---	---	---	470N	470N	470N	470N	470N	470N	470N	470N	470N	470N	470N	470N	470N	470N	470N	470N	470N
2542	250V 1N5	250V 1N5	250V 1N5	250V 1N	250V 1N	250V 1N	250V 1N	250V 1N	250V 1N	250V 1N	250V 1N	250V 1N	250V 1N	250V 1N	250V 1N	250V 1N	250V 1N	250V 1N	250V 1N	250V 1N
2570	---	---	---	250V 470P	250V 470P	250V 470P	250V 470P	250V 470P	250V 470P	250V 470P	250V 470P	250V 470P	250V 470P	250V 470P	250V 470P	250V 470P	250V 470P	250V 470P	250V 470P	250V 470P
3505	1MA/423V	1MA/423V	1MA/423V	1MA/612V	1MA/612V	1MA/612V	1MA/612V	1MA/612V	1MA/612V	1MA/612V	1MA/612V	1MA/612V	1MA/612V	1MA/612V	1MA/612V	1MA/612V	1MA/612V	1MA/612V	1MA/612V	1MA/612V
3506	---	---	---	3M3	3M3	3M3	3M3	3M3	3M3	3M3	3M3	3M3	3M3	3M3	3M3	3M3	3M3	3M3	3M3	3M3
3507	---	144V 3R	144V 3R	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---
3508	---	---	---	---	---	---	---	---	---	---	470R	470R	---	---	---	---	470R	---	470R	470R
3514	100R	100R	100R	47R	47R	47R	47R	47R	47R	47R	47R	47R	47R	47R	47R	47R	47R	47R	47R	47R
3520	0R18	0R18	0R18	0R33	0R33	0R33	0R22	0R33	0R22	0R33	0R33	0R33	0R33	0R33	0R33	0R33	0R33	0R33	0R33	0R33
3527	---	---	---	47K	47K	47K	47K	47K	47K	47K	47K	47K	47K	47K	47K	47K	47K	47K	47K	47K
3528	---	---	---	1M	1M	1M	1M	1M	1M	1M	1M	1M	1M	1M	1M	1M	1M	1M	1M	1M
3529	---	---	---	2M2	2M2	2M2	2M2	2M2	2M2	2M2	2M2	2M2	2M2	2M2	2M2	2M2	2M2	2M2	2M2	2M2
3523	145V 1R5	---	---	276V 4R5	276V 4R5	276V4R5	276V 4R5	276V 4R5	276V 4R5	276V 4R5	276V 4R5	276V 4R5	276V 4R5	276V 4R5	276V 4R5	276V 4R5	276V 4R5	276V 4R5	276V 4R5	276V 4R5
3565	15K	15K	15K	18K	18K	18K	18K	18K	18K	15K	15K	15K	15K	15K	15K	15K	15K	15K	15K	15K
3574	150K	150K	33K	150K	150K	150K	150K	33K	33K	150K	150K	150K	150K	150K	150K	150K	150K	33K	33K	33K
5500	---	---	---	10MH 2A	10MH 2A	10MH 2A	10MH 2A	10MH 2A	10MH 2A	20MH 1A5	20MH 1A5	20MH 1A5	---	---	20MH 1A5	20MH 1A5	20MH 1A5	20MH 1A5	20MH 1A5	20MH 1A5
5502	---	---	---	---	---	---	---	---	---	---	65MH	65MH	---	---	---	---	65MH	---	65MH	38MH
5512	SS40310-01	SS40310-01	SS40312-01	SS42315-01	SS42315-01	SS42315-01	SS49309-01	SS42316-01	SS49308-01	SS42315-01	SS42315-01	SS42315-01	SS42315-01	SS42317-01	SS42315-01	SS42315-01	SS42315-01	SS42316-01	SS42316-01	SS42316-01
6500	GBU4JL	GBU6JL	GBU6JL	GBU4JL	GBU4JL	GBU6JL	GBU6JL	GBU6JL	GBU6JL	GBU4JL	GBU4JL	BYV29X-500	GBU4JL	GBU4JL	GBU4JL	GBU4JL	GBU4JL	GBU4JL	GBU4JL	GBU4JL
6538	---	---	---	BAS316	BAS316	BAS316	BAS316	BAS316	BAS316	BAS316	BAS316	BAS316	BAS316	BAS316	BAS316	BAS316	BAS316	BAS316	BAS316	BAS316
6551	STTH8L06D	BYV29X-500	BYV29X-500	STTH8L06D	STTH8L06D	STTH8L06D	STTH8L06D	STTH8L06D	BYV29X-500	STTH8L06D	STTH8L06D	GBU4JL	STTH8L06D	STTH8L06D	STTH8L06D	STTH8L06D	STTH8L06D	STTH8L06D	STTH8L06D	BYV29X-500
6565	UDZS9.1B	UDZS9.1B	UDZS9.1B	UDZS7.5B	UDZS7.5B	UDZS7.5B	UDZS7.5B	UDZS7.5B	UDZS7.5B	UDZS10B	UDZS10B	UDZS10B	UDZS10B	UDZS10B	UDZS10B	UDZS10B	UDZS10B	UDZS10B	UDZS10B	UDZS10B
7512	FQPF9N50	FQPF9N50	FQPF9N50	FQPF7N80	STP10NK8OZFP	STP10NK8OZFP	STP10NK8OZFP	STP10NK8OZFP	STP10NK8OZFP	FQPF7N80	FQPF7N80	FQPF7N80	FQPF7N80	FQPF7N80	FQPF7N80	FQPF7N80	FQPF7N80	FQPF7N80	FQPF7N80	FQPF7N80
7532	---	---	---	BC857B	BC857B	BC857B	BC857B	BC857B	BC857B	BC857B	BC857B	BC857B	BC857B	BC857B	BC857B	BC857B	BC857B	BC857B	BC857B	BC857B
9502	JMP	JMP	JMP	---	---	---	---	---	---	---	---	---	JMP	JMP	---	---	---	---	---	---
9504	JMP	JMP	JMP	---	---	---	---	---	---	---	---	---	JMP	JMP	---	---	---	---	---	---
9506	JMP	JMP	JMP	JMP	JMP	JMP	JMP	JMP	JMP	JMP	---	---	JMP	JMP	JMP	JMP	---	JMP	---	---

AUDIO OUTPUT	2X5W	2X10W ---	2X10+20W ---	2X15W
1543	---	---	2A 250V	2A250V
2562	25V 1000uF	25V 2200uF	25V 2200uF	25V 2200uF
2563	25V 1000uF	25V 2200uF	25V 2200uF	25V 2200uF
3571	220R	220R	220R	680R
3572	220R	220R	220R	470R
6562	SB360	SB360	SB360	SB380
6563	SB360	SB360	SB360	SB380
9514	JMP	JMP	---	---

REGION	NAFTA	ROW
1506	---	Main Switch
9507	JMP	---
9508	JMP	---

3139 123 5676.1

E_14480_126.eps
100504

Mono Carrier: Deflection

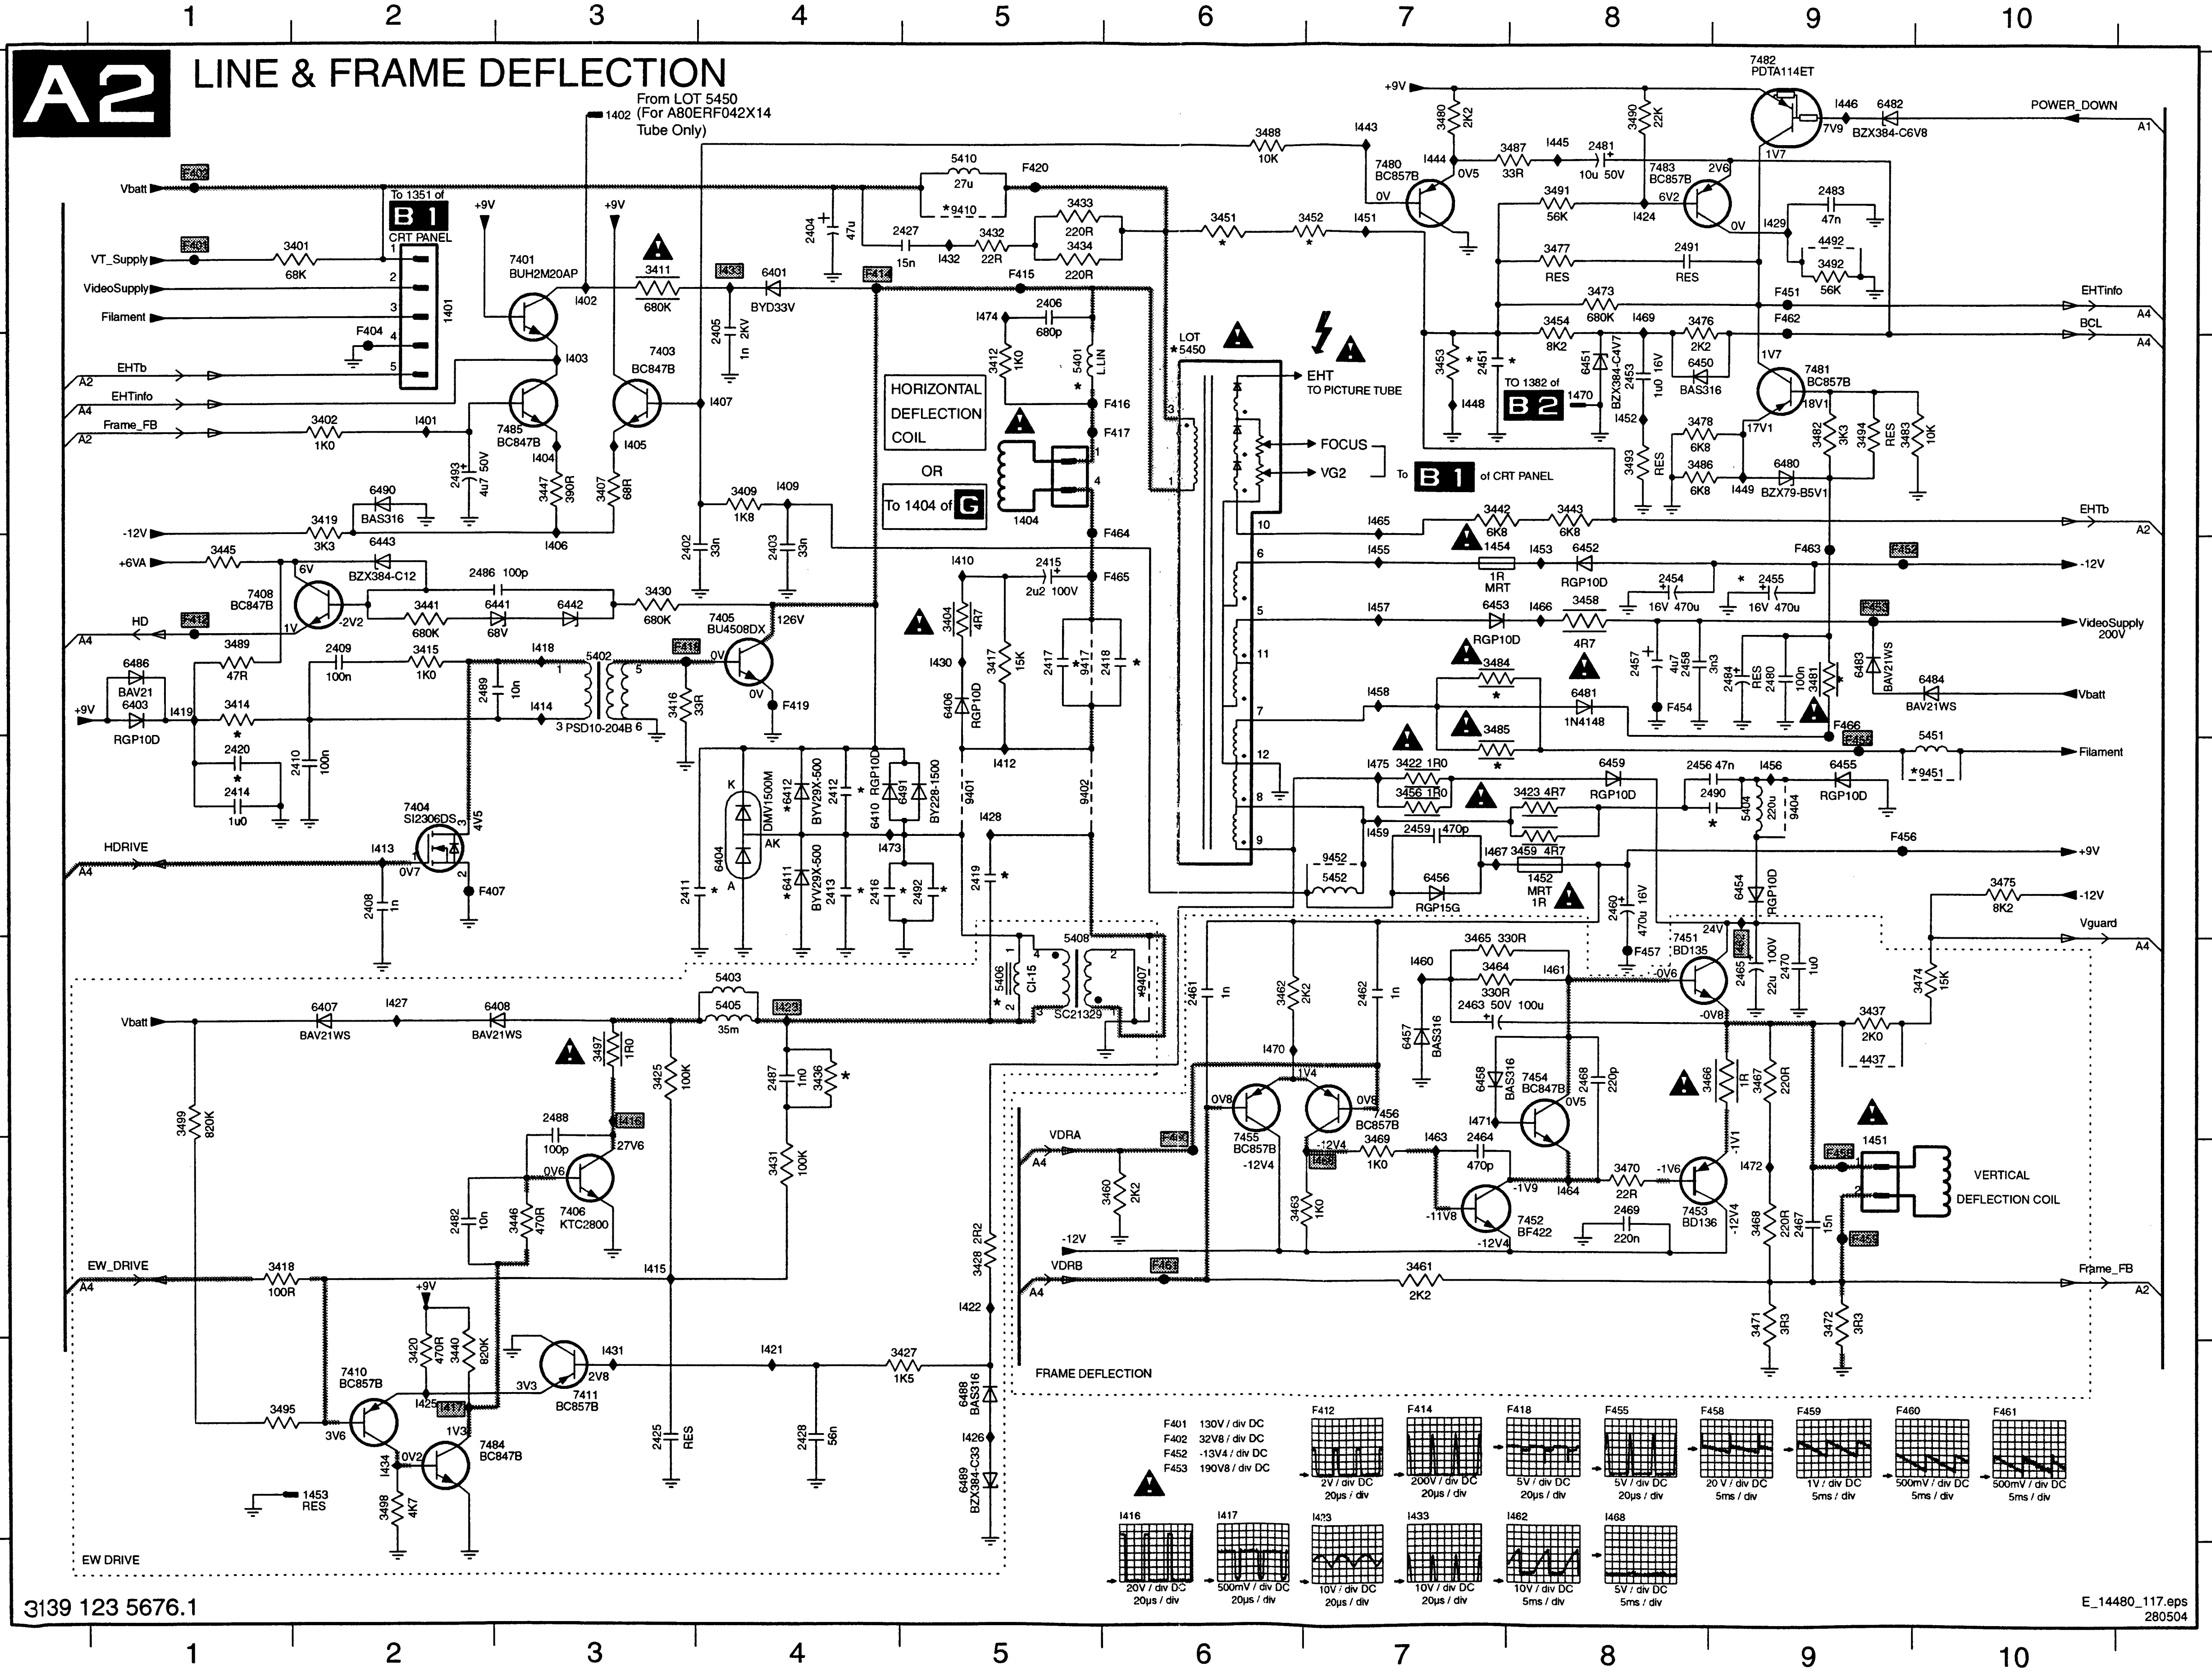
A2
LINE & FRAME DEFLECTION
From LOT 5450 (For A80ERF042X14 Tube Only)
1402
Vbatt
VT_Supply
VideoSupply
Filament
EHTb
EHTinfo
Frame_FB
To 1351 of B1 CRT PANEL
1401
F401
F402
F404
3401 68K
3402 1K0
+9V
7401 BUH2M20AP
7403 BC847B
7485 BC847B
3411 680K
6401 BYD33V
2404 47u
2405 1n 2KV
F414
5410 27u
9410
F420
2427 15n
3432 22R
3433 220R
3434 220R
I432
F415
I474
2406 680p
3412 1K0
5401 LLIN
F416
F417
HORIZONTAL DEFLECTION COIL
OR
To 1404 of G
1404
F464
F465
-12V
+6VA
HD
+9V
3419 3K3
6490 BAS316
6443 BZX384-C12
3445
7408 BC847B
2486 100p
3441 680K
6441 68V
6442
3430 680K
7405 BU4508DX
126V
F418
F419
3489 47R
6486 BAV21
6403 RGP10D
I419
3414
2420
2414 1u0
2409 100n
3415 1K0
I418
5402
3 PSD10-204B
2489 10n
I414
3416 33R
2410 100n
7404 SI2306DS
F407
HDRIVE
I413
0V7
2408 1n
2402 33n
2403 33n
3409 1K8
I409
2415 2u2 100V
I410
3404 4R7
3417 15K
6406 RGP10D
I430
2417
2418
9417
I412
9401
9402
I428
2419
DMV1500M
6404
2411
6412
6411
BYV29X-500
2412
2413
2416
6410 RGP10D
6491
BY228-1500
I473
2492
5408
5406 CI-15
SC21329
9407
5403
5405 35m
I429
6407 BAV21WS
6408 BAV21WS
I427
3497 1R0
3425 100K
2487 1n0
3436
2488 100p
I416
27V6
7406 KTC2800
2482 10n
3446 470R
3431 100K
EW_DRIVE
3418 100R
I415
+9V
3420 470R
3440 820K
7410 BC857B
7411 BC857B
I431
I421
3427 1K5
I422
3428 2R2
3495
3499 820K
7484 BC847B
3498 4K7
I434
I425
I417
2425 RES
2428 56n
6488 BAS316
I426
6489 BZX384-C33
1453 RES
EW DRIVE
LOT 5450
EHT TO PICTURE TUBE
FOCUS
VG2
To B1 of CRT PANEL
TO 1382 of B2
1470
+9V
3488 10K
I443
3480 2K2
7480 BC857B
I444
3487 33R
I445
2481 10u 50V
3490 22K
7483 BC857B
7482 PDTA114ET
I446
6482 BZX384-C6V8
POWER_DOWN
3451
3452
I451
3491 56K
I424
3477 RES
2491 RES
2483 47n
4492
3492 56K
F451
F462
EHTinfo
BCL
3473 680K
3454 8K2
I469
3476 2K2
6450 BAS316
3453
2451
I448
6451 BZX384-C4V7
2453 1u0 16V
I452
3478 6K8
3486 6K8
I449
6480 BZX79-B5V1
7481 BC857B
3482 3K3
3494 RES
3483 10K
3493 RES
EHTb
3442 6K8
3443 6K8
I465
I455
1454 1R MRT
I453
6452 RGP10D
F463
F452
-12V
2454 16V 470u
2455 16V 470u
6453 RGP10D
I457
I466
3458 4R7
F453
VideoSupply 200V
3484
6481 1N4148
2457
2458 4n7
2484 3n3
2480 RES
3481 100n
6483 BAV21WS
6484 BAV21WS
Vbatt
F454
F466
F455
5451
9451
Filament
I458
3485
I475
3422 1R0
3456 1R0
3423 4R7
6459 RGP10D
2456 47n
I456
6455 RGP10D
2490
5404 220u
9404
F456
+9V
I459
2459 470p
3459 4R7
I467
1452 MRT 1R
9452
5452
6456 RGP15G
6454 RGP10D
3475 8K2
-12V
Vguard
2460 470u 16V
F457
7451 BD135
24V
2465 22u
2470 100V 1u0
3474 15K
I460
3465 330R
3464 330R
I461
2463 50V 100u
6457 BAS316
2461 1n
3462 2K2
2462 1n
I470
6458 BAS316
7454 BC847B
2468 220p
3466
3467 220R
3437 2K0
4437
7455 BC857B
7456 BC857B
VDRA
F460
3460 2K2
3463 1K0
3469 1K0
I468
I463
2464 470p
I471
7452 BF422
I464
3470 22R
2469 220n
7453 BD136
I472
3468 220R
2467 15n
1451
VERTICAL DEFLECTION COIL
F458
F459
-12V
VDRB
F461
3461 2K2
Frame_FB
3471 3R3
3472 3R3
FRAME DEFLECTION
F401 130V / div DC
F402 32V8 / div DC
F452 -13V4 / div DC
F453 190V8 / div DC
F412 2V / div DC 20µs / div
F414 200V / div DC 20µs / div
F418 5V / div DC 20µs / div
F455 5V / div DC 20µs / div
F458 20 V / div DC 5ms / div
F459 1V / div DC 5ms / div
F460 500mV / div DC 5ms / div
F461 500mV / div DC 5ms / div
I416 20V / div DC 20µs / div
I417 500mV / div DC 20µs / div
I423 10V / div DC 20µs / div
I433 10V / div DC 20µs / div
I462 10V / div DC 5ms / div
I468 5V / div DC 5ms / div
3139 123 5676.1
E_14480_117.eps 280504

1401	A2
1402	A3
1404	B5
1451	F9
1452	D8
1453	G2
1454	C7
1470	B8
2402	C3
2403	C4
2404	A4
2405	A4
2406	A5
2408	D2
2409	C2
2410	D2
2411	D3
2412	D4
2413	D4
2414	D1
2415	C5
2416	D4
2417	C5
2418	C6
2419	D5
2420	D1
2425	G3
2427	A5
2428	G4
2451	B7
2453	B8
2454	C8
2455	C9
2456	D8
2457	C8
2458	C8
2459	D7
2460	D8
2461	E6
2462	E7
2463	E7
2464	F7
2465	E9
2467	F9
2468	E8
2469	F8
2470	E9
2480	C9
2481	A8
2482	F2
2483	A9
2484	C9
2486	C2
2487	E4
2488	E3
2489	C2
2490	D9
2491	A8
2492	D5
2493	B2
3401	A2
3402	B2
3404	C5
3407	B3
3409	B4
3411	A3
3412	B5
3414	C1
3415	C2
3416	C3
3417	C5
3418	F1
3419	B2
3420	G2
3422	D7
3423	D8
3425	E3
3427	G5
3428	F5
3430	C3
3431	F4
3432	A5
3433	A5
3434	A5
3436	E4
3437	E9
3440	G2
3441	C2
3442	B7
3443	B8
3445	C1
3446	F3
3447	B3
3451	A6
3452	A7
3453	B7
3454	A8
3456	D7
3458	C8
3459	D8
3460	F6
3461	F7
3462	E6
3463	F6
3464	E7
3465	E7
3466	E9
3467	E9
3468	F9
3469	F7
3470	F8
3471	F9
3472	F9
3473	A8
3474	E10
3475	D10
3476	A8
3477	A8
3478	B8
3480	A7
3481	C9
3482	B9
3483	B9
3484	C7
3485	C7
3486	B8
3487	A8
3488	A6
3489	C1
3490	A8
3491	A8
3492	A9
3493	B8
3494	B9
3495	G1
3497	E3
3498	G2
3499	E1
4437	E9
4492	A9
5401	B5
5402	C3
5403	E4
5404	D9
5405	E4
5406	E5
5408	D5
5410	A5
5450	B6
5451	D10
5452	D7
6401	A4
6403	C1
6404	D4
6406	C5
6407	E2
6408	E3
6410	D4
6411	D4
6412	D4
6441	C3
6442	C3
6443	C2
6450	B8
6451	B8
6452	C8
6453	C7
6454	D9
6455	D9
6456	D7
6457	E7
6458	E7
6459	D8
6480	B9
6481	C8
6482	A9
6483	C9
6484	C10
6486	C1
6488	G5
6489	G5
6490	B2
6491	D4
7401	A3
7403	B3
7404	D2
7405	C4
7406	F3
7408	C1
7410	G2
7411	G3
7451	E8
7452	F8
7453	F8
7454	E8
7455	E6
7456	E7
7480	A7
7481	B9
7482	A9
7483	A8
7484	G2
7485	B3
9401	D5
9402	D5
9404	D9
9407	E6
9410	A5
9417	C5
9451	D10
9452	D7
F401	A1
F402	A1
F404	B2
F407	D2
F412	C1
F414	A4
F415	A5
F416	B6
F417	B6
F418	C3
F419	C4
F420	A5
F451	A9
F452	C9
F453	C9
F454	C8
F455	D9
F456	D9
F457	E8
F458	F9
F459	F9
F460	E6
F461	F6
F462	A9
F463	C9
F464	C6
F465	C6
F466	C9
I401	B2
I402	A3
I403	B3
I404	B3
I405	B3
I406	C3
I407	B4
I409	B4
I410	C5
I412	D5
I413	D2
I414	C3
I415	F3
I416	E3
I417	G2
I418	C3
I419	C1
I421	G4
I422	F5
I423	E4
I424	A8
I425	G2
I426	G5
I427	E2
I428	D5
I429	A9
I430	C5
I431	G3
I432	A5
I433	A4
I434	G2
I443	A7
I444	A7
I445	A8
I446	A9
I448	B7
I449	B9
I451	A7
I452	B8
I453	C8
I455	C7
I456	D9
I457	C7
I458	C7
I459	D7
I460	E7
I461	E8
I462	E9
I463	E7
I464	F8
I465	B7
I466	C8
I467	D7
I468	F7
I469	A8
I470	E6
I471	E7
I472	F9
I473	D4
I474	A5
I475	D7

Mono Carrier: Diversity Table for A2 (Deflection)

DIVERSITY TABLE FOR A2 DEFLECTION

Region	NAFTA						
Tube	LPD	LPD	LPD	LPD	LPD	LPD	SMGK
Size	27 V	28 WR	29 RF	32 V	32 V RF	32 WR	25 RF
2411	470pF	1.2nF	1.5nF	2.2nF	680pF	330pF	1.2nF
2412	12nF	13nF	15nF	15nF	12nF	13nF	15nF
2413	120nF	15nF	39nF	33nF	33nF	18nF	33nF
2416	-	3n3	-	-	4n7	-	-
2418	390nF	-	330nF	470nF	270nF	-	390nF
2419	-	390nF	2u2	2u2	2u2	430nF	2u2
2425	-	33nF	33nF	33nF	10nF	33nF	33nF
2451	150nF	150nF	180nF	180nF	150nF	180nF	100nF
2457	4u7	4u7	4u7	4u7	4u7	4u7	4u7
2487	-	1n5	1n5	1n5	2n2	1n5	1n5
2490	47n	-	-	-	-	-	47n
3224	680K 5%	680K 5%	680K 5%	680K 5%	560K 5%	680K 5%	680K 5%
3295	8K2 5%	10K 5%	8K2 5%	8K2 5%	8K2 5%	8K2 5%	8K2 5%
3414	1R 1W 5%	2R2 1W 5%	1R 1W 5%	0R33 1W 5%	1R 1W 5%	6R8 1W 5%	3R3 1W 5%
3431	82K 1%	82K 1%	82K 1%	82K 1%	10K 1%	82K 1%	82K 1%
3451	68K 1%	82K 1%	68K 1%	75K 1%	68K 1%	82K 1%	68K 1%
3452	18K 5%	15K 5%	15K 5%	15K 5%	6K8 5%	6K8 5%	18K 5%
3453	33K 5%	22K 5%	33K 5%	22K 5%	33K 5%	22K 5%	33K 5%
3467	120R 5%	120R 5%	120R 5%	220R 5%	150R 5%	220R 5%	120R 5%
3468	220R 5%	150R 5%	150R 5%	150R 5%	150R 5%	220R 5%	150R 5%
3471	-	2R7 1%	2R4 1%	2R4 1%	2R2 1%	1R8 1%	2R2 1%
3472	3R3 1%	2R4 1%	2R4 1%	2R7 1%	2R2 1%	3R3 1%	2R 1%
3473	390K 5%	680K 5%	820K 5%	820K 5%	820K 5%	820K 5%	680K 5%
3474	15K 5%	12K 5%	15K 5%	15K 5%	15K 5%	15K 5%	15K 5%
3481	5R6 5%	5R6 5%	10R 5%	2R7 5%	5R6 5%	4R7 5%	-
3482	22K 1%	22K 1%	2K4 1%	22K 1%	22K 1%	22K 1%	-
3483	56K 1%	56K 1%	5K6 1%	56K 1%	56K 1%	56K 1%	-
3491	100K 5%	100K 5%	100K 5%	82K 5%	68K 5%	82K 5%	100K 5%
3494	180K 5%	-	100K 5%	150K 5%	680K 5%	680K 5%	-
3499	680K 5%	680K 5%	680K 5%	330K 5%	680K 5%	680K 5%	680K 5%
5401	50uH	42uH	33uH	33uH	25uH	42uH	33uH
5408	-	SC2132 9-00B	CU15	CU15	CU15	SC2132 9-00B	CU15
5450	JF0501-21835B	JF0501-85021B	JF0501-21836B	JF0501-21140B	JF0101-85020B	JF0101-85021B	JF0501-21835B
5451	27uH 10%	JMP	33uH 10%	27uH 10%	JMP	JMP	33uH 10%
6404	DVM1500M	-	DVM1500M	DVM1500M	DVM1500M	-	DVM1500M
6411	-	BY229X-800	-	-	-	BY229X-800	-
6412	-	BY359X-1500	-	-	-	BY359X-1500	-
7405	BU4508DX	BU2725DX	BU4508DX	BU2725DX	BU4508DX	BU2725DX	BU4508DX
9407	-	-	JMP	JMP	JMP	-	JMP
9417	-	JMP	-	-	-	JMP	-

Region	LATAM					
Tube	LPD	LPD	LPD	LPD	LPD	SMGK
Size	25 RF	27V	28WS	28WR	32WR	29RF
2411	680nF	470pF	1.2nF	1.2nF	330pF	1.5nF
2412	15nF	12nF	15nF	13nF	13nF	15nF
2413	33nF	120nF	18nF	15nF	18nF	39nF
2416	-	-	2n2	3n3	-	-
2418	360nF	390nF	-	-	-	330nF
2419	2u2	-	470nF	390nF	430nF	2u2
2425	33nF	-	33nF	33nF	33nF	33nF
2451	100nF	150nF	120nF	150nF	180nF	100nF
2457	4u7	4u7	4u7	4u7	4u7	4u7
2487	1n5	-	1n5	1n5	1n5	3n3
2490	-	47n	-	-	-	-
3224	680K 5%	680K 5%	680K 5%	560K 5%	680K 5%	680K 5%
3295	8K2 5%	8K2 5%	8K2 5%	10K 5%	8K2 5%	8K2 5%
3414	1R 1W 5%	1R 1W 5%	4R7 1W 5%	2R2 1W 5%	6R8 1W 5%	0R33 1W 5%
3431	82K 1%	82K 1%	82K 1%	82K 1%	82K 1%	82K 1%
3451	68K 1%	68K 1%	120K 1%	82K 1%	82K 1%	68K 1%
3452	18K 5%	18K 5%	27K 5%	15K 5%	6K8 5%	15K 5%
3453	33K 5%	33K 5%	33K 5%	22K 5%	22K 5%	33K 5%
3467	120R 5%	120R 5%	220R 5%	120R 5%	220R 5%	120R 5%
3468	150R 5%	220R 5%	220R 5%	150R 5%	220R 5%	150R 5%
3471	2R4 1%	-	2R2 1%	2R7 1%	1R8 1%	1R8 1%
3472	2R4 1%	3R3 1%	3R3 1%	2R4 1%	3R3 1%	2R2 1%
3473	820K 5%	390K 5%	1M 5%	680K 5%	820K 5%	1M 5%
3474	15K 5%	15K 5%	15K 5%	12K 5%	15K 5%	15K 5%
3481	-	5R6 5%	-	5R6 5%	4R7 5%	
3482	-	22K 1%	-	22K 1%	22K 1%	
3483	-	56K 1%	-	56K 1%	56K 1%	-
3491	100K 5%	100K 5%	82K 5%	100K 5%	82K 5%	82K 5%
3494	-	180K 5%	-	-	680K 5%	-
3499	680K 5%	680K 5%	680K 5%	680K 5%	680K 5%	680K 5%
5401	37uH	50uH	16uH	42uH	42uH	25uH
5408	CU15	-	SC2132 9-00B	SC2132 9-00B	SC2132 9-00B	CU15
5450	JF0501-2153B	JF0501-21835B	JF0501-21133B	JF0501-85021B	JF0101-85021B	JF0501-2136B
5451	27uH 10%	27uH 10%	39uH 10%	JMP	JMP	27uH 10%
6404	DVM1500M	DVM1500M	-	-	-	DMV1500M
6411	-	-	BY229X-80	BY229X-80	BY229X-800	-
6412	-	-	BY359X-1500	BY359X-1500	BY359X-1500	-
7405	BU4508DX	BU4508DX	BU4508DX	BU2725DX	BU2725DX	BU4508DX
9407	JMP	-	-	-	-	JMP
9417	-	-	JMP	JMP	JMP	-

Region	AP				
Tube	CPT	LPD	LPD	LPD	LPD
Size	21RF	25RF	29RF	32WR	34RF
2411	220pF	680nF	1.2nF	330pF	1nF
2412	8n2	15nF	15nF	13nF	12nF
2413	68nF	33nF	33nF	18nF	33nF
2416	-	-	3n3	-	-
2418	220nF	360nF	330nF	-	300nF
2419	-	2u2	2u2	430nF	2u2
2425	-	33nF	33nF	33nF	10nF
2451	120nF	120nF	220nF	180nF	270nF
2457	4u7	4u7	4u7	4u7	4u7
2487	1nF	1n5	1nF	1n5	3n3
2490	-	-	-	-	-
3224	1M 5%	680K 5%	680K 5%	680K 5%	1M 5%
3295	2K7 5%	8K2 5%	10K 5%	8K2 5%	7K5 1%
3414	10R 1W 5%	1R 1W 5%	1R 1W 5%	6R8 1W 5%	6R8 1W 5%
3431	82K 1%	82K 1%	82K 1%	82K 1%	10K 1%
3451	82K 1%	68K 1%	68K 1%	82K 1%	68K 1%
3452	18K 5%	18K 5%	15K 5%	6K8 5%	18K 5%
3453	33K 5%	33K 5%	33K 5%	22K 5%	33K 5%
3467	220R 5%	120R 5%	120R 5%	220R 5%	150R 5%
3468	220R 5%	150R 5%	150R 5%	220R 5%	150R 5%
3471	2R2 1%	2R4 1%	2R4 1%	1R8 1%	2R2 1%
3472	3R9 1%	2R4 1%	2R4 1%	3R3 1%	2R2 1%
3473	390K 5%	820K 5%	680K 5%	820K 5%	430K 5%
3474	15K 5%	15K 5%	15K 5%	15K 5%	15K 5%
3481	-	-	-	4R7 5%	-
3482	-	-	-	22K 1%	-
3483	-	-	-	56K 1%	-
3491	82K 5%	100K 5%	82K 5%	82K 5%	82K 5%
3494	-	-	-	680K 1%	-
3499	680K 5%	680K 5%	680K 5%	680K 5%	680K 5%
5401	82uH	37uH	33uH	42uH	42uH
5408	-	CU15	CU15	SC2132 9-00B	CU15
5450	JF0501-2135B	JF0501-2135B	JF0501-2136B	JF0101-85021B	JF0501-2601B
5451	68uH 5%	27uH 10%	27uH 10%	0.58mm COL	22uH
6404	DVM1500M	DVM1500M	DVM1500M	-	DVM1500M
6411	-	-	-	BY229X-800	-
6412	-	-	-	BY359X-1500	-
7405	BU4508DX	BU4508DX	BU4508DX	BU2725DX	BU4508DX
9407	-	JMP	JMP	-	JMP
9417	-	-	-	JMP	-

Region	CHINA				INDIA		
Tube	LPD	LPD	LPD	LPD	CPD	LPD	SMGK
Size	25RF	21RF	29RF	34RF	21RF	29RF	29FSQ
2411	680nF	220pF	1.2nF	1nF	220pF	1.2nF	680pF
2412	15nF	8n2	15nF	12nF	8n2	15nF	13nF
2413	33nF	68nF	33nF	33nF	68nF	33nF	39nF
2416	-	-	3n3	-	-	3n3	-
2418	360nF	270nF	330nF	300nF	220nF	330nF	390nF
2419	2u2	-	2u2	2u2	-	2u2	2u2
2425	33nF	-	33nF	10nF	-	33nF	33nF
2451	120nF	220nF	220nF	270nF	120nF	220nF	220nF
2457	4u7	4u7	4u7	4u7	4u7	4u7	4u7
2487	1n5	1nF	1nF	3n3	1nF	1nF	1nF
2490	-	-	-	-	-	-	-
3224	680K 5%	1M 5%	680K 5%	1M 5%	1M 5%	680K 5%	1M 5%
3295	8K2 5%	8K2 5%	10K 5%	7K5 1%	2K7 5%	10K 5%	8K2 5%
3414	1R 1W 5%	4R7 1W 5%	1R 1W 5%	6R8 1W 5%	10R 1W 5%	1R 1W 5%	4R7 1W 5%
3431	82K 1%	82K 1%	82K 1%	10K 1%	82K 1%	82K 1%	82K 1%
3451	68K 1%	68K 1%	68K 1%	68K 1%	82K 1%	68K 1%	56K 1%
3452	18K 5%	18K 5%	15K 5%	18K 5%	18K 5%	15K 5%	18K 5%
3453	33K 5%	33K 5%	33K 5%	33K 5%	33K 5%	33K 5%	33K 5%
3467	120R 5%	220R 5%	120R 5%	150R 5%	220R 5%	120R 5%	220R 5%
3468	150R 5%	220R 5%	150R 5%	150R 5%	220R 5%	150R 5%	220R 5%
3471	2R4 1%	3R9 1%	2R4 1%	2R2 1%	2R2 1%	2R4 1%	2R2 1%
3472	2R4 1%	4R7 1%	2R4 1%	2R2 1%	3R9 1%	2R4 1%	2R2 1%
3473	820K 5%	680K 5%	680K 5%	430K 5%	390K 5%	680K 5%	680K 5%
3474	15K 5%	15K 5%	15K 5%	15K 5%	15K 5%	15K 5%	15K 5%
3481		-	-	-	-	-	-
3482		-	-	-	-	-	-
3483	-	-	-	-	-	-	-
3491	100K 5%	56K 5%	82K 5%	82K 5%	82K 5%	82K 5%	56K 5%
3494	-	-	-	-	-	-	-
3499	680K 5%	680K 5%	56K 5%	56K 5%	56K 5%	56K 5%	56K 5%
5401	-	82uH	33uH	42uH	82uH	33uH	33uH
5408	CU15	-	CU15	CU15	-	CU15	CU15
5450	JF0501-2135B	JF0501-2135B	JF0501-2136B	JF0501-2601B	JF0501-2135B	JF0501-2136B	JF0501-2133B
5451	27uH 10%	68uH 5%	27uH 10%	22uH	68uH 5%	27uH 10%	22uH 10%
6404	DVM1500M	DVM1500M	DVM1500M	DVM1500M	DVM1500M	DVM1500M	DVM1500M
6411	-	-	-	-	-	-	-
6412	-	-	-	-	-	-	-
7405	BU4508DX	BU4508DX	BU4508DX	BU4508DX	BU4508DX	BU4508DX	BU4508DX
9407	JMP	-	JMP	JMP	-	JMP	JMP
9417	-	-	-	-	-	-	-

Region	EUROPE							
Tube	LPD	LPD	LPD	LPD	LPD	LPD	LPD	LPD
Size	21RF	24 WR	25 I	28 I	29 RF	28 WR	28 WS	32 WR
2411	470pF	1n2	470pF	470pF	1nF	680pF	680pF	680pF
2412	8n2	13nF	9n1	9n1	13nF	11nF	11nF	11nF
2413	33nF	15nF	18nF	18nF	33nF	15nF	15nF	15nF
2416	-	2n2	-	-	-	4n7	2n2	4n7
2418	470nF	-	390nF	390nF	360nF	-	-	-
2419	2u2	470nF	470nF	470nF	2u2	430nF	470nF	430nF
2425	33nF	33nF	33nF	33nF	33nF	33nF	33nF	33nF
2451	220nF	220nF	220nF	220nF	220nF	220nF	220nF	220nF
2457	4u7	4u7	4u7	4u7	4u7	4u7	4u7	4u7
2487	1nF	1nF	1nF	1nF	1nF	1nF	1nF	1nF
2490	47n	-	-	-	-	-	-	-
3224	1M 5%	1M 5%	1M 5%	1M 5%	1M 5%	1M 5%	1M 5%	1M 5%
3295	8K2 5%	8K2 5%	8K2 5%	8K2 5%	8K2 5%	8K2 5%	8K2 5%	8K2 5%
3414	4R7 1W	4R7 1W	10R 1W 5%	10R 1W 5%	2R2 1W	3R3 1W	4R7 1W	3R3 1W
3431	82K 1%	82K 1%	82K 1%	82K 1%	82K 1%	82K 1%	82K 1%	68K 1%
3451	68K 1%	56K 1%	120K 5%	120K 5%	68K 1%	68K 1%	68K 1%	18K 5%
3452	18K 5%	18K 5%	18K 5%	18K 5%	18K 5%	18K 5%	18K 5%	220R 5%
3453	22K 5%	22K 5%	33K 5%	33K 5%	33K 5%	22K 5%	22K 5%	220R 5%
3467	220R 5%	220R 5%	220R 5%	220R 5%	220R 5%	220R 5%	220R 5%	1R5 1%
3468	220R 5%	220R 5%	220R 5%	220R 5%	220R 5%	220R 5%	220R 5%	6R8 1%
3471	3R3 1%	3R3 5%	1R5 1%	1R5 1%	2R2 1%	1R5 1%	3R3 1%	470K 5%
3472	3R3 1%	3R3 1%	2R2 1%	2R2 1%	2R2 1%	6R8 1%	3R3 1%	15K 5%
3473	470K 5%	470K 5%	680K 5%	680K 5%	680K 5%	470K 5%	470K 5%	-
3474	15K 5%	15K 5%	15K 5%	15K 5%	15K 5%	15K 5%	15K 5%	-
3481	-	-	-	-	-	-	-	-
3482	-	-	-	-	-	-	-	56K 5%
3483	-	-	-	-	-	-	-	56K 5%
3491	56K 5%	56K 5%	56K 5%	56K 5%	56K 5%	56K 5%	56K 5%	-
3494	56K 5%	56K 5%	56K 5%	56K 5%	56K 5%	56K 5%	56K 5%	680K 5%
3499	680K 5%	680K 5%	680K 5%	680K 5%	680K 5%	680K 5%	680K 5%	680K 5%
5401	82uH	37uH	50uH	50uH	25uH	50uH	25uH	25uH
5408	CU15	SC21329-00B	SC21329-00B	SC21329-00B	CU15	SC21329-00B	SC21329-00B	SC21329-00B
5450	1342.0033CY	1342.0048B	1342.0048B	1342.0048B	1362.0016AB	1362-0015AB	1342.0042CY	1362-0015AB
5451	22uH 10%	22uH 10%	27uH 10%	27uH 10%	39uH 10%	0.588 COL	22uH 10%	33uH 10%
6404	DVM1500M	-	-	-	DVM1500M	-	-	-
6411	-	BY229X-800	BY229X-800	BY229X-800	-	BY229X-800	BY229X-800	BY229X-800
6412	-	BY359X-1500	BY359X-1500	BY359X-1500	-	BY359X-1500	BY359X-1500	BY359X-1500
7405	BU4508DX	BU2725DX	BU2725DX	BU2725DX	BU4508DX	BU2725DX	BU4508DX	BU2725DX
9407	JMP	-	-	-	JMP	-	-	-
9417	-	JMP	-	-	-	JMP	JMP	JMP

3139 123 5676.1

E_14480_127.eps
100504

Mono Carrier: Tuner IF

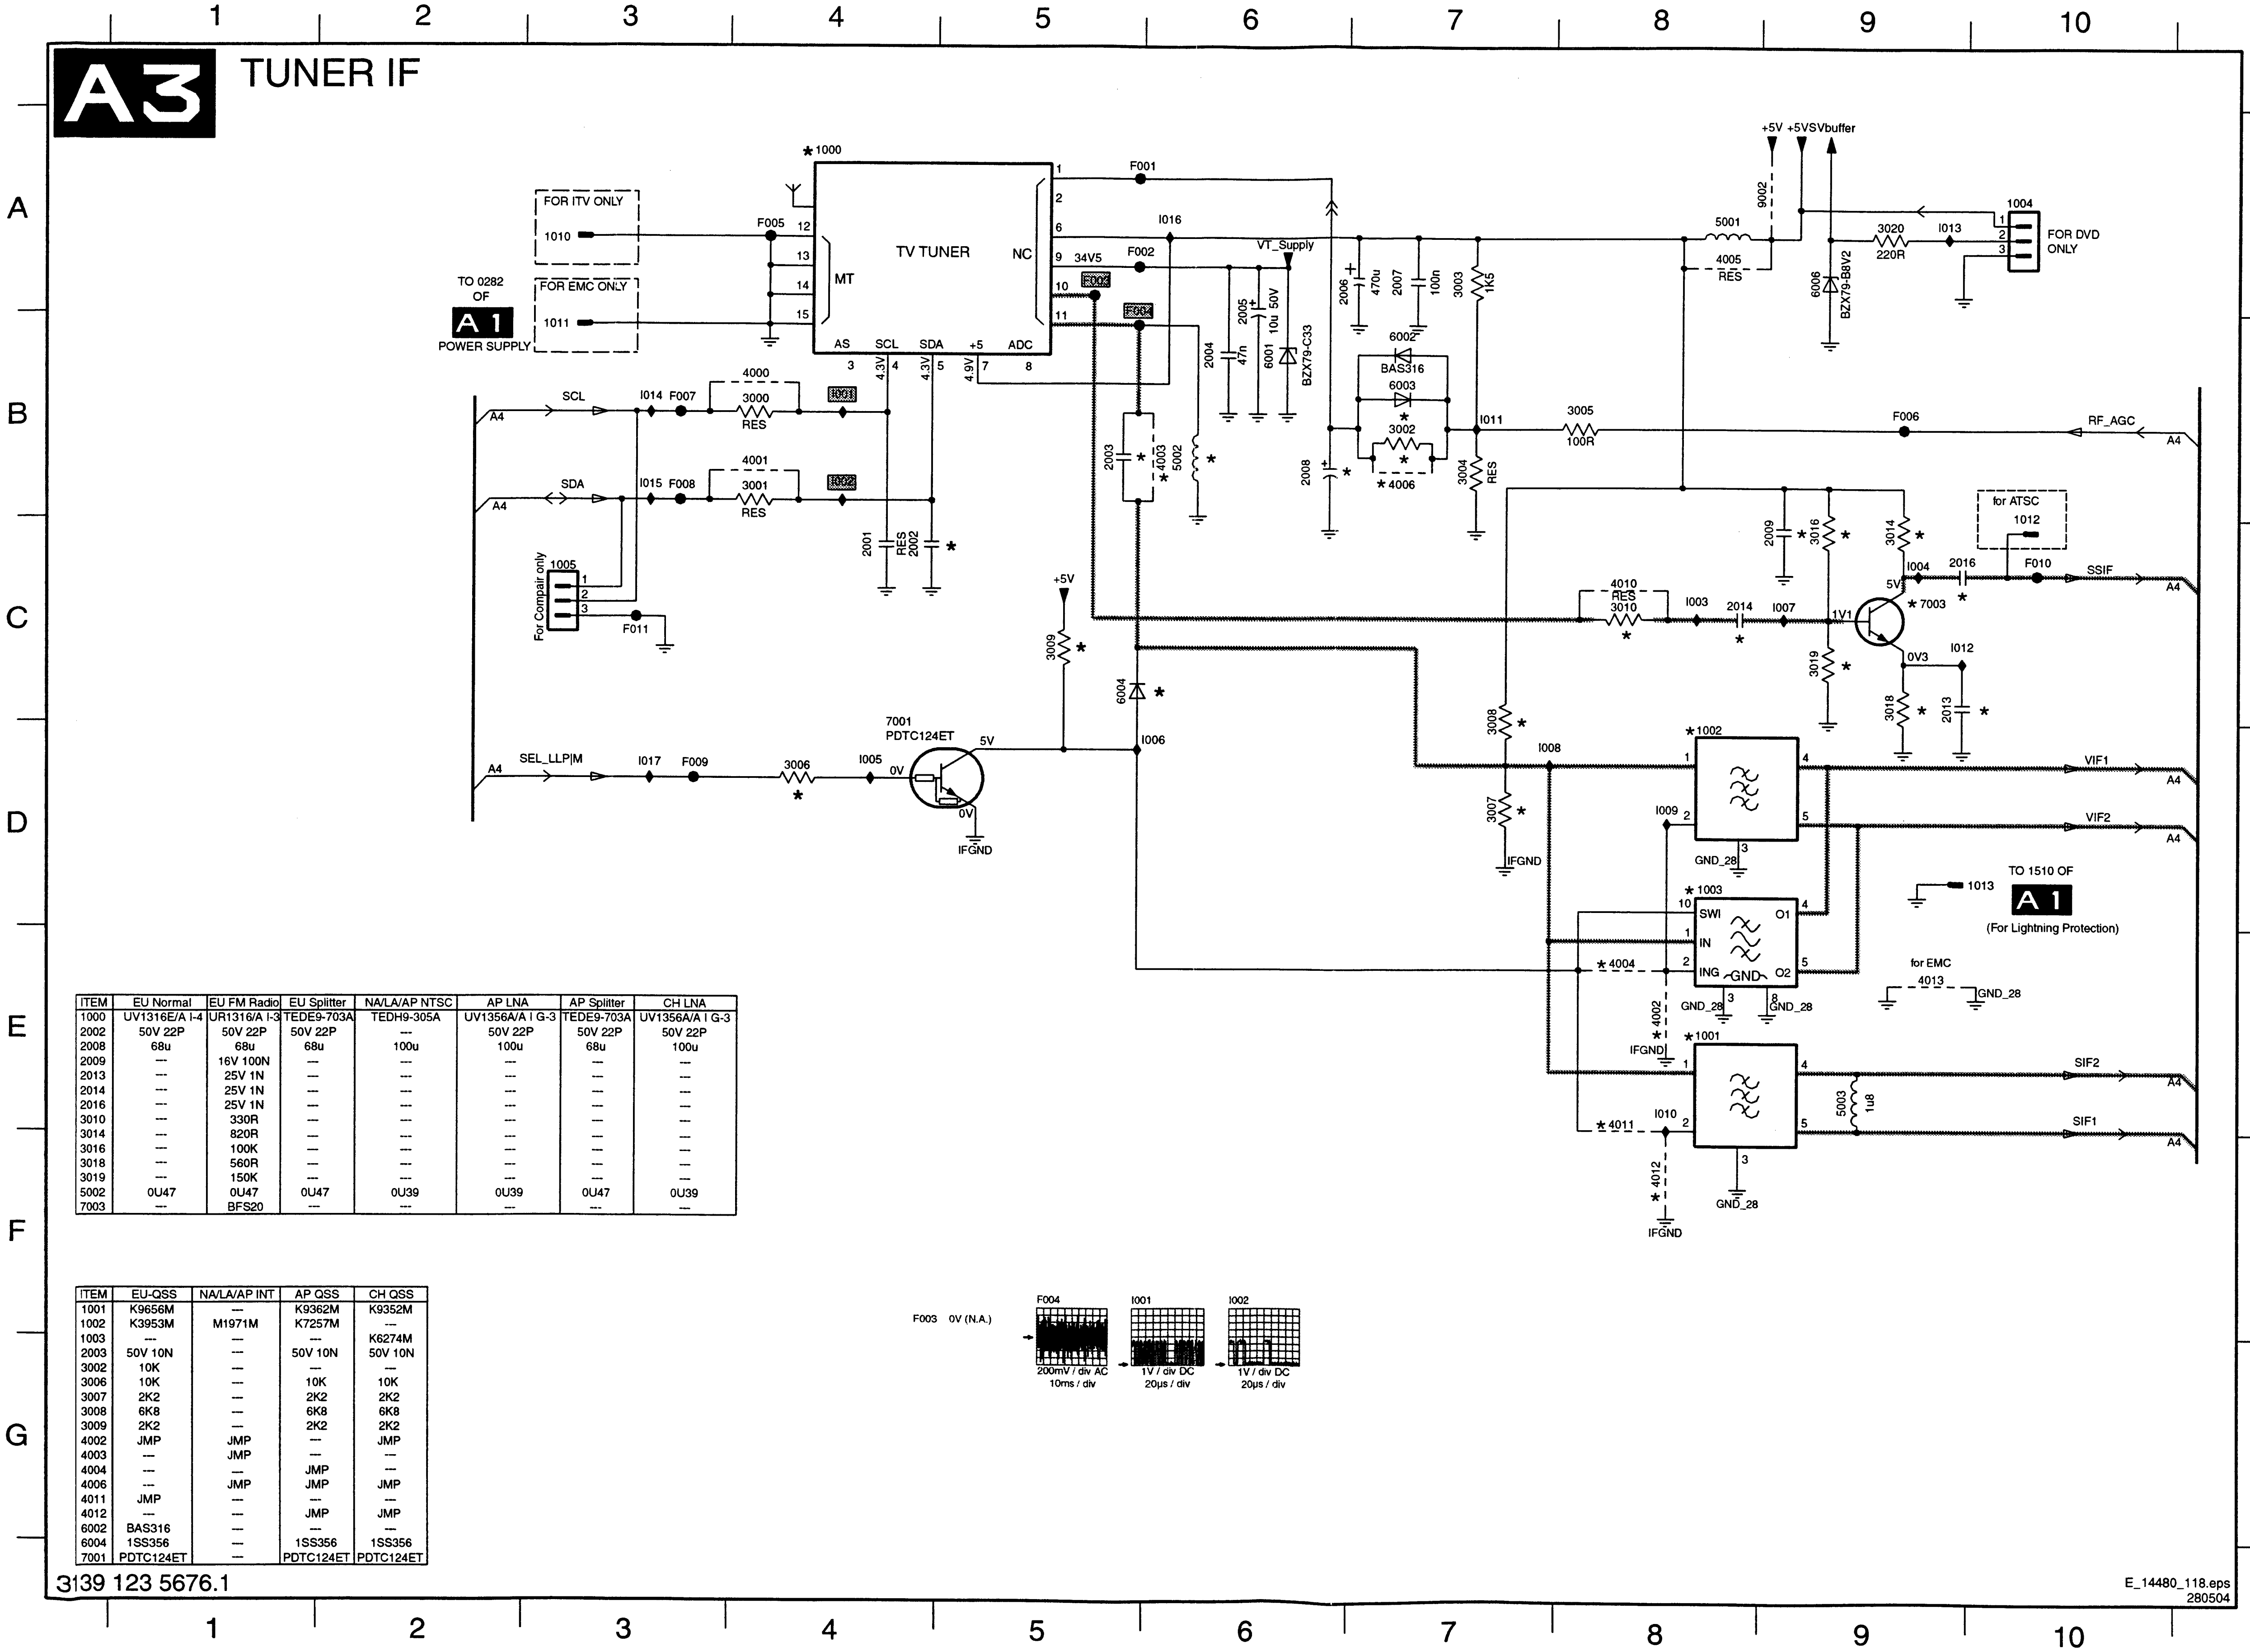
A3
TUNER IF
1000
TV TUNER
MT
NC
AS
SCL
SDA
+5
ADC
FOR ITV ONLY
1010
FOR EMC ONLY
1011
TO 0282 OF
A1
POWER SUPPLY
F001
F002
F003
F004
F005
F006
F007
F008
F009
F010
F011
I014
I015
I016
I017
34V5
VT_Supply
SCL
SDA
SEL_LLP|M
4000
3000
RES
4001
3001
RES
I001
I002
1005
For Compair only
7001
PDTC124ET
5V
0V
IFGND
+5V
3009
6004
I006
3006
I005
2001
2002
RES
2003
4003
5002
2004
47n
2005
10u 50V
6001
BZX79-C33
2006
470u
2007
100n
3003
1K5
2008
6002
BAS316
6003
3002
4006
3004
RES
I011
3005
100R
+5V
+5VS
Vbuffer
9002
5001
4005
RES
6006
BZX79-B8V2
3020
220R
I013
1004
FOR DVD ONLY
RF_AGC
A4
for ATSC
1012
2009
3016
3014
I004
2016
SSIF
7003
4010
RES
3010
I003
2014
I007
1V1
3019
0V3
I012
3018
2013
3008
I008
3007
IFGND
1002
VIF1
VIF2
I009
GND_28
1003
SWI
IN
ING
GND
O1
O2
4004
4002
IFGND
1001
SIF2
SIF1
5003
1u8
I010
4011
4012
TO 1510 OF
1013
A1
(For Lightning Protection)
for EMC
4013
GND_28
F003 0V (N.A.)
F004
I001
I002
200mV / div AC
10ms / div
1V / div DC
20µs / div
1V / div DC
20µs / div
1
2
3
4
5
6
7
8
9
10
A
B
C
D
E
F
G

ITEM	EU Normal	EU FM Radio	EU Splitter	NA/LA/AP NTSC	AP LNA	AP Splitter	CH LNA
1000	UV1316E/A I-4	UR1316/A I-3	TEDE9-703A	TEDH9-305A	UV1356A/A I G-3	TEDE9-703A	UV1356A/A I G-3
2002	50V 22P	50V 22P	50V 22P	---	50V 22P	50V 22P	50V 22P
2008	68u	68u	68u	100u	100u	68u	100u
2009	---	16V 100N	---	---	---	---	---
2013	---	25V 1N	---	---	---	---	---
2014	---	25V 1N	---	---	---	---	---
2016	---	25V 1N	---	---	---	---	---
3010	---	330R	---	---	---	---	---
3014	---	820R	---	---	---	---	---
3016	---	100K	---	---	---	---	---
3018	---	560R	---	---	---	---	---
3019	---	150K	---	---	---	---	---
5002	0U47	0U47	0U47	0U39	0U39	0U47	0U39
7003	---	BFS20	---	---	---	---	---

ITEM	EU-QSS	NA/LA/AP INT	AP QSS	CH QSS
1001	K9656M	---	K9362M	K9352M
1002	K3953M	M1971M	K7257M	---
1003	---	---	---	K6274M
2003	50V 10N	---	50V 10N	50V 10N
3002	10K	---	---	---
3006	10K	---	10K	10K
3007	2K2	---	2K2	2K2
3008	6K8	---	6K8	6K8
3009	2K2	---	2K2	2K2
4002	JMP	JMP	---	JMP
4003	---	JMP	---	---
4004	---	---	JMP	---
4006	---	JMP	JMP	JMP
4011	JMP	---	---	---
4012	---	---	JMP	JMP
6002	BAS316	---	---	---
6004	1SS356	---	1SS356	1SS356
7001	PDTC124ET	---	PDTC124ET	PDTC124ET

3139 123 5676.1

E_14480_118.eps
280504

1000	A4
1001	E8
1002	D8
1003	D8
1004	A10
1005	C3
1010	A3
1011	B3
1012	C10
1013	D10
2001	C4
2002	C4
2003	B5
2004	B6
2005	A6
2006	A6
2007	A7
2008	B6
2009	C9
2013	C9
2014	C8
2016	C9
3000	B4
3001	B4
3002	B7
3003	A7
3004	B7
3005	B8
3006	D4
3007	D7
3008	C7
3009	C5
3010	C8
3014	C9
3016	C9
3018	C9
3019	C9
3020	A9
4000	B4
4001	B4
4002	E8
4003	B6
4004	E8
4005	A8
4006	B7
4010	C8
4011	E8
4012	F8
4013	E9
5001	A8
5002	B6
5003	E9
6001	B6
6002	B7
6003	B7
6004	C5
6006	A9
7001	D4
7003	C9
9002	A9
F001	A5
F002	A5
F003	A5
F004	B5
F005	A4
F006	B9
F007	B3
F008	B3
F009	D3
F010	C10
F011	C3
I001	B4
I002	B4
I003	C8
I004	C9
I005	D4
I006	D6
I007	C9
I008	D7
I009	D8
I010	E8
I011	B7
I012	C9
I013	A9
I014	B3
I015	B3
I016	A6
I017	D3

Mono Carrier: Hercules

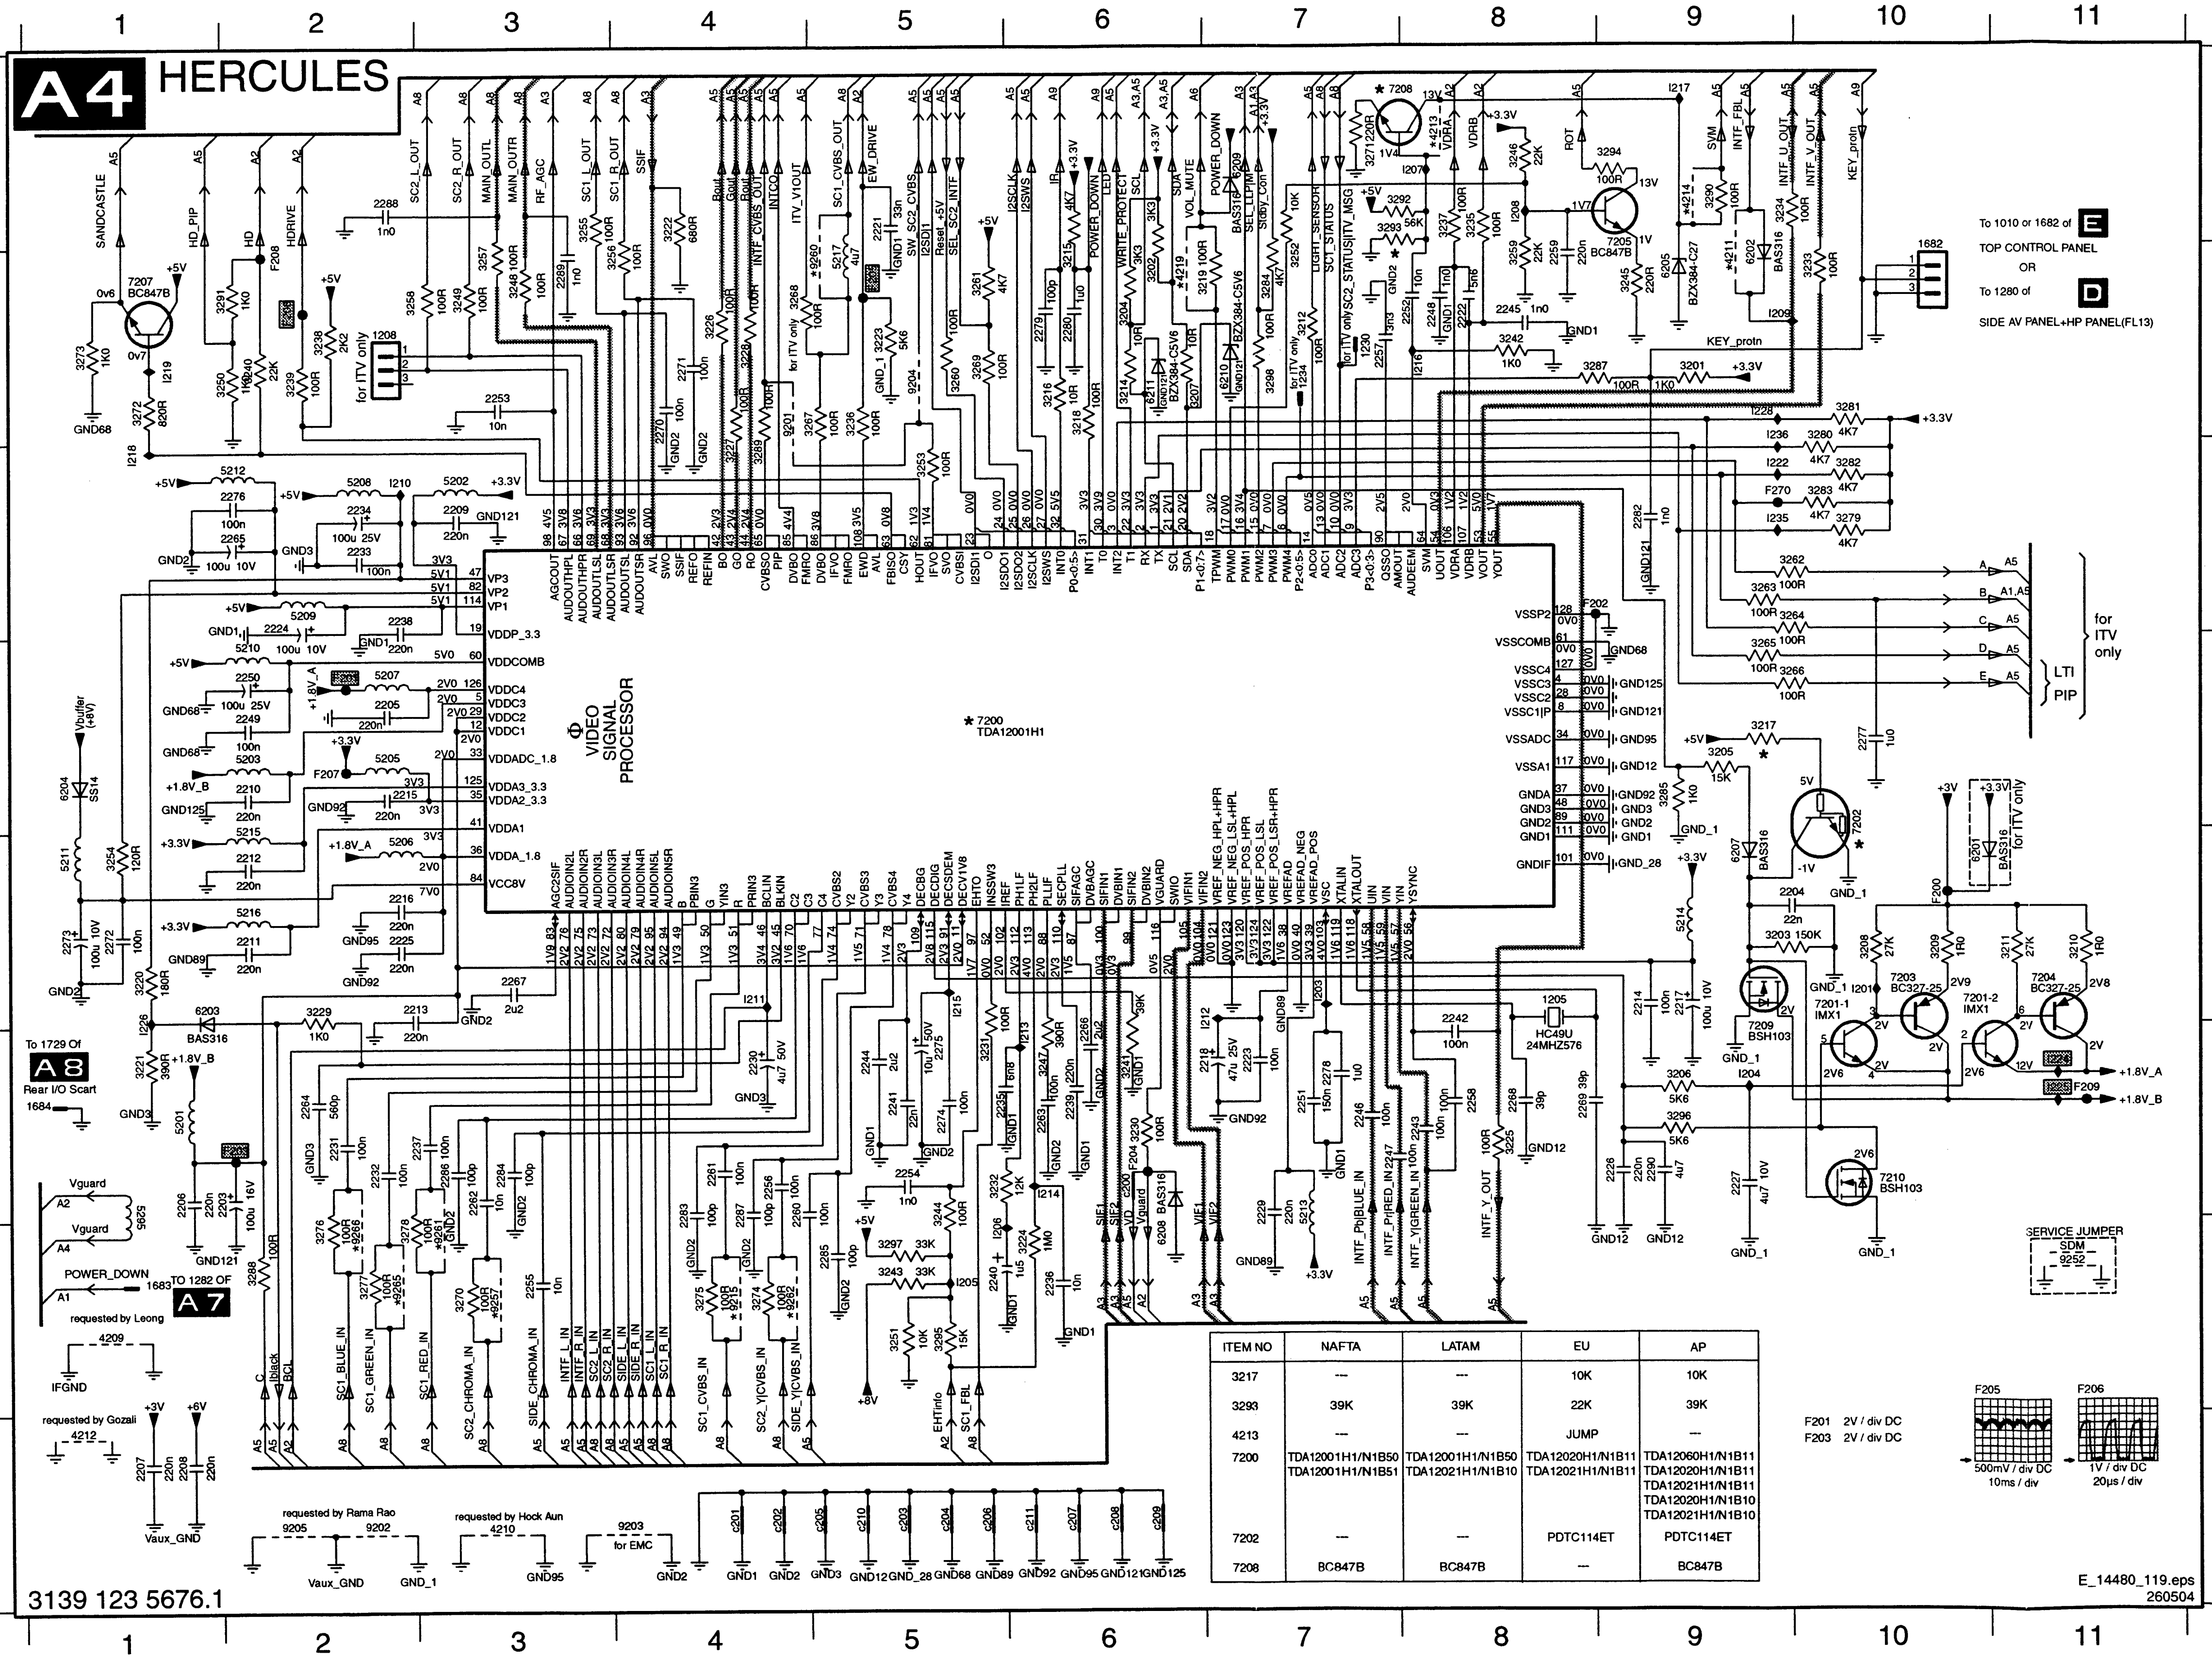
A4
HERCULES
VIDEO SIGNAL PROCESSOR
7200 TDA12001H1
To 1010 or 1682 of E TOP CONTROL PANEL
OR
To 1280 of D SIDE AV PANEL+HP PANEL(FL13)
for ITV only
LTI PIP
To 1729 Of A8 Rear I/O Scart
TO 1282 OF A7
requested by Leong
requested by Gozali
requested by Rama Rao
requested by Hock Aun
for EMC
SERVICE JUMPER SDM 9252
F201 2V / div DC
F203 2V / div DC
F205 500mV / div DC 10ms / div
F206 1V / div DC 20µs / div
3139 123 5676.1
E_14480_119.eps
260504

ITEM NO	NAFTA	LATAM	EU	AP
3217	---	---	10K	10K
3293	39K	39K	22K	39K
4213	---	---	JUMP	---
7200	TDA12001H1/N1B50 TDA12001H1/N1B51	TDA12001H1/N1B50 TDA12021H1/N1B10	TDA12020H1/N1B11 TDA12021H1/N1B11	TDA12060H1/N1B11 TDA12020H1/N1B11 TDA12021H1/N1B11 TDA12020H1/N1B10 TDA12021H1/N1B10
7202	---	---	PDTC114ET	PDTC114ET
7208	BC847B	BC847B	---	BC847B

1205	E8
1208	B2
1230	B7
1234	B7
1682	B10
1683	G1
1684	F1
2203	F2
2204	E9
2205	D2
2206	F1
2207	H1
2208	H1
2209	C3
2210	D2
2211	E2
2212	E2
2213	E2
2214	E9
2215	D2
2216	E2
2217	E9
2218	F7
2221	A5
2222	B8
2223	F7
2224	C2
2225	E2
2226	F9
2227	F9
2229	F7
2230	F4
2231	F2
2232	F2
2233	C2
2234	C2
2235	F5
2236	G6
2237	F3
2238	C2
2239	F6
2240	G5
2241	F5
2242	E8
2243	F8
2244	F5
2245	B8
2246	F7
2247	F7
2248	B8
2249	D2
2250	D2
2251	F7
2252	B8
2253	B3
2254	F5
2255	G3
2256	F4
2257	B7
2258	F8
2259	B8
2260	F4
2261	F4
2262	F3
2263	F6
2264	F2
2265	C2
2266	F6
2267	E3
2268	F8
2269	F8
2270	B4
2271	B4
2272	E1
2273	E1
2274	F5
2275	F5
2276	C2
2277	D10
2278	F7
2279	B6
2280	B6
2282	C9
2283	F4
2284	F3
2285	G5
2286	F3
2287	F4
2288	A2
2289	B3
2290	F9
3201	B9
3202	B6
3203	E9
3204	B6
3205	D9
3206	F9
3207	B6
3208	E10
3209	E10
3210	E11
3211	E11
3212	B7
3214	B6
3215	B6
3216	B6
3217	D9
3218	B6
3219	B7
3220	E1
3221	F1
3222	A4
3223	B5
3224	G6
3225	F8
3226	B4
3227	C4
3228	B4
3229	E2
3230	F6
3231	F5
3232	F5
3233	B10
3234	A9
3235	A8
3236	B5
3237	A8
3238	B2
3239	B2
3240	B2
3241	F6
3242	B8
3243	G5
3244	F5
3245	B9
3246	A8
3247	F6
3248	B3
3249	B3
3250	B2
3251	G5
3252	B7
3253	C5
3254	E1
3255	A3
3256	B4
3257	B3
3258	B2
3259	B8
3260	B5
3261	B5
3262	C9
3263	C9
3264	C9
3265	D9
3266	D9
3267	B5
3268	B4
3269	B5
3270	G3
3271	A7
3272	B1
3273	B1
3274	G4
3275	G4
3276	G2
3277	G2
3278	G2
3279	C10
3280	C10
3281	B10
3282	C10
3283	C10
3284	B7
3285	D9
3287	B8
3288	G2
3289	C4
3290	A9
3291	B2
3292	A7
3293	A7
3294	A9
3295	G5
3296	F9
3297	G5
3298	B7
4209	G1
4210	H3
4211	B9
4212	H1
4213	A8
4214	A9
4219	B6
5201	F1
5202	C3
5203	D2
5205	D2
5206	E2
5207	D2
5208	C2
5209	C2
5210	D2
5211	E1
5212	C2
5213	F7
5214	E9
5215	E2
5216	E2
5217	B5
5295	F1
6201	E10
6202	B9
6203	E1
6204	D1
6205	B9
6207	E9
6208	G6
6209	A7
6210	B7
6211	B6
7200	D5
7201-1	E10
7201-2	E10
7202	D10
7203	E10
7204	E11
7205	B9
7207	B1
7208	A8
7209	F9
7210	F10
9201	B4
9202	H2
9203	H4
9204	B5
9205	H2
9215	G4
9257	G3
9260	B5
9261	G3
9262	G4
9265	G2
9266	G2
F200	E10
F201	D2
F202	C8
F203	F2
F204	F6
F205	B5
F206	B2
F207	D2
F208	B2
F209	F11
F270	C9
I201	E10
I203	E7
I204	F9
I205	G5
I206	G5
I207	A8
I208	A8
I209	B9
I210	C2
I211	E4
I212	E7
I213	F6
I214	F6
I215	E5
I216	B8
I217	A9
I218	C1
I219	B1
I222	C9
I224	F11
I225	F11
I226	E1
I228	B9
I235	C9
I236	B9
c200	F6
c201	H4
c202	H4
c203	H5
c204	H5
c205	H5
c206	H5
c207	H6
c208	H6
c209	H6
c210	H5
c211	H6

Mono Carrier: Features & Connectivities

A5 FEATURES & CONNECTIVITIES

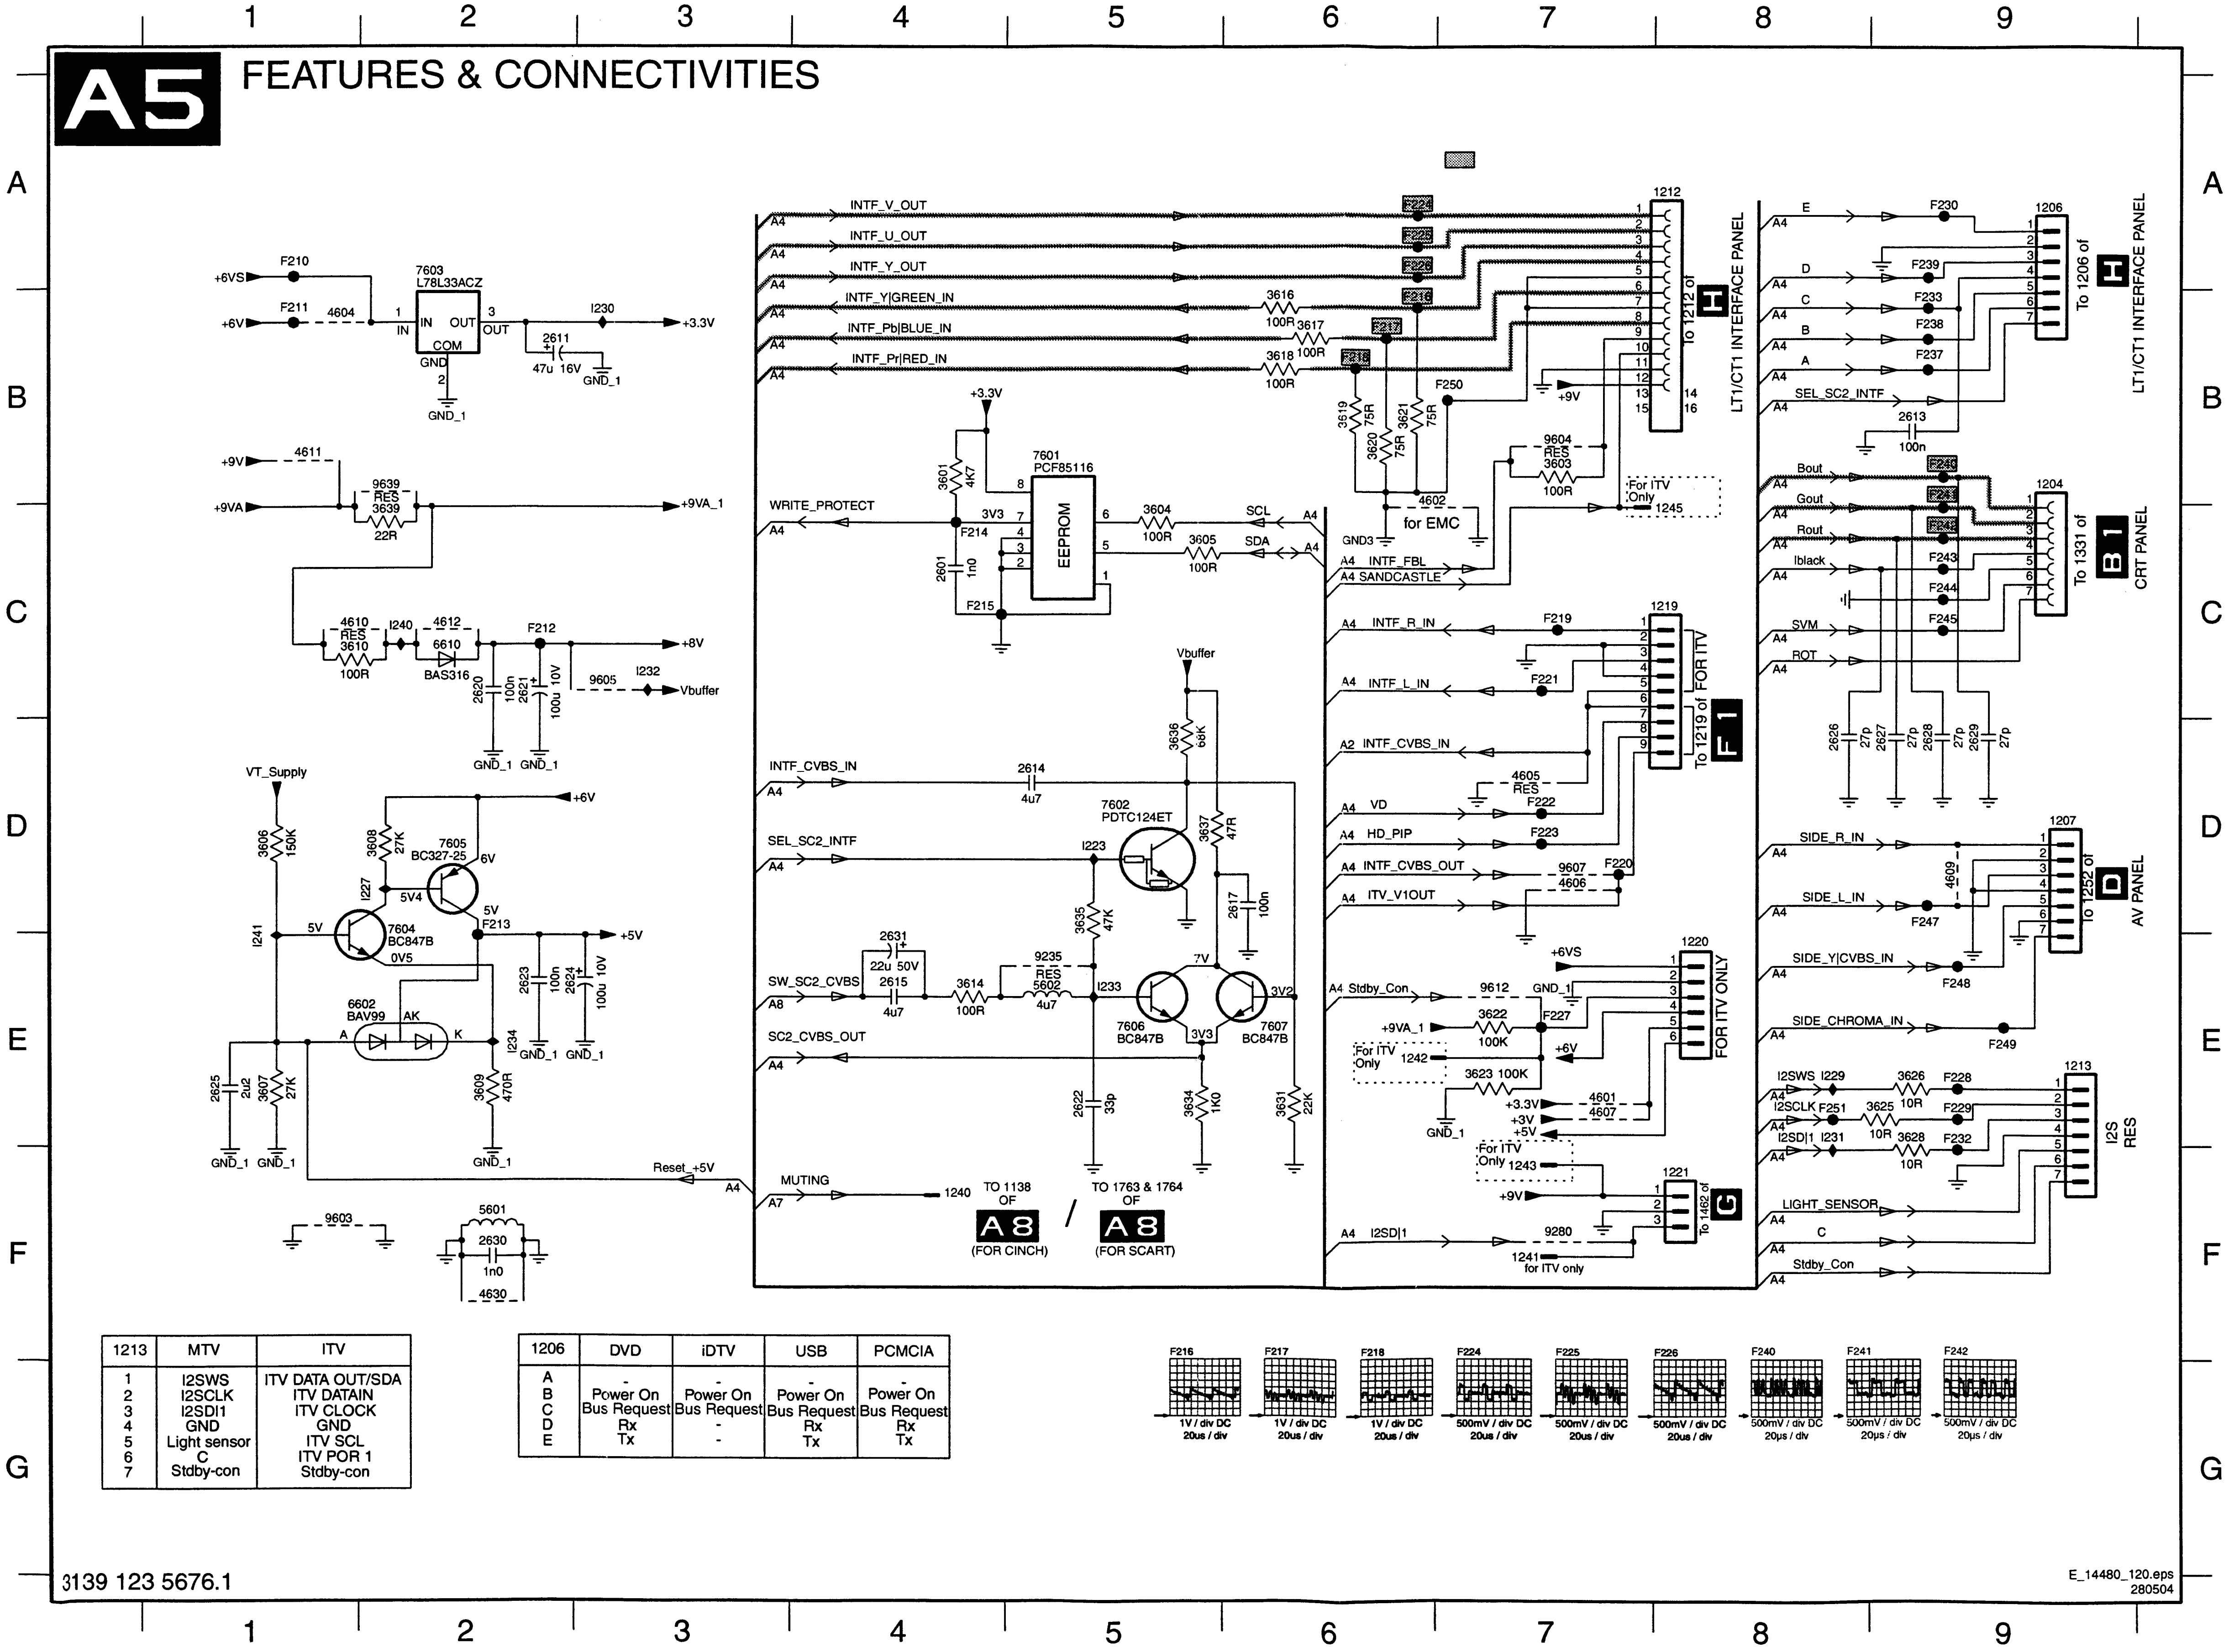
1
2
3
4
5
6
7
8
9
A
B
C
D
E
F
G
+6VS
F210
+6V
F211
4604
7603
L78L33ACZ
IN
OUT
COM
GND
1230
2611
47u 16V
GND_1
+3.3V
+9V
4611
+9VA
9639
RES
3639
22R
+9VA_1
4610
RES
3610
100R
1240
4612
6610
BAS316
F212
+8V
2620
100n
2621
100u 10V
9605
1232
Vbuffer
VT_Supply
3606
150K
3608
27K
7605
BC327-25
6V
5V4
1227
5V
7604
BC847B
0V5
F213
+5V
2623
100n
2624
100u 10V
1241
6602
BAV99
A
AK
K
1234
2625
2u2
3607
27K
3609
470R
Reset_+5V
9603
5601
2630
1n0
4630
INTF_V_OUT
INTF_U_OUT
INTF_Y_OUT
INTF_Y|GREEN_IN
INTF_Pb|BLUE_IN
INTF_Pr|RED_IN
A4
F224
F225
F226
F216
F217
F218
3616
100R
3617
100R
3618
100R
3619
75R
3620
75R
3621
75R
F250
1212
To 1212 of
H
LT1/CT1 INTERFACE PANEL
9604
RES
3603
100R
4602
for EMC
GND3
For ITV Only
1245
+3.3V
3601
4K7
7601
PCF85116
EEPROM
WRITE_PROTECT
3V3
F214
2601
1n0
F215
3604
100R
3605
100R
SCL
SDA
A4 INTF_FBL
A4 SANDCASTLE
Vbuffer
3636
68K
3637
47R
2617
100n
7602
PDTC124ET
1223
INTF_CVBS_IN
2614
4u7
SEL_SC2_INTF
3635
47K
2631
22u 50V
2615
4u7
SW_SC2_CVBS
A8
3614
100R
9235
RES
5602
4u7
1233
7606
BC847B
7607
BC847B
7V
3V2
3V3
SC2_CVBS_OUT
2622
33p
3634
1K0
3631
22K
MUTING
A7
1240
TO 1138 OF
A8
(FOR CINCH)
TO 1763 & 1764 OF
A8
(FOR SCART)
INTF_R_IN
F219
INTF_L_IN
F221
A2 INTF_CVBS_IN
4605
RES
VD
F222
HD_PIP
F223
INTF_CVBS_OUT
9607
4606
F220
ITV_V1OUT
1219
To 1219 of FOR ITV
F1
A4 Stdby_Con
9612
GND_1
+6VS
+9VA_1
3622
100K
F227
For ITV Only
1242
3623 100K
+6V
+3.3V
+3V
+5V
4601
4607
1220
FOR ITV ONLY
For ITV Only
1243
+9V
1221
To 1462 of
G
I2SD|1
9280
1241
for ITV only
E
D
C
B
A
F230
F239
F233
F238
F237
SEL_SC2_INTF
2613
100n
1206
To 1206 of
H
LT1/CT1 INTERFACE PANEL
Bout
Gout
Rout
Iblack
SVM
ROT
F240
F241
F242
F243
F244
F245
1204
To 1331 of
B1
CRT PANEL
2626
27p
2627
27p
2628
27p
2629
27p
SIDE_R_IN
SIDE_L_IN
4609
F247
1207
To 1252 of
D
AV PANEL
SIDE_Y|CVBS_IN
F248
SIDE_CHROMA_IN
F249
I2SWS
1229
3626
10R
F228
I2SCLK
F251
3625
10R
F229
I2SD|1
1231
3628
10R
F232
1213
I2S
RES
LIGHT_SENSOR
C
Stdby_Con
F216
1V / div DC
20us / div
F217
1V / div DC
20us / div
F218
1V / div DC
20us / div
F224
500mV / div DC
20us / div
F225
500mV / div DC
20us / div
F226
500mV / div DC
20us / div
F240
500mV / div DC
20µs / div
F241
500mV / div DC
20µs / div
F242
500mV / div DC
20µs / div
3139 123 5676.1
E_14480_120.eps
280504

1213	MTV	ITV
1	I2SWS	ITV DATA OUT/SDA
2	I2SCLK	ITV DATAIN
3	I2SDI1	ITV CLOCK
4	GND	GND
5	Light sensor	ITV SCL
6	C	ITV POR 1
7	Stdby-con	Stdby-con

1206	DVD	iDTV	USB	PCMCIA
A	-	-	-	-
B	Power On	Power On	Power On	Power On
C	Bus Request	Bus Request	Bus Request	Bus Request
D	Rx	-	Rx	Rx
E	Tx	-	Tx	Tx

1204	B9
1206	A9
1207	D9
1212	A7
1213	E9
1219	C8
1220	E8
1221	F8
1240	F4
1241	F7
1242	E6
1243	F7
1245	C8
2601	C4
2611	B2
2613	B9
2614	D5
2615	E4
2617	D6
2620	C2
2621	C2
2622	E5
2623	E2
2624	E3
2625	E1
2626	D8
2627	D9
2628	D9
2629	D9
2630	F2
2631	E4
3601	B4
3603	B7
3604	C5
3605	C5
3606	D1
3607	E1
3608	D2
3609	E2
3610	C1
3614	E4
3616	B6
3617	B6
3618	B6
3619	B6
3620	B6
3621	B6
3622	E7
3623	E7
3625	E9
3626	E9
3628	E9
3631	E6
3634	E5
3635	D5
3636	D5
3637	D5
3639	C2
4601	E7
4602	C6
4604	B1
4605	D7
4606	D7
4607	E7
4609	D9
4610	C1
4611	B1
4612	C2
4630	F2
5601	F2
5602	E5
6602	E2
6610	C2
7601	B5
7602	D5
7603	A2
7604	E2
7605	D2
7606	E5
7607	E6
9235	E5
9280	F7
9603	F1
9604	B7
9605	C3
9607	D7
9612	E7
9639	B2
F210	A1
F211	B1
F212	C2
F213	D2
F214	C4
F215	C4
F216	B6
F217	B6
F218	B6
F219	C7
F220	D7
F221	C7
F222	D7
F223	D7
F224	A6
F225	A6
F226	A6
F227	E7
F228	E9
F229	E9
F230	A9
F232	E9
F233	B9
F237	B9
F238	B9
F239	A9
F240	B9
F241	B9
F242	C9
F243	C9
F244	C9
F245	C9
F247	D9
F248	E9
F249	E9
F250	B7
F251	E8
I223	D5
I227	D2
I229	E8
I230	B3
I231	E8
I232	C3
I233	E5
I234	E2
I240	C2
I241	E1

Mono Carrier: Class D - Audio Amplifier

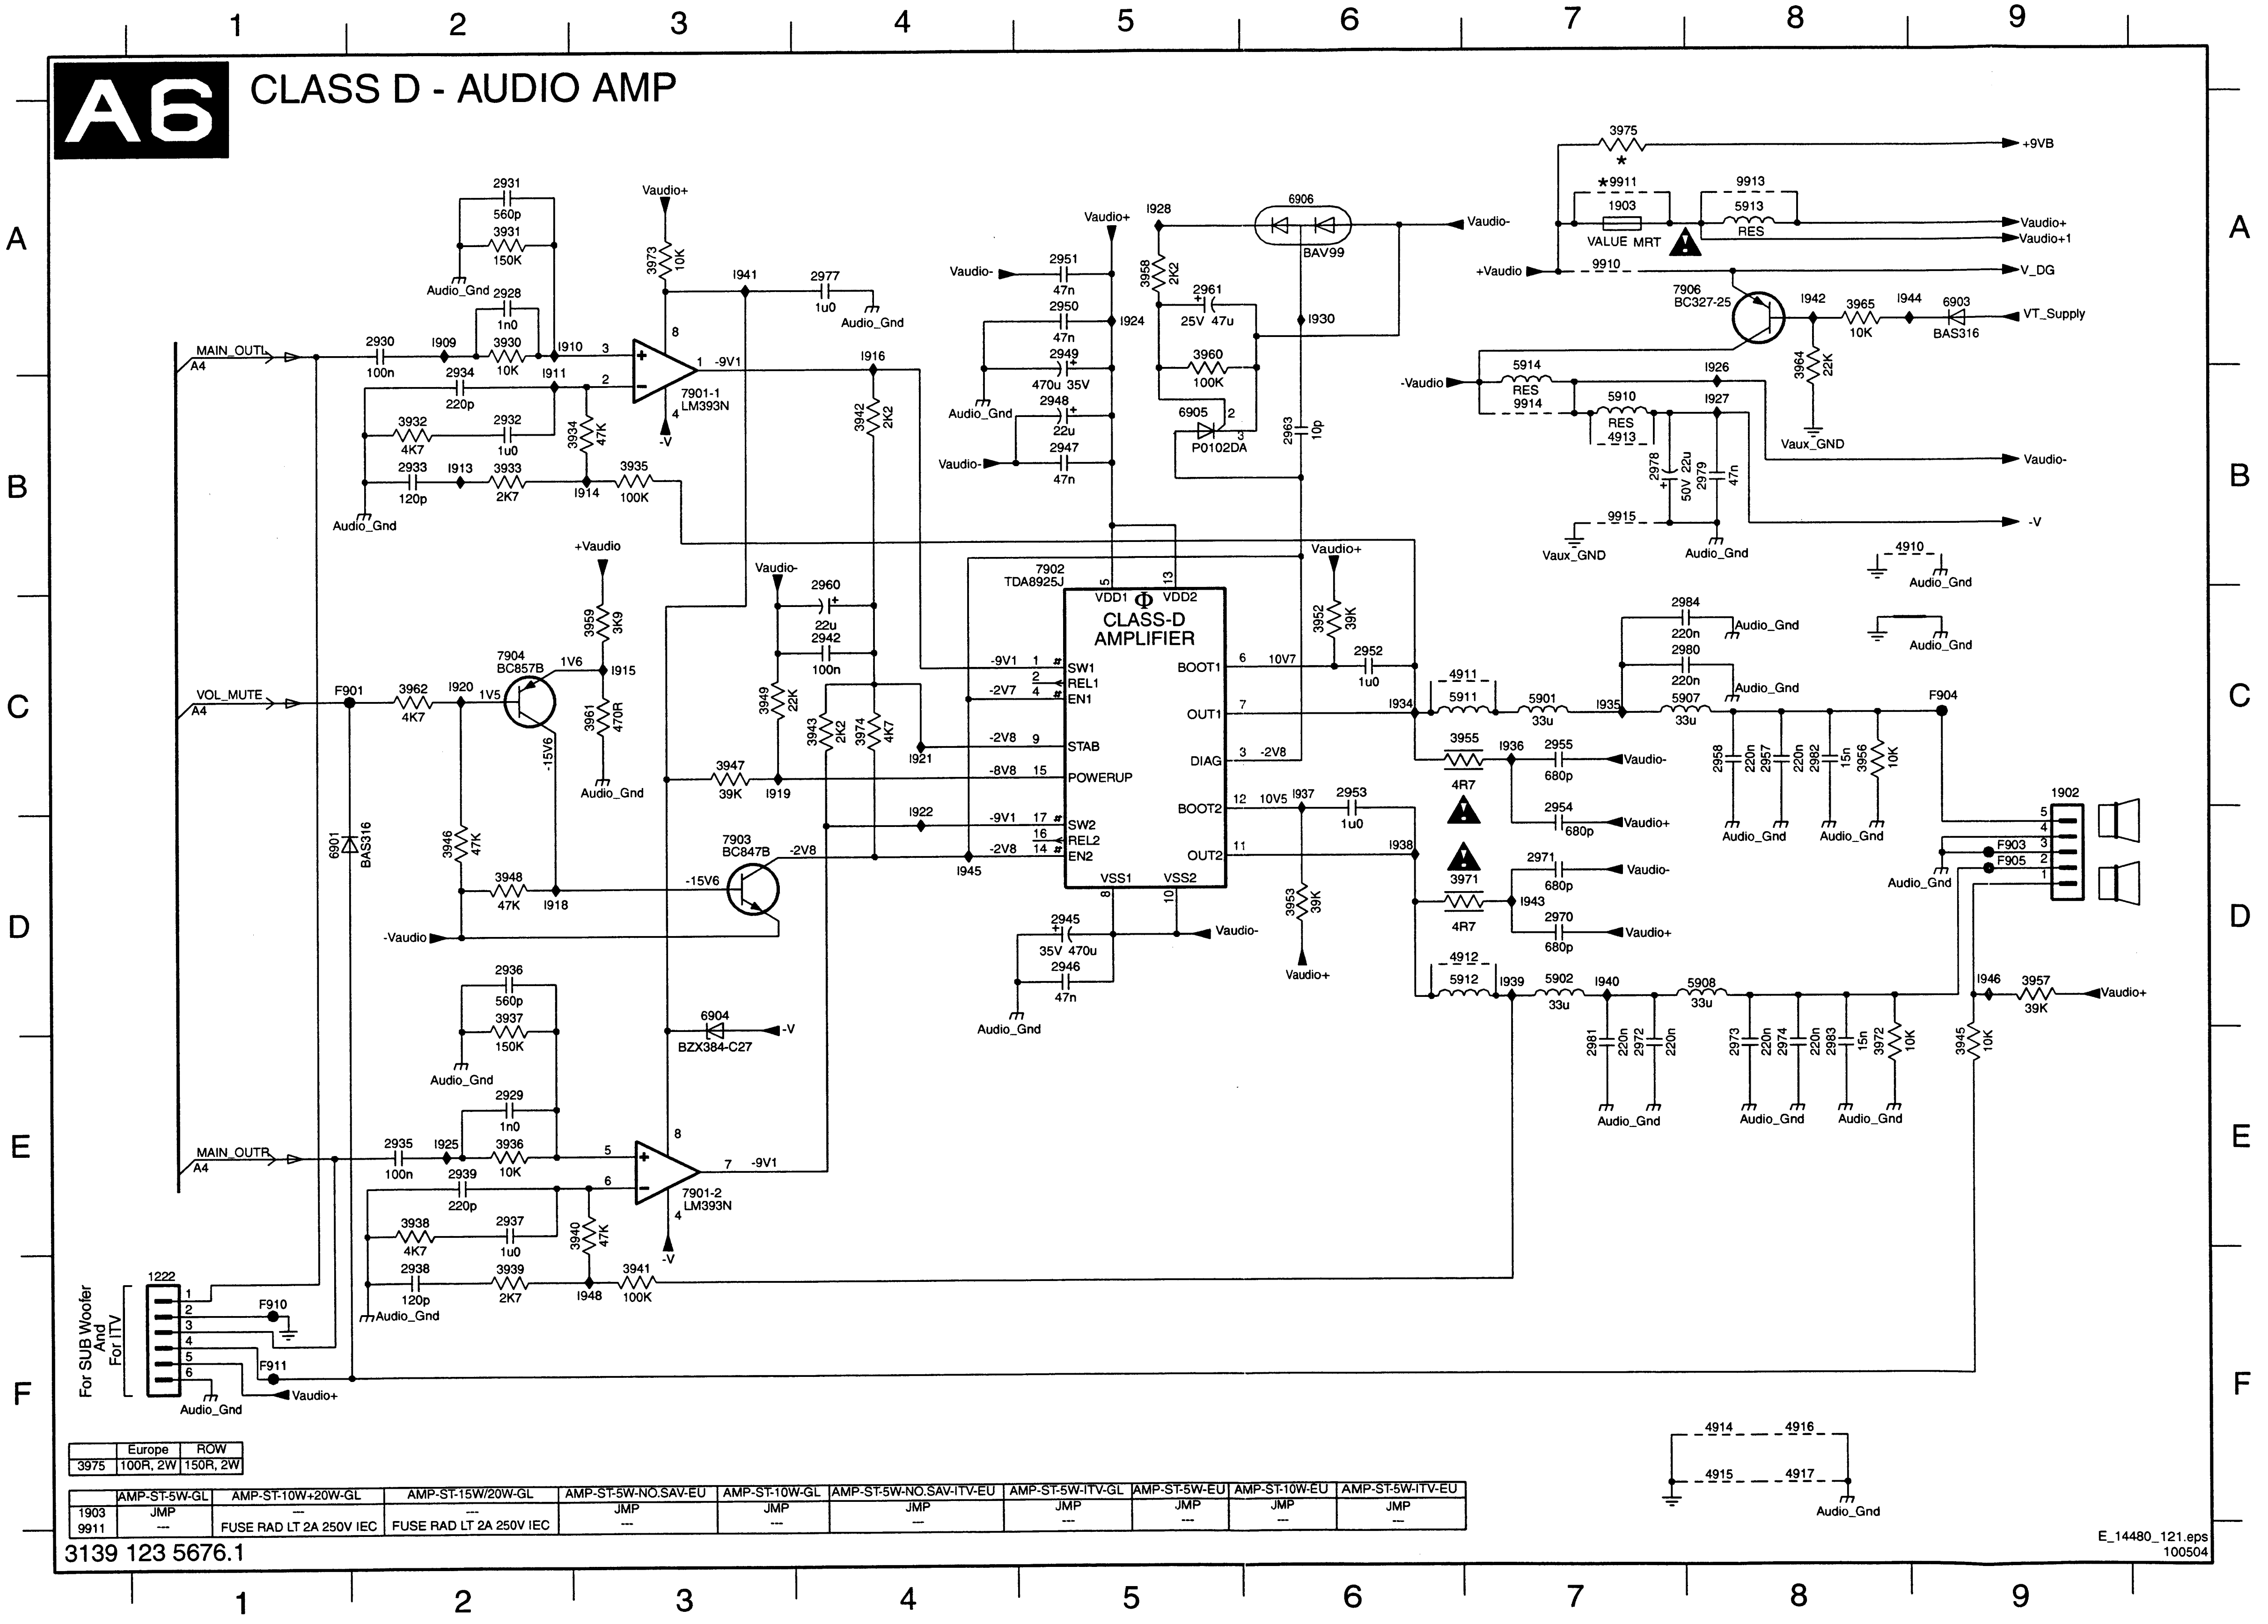
A6
CLASS D - AUDIO AMP
1 2 3 4 5 6 7 8 9
A B C D E F
MAIN_OUTL
MAIN_OUTR
VOL_MUTE
A4
7901-1 LM393N
7901-2 LM393N
7902 TDA8925J
CLASS-D AMPLIFIER
VDD1 VDD2 VSS1 VSS2
SW1 REL1 EN1 STAB POWERUP SW2 REL2 EN2
BOOT1 OUT1 DIAG BOOT2 OUT2
7903 BC847B
7904 BC857B
7906 BC327-25
6901 BAS316
6903 BAS316
6904 BZX384-C27
6905 P0102DA
6906 BAV99
1902
1222
For SUB Woofer And For ITV
F901 F903 F904 F905 F910 F911
Vaudio+
Vaudio-
Vaudio+1
+Vaudio
-Vaudio
+9VB
V_DG
VT_Supply
-V
Audio_Gnd
Vaux_GND
VALUE MRT
RES
-9V1 -2V7 -2V8 -8V8 -15V6 1V5 1V6 10V7 10V5
E_14480_121.eps 100504

	Europe	ROW
3975	100R, 2W	150R, 2W

	AMP-ST-5W-GL	AMP-ST-10W+20W-GL	AMP-ST-15W/20W-GL	AMP-ST-5W-NO.SAV-EU	AMP-ST-10W-GL	AMP-ST-5W-NO.SAV-ITV-EU	AMP-ST-5W-ITV-GL	AMP-ST-5W-EU	AMP-ST-10W-EU	AMP-ST-5W-ITV-EU
1903	JMP	---	---	JMP	JMP	JMP	JMP	JMP	JMP	JMP
9911	---	FUSE RAD LT 2A 250V IEC	FUSE RAD LT 2A 250V IEC	---	---	---	---	---	---	---

3139 123 5676.1

1222	F1
1902	C9
1903	A7
2928	A2
2929	E2
2930	A2
2931	A2
2932	B2
2933	B2
2934	B2
2935	E2
2936	D2
2937	E2
2938	F2
2939	E2
2942	C4
2945	D5
2946	D5
2947	B5
2948	B5
2949	A5
2950	A5
2951	A5
2952	C6
2953	C6
2954	D7
2955	C7
2957	C8
2958	C8
2960	B4
2961	A5
2963	B6
2970	D7
2971	D7
2972	E7
2973	E8
2974	E8
2977	A4
2978	B7
2979	B8
2980	C8
2981	E7
2982	C8
2983	E8
2984	C8
3930	A2
3931	A2
3932	B2
3933	B2
3934	B3
3935	B3
3936	E2
3937	D2
3938	E2
3939	F2
3940	E3
3941	F3
3942	B4
3943	C4
3945	E9
3946	D2
3947	C3
3948	D2
3949	C3
3952	C6
3953	D6
3955	C7
3956	C8
3957	D9
3958	A5
3959	C3
3960	A5
3961	C3
3962	C2
3964	A8
3965	A8
3971	D7
3972	E8
3973	A3
3974	C4
3975	A7
4910	B9
4911	C7
4912	D7
4913	B7
4914	F8
4915	F8
4916	F8
4917	F8
5901	C7
5902	D7
5907	C8
5908	D8
5910	B7
5911	C7
5912	D7
5913	A8
5914	B7
6901	D1
6903	A9
6904	D3
6905	B5
6906	A6
7901-1	B3
7901-2	E3
7902	B5
7903	D3
7904	C2
7906	A8
9910	A7
9911	A7
9913	A8
9914	B7
9915	B7
F901	C2
F903	D9
F904	C9
F905	D9
F910	F1
F911	F1
I909	A2
I910	A3
I911	B2
I913	B2
I914	B3
I915	C3
I916	A4
I918	D2
I919	C3
I920	C2
I921	C4
I922	D4
I924	A5
I925	E2
I926	B8
I927	B8
I928	A5
I930	A6
I934	C6
I935	C7
I936	C7
I937	C6
I938	D6
I939	D7
I940	D7
I941	A3
I942	A8
I943	D7
I944	A9
I945	D4
I946	D9
I948	F3

Mono Carrier: Audio Amplifier

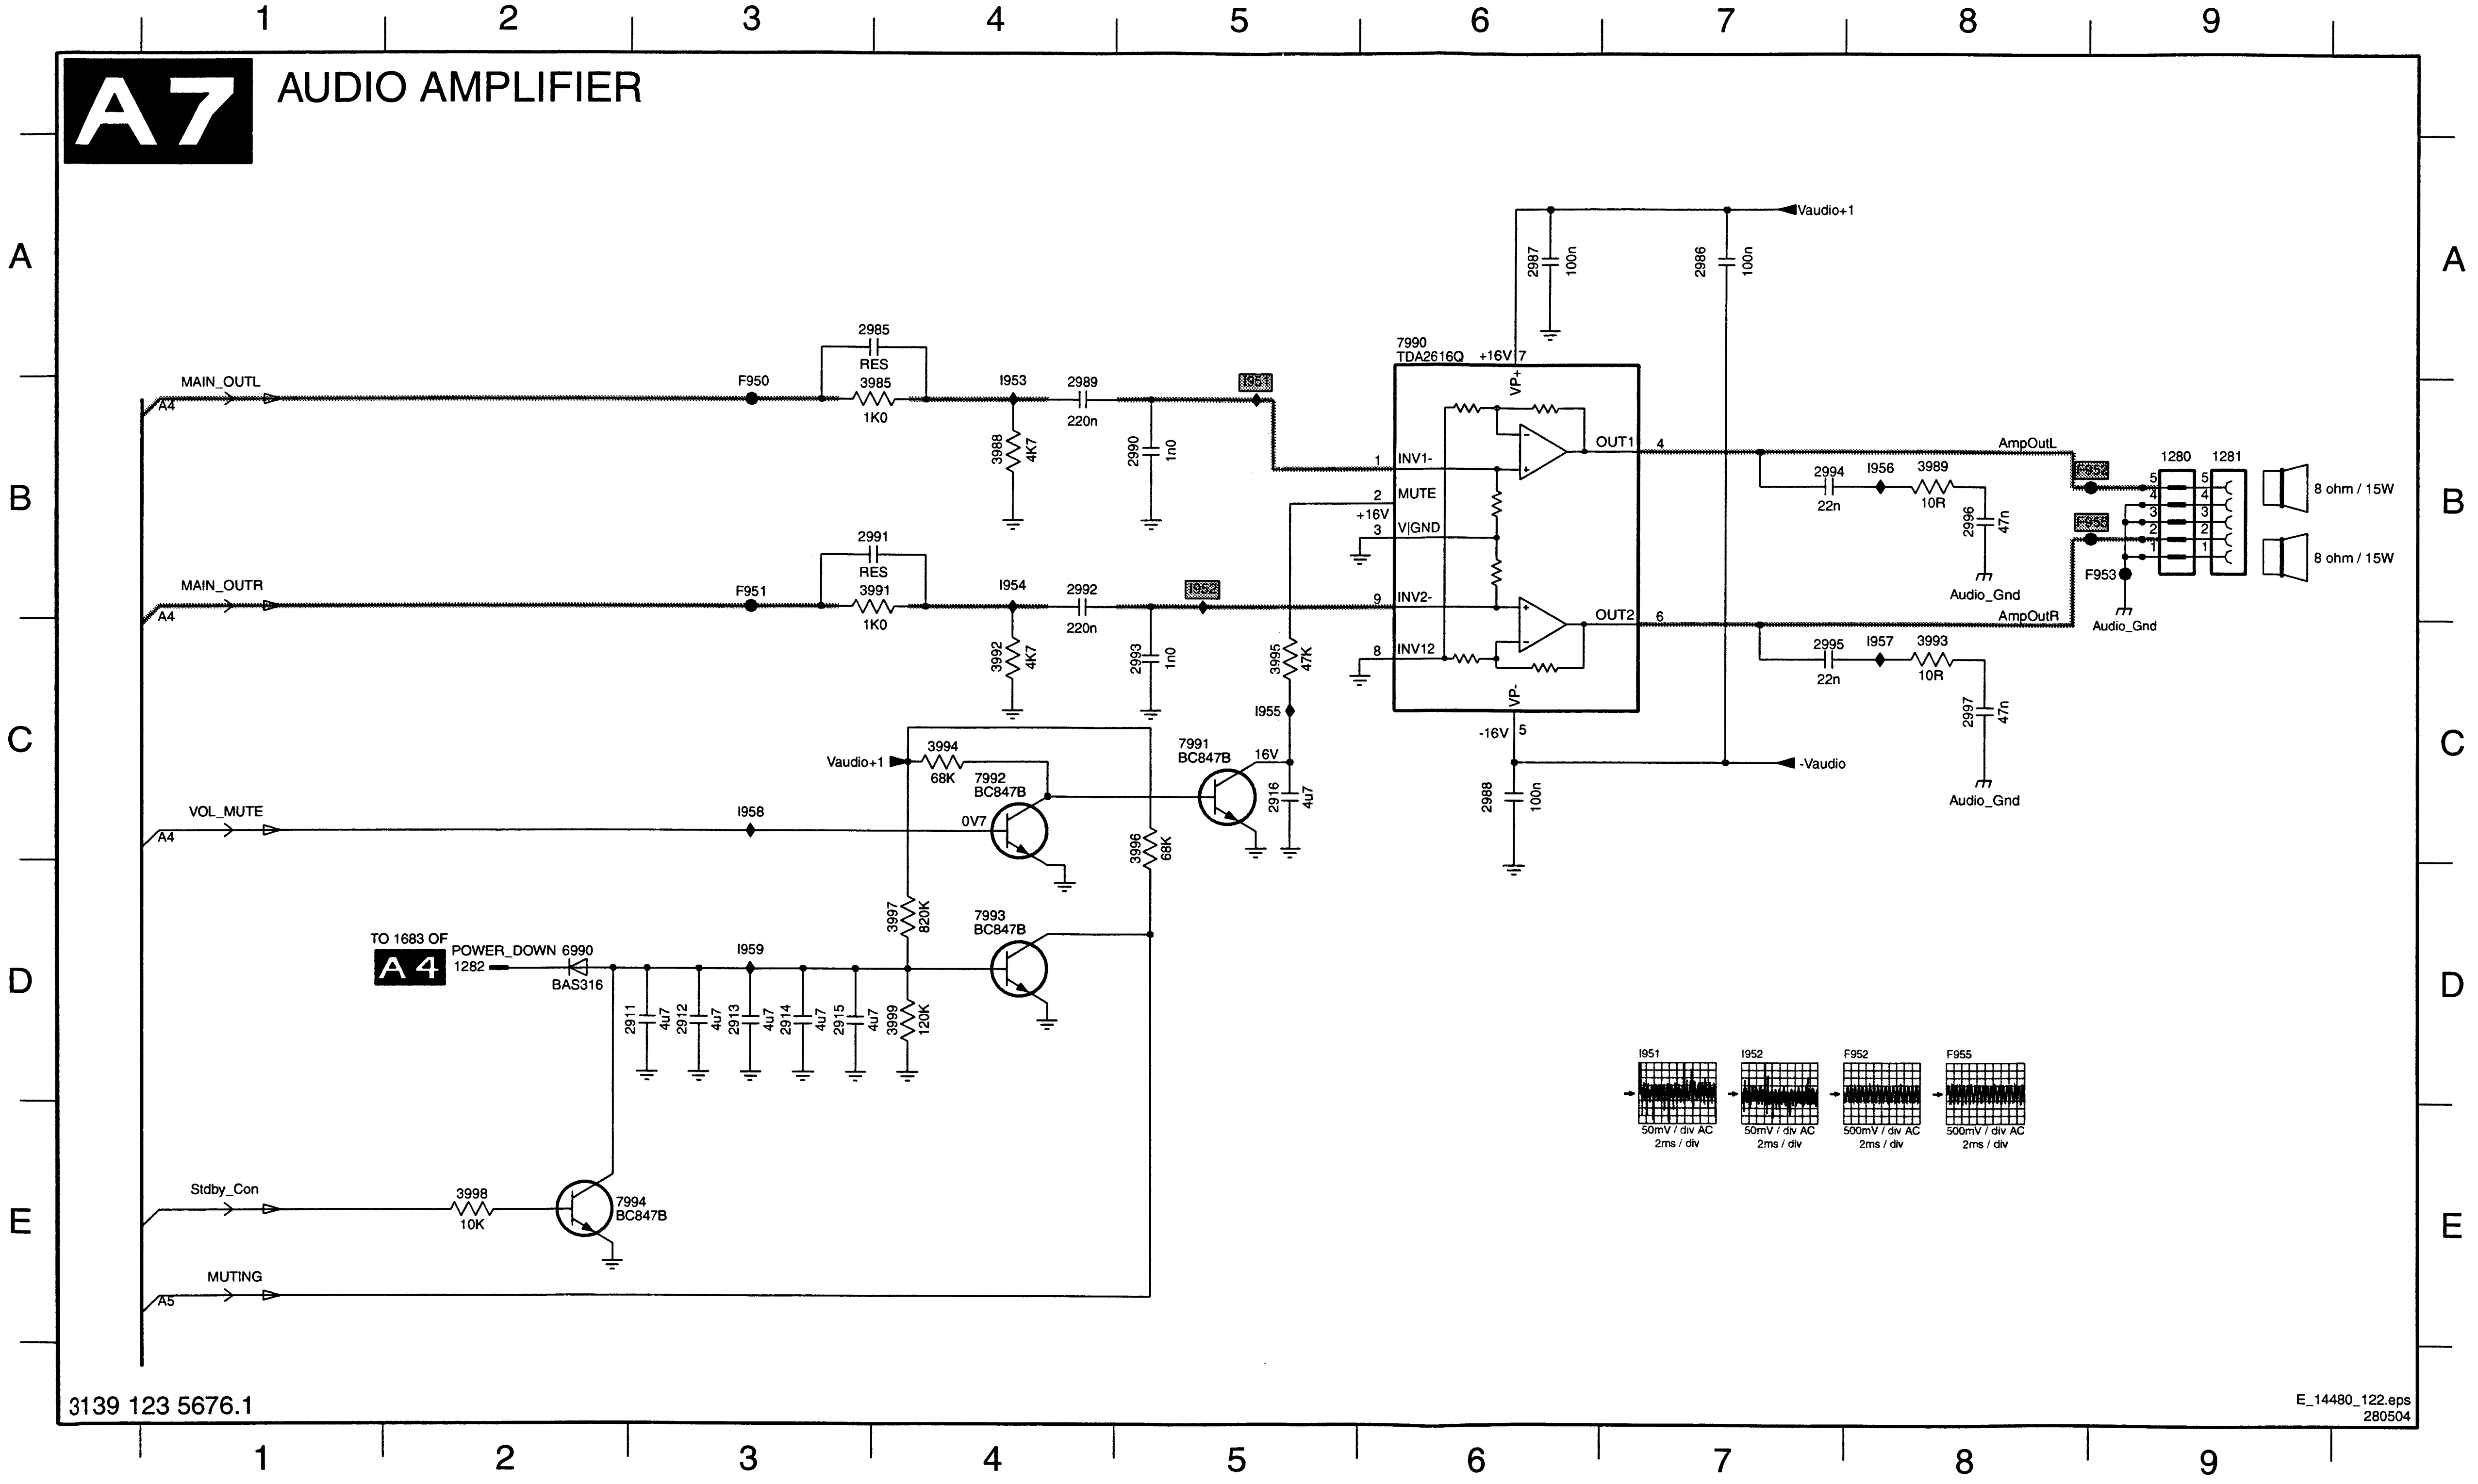
1
2
3
4
5
6
7
8
9
A
B
C
D
E
A7
AUDIO AMPLIFIER
MAIN_OUTL
A4
F950
2985
RES
3985
1K0
I953
2989
220n
I951
3988
4K7
2990
1n0
MAIN_OUTR
A4
F951
2991
RES
3991
1K0
I954
2992
220n
I952
3992
4K7
2993
1n0
VOL_MUTE
A4
I958
Vaudio+1
3994
68K
7992
BC847B
0V7
7991
BC847B
16V
2916
4u7
3995
47K
I955
3996
68K
3997
820K
7993
BC847B
TO 1683 OF
A4
POWER_DOWN
1282
6990
BAS316
I959
2911
4u7
2912
4u7
2913
4u7
2914
4u7
2915
4u7
3999
120K
Stdby_Con
3998
10K
7994
BC847B
MUTING
A5
7990
TDA2616Q
+16V
7
VP+
1
INV1-
2
MUTE
+16V
3
V|GND
9
INV2-
8
INV12
VP-
-16V
5
OUT1
4
OUT2
6
2987
100n
2986
100n
2988
100n
Vaudio+1
-Vaudio
AmpOutL
AmpOutR
2994
22n
I956
3989
10R
2996
47n
Audio_Gnd
2995
22n
I957
3993
10R
2997
47n
Audio_Gnd
F952
F955
F953
Audio_Gnd
1280
1281
5
4
3
2
1
8 ohm / 15W
8 ohm / 15W
I951
50mV / div AC
2ms / div
I952
50mV / div AC
2ms / div
F952
500mV / div AC
2ms / div
F955
500mV / div AC
2ms / div
3139 123 5676.1
E_14480_122.eps
280504

1280	B9
1281	B9
1282	D2
2911	D3
2912	D3
2913	D3
2914	D3
2915	D3
2916	C5
2985	A4
2986	A7
2987	A6
2988	C6
2989	B4
2990	B5
2991	B4
2992	B4
2993	C5
2994	B7
2995	C7
2996	B8
2997	C8
3985	B4
3988	B4
3989	B8
3991	B4
3992	C4
3993	C8
3994	C4
3995	C5
3996	C5
3997	D4
3998	E2
3999	D4
6990	D2
7990	A6
7991	C5
7992	C4
7993	D4
7994	E2
F950	B3
F951	B3
F952	B9
F953	B9
F955	B9
I951	B5
I952	B5
I953	B4
I954	B4
I955	C5
I956	B8
I957	C8
I958	C3
I959	D3

Mono Carrier: Rear I/O Scart

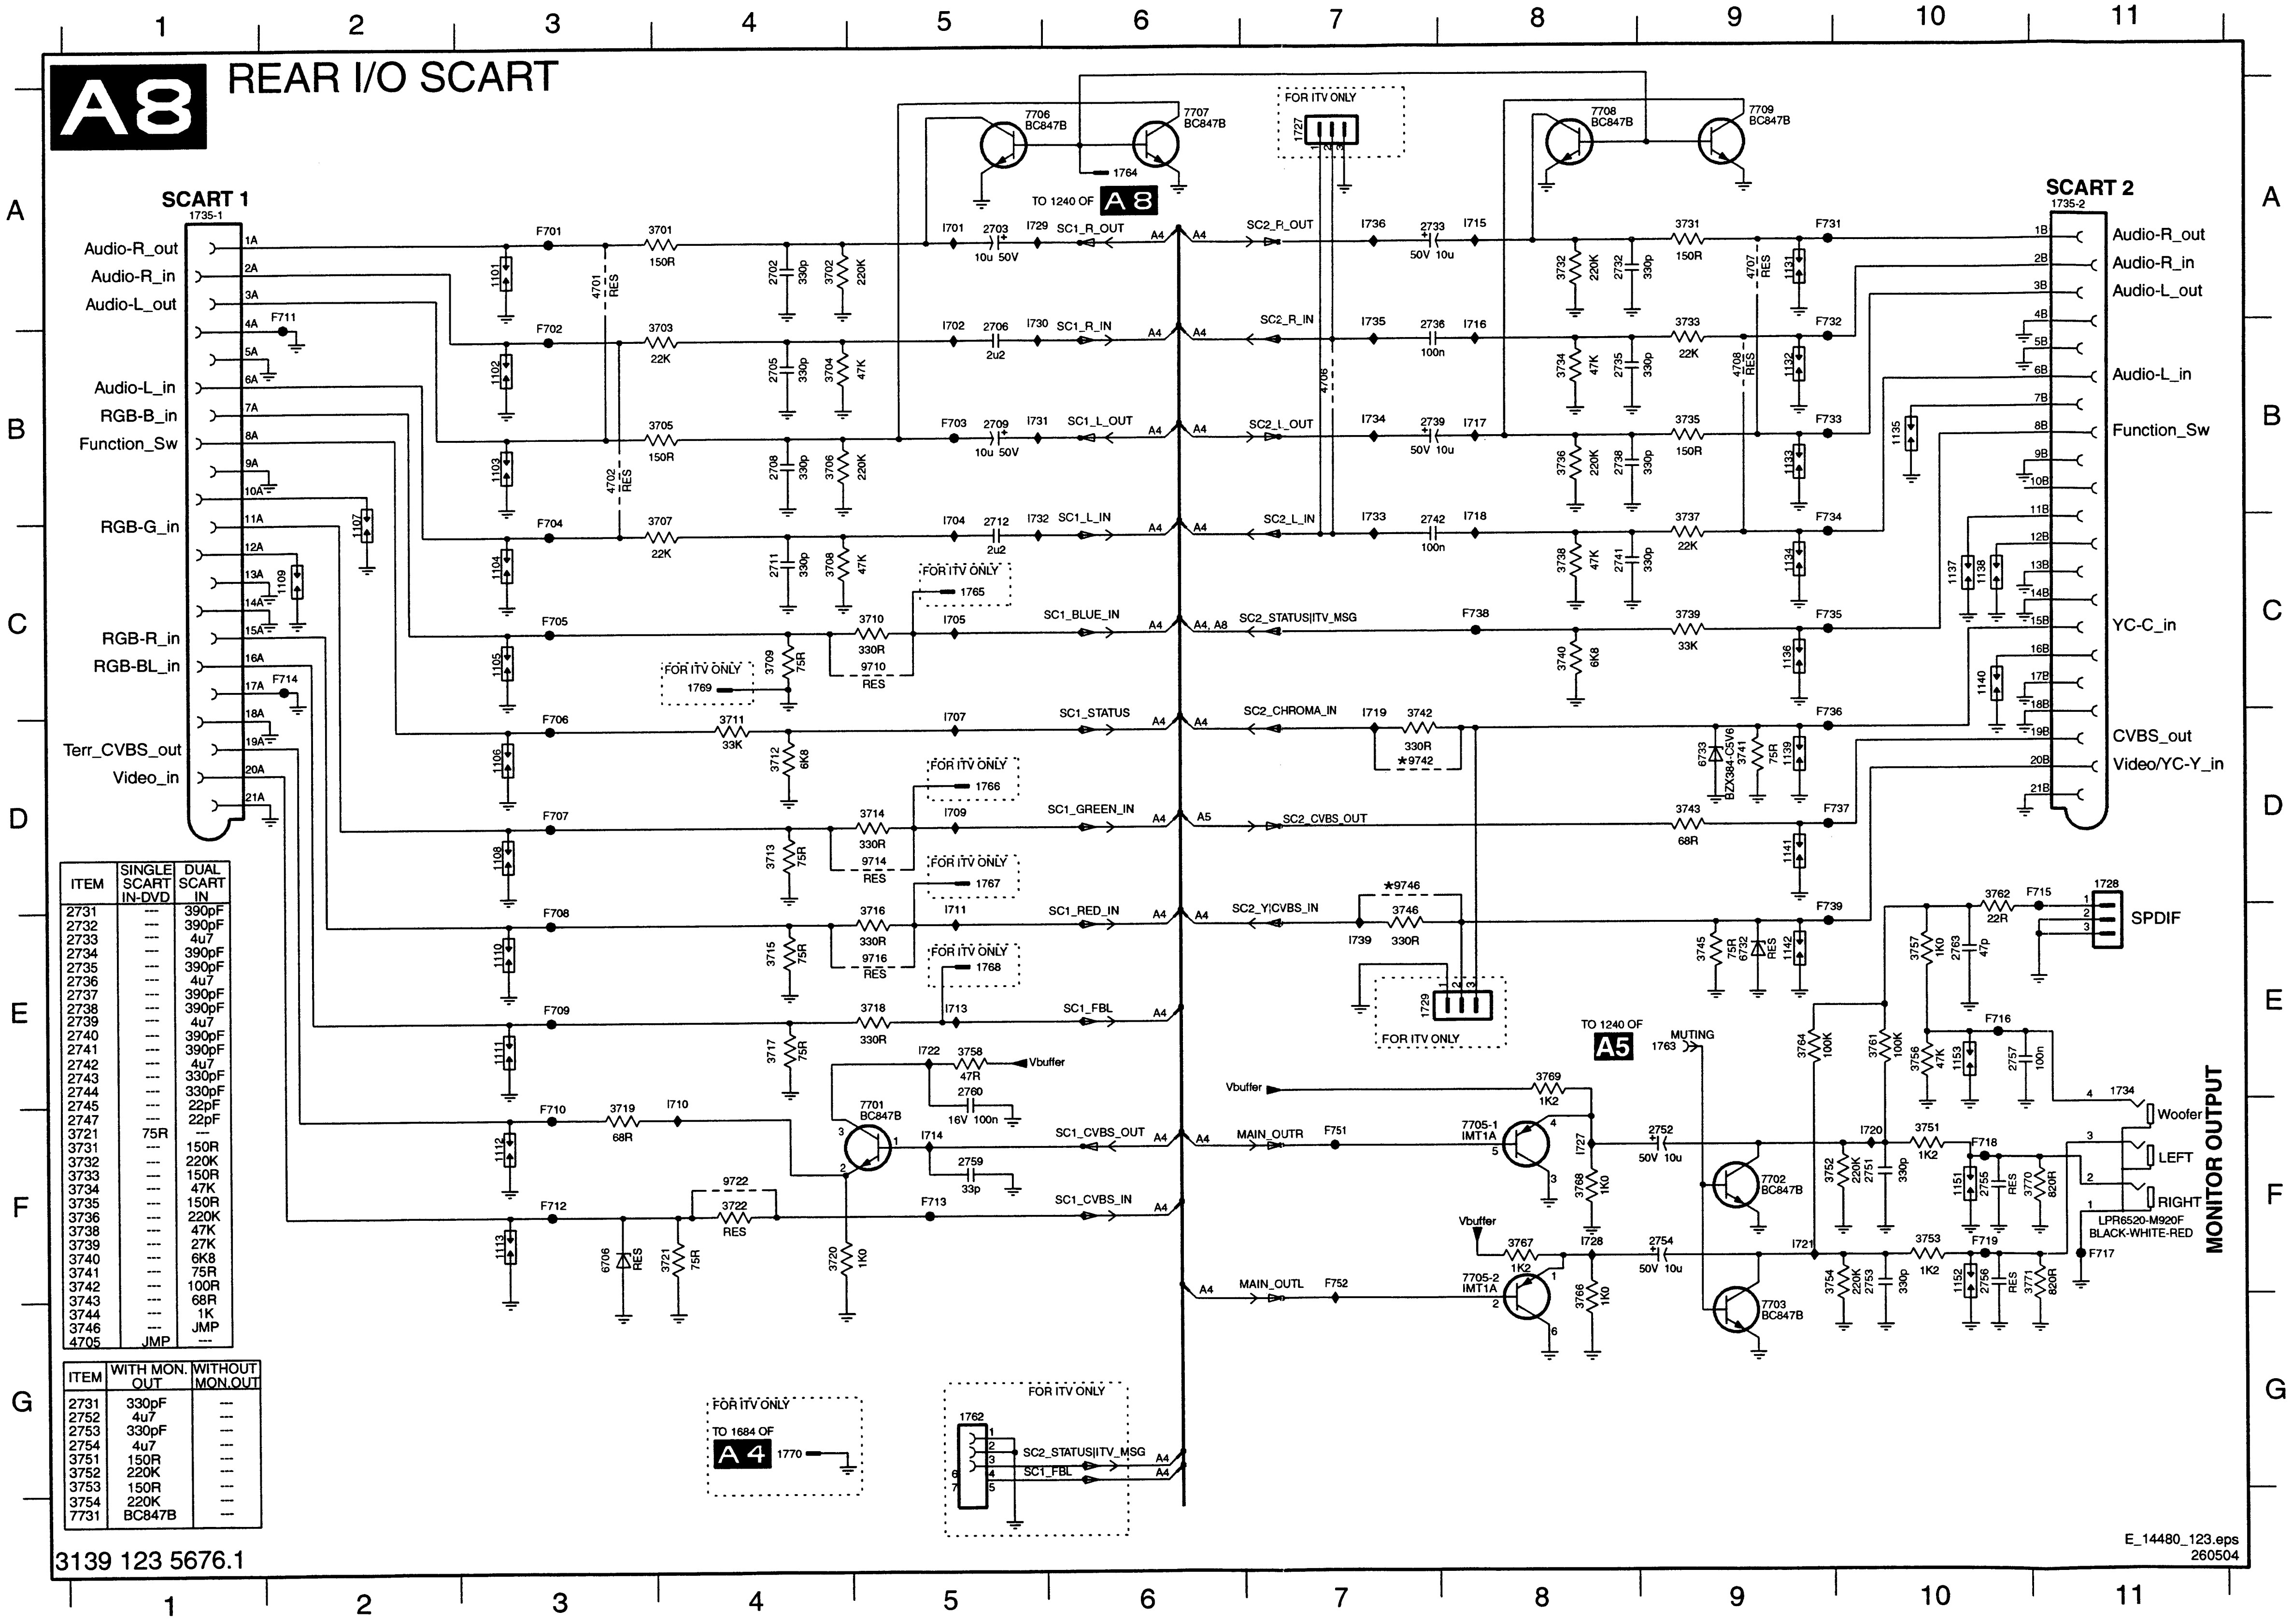
A8
REAR I/O SCART
SCART 1
1735-1
Audio-R_out
Audio-R_in
Audio-L_out
Audio-L_in
RGB-B_in
Function_Sw
RGB-G_in
RGB-R_in
RGB-BL_in
Terr_CVBS_out
Video_in
SCART 2
1735-2
Audio-R_out
Audio-R_in
Audio-L_out
Audio-L_in
Function_Sw
YC-C_in
CVBS_out
Video/YC-Y_in
SPDIF
1728
MONITOR OUTPUT
Woofer
LEFT
RIGHT
LPR6520-M920F
BLACK-WHITE-RED
1734
TO 1240 OF A8
TO 1240 OF A5
MUTING
1763
FOR ITV ONLY
TO 1684 OF A4
1770
1762
SC1_R_OUT
SC1_R_IN
SC1_L_OUT
SC1_L_IN
SC1_BLUE_IN
SC1_STATUS
SC1_GREEN_IN
SC1_RED_IN
SC1_FBL
SC1_CVBS_OUT
SC1_CVBS_IN
SC2_R_OUT
SC2_R_IN
SC2_L_OUT
SC2_L_IN
SC2_STATUS|ITV_MSG
SC2_CHROMA_IN
SC2_CVBS_OUT
SC2_Y|CVBS_IN
MAIN_OUTR
MAIN_OUTL
Vbuffer
7701 BC847B
7702 BC847B
7703 BC847B
7705-1 IMT1A
7705-2 IMT1A
7706 BC847B
7707 BC847B
7708 BC847B
7709 BC847B
BZX384-C5V6
1764
1765
1766
1767
1768
1769
1727
1729
A4
A5
A4, A8
1
2
3
4
5
6
7
8
9
10
11
A
B
C
D
E
F
G
E_14480_123.eps
260504

ITEM	SINGLE SCART IN-DVD	DUAL SCART IN
2731	---	390pF
2732	---	390pF
2733	---	4u7
2734	---	390pF
2735	---	390pF
2736	---	4u7
2737	---	390pF
2738	---	390pF
2739	---	4u7
2740	---	390pF
2741	---	390pF
2742	---	4u7
2743	---	330pF
2744	---	330pF
2745	---	22pF
2747	---	22pF
3721	75R	---
3731	---	150R
3732	---	220K
3733	---	150R
3734	---	47K
3735	---	150R
3736	---	220K
3738	---	47K
3739	---	27K
3740	---	6K8
3741	---	75R
3742	---	100R
3743	---	68R
3744	---	1K
3746	---	JMP
4705	JMP	---

ITEM	WITH MON. OUT	WITHOUT MON.OUT
2731	330pF	---
2752	4u7	---
2753	330pF	---
2754	4u7	---
3751	150R	---
3752	220K	---
3753	150R	---
3754	220K	---
7731	BC847B	---

3139 123 5676.1

1101	A3
1102	B3
1103	B3
1104	C3
1105	C3
1106	D3
1107	C2
1108	D3
1109	C2
1110	E3
1111	E3
1112	F3
1113	F3
1131	A9
1132	B9
1133	B9
1134	C9
1135	B10
1136	C9
1137	C10
1138	C10
1139	D9
1140	C10
1141	D9
1142	E9
1151	F10
1152	F10
1153	E10
1727	A7
1728	D11
1729	E7
1734	E11
1735-1	A1
1735-2	A11
1762	G5
1763	E9
1764	A6
1765	C5
1766	D5
1767	D5
1768	E5
1769	C4
1770	G4
2702	A4
2703	A5
2705	B4
2706	B5
2708	B4
2709	B5
2711	C4
2712	C5
2732	A8
2733	A7
2735	B8
2736	B7
2738	B8
2739	B7
2741	C8
2742	C7
2751	F10
2752	F9
2753	F10
2754	F9
2755	F10
2756	F10
2757	E10
2759	F5
2760	E5
2763	E10
3701	A4
3702	A4
3703	B4
3704	B4
3705	B4
3706	B4
3707	C4
3708	C4
3709	C4
3710	C5
3711	D4
3712	D4
3713	D4
3714	D5
3715	E4
3716	E5
3717	E4
3718	E5
3719	F3
3720	F4
3721	F4
3722	F4
3731	A9
3732	A8
3733	B9
3734	B8
3735	B9
3736	B8
3737	C9
3738	C8
3739	C9
3740	C8
3741	D9
3742	D7
3743	D9
3745	E9
3746	E7
3751	F10
3752	F9
3753	F10
3754	F9
3756	E10
3757	E10
3758	E5
3761	E10
3762	D10
3764	E9
3766	G8
3767	F8
3768	F8
3769	E8
3770	F11
3771	F11
4701	A3
4702	B3
4706	B7
4707	A9
4708	B9
6706	F3
6732	E9
6733	D9
7701	F5
7702	F9
7703	G9
7705-1	F8
7705-2	F8
7706	A6
7707	A6
7708	A8
7709	A9
9710	C5
9714	D5
9716	E5
9722	F4
9742	D7
9746	D7
F701	A3
F702	B3
F703	B5
F704	C3
F705	C3
F706	D3
F707	D3
F708	E3
F709	E3
F710	F3
F711	A2
F712	F3
F713	F5
F714	C2
F715	D11
F716	E10
F717	F11
F718	F10
F719	F10
F731	A9
F732	B9
F733	B9
F734	C9
F735	C9
F736	D9
F737	D10
F738	C8
F739	E9
F751	F7
F752	F7
I701	A5
I702	B5
I704	C5
I705	C5
I707	D5
I709	D5
I710	E4
I711	E5
I713	E5
I714	F5
I715	A8
I716	B8
I717	B8
I718	B8
I719	D7
I720	F10
I721	F9
I722	E5
I727	F8
I728	F8
I729	A5
I730	A5
I731	B5
I732	B5
I733	B7
I734	B7
I735	A7
I736	A7
I739	E7

Mono Carrier: Front Control

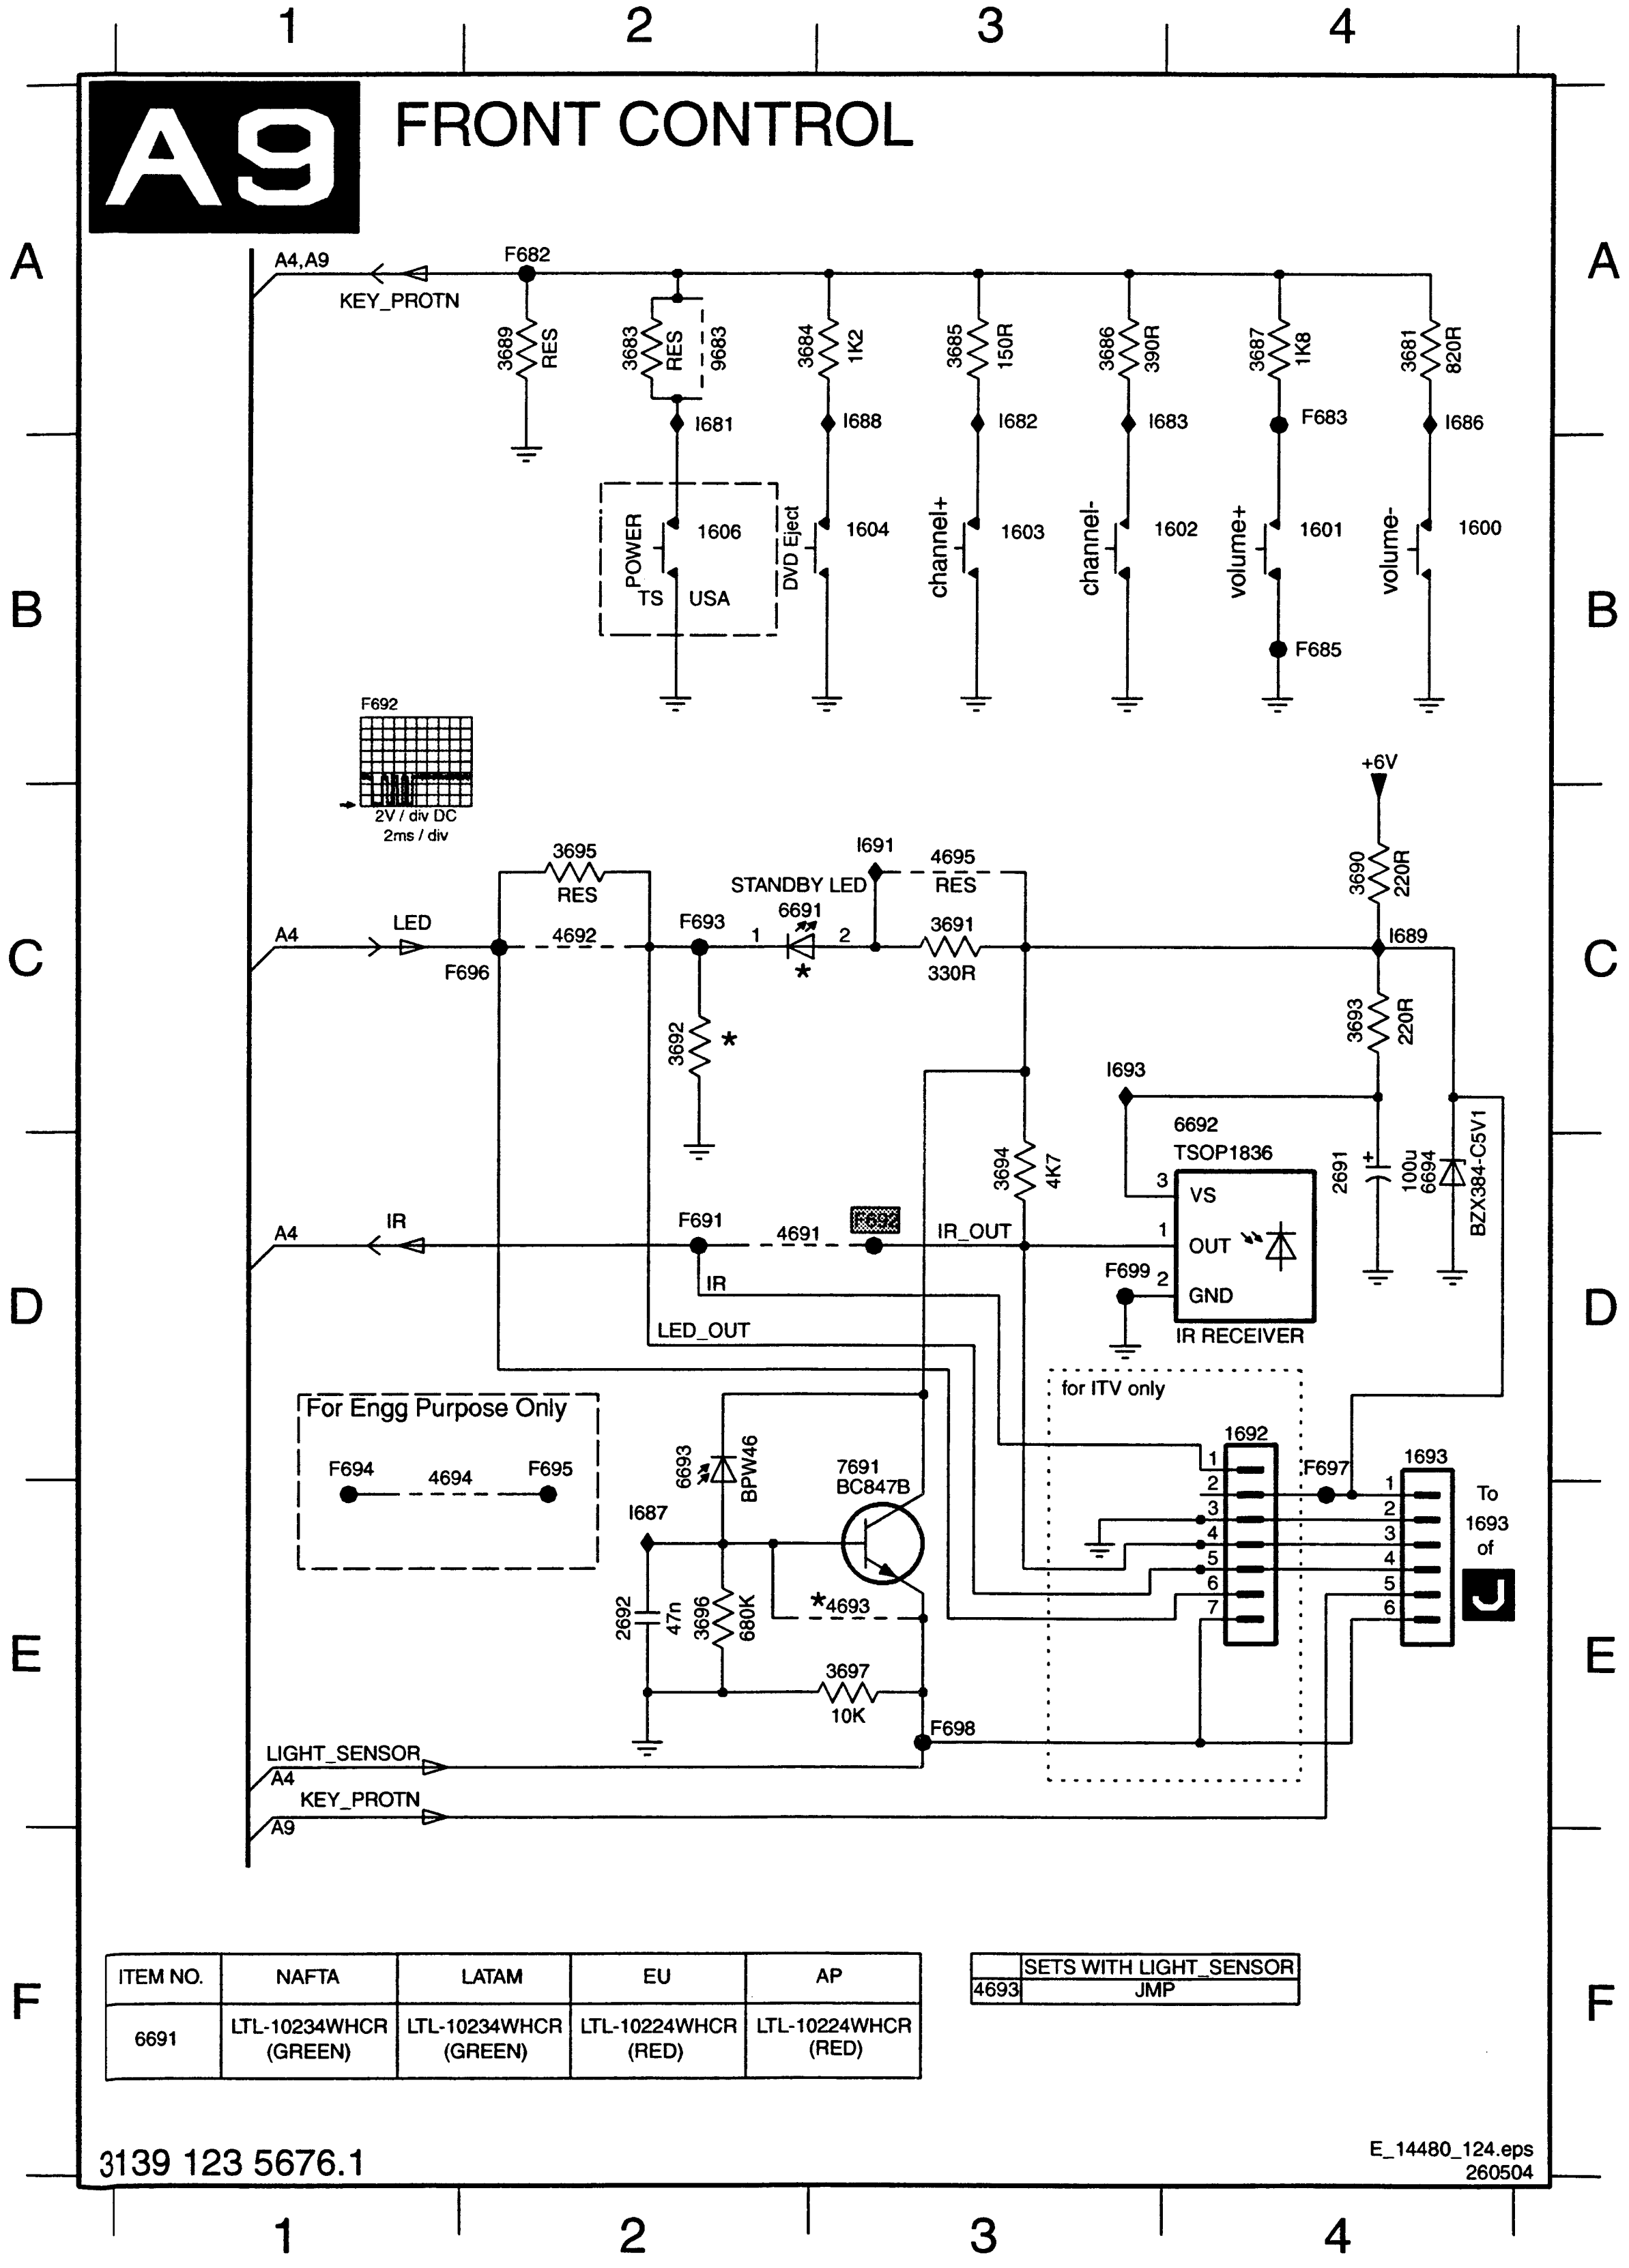
A9
FRONT CONTROL
1
2
3
4
A
B
C
D
E
F
A4,A9
KEY_PROTN
F682
3689
RES
3683
RES
9683
3684
1K2
3685
150R
3686
390R
3687
1K8
3681
820R
I681
I688
I682
I683
F683
I686
POWER
1606
TS
USA
DVD Eject
1604
channel+
1603
channel-
1602
volume+
1601
volume-
1600
F685
F692
2V / div DC
2ms / div
+6V
3695
RES
I691
4695
RES
STANDBY LED
6691
3690
220R
A4
LED
F696
4692
F693
1
2
3691
330R
I689
*
3692
*
3693
220R
I693
6692
TSOP1836
3694
4K7
2691
100u
6694
BZX384-C5V1
A4
IR
F691
4691
F692
IR_OUT
VS
OUT
GND
F699
IR RECEIVER
IR
LED_OUT
for ITV only
For Engg Purpose Only
F694
4694
F695
6693
BPW46
7691
BC847B
I687
1692
F697
1693
To
1693
of
J
2692
47n
3696
680K
*4693
3697
10K
F698
LIGHT_SENSOR
A4
KEY_PROTN
A9

ITEM NO.	NAFTA	LATAM	EU	AP
6691	LTL-10234WHCR (GREEN)	LTL-10234WHCR (GREEN)	LTL-10224WHCR (RED)	LTL-10224WHCR (RED)

	SETS WITH LIGHT_SENSOR
4693	JMP

3139 123 5676.1

E_14480_124.eps
260504

1600	B4
1601	B4
1602	B4
1603	B3
1604	B3
1606	B2
1692	D4
1693	D4
2691	D4
2692	E2
3681	A4
3683	A2
3684	A2
3685	A3
3686	A3
3687	A4
3689	A2
3690	C4
3691	C3
3692	C2
3693	C4
3694	D3
3695	C2
3696	E2
3697	E3
4691	D2
4692	C2
4693	E3
4694	E1
4695	C3
6691	C3
6692	C4
6693	E2
6694	D4
7691	D3
9683	A2
F682	A2
F683	A4
F685	B4
F691	D2
F692	D3
F693	C2
F694	D1
F695	D2
F696	C2
F697	D4
F698	E3
F699	D3
I681	A2
I682	A3
I683	A4
I686	A4
I687	E2
I688	A3
I689	C4
I691	C3
I693	C3

Personal Notes:

E_06532_012.eps
130204

Mono Carrier: DVD Power Supply

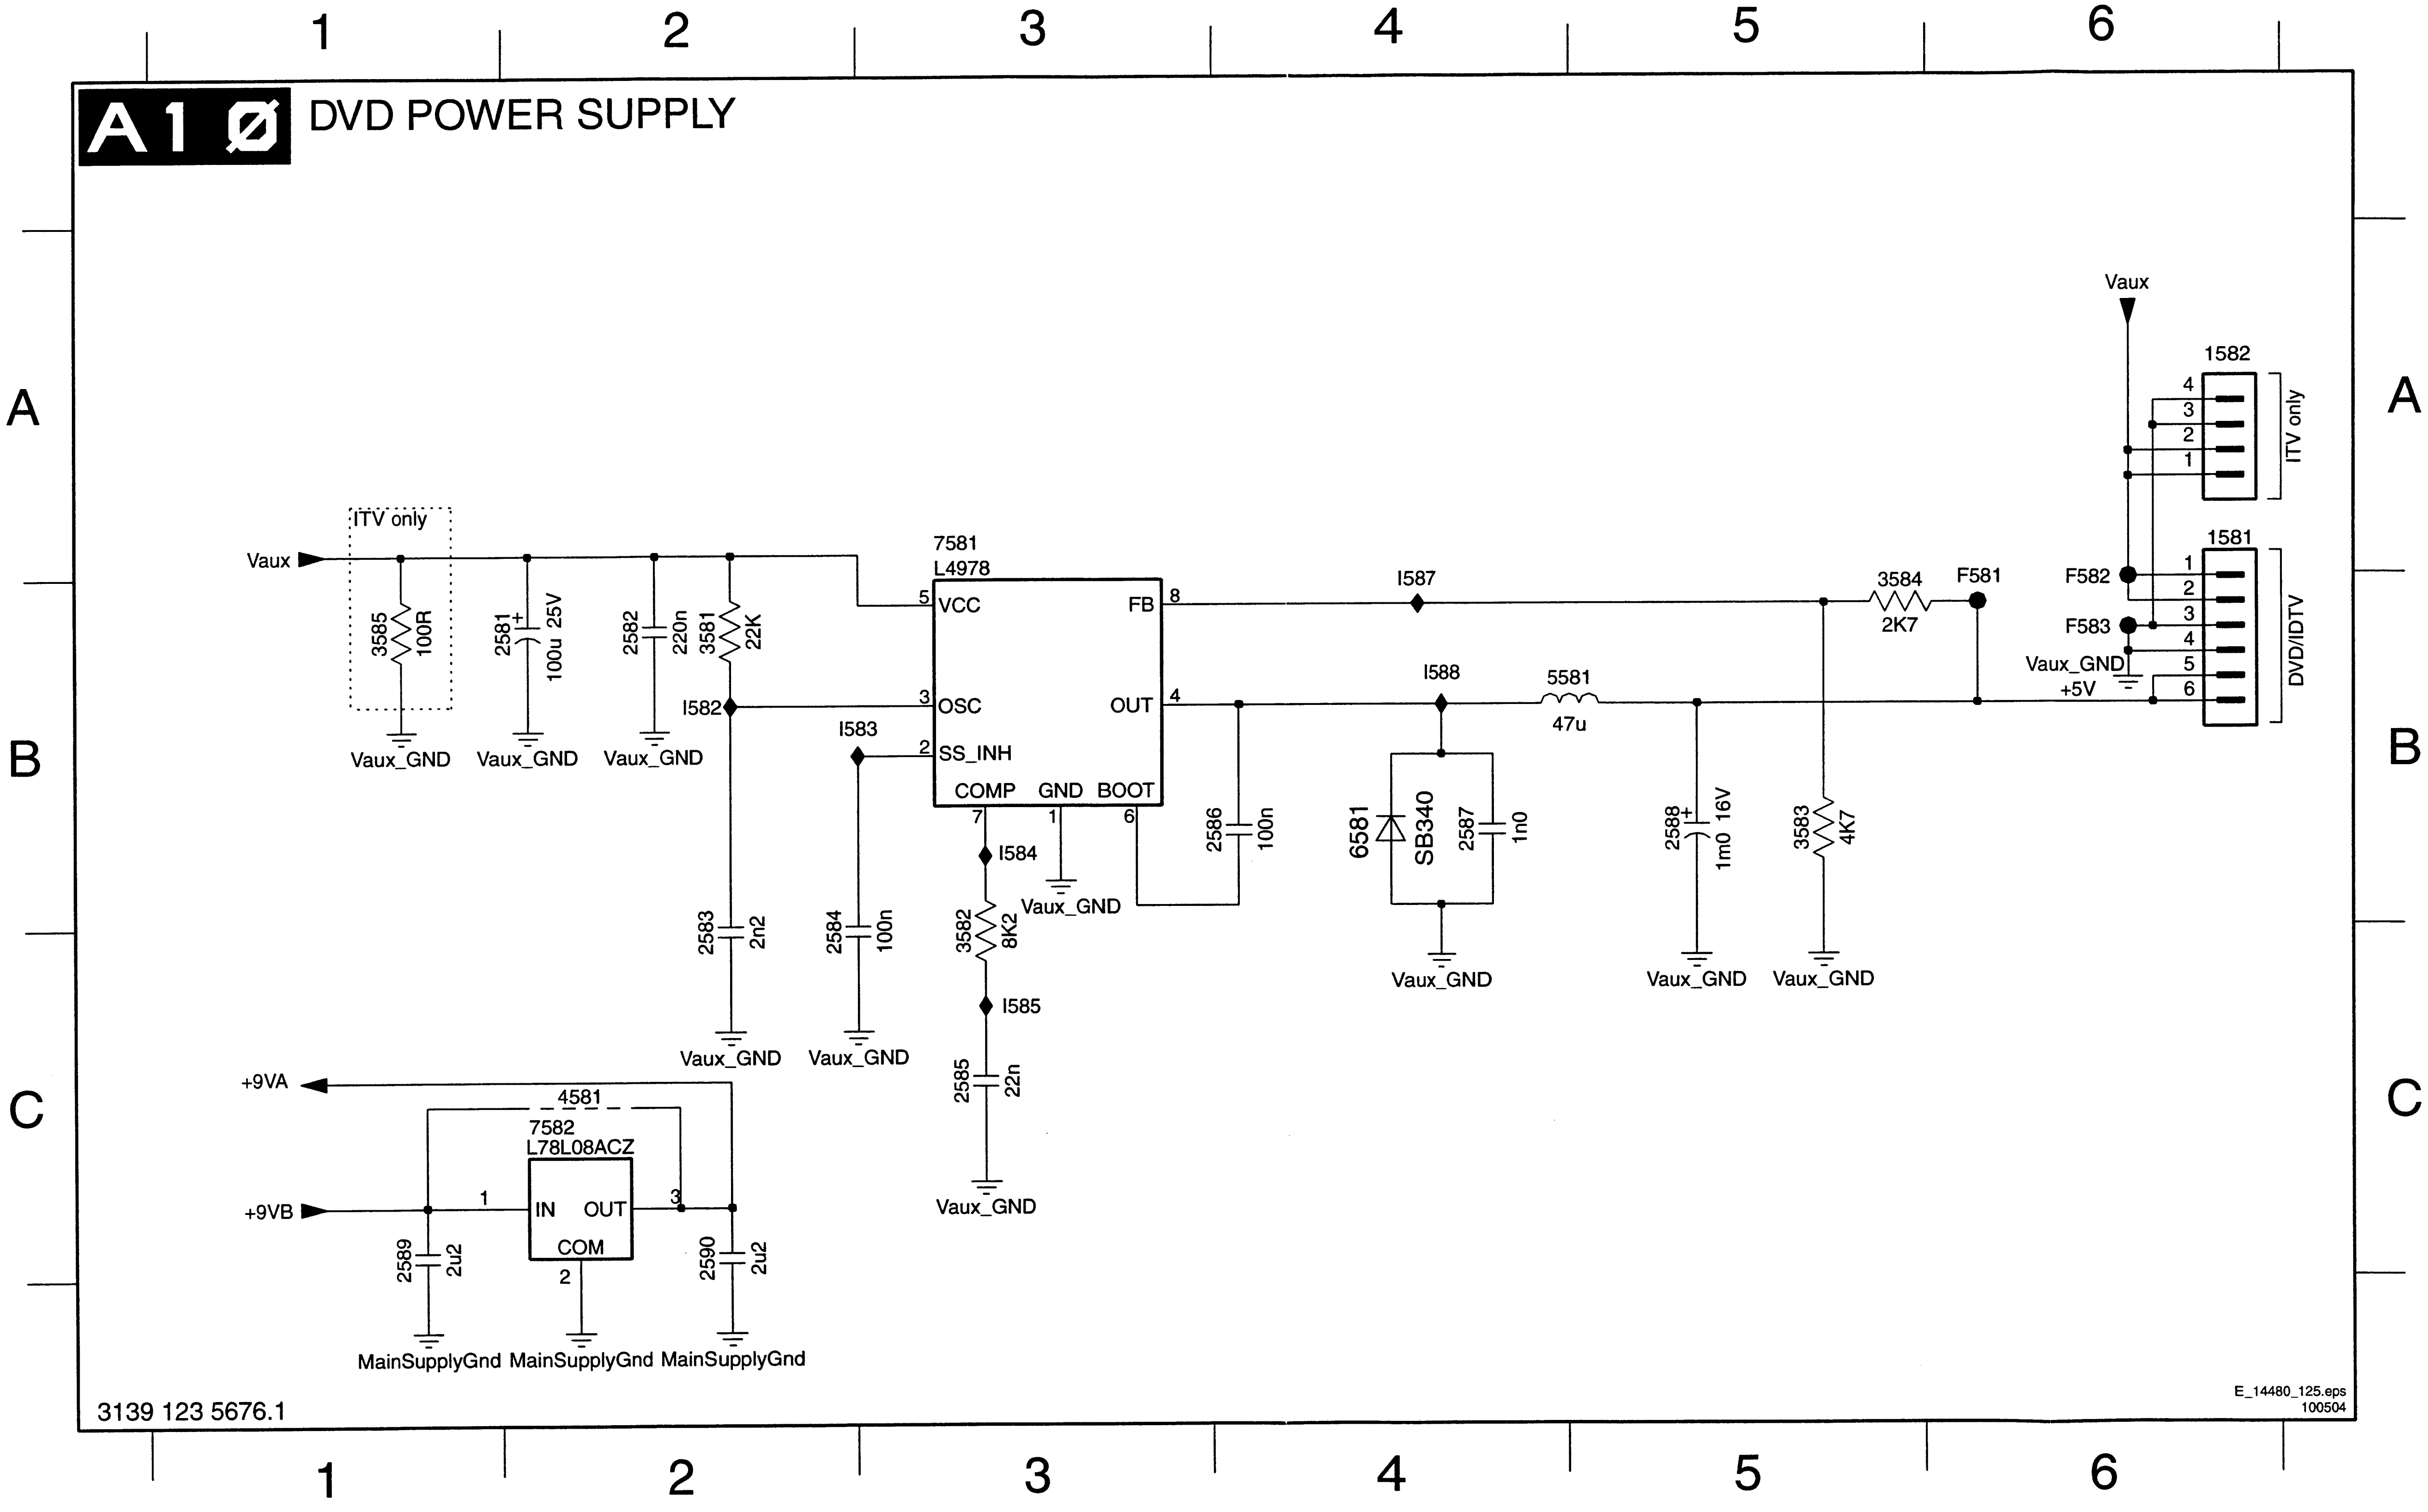
A1 Ø
DVD POWER SUPPLY
1
2
3
4
5
6
A
B
C
Vaux
ITV only
3585
100R
2581
100u 25V
2582
220n
3581
22K
Vaux_GND
7581
L4978
5 VCC
FB 8
3 OSC
OUT 4
2 SS_INH
COMP
GND
BOOT
7
1
6
I582
I583
I584
I585
I587
I588
2583
2n2
2584
100n
3582
8K2
2585
22n
2586
100n
6581
SB340
2587
1n0
5581
47u
2588
1m0 16V
3583
4K7
3584
2K7
F581
F582
F583
1582
1581
ITV only
DVD/IDTV
+5V
+9VA
+9VB
4581
7582
L78L08ACZ
IN
OUT
COM
2589
2u2
2590
2u2
MainSupplyGnd
3139 123 5676.1
E_14480_125.eps
100504

1581	A6
1582	A6
2581	B2
2582	B2
2583	C2
2584	C2
2585	C3
2586	B4
2587	B4
2588	B5
2589	C1
2590	C2
3581	B2
3582	C3
3583	B5
3584	B5
3585	B1
4581	C2
5581	B5
6581	B4
7581	A3
7582	C2
F581	B6
F582	B6
F583	B6
I582	B2
I583	B3
I584	B3
I585	C3
I587	B4
I588	B4

Layout Mono Carrier: (Top Side)

1000	E8
1001	E6
1002	E5
1003	E5
1004	E7
1005	E8
1010	E7
1011	E7
1012	E6
1013	E8
1204	C6
1205	D5
1206	D5
1207	E7
1208	D7
1212	C6
1213	C5
1219	C7
1220	E4
1221	C5
1222	D3
1230	D5
1234	D5
1240	D4
1241	D5
1242	E4
1243	C6
1245	D6
1280	E3
1281	E3
1282	D3
1401	C7
1402	A6
1404	A5
1451	C7
1452	A8
1453	B5
1454	B7
1470	A8
1500	A2
1501	A2
1502	B2
1503	C3
1504	C2
1505	A2
1506	A2
1507	C2
1508	A2
1509	C2
1510	B1
1532	B3
1535	C5
1542	C4
1543	C4
1545	C4
1581	D4
1582	C3
1600	C1
1601	C1
1602	D1
1603	D1
1604	C1
1606	A1
1682	D4
1683	C5
1684	D6
1692	C1
1693	C1
1727	C7
1728	D8
1729	D7
1734	D8
1735	D8
1762	D7
1763	E8
1764	C7
1765	C7
1766	D7
1767	D7
1768	E7
1769	D8
1770	D8
1902	D2
1903	D3
2005	E5
2006	E7
2008	E8
2203	D5
2217	E5
2218	D6
2224	E5
2230	D6
2234	D6
2240	E5
2250	D6
2251	E5
2265	E6
2273	E6
2275	E6
2404	B6
2405	A6
2406	A6
2411	B6
2412	A6
2413	B6
2415	A5
2416	B6
2417	A6
2418	A5
2419	B6
2427	B6
2451	A8
2454	A8
2455	A8
2457	C7
2458	C7
2459	A8
2460	A7
2463	C8
2465	C8
2467	C7
2481	A7
2484	A8
2486	B6
2492	B6
2493	A7
2500	A2
2501	C2
2502	C2
2503	A4
2504	A4
2505	A4
2506	A3
2507	A3
2508	C2
2509	C1
2511	A5
2514	A4
2528	B4
2534	B3
2535	C3
2536	C3
2537	C3
2539	C3
2540	C3
2541	C3
2542	B4
2543	B3
2545	B3
2546	B3
2551	B5
2552	C5
2561	C4
2562	B4
2563	C4
2565	C4
2570	B4
2581	C4
2588	C4
2611	E4
2621	E5
2624	E5
2631	D7
2691	B1
2703	C7
2709	C7
2733	C7
2739	C7
2752	E7
2754	E8
2945	D2
2948	D2
2949	D2
2960	D2
2961	D1
2978	C3
3020	E7
3201	D5
3215	D5
3224	E5
3230	D4
3231	D6
3234	C6
3239	C7
3241	E5
3246	D5
3249	D7
3252	D5
3258	D7
3260	D5
3270	D7
3274	D7
3275	E7
3276	C7
3277	C7
3278	D7
3291	D7
3401	C6
3402	A7
3407	A7
3411	A6
3412	A6
3414	C6
3415	B6
3417	A6
3418	C5
3425	C5
3430	B6
3431	C6
3432	B7
3433	B6
3434	B6
3440	C5
3441	B6
3442	A7
3443	A7
3447	A7
3451	B6
3454	A8
3458	B7
3460	B7
3461	C7
3466	C7
3467	C7
3468	C7
3470	C8
3471	C7
3472	C7
3482	B8
3483	B8
3484	B8
3485	B8
3497	C5
3500	B1
3501	B1
3502	A1
3503	B1
3504	B2
3505	A2
3506	B1
3507	B3
3508	A3
3509	B2
3510	B2
3511	B5
3513	A5
3514	A5
3515	A5
3516	A4
3519	B4
3520	A4
3521	A5
3523	B2
3529	B3
3531	B4
3532	B3
3534	B4
3542	B3
3563	C4
3571	B5
3574	B5
3575	B5
3577	B5
3584	C4
3585	D4
3589	C5
3603	C6
3606	E4
3616	C6
3617	C6
3618	C6
3639	E4
3683	B1
3701	C8
3703	C8
3705	C8
3707	C8
3709	D8
3710	D8
3713	D8
3714	D8
3715	D8
3716	D8
3717	D8
3718	D8
3721	D8
3722	D8
3731	C8
3733	C8
3735	C8
3737	C8
3739	D8
3741	D8
3742	D7
3743	D7
3745	D8
3746	D7
3751	E8
3753	E8
3757	D8
3758	D7
3943	C2
3945	D3
3961	C3
3962	D3
3975	D3
5201	D5
5208	D6
5216	D6
5217	D7
5295	C5
5401	A6
5402	B6
5403	B5
5404	B8
5405	B5
5406	B6
5408	B6
5410	B6
5450	B7
5451	B7
5452	A8
5500	B2
5501	B2
5502	A3
5503	A3
5511	A4
5512	B4
5512C	B4
5512D	B4
5531	B4
5532	B3
5536	C4
5537	C4
5551	B5
5552	B5
5561	B4
5562	B4
5581	D4
5602	D7
5901	D2
5902	D2
5907	D1
5908	D2
5913	D3
5914	D3
6001	E8
6006	E7
6401	A6
6403	C6
6404	A6
6406	A6
6410	A6
6411	A6
6412	A6
6452	C7
6453	B7
6454	B8
6455	B8
6456	A8
6459	B8
6480	B8
6481	B8
6486	C6
6491	A6
6500	A4
6511	A5
6535	C4
6536	C3
6537	C3
6540	B3
6551	C5
6562	B4
6563	C4
6573	B5
6575	A4
6581	D4
6691	A1
6692	B1
6693	B1
6905	D1
7203	E5
7204	E5
7401	A6
7405	B6
7406	C5
7451	C8
7452	C8
7453	C7
7512	A4
7513	B5
7531	B3
7571	B5
7581	D4
7582	D4
7601	D5
7603	E4
7605	E5
7902	C2
7906	C3
7990	E3
9002	E7
9201	E6
9202	E4
9203	E6
9204	E7
9205	D4
9206	D4
9207	D4
9208	D4
9209	C5
9210	E7
9211	D7
9212	E7
9213	D7
9214	D4
9215	E7
9216	D4
9217	D6
9218	E6
9219	D6
9220	D5
9221	D5
9222	E5
9223	E6
9224	D5
9225	D4
9226	D4
9227	D5
9228	D4
9229	D5
9230	D5
9231	E6
9232	E5
9233	E6
9234	E7
9235	D7
9236	C5
9237	D6
9238	D7
9239	E6
9240	E5
9241	C6
9242	D4
9243	C4
9244	E6
9245	E4
9246	E6
9247	E4
9248	E6
9249	D4
9250	E6
9251	E5
9252	C5
9253	D5
9254	C7
9255	C7
9257	D7
9258	C7
9259	D7
9260	D7
9261	D7
9262	D7
9263	E7
9264	C7
9265	C7
9266	C7
9267	D7
9268	D7
9269	C4
9271	E5
9272	D4
9273	D4
9274	D4
9275	C5
9276	D5
9277	C6
9278	D4
9279	D4
9280	D5
9290	E6
9294	C6
9296	C5
9297	C4
9298	C5
9299	C5
9401	B5
9402	B6
9404	B8
9407	B6
9410	B6
9417	A5
9451	B7
9452	A8
9460	B6
9466	B5
9467	B6
9469	C5
9470	C6
9473	C5
9474	C5
9475	C5
9476	C5
9477	C6
9478	C6
9479	C6
9480	C6
9481	C6
9482	C7
9483	C8
9484	C7
9485	C7
9486	B7
9487	B8
9488	A8
9489	B8
9490	A8
9491	A6
9492	C6
9500	A2
9501	B2
9502	B2
9503	B2
9504	B2
9505	B3
9506	A3
9507	A2
9508	A2
9509	C4
9510	C4
9511	B2
9512	B3
9513	B5
9514	C4
9532	B3
9536	C4
9537	C4
9570	A3
9573	C2
9574	B4
9575	C3
9576	A4
9577	B5
9578	B3
9579	C3
9582	C4
9583	C4
9584	B4
9585	A4
9586	C4
9587	B4
9589	C5
9590	C5
9591	C3
9592	C3
9593	C4
9603	C7
9604	C6
9605	E6
9607	D7
9612	E4
9631	C6
9633	C7
9637	E7
9639	E4
9642	D7
9643	D5
9653	D4
9660	C1
9661	C1
9662	B1
9663	C1
9664	C1
9665	B1
9666	C1
9683	B1
9688	E4
9689	E4
9690	E4
9694	E6
9695	E4
9696	D4
9710	D8
9714	D8
9716	D8
9720	D7
9721	D7
9722	D8
9723	D8
9724	D7
9728	D7
9729	D7
9742	D7
9746	D7
9910	C3
9911	D3
9913	D3
9914	D3
9915	C3
9920	D3
9921	D3
9924	D2
9926	D3
9927	D2
9933	D3
9935	D3
9936	C3
9937	C3
9939	D3
9940	C3
9941	D3
9942	D3
9943	D3
9944	D3
9946	C2

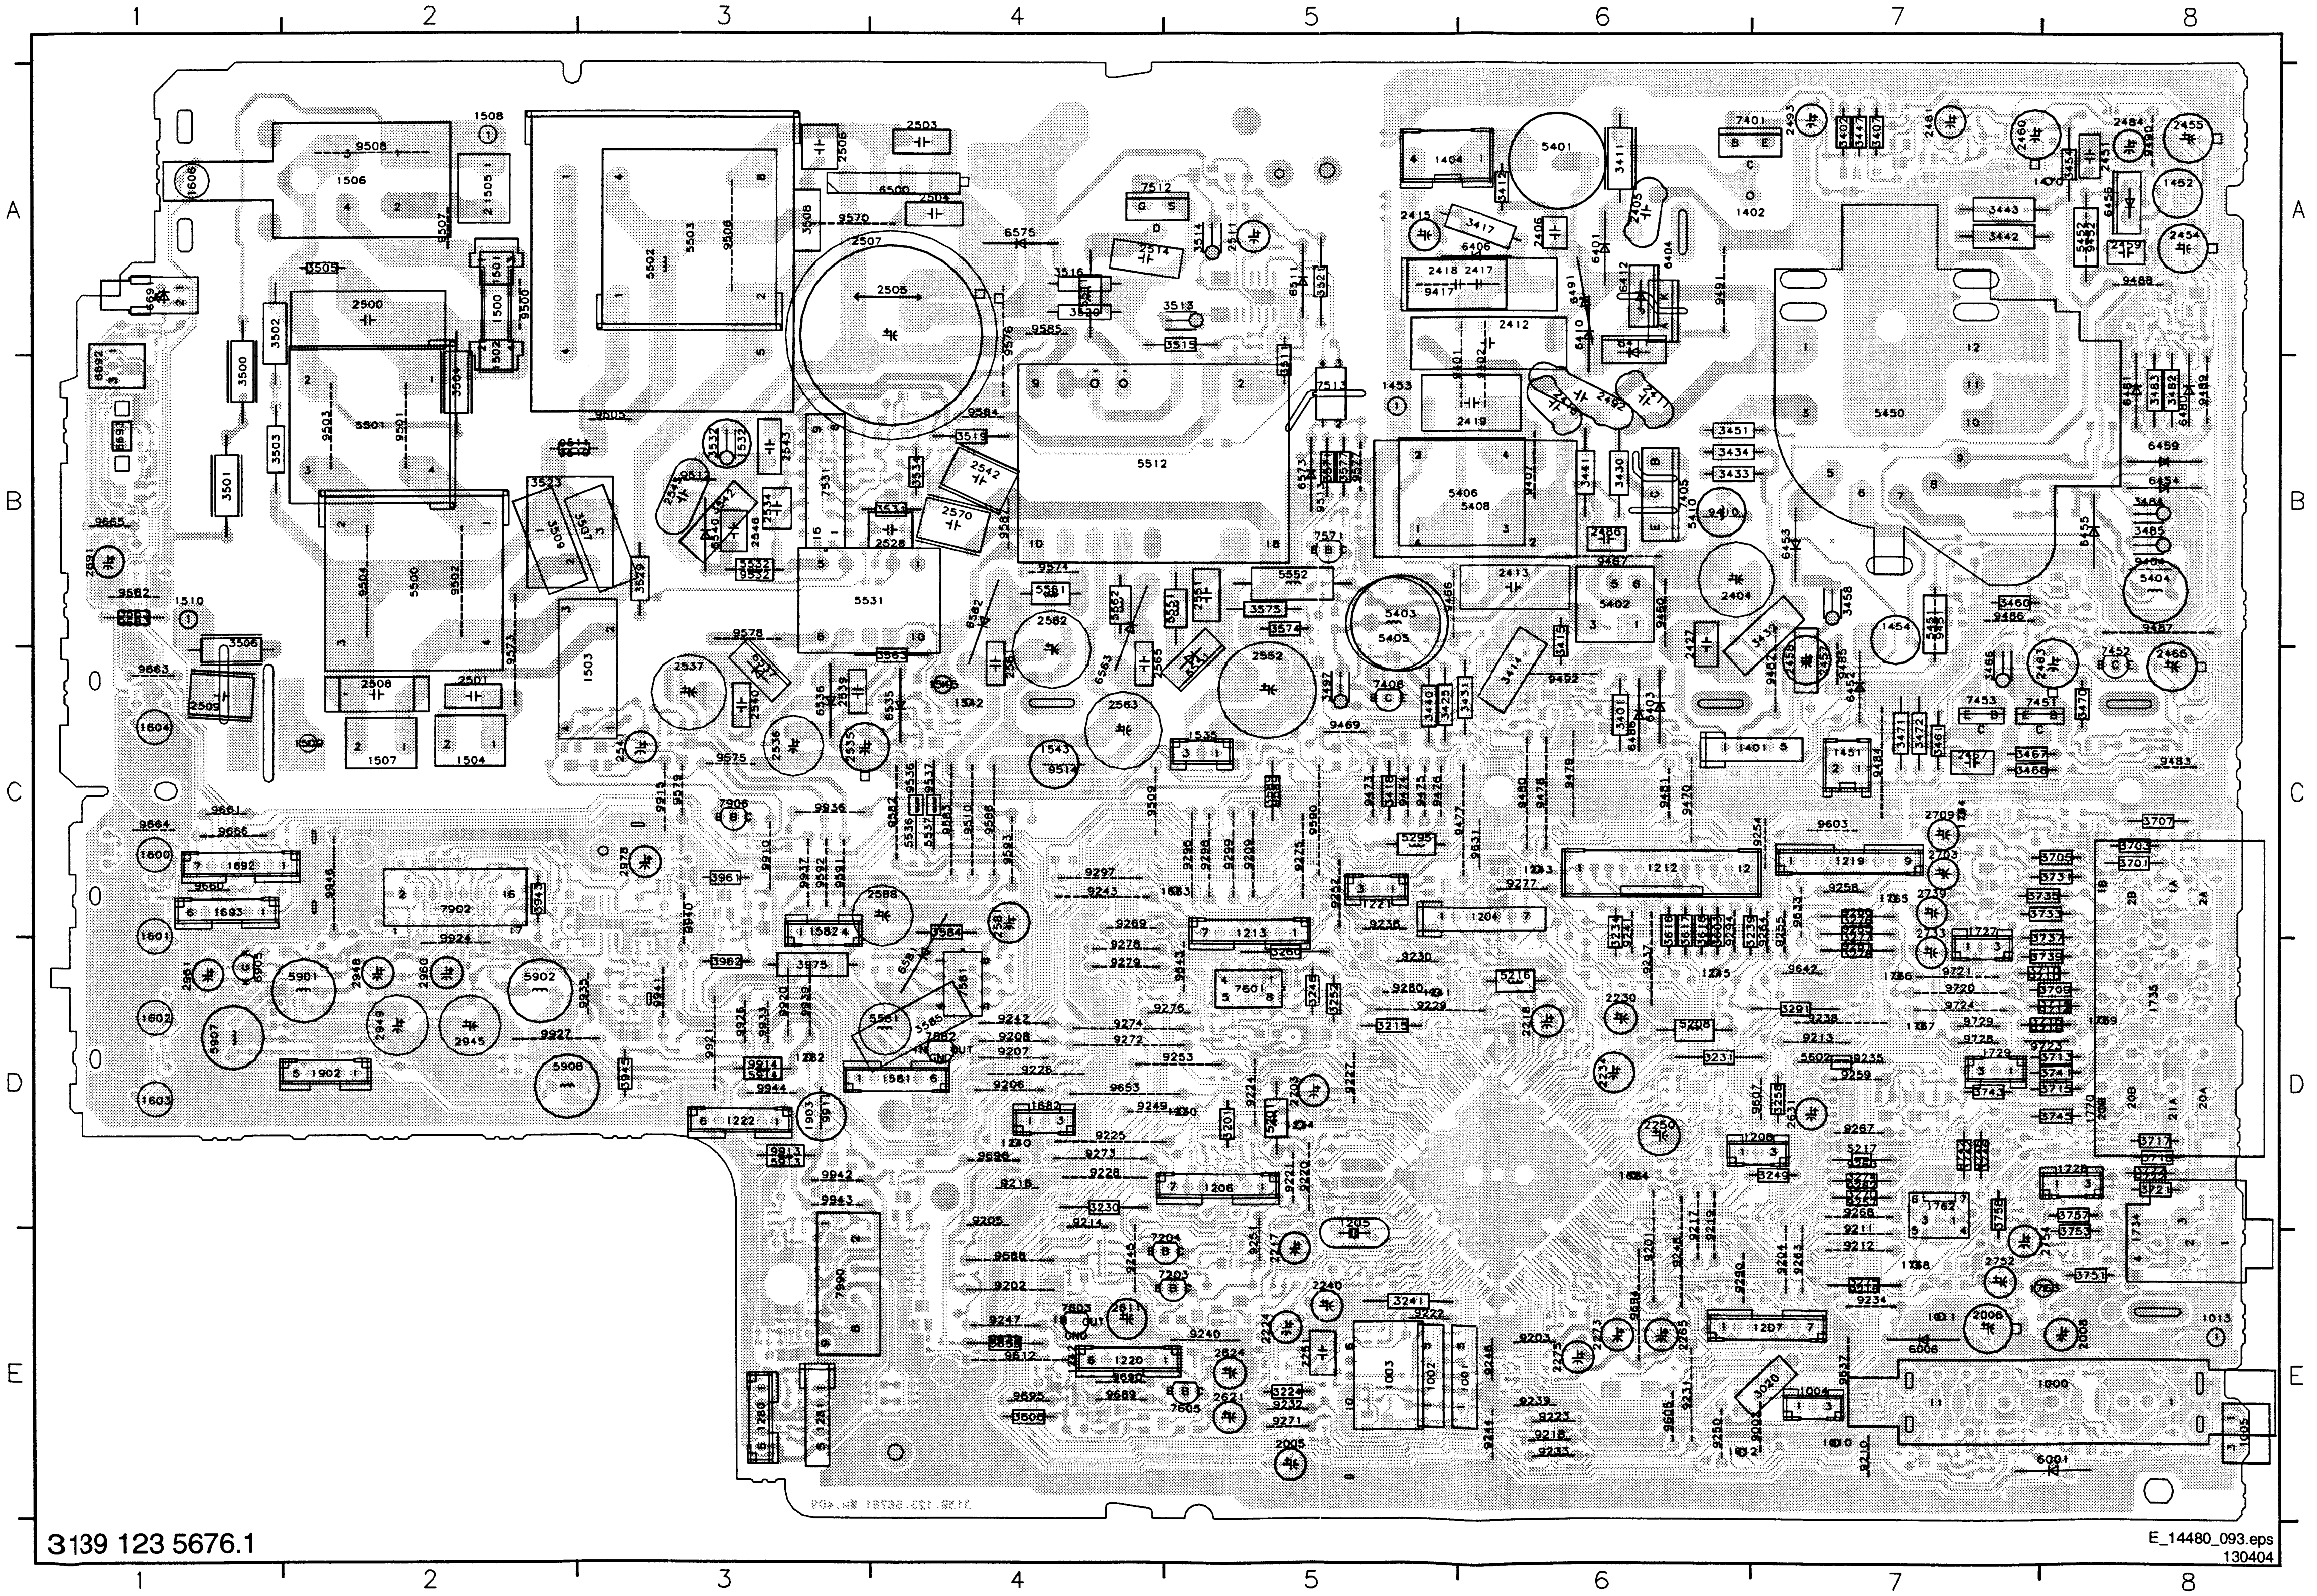

Layout Mono Carrier (Overview Bottom Side)

2001	A8
2002	A8
2003	A7
2004	A7
2007	A7
2009	A7
2013	A7
2014	A7
2016	A7
2204	A5
2205	B5
2206	B5
2207	A4
2208	A4
2209	B5
2210	B5
2211	B6
2212	B5
2213	B5
2214	A5
2215	B6
2216	B6
2221	A5
2222	A5
2223	B6
2225	B6
2226	A5
2227	A5
2229	B6
2231	B6
2232	B6
2233	B6
2235	A5
2236	A5
2237	B6
2238	A5
2239	A5
2241	A5
2242	B6
2243	B6
2244	A5
2245	A5
2246	B6
2247	B6
2248	A5
2249	B6
2252	B6
2253	A6
2254	A6
2255	A7
2256	A6
2257	A6
2258	B6
2259	B5
2260	A6
2261	A6
2262	B6
2263	A6
2264	B6
2266	A6
2267	A6
2268	A5
2269	A5
2270	A6
2271	A6
2272	A6
2274	A6
2276	A6
2277	B5
2278	A5
2279	B5
2280	B5
2282	B5
2283	A6
2284	A6
2285	A6
2286	B6
2287	B6
2288	B4
2289	B4
2290	A5
2402	E8
2403	E8
2408	C6
2409	D6
2410	C6
2414	C6
2420	C6
2425	C6
2428	D7
2453	E8
2456	D8
2461	D7
2462	D7
2464	C8
2468	C8
2469	D7
2470	C8
2480	E8
2482	C5
2483	E8
2487	D6
2488	C5
2489	D6
2490	D8
2491	E8
2512	E5
2513	E5
2515	D5
2516	E5
2517	E5
2518	E5
2519	E5
2530	D4
2531	D4
2532	D4
2533	D3
2538	C4
2544	D4
2547	C4
2548	C4
2549	D3
2550	D3
2553	D4
2564	C4
2566	C4
2571	D5
2572	C5
2573	D5
2582	C4
2583	B4
2584	B4
2585	B4
2586	B4
2587	B4
2589	B4
2590	B4
2601	B5
2613	B5
2614	B7
2615	B7
2617	B7
2620	A5
2622	B7
2623	A5
2625	A4
2626	C6
2627	B6
2628	B6
2629	B6
2630	C7
2692	D1
2702	C8
2705	C8
2706	C8
2708	C7
2711	C8
2712	C8
2732	C7
2735	C7
2736	B7
2738	C7
2741	B7
2742	B7
2751	A8
2753	A8
2755	A8
2756	B8
2757	B8
2759	B7
2760	B8
2763	A8
2911	A4
2912	A4
2913	A4
2914	A4
2915	A4
2916	B3
2928	C3
2929	B3
2930	B3
2931	C3
2932	C3
2933	C3
2934	C3
2935	B3
2936	B3
2937	B3
2938	B3
2939	B3
2942	C2
2946	B2
2947	C2
2950	B2
2951	C2
2952	C2
2953	C2
2954	B2
2955	B2
2957	B1
2958	B2
2963	B2
2970	B2
2971	B2
2972	B2
2973	B2
2974	B2
2977	C2
2979	C3
2980	B1
2981	B2
2982	B2
2983	B2
2984	B2
2985	B3
2986	A3
2987	A3
2988	A3
2989	B3
2990	A3
2991	A3
2992	A3
2993	A3
2994	A3
2995	A3
2996	A3
2997	A3
3000	A8
3001	A8
3002	A8
3003	A7
3004	A8
3005	A7
3006	A5
3007	A5
3008	A7
3009	A5
3010	A7
3014	A7
3016	A7
3018	A7
3019	A7
3202	B5
3203	A5
3204	B5
3205	A5
3206	A5
3207	B5
3208	A4
3209	A4
3210	A4
3211	A4
3212	B5
3214	B5
3216	B6
3217	A5
3218	B5
3219	B5
3220	B6
3221	B6
3222	A6
3223	A4
3225	B6
3226	B6
3227	B6
3228	B6
3229	B6
3232	A5
3233	C6
3235	A5
3236	A5
3237	A5
3238	B6
3240	B6
3242	B6
3243	A5
3244	A6
3245	C5
3247	A6
3248	B7
3250	B7
3251	A6
3253	A6
3254	A6
3255	A6
3256	A6
3257	B7
3259	B5
3261	B4
3262	B5
3263	B5
3264	B5
3265	B5
3266	B5
3267	A6
3268	B7
3269	B5
3271	B6
3272	B6
3273	B6
3279	B5
3280	B5
3281	B5
3282	B5
3283	B5
3284	B5
3285	A4
3287	B5
3288	B5
3289	B6
3290	C6
3292	B6
3293	B6
3294	C6
3295	A5
3296	A5
3297	A6
3298	B5
3404	E6
3409	E8
3416	D6
3419	E7
3420	C6
3422	D8
3423	D7
3427	D7
3428	D7
3436	D5
3437	C7
3445	C5
3446	C5
3452	D7
3453	E7
3456	D8
3459	D7
3462	D8
3463	D8
3464	C8
3465	C8
3469	C8
3473	E8
3474	C7
3475	C7
3476	E7
3477	E8
3478	D8
3480	E7
3481	D8
3486	D8
3487	E7
3488	E7
3489	C6
3490	E8
3491	E8
3492	E8
3493	E8
3494	E8
3495	C6
3498	C6
3499	C6
3512	E5
3517	E5
3518	E5
3522	E5
3524	E5
3527	D4
3528	D4
3530	D3
3533	D3
3535	C3
3536	C3
3537	D3
3538	D3
3539	D3
3541	C3
3565	C4
3572	C5
3573	D5
3576	D5
3578	D5
3579	D5
3581	B4
3582	B4
3583	B4
3601	B5
3604	B5
3605	B5
3607	A4
3608	A5
3609	A4
3610	A4
3614	B7
3619	C6
3620	C6
3621	C6
3622	A4
3623	A4
3625	B5
3626	B5
3628	B5
3631	B7
3634	B7
3635	B7
3636	B7
3637	B7
3681	C1
3684	C1
3685	B1
3686	B1
3687	C1
3689	C1
3690	C2
3691	E1
3692	E1
3693	D1
3694	E1
3695	D1
3696	D1
3697	D1
3702	C7
3704	C8
3706	C7
3708	C8
3711	C8
3712	C8
3719	B8
3720	B8
3732	C7
3734	C7
3736	C7
3738	C8
3740	B8
3752	A7
3754	B8
3756	B8
3761	A8
3762	B8
3764	A7
3766	B7
3767	A7
3768	A7
3769	A7
3770	A8
3771	B8
3930	C3
3931	C3
3932	C3
3933	C3
3934	C3
3935	C2
3936	B3
3937	B3
3938	B3
3939	B3
3940	B3
3941	B2
3942	C2
3946	B3
3947	C2
3948	C3
3949	C2
3952	C2
3953	C2
3955	B2
3956	B2
3957	B3
3958	B1
3959	C3
3960	B1
3964	C3
3965	C3
3971	B2
3972	B2
3973	B2
3974	C2
3985	B3
3988	A3
3989	A3
3991	A3
3992	A3
3993	A3
3994	B3
3995	A3
3996	B4
3997	B4
3998	A4
3999	A4
4000	A8
4001	A8
4002	A5
4003	A7
4004	A5
4005	A7
4006	A8
4010	A7
4011	A6
4012	A6
4013	A6
4015	A8
4209	A6
4210	B6
4211	B6
4212	B5
4213	B6
4214	C6
4219	B5
4221	B5
4222	A5
4223	A6
4224	A5
4226	A5
4227	A6
4240	C4
4241	C4
4437	C7
4470	E8
4471	E8
4472	E7
4473	E8
4474	C6
4492	E8
4533	E5
4534	C4
4535	C4
4536	C3
4537	C4
4538	C3
4581	B4
4601	A4
4602	C6
4604	A4
4605	C7
4606	C7
4607	A4
4609	A6
4610	A4
4611	B4
4612	A5
4620	C7
4630	C7
4631	B4
4635	C7
4637	B6
4642	A7
4644	A7
4645	B6
4646	B5
4648	B7
4649	A4
4650	B4
4651	B4
4691	C1
4692	D1
4693	D1
4694	C1
4695	E1
4696	C1
4701	C8
4702	C8
4706	B7
4707	C8
4708	C8
4730	C7
4910	B3
4911	B2
4912	B2
4913	C2
4914	A4
4915	A4
4916	A4
4917	A4
4921	C2
5001	A7
5002	A7
5003	A5
5202	B5
5203	B5
5205	B6
5206	B5
5207	B5
5209	A5
5210	B6
5211	A6
5212	A6
5213	B6
5214	A5
5215	B5
5513	D5
5533	D4
5534	C4
5535	C4
5601	C7
5910	C2
5911	B2
5912	B2
6002	A8
6003	A8
6004	A5
6201	A4
6202	B6
6203	B6
6204	A6
6205	C6
6207	A5
6208	C5
6209	C4
6210	B5
6211	B5
6407	D5
6408	D5
6441	D6
6442	D6
6443	C5
6450	E7
6451	E7
6457	C7
6458	C8
6482	C5
6483	C7
6484	D6
6488	D7
6489	D7
6490	E7
6512	D5
6514	E5
6531	D3
6532	D4
6533	D4
6534	D4
6538	D4
6541	C3
6564	C4
6565	C4
6566	C4
6571	C5
6572	D5
6576	C3
6602	A4
6610	A5
6694	C1
6706	B8
6732	B8
6733	B8
6901	B3
6903	C3
6904	C2
6906	B2
6990	B4
7001	A5
7003	A7
7200	B6
7201	A5
7202	A5
7205	C5
7207	B6
7208	B6
7209	A5
7210	A5
7403	E7
7404	C6
7408	C6
7410	C6
7411	C6
7454	C8
7455	D8
7456	D8
7480	E7
7481	D8
7482	C5
7483	E8
7484	C5
7485	E7
7511	E5
7514	E5
7532	D4
7535	C3
7536	C3
7541	C2
7561	C4
7573	C5
7602	B7
7604	A4
7606	B7
7607	B7
7691	D1
7701	B8
7702	A7
7703	A8
7705	A7
7706	C7
7707	C7
7708	C7
7709	C7
7901	C3
7903	C3
7904	C3
7991	B3
7992	B3
7993	B4
7994	A4

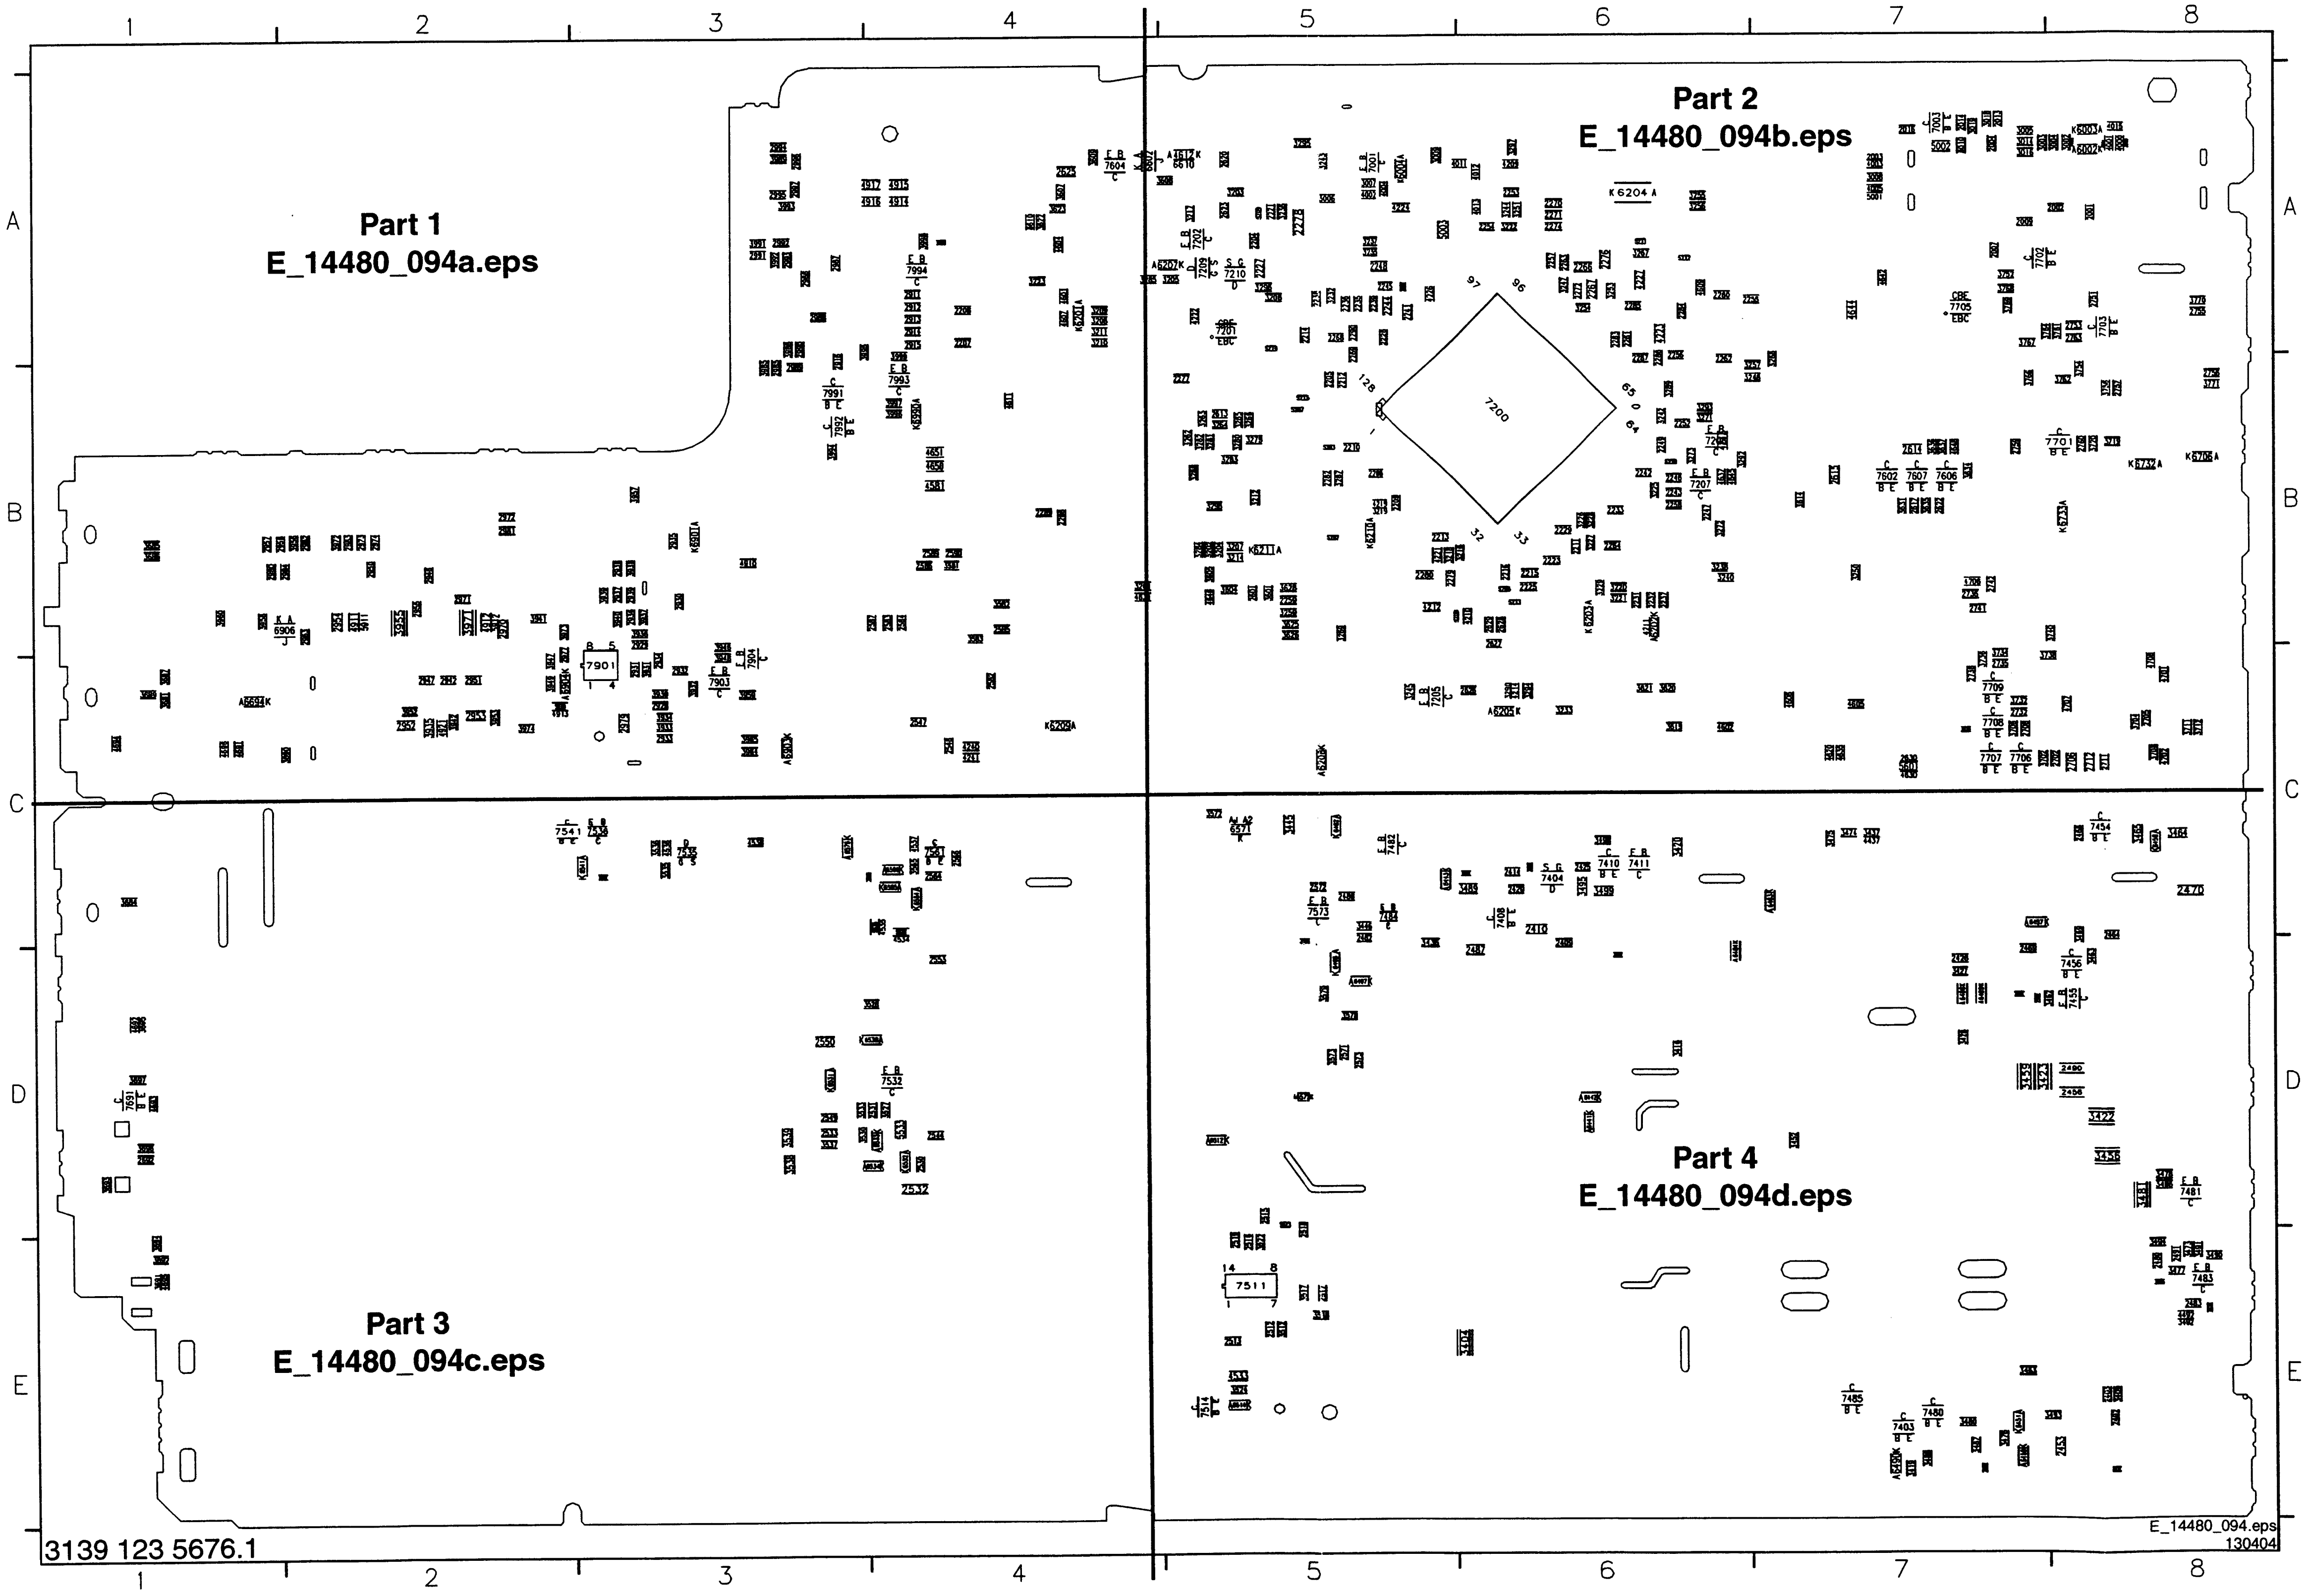

Layout Mono Carrier (Part 1 Bottom Side)

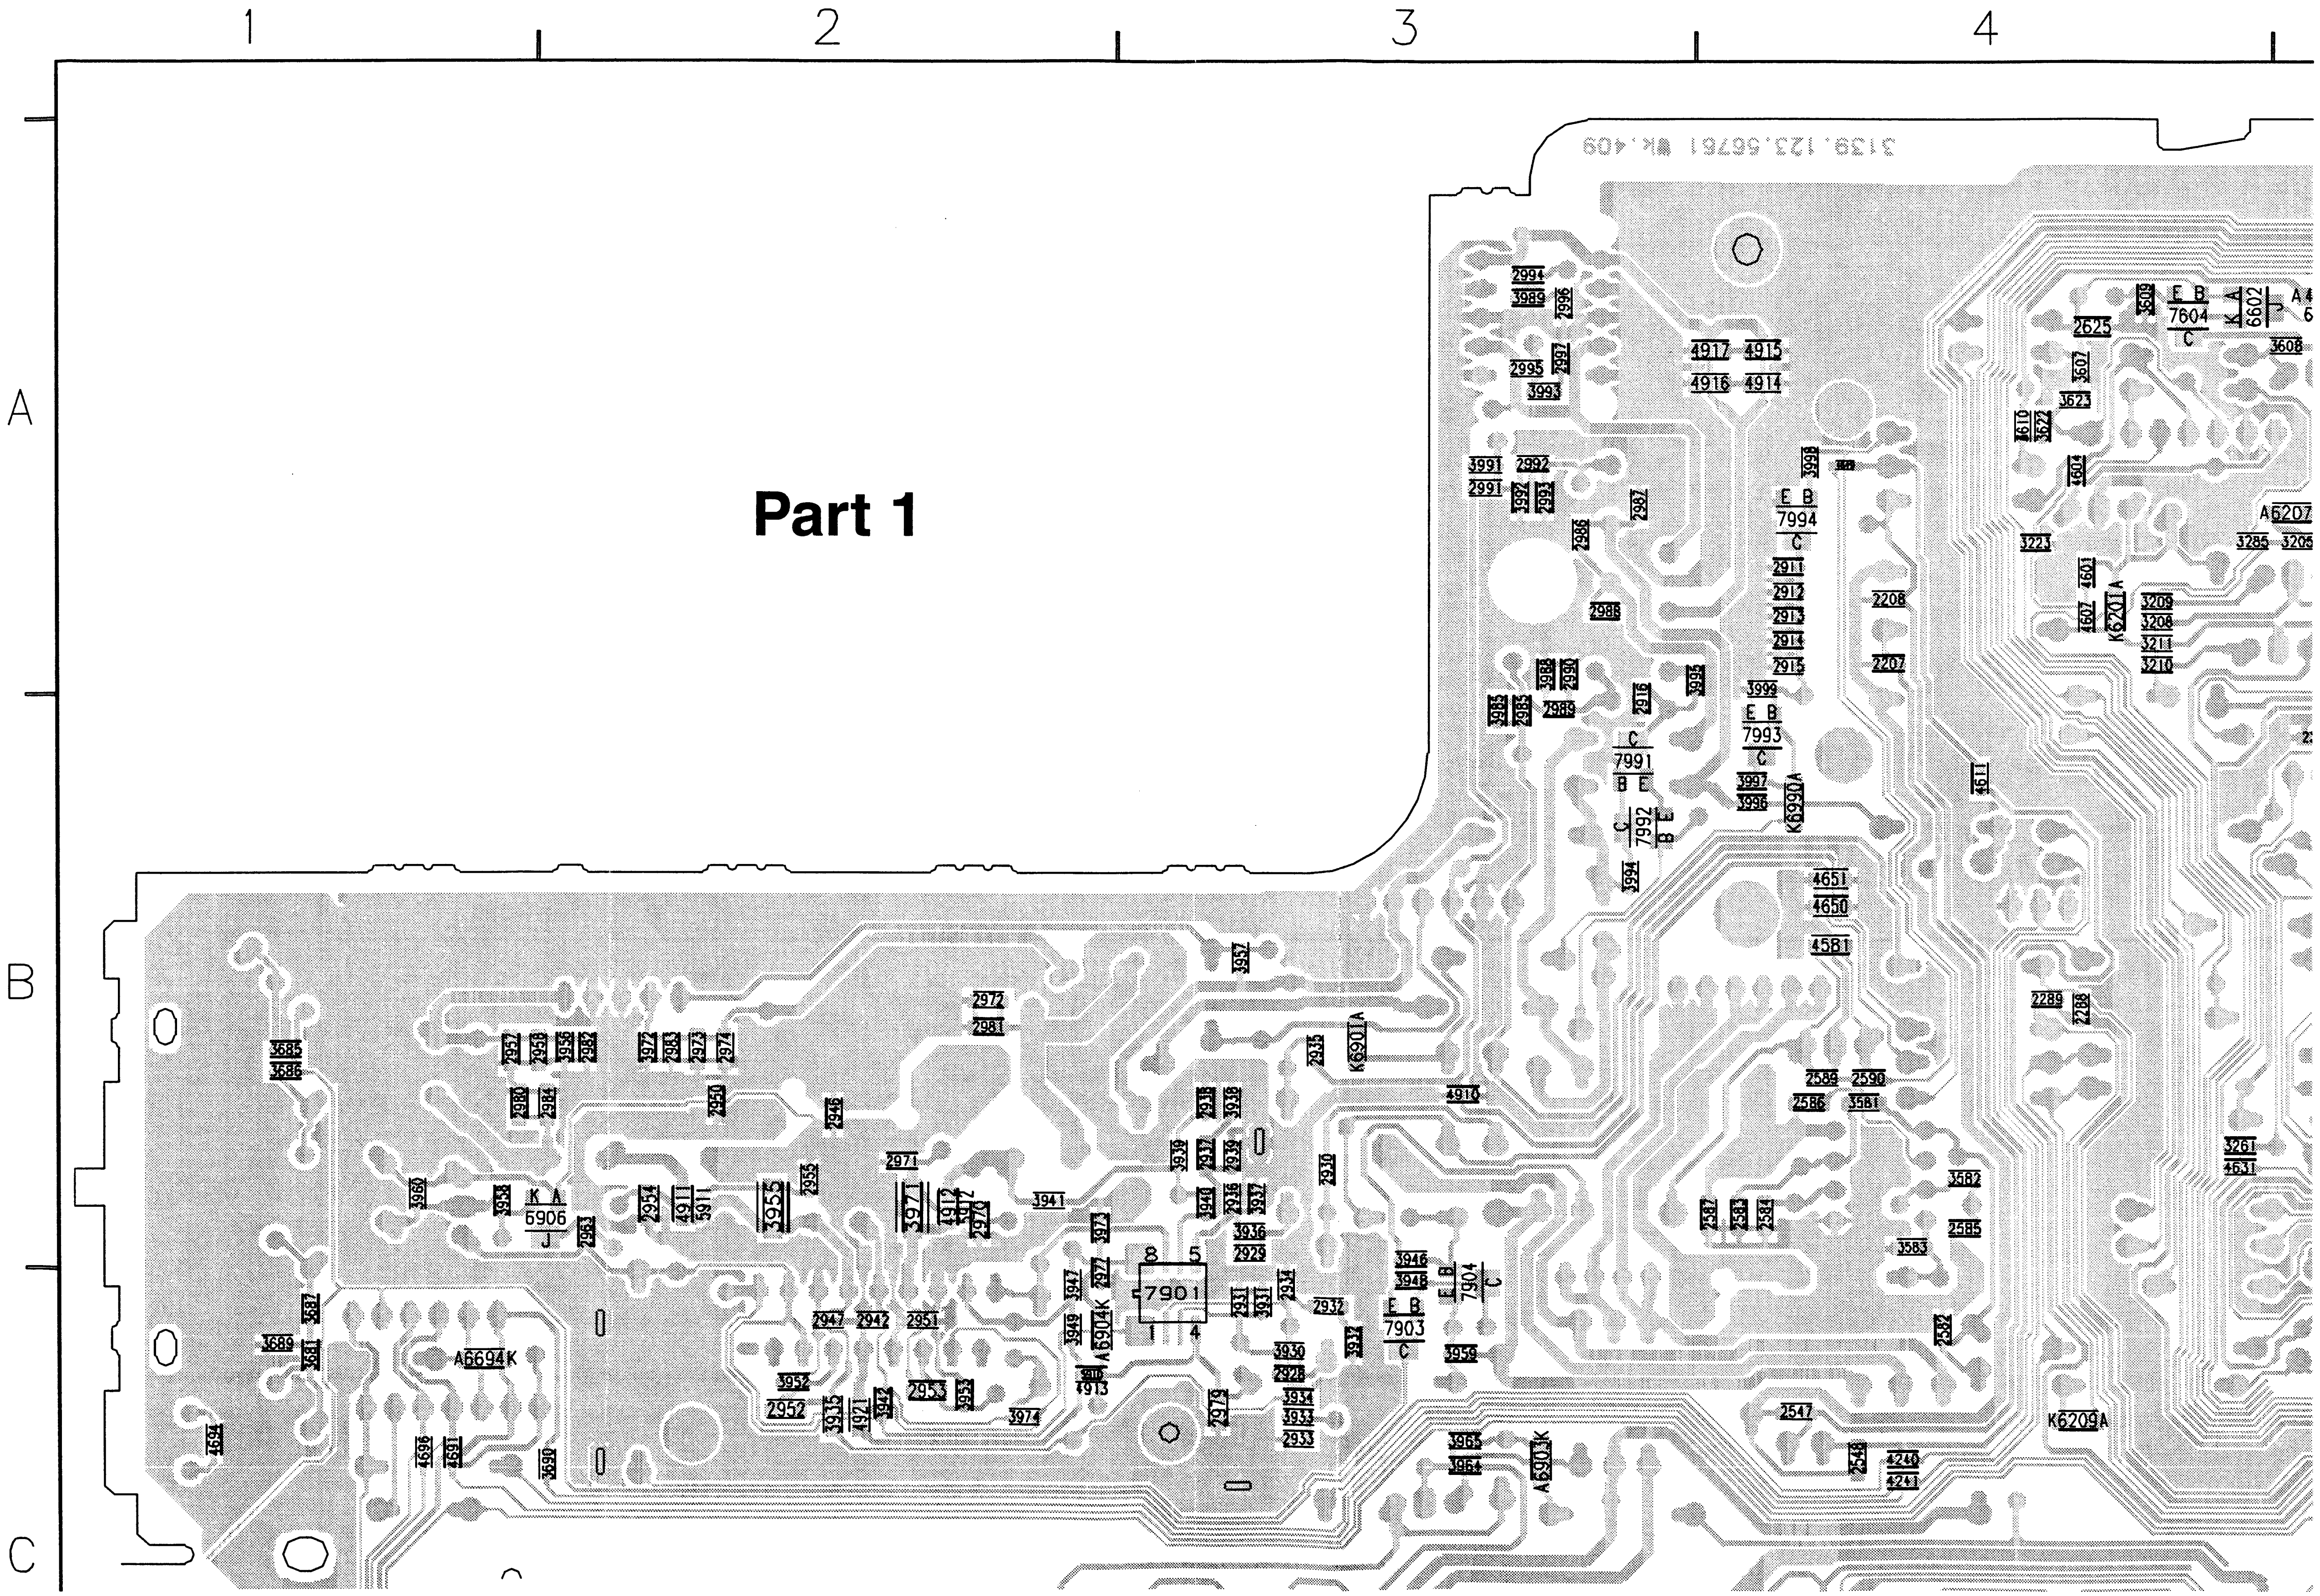
1
2
3
4
A
B
C
Part 1
3139.123.56761 WK.409
7901
7903
7904
7991
7992
7993
7994
7604
6602
6906
A6694K
K6901A
K6201A
K6209A
A6207
A6904K
A6903K
K6990A

E_14480_094a.eps
130404

Layout Mono Carrier (Part 2 Bottom Side)

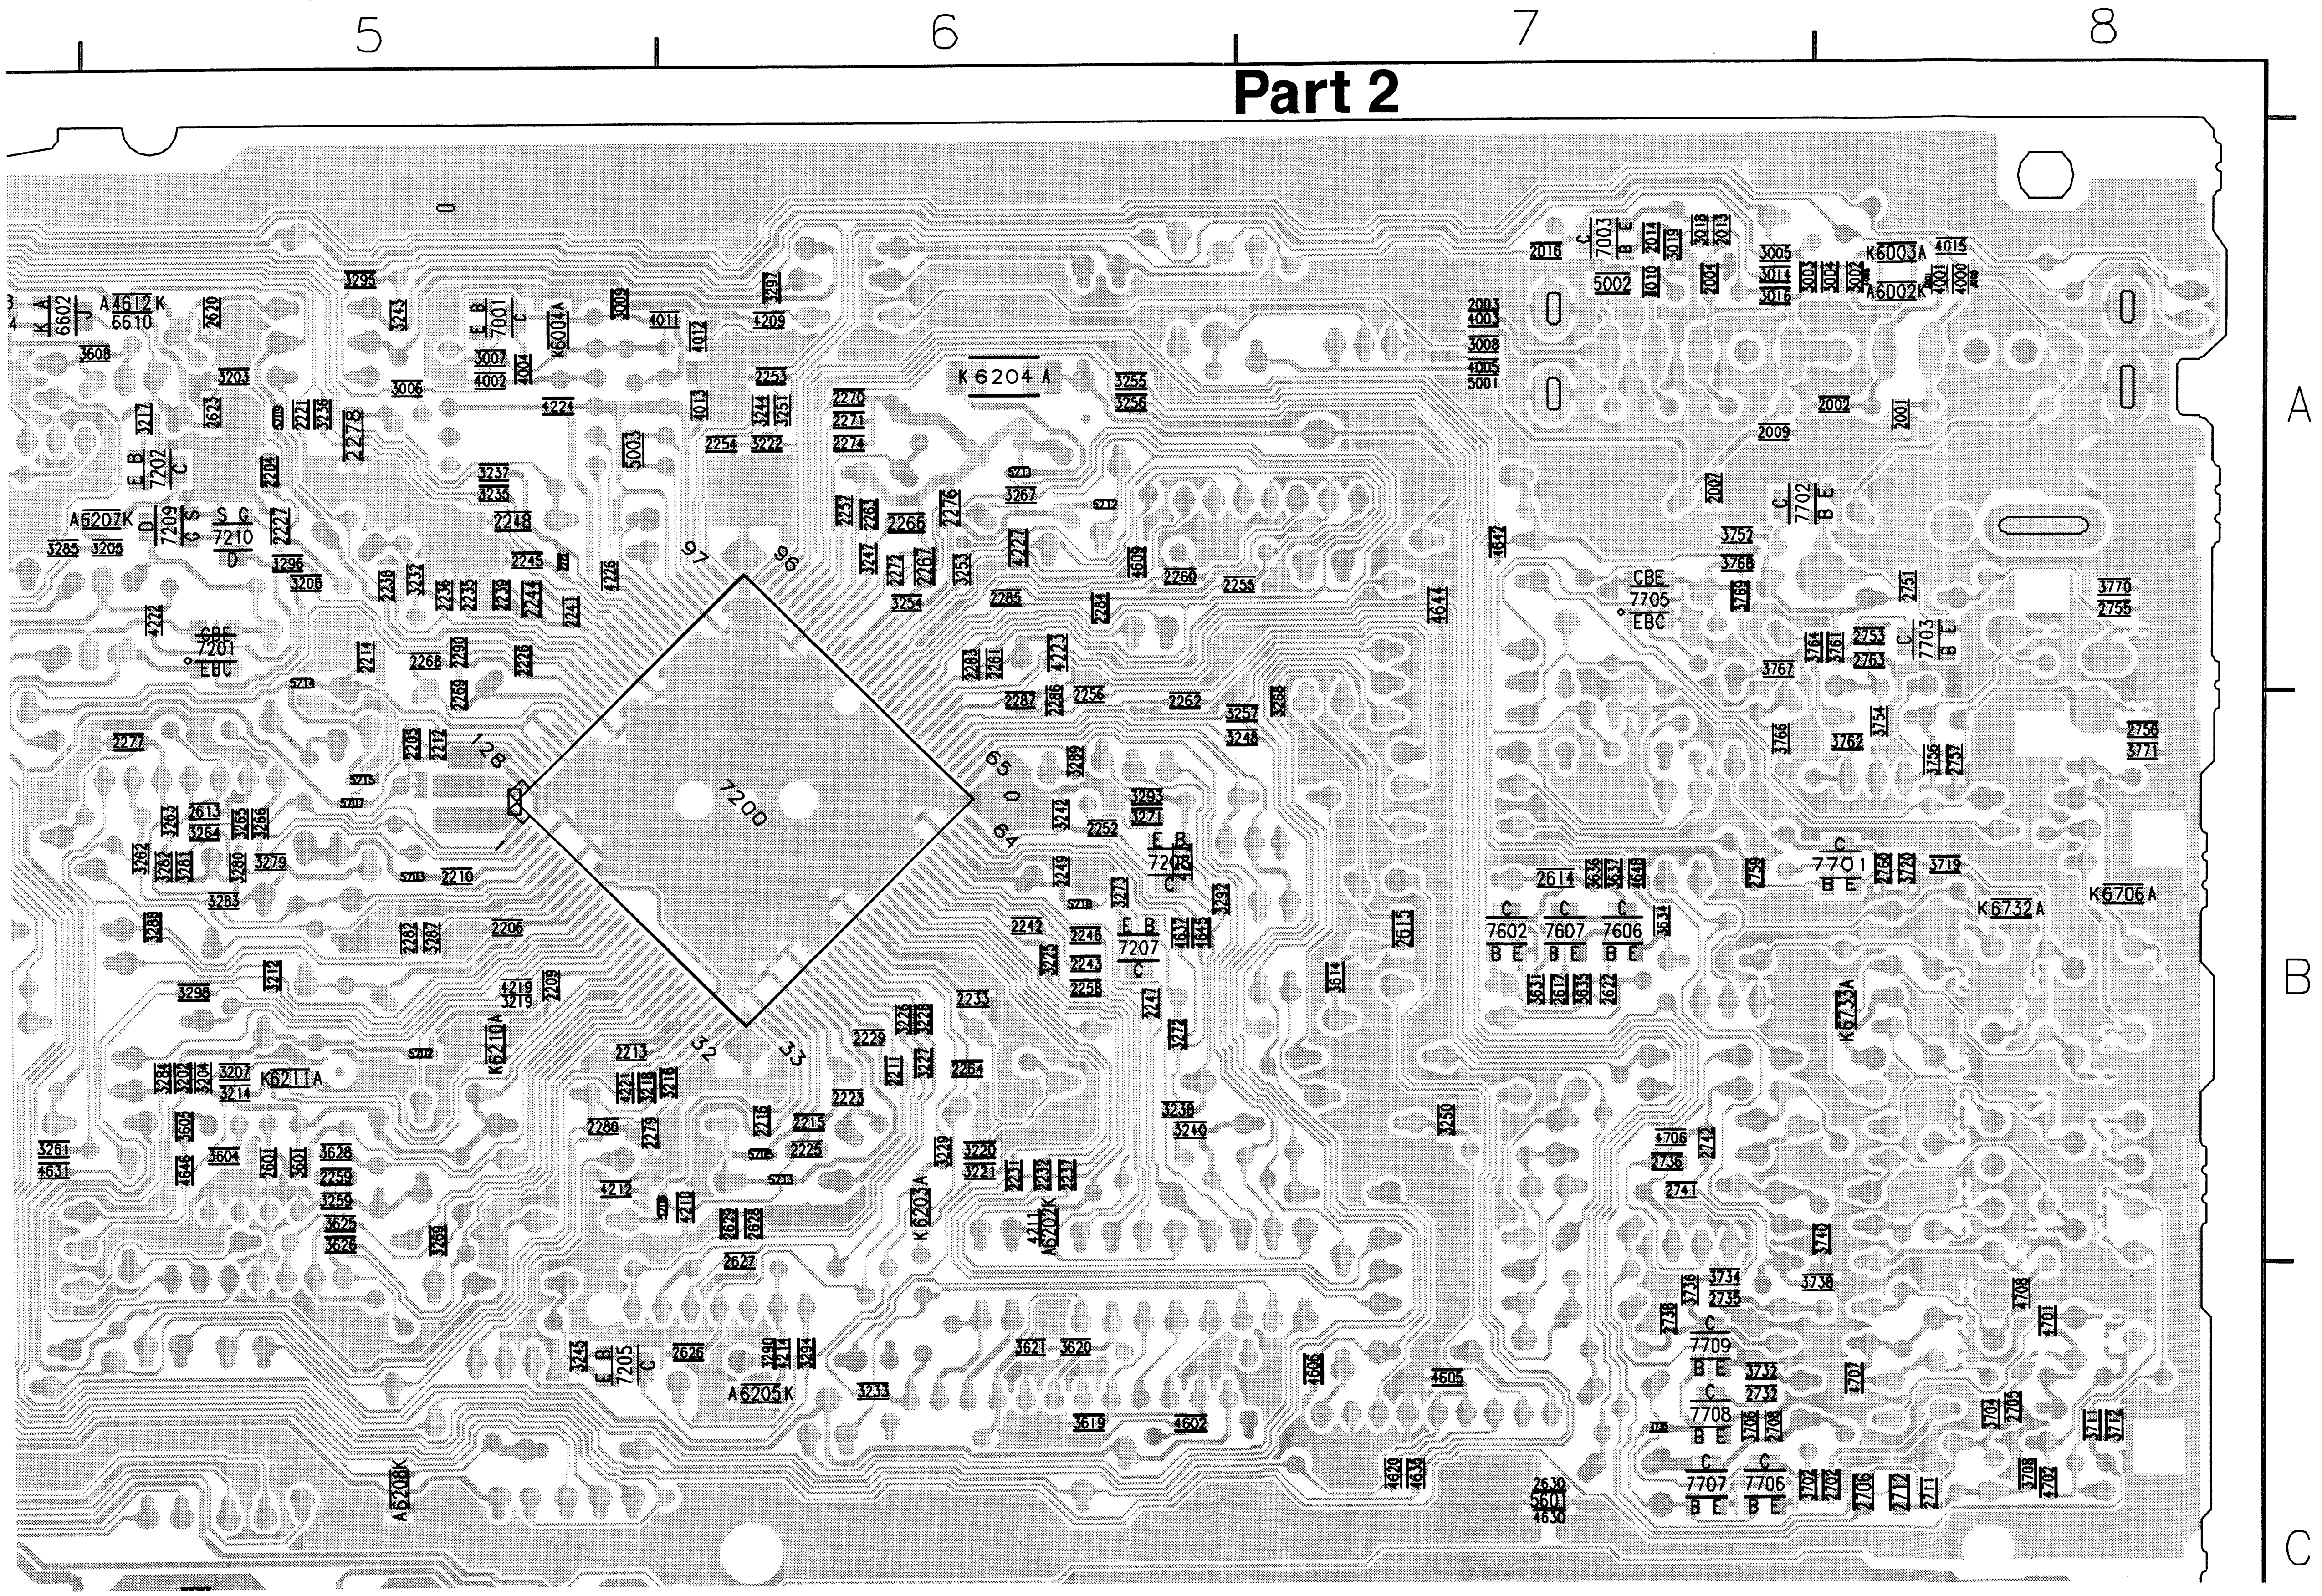
5
6
7
8
Part 2
A
B
C
7200
K6204 A
7701
7702
7703
7705
7602
7607
7606
7709
7708
7707
7706
7201
7202
7205
7207
7208
7209
7210

E_14480_094b.eps
130404

Layout Mono Carrier (Part 3 Bottom Side)

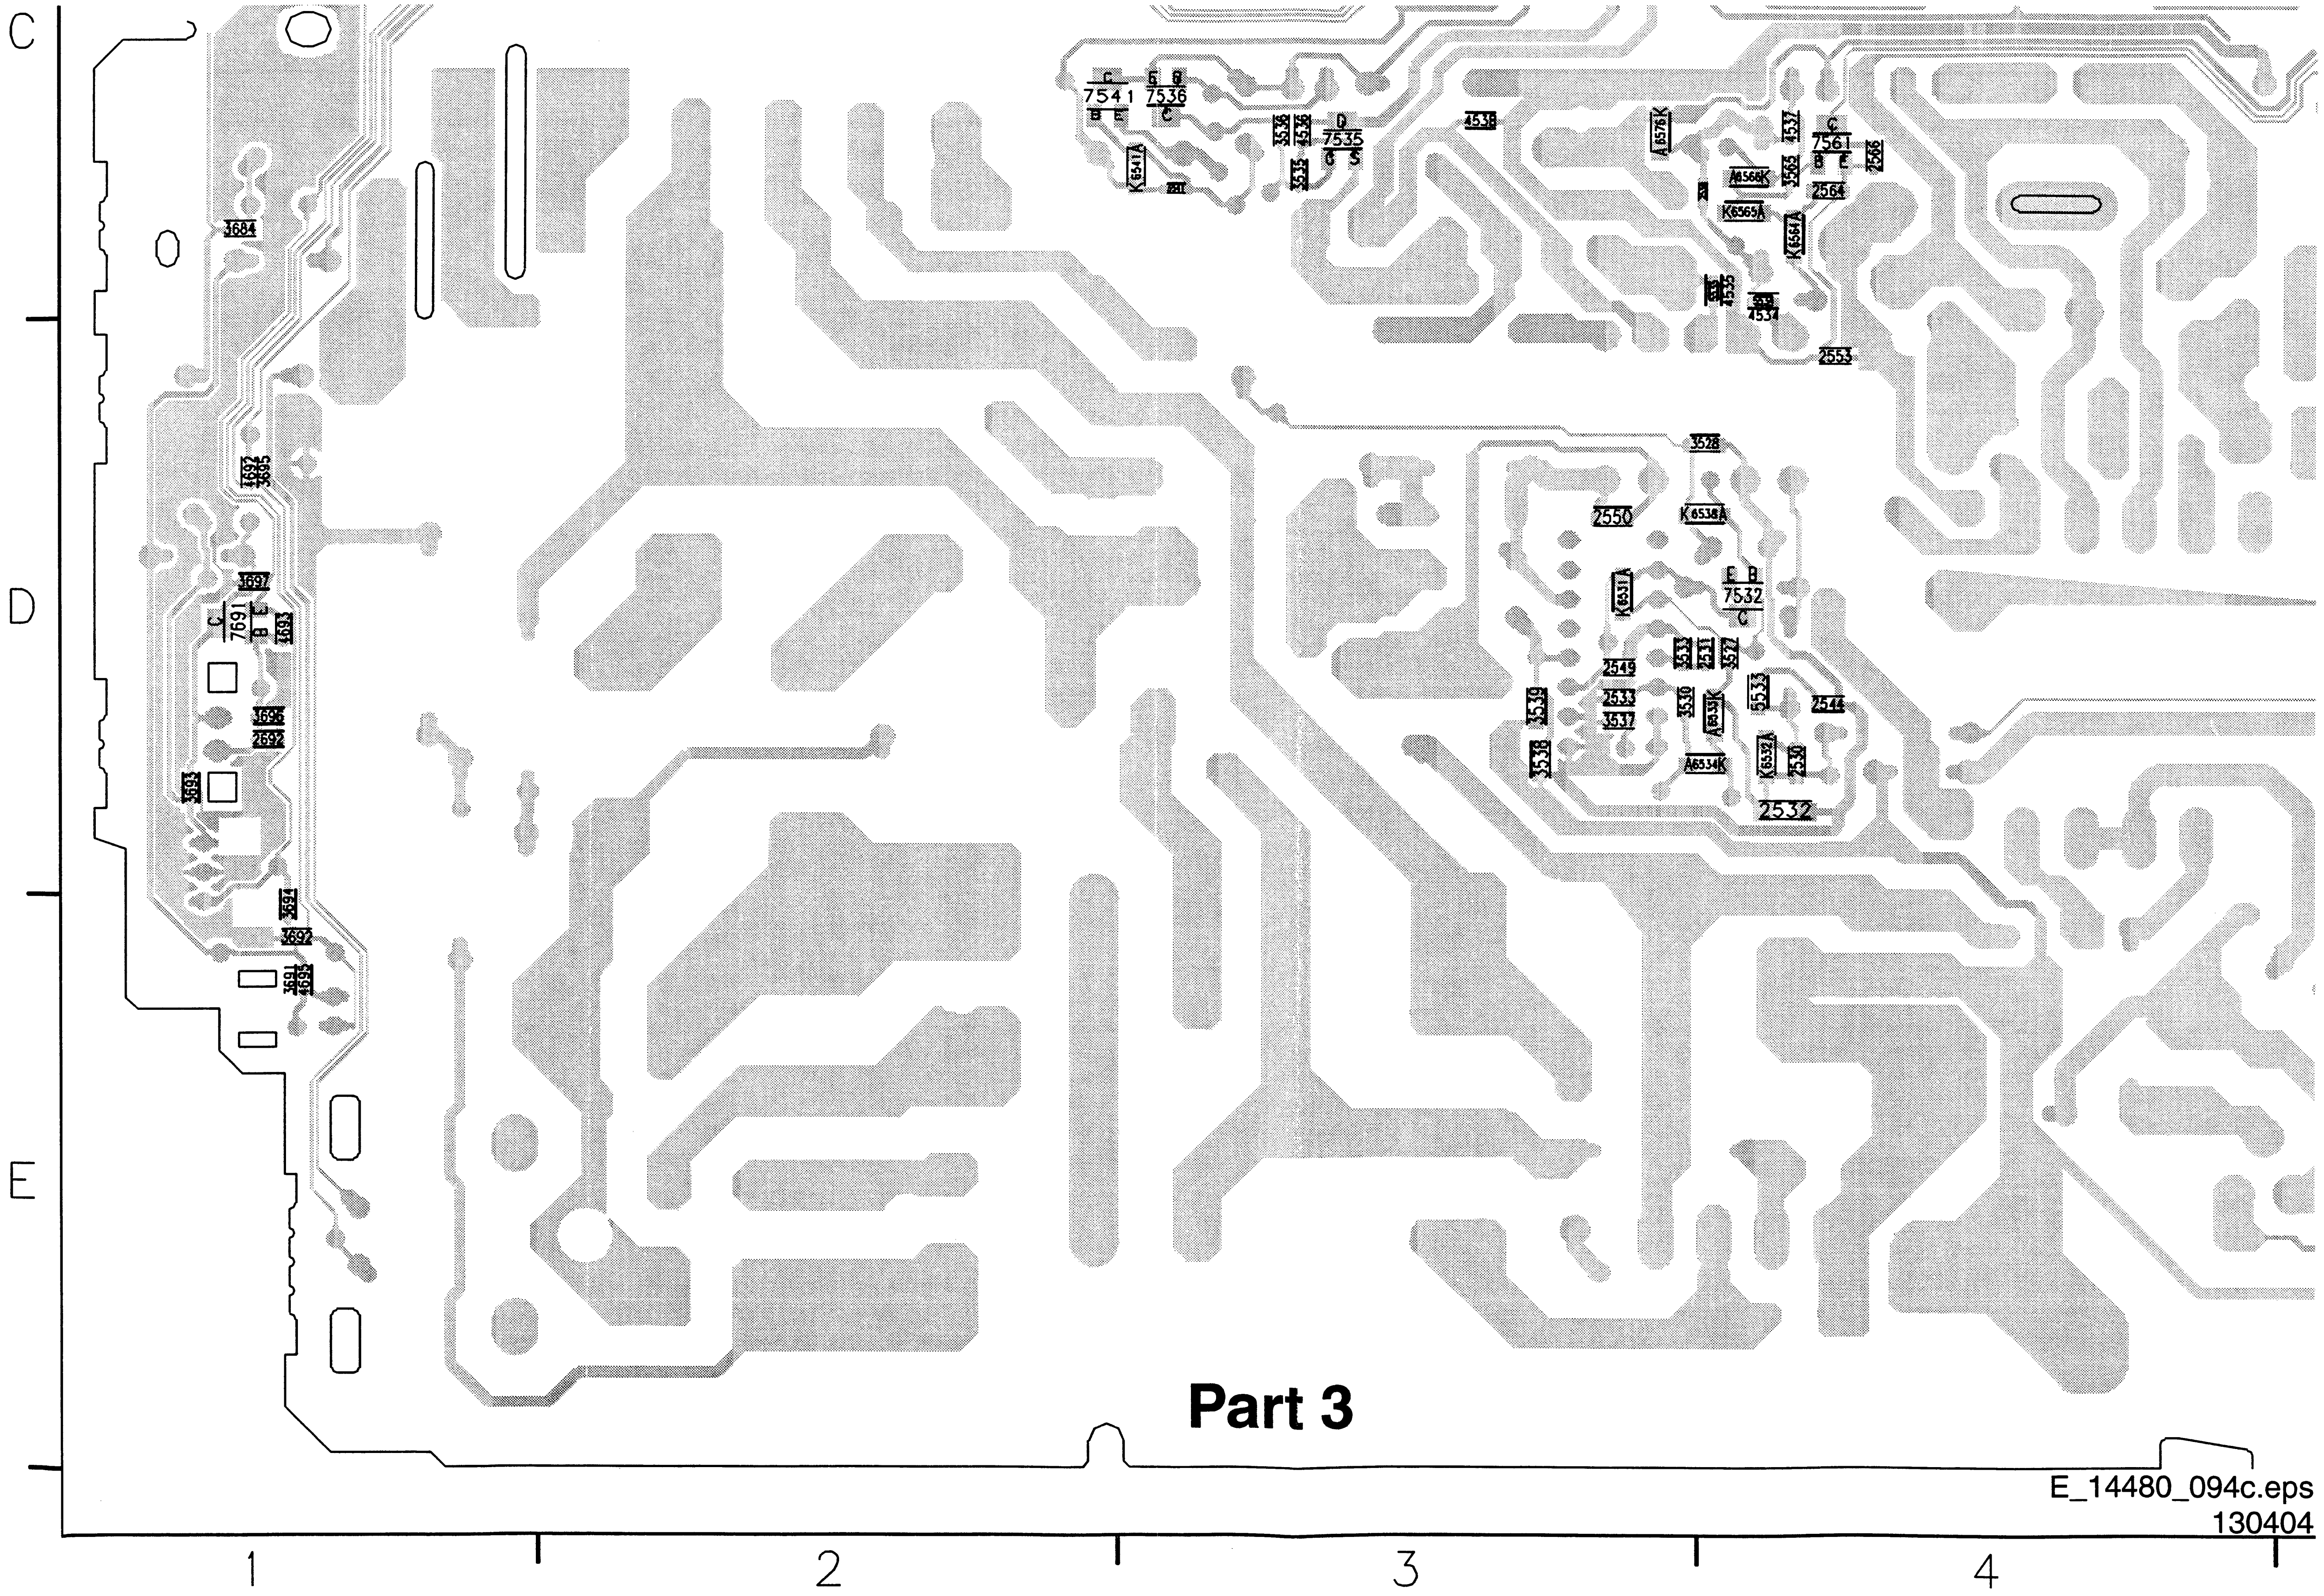
C
D
E
1
2
3
4
7541
7536
7535
3536
4536
3535
6541
4538
6576
4537
7561
2566
6568
2563
6565
2564
6564
4534
2553
3684
3695
3697
7691
3696
2692
3693
3694
3692
3691
3528
2550
6538
6531
7532
2549
2533
3537
3539
3538
3530
6533
3533
2544
6534
6532
2530
2532
Part 3

E_14480_094c.eps
130404

Layout Mono Carrier (Part 4 Bottom Side)

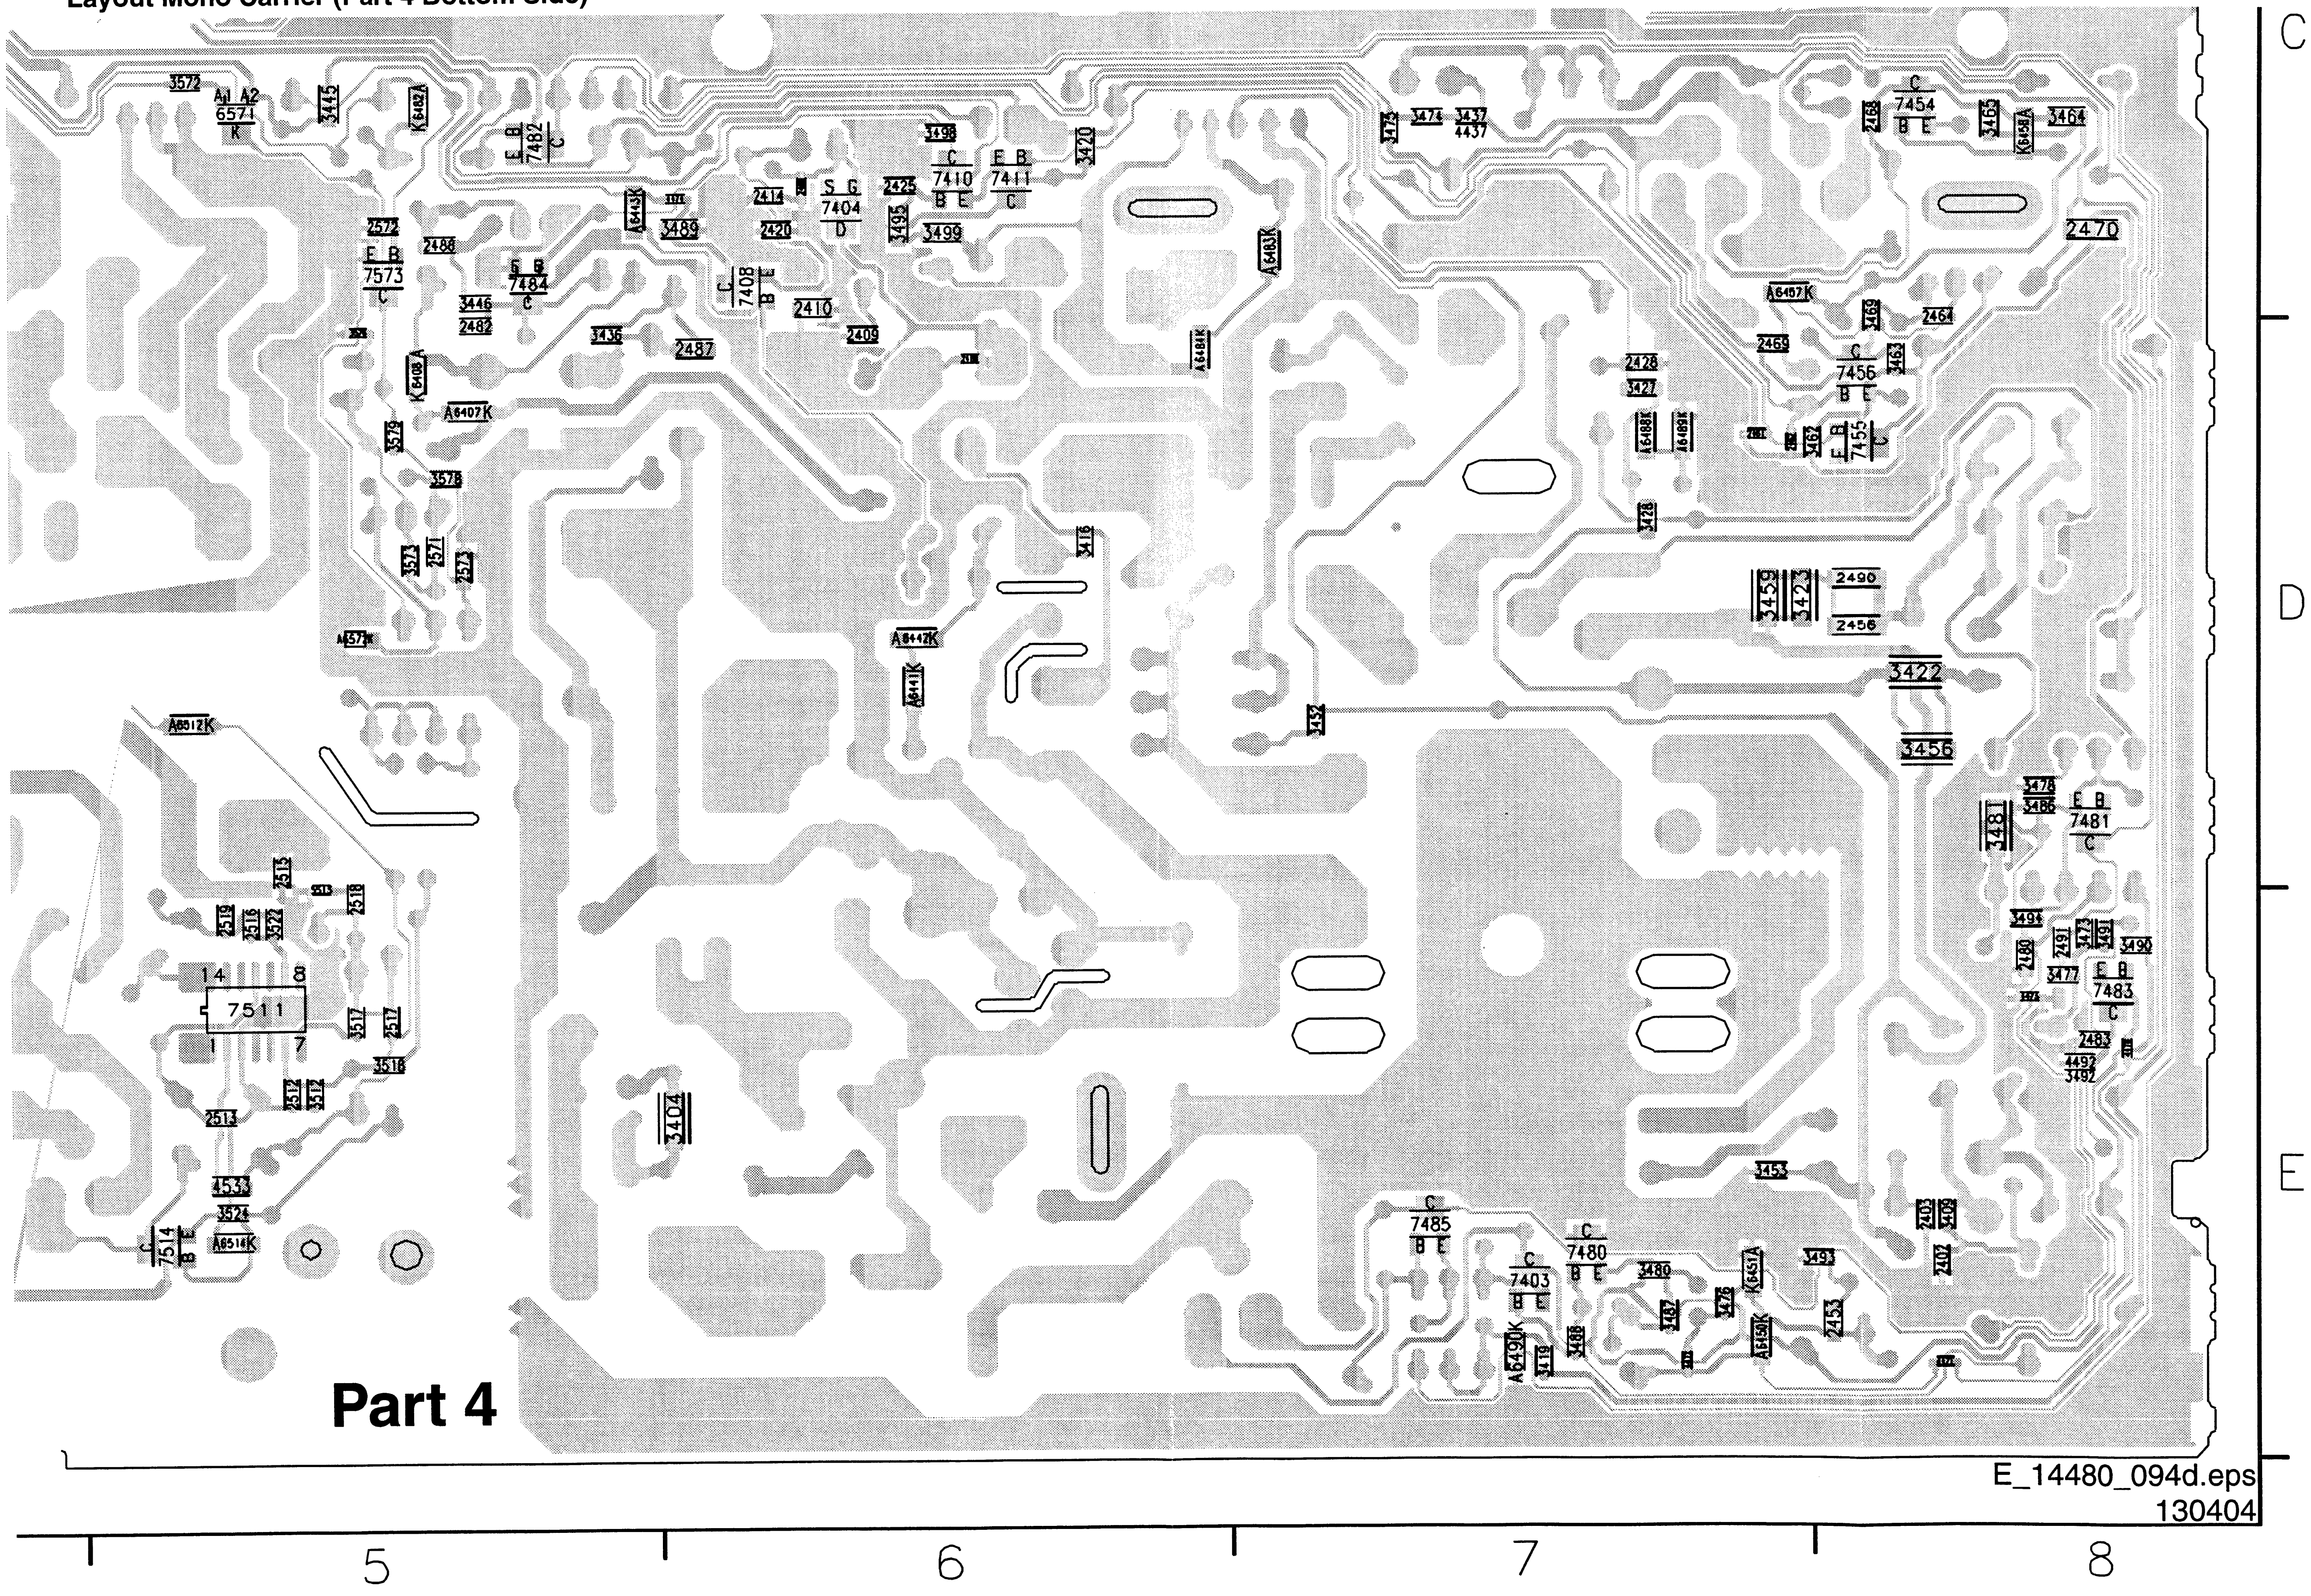
C
D
E
5
6
7
8
Part 4
3572
6571
3445
7482
3498
7410
7411
3420
7404
2425
3489
2420
3495
3499
2572
7573
2488
7484
3446
2482
3436
2487
7408
2410
2409
3578
3416
3432
3474
3437
4437
7454
3464
2470
2469
7456
2464
7455
2428
3427
3428
3459
3421
2490
2456
3422
3456
3481
7481
7483
3490
2483
4492
3492
3404
7511
14
8
1
7
2513
3518
3517
4533
3524
7514
7485
7480
7403
3480
3493
2453
3453

E_14480_094d.eps
130404

CRT Panel

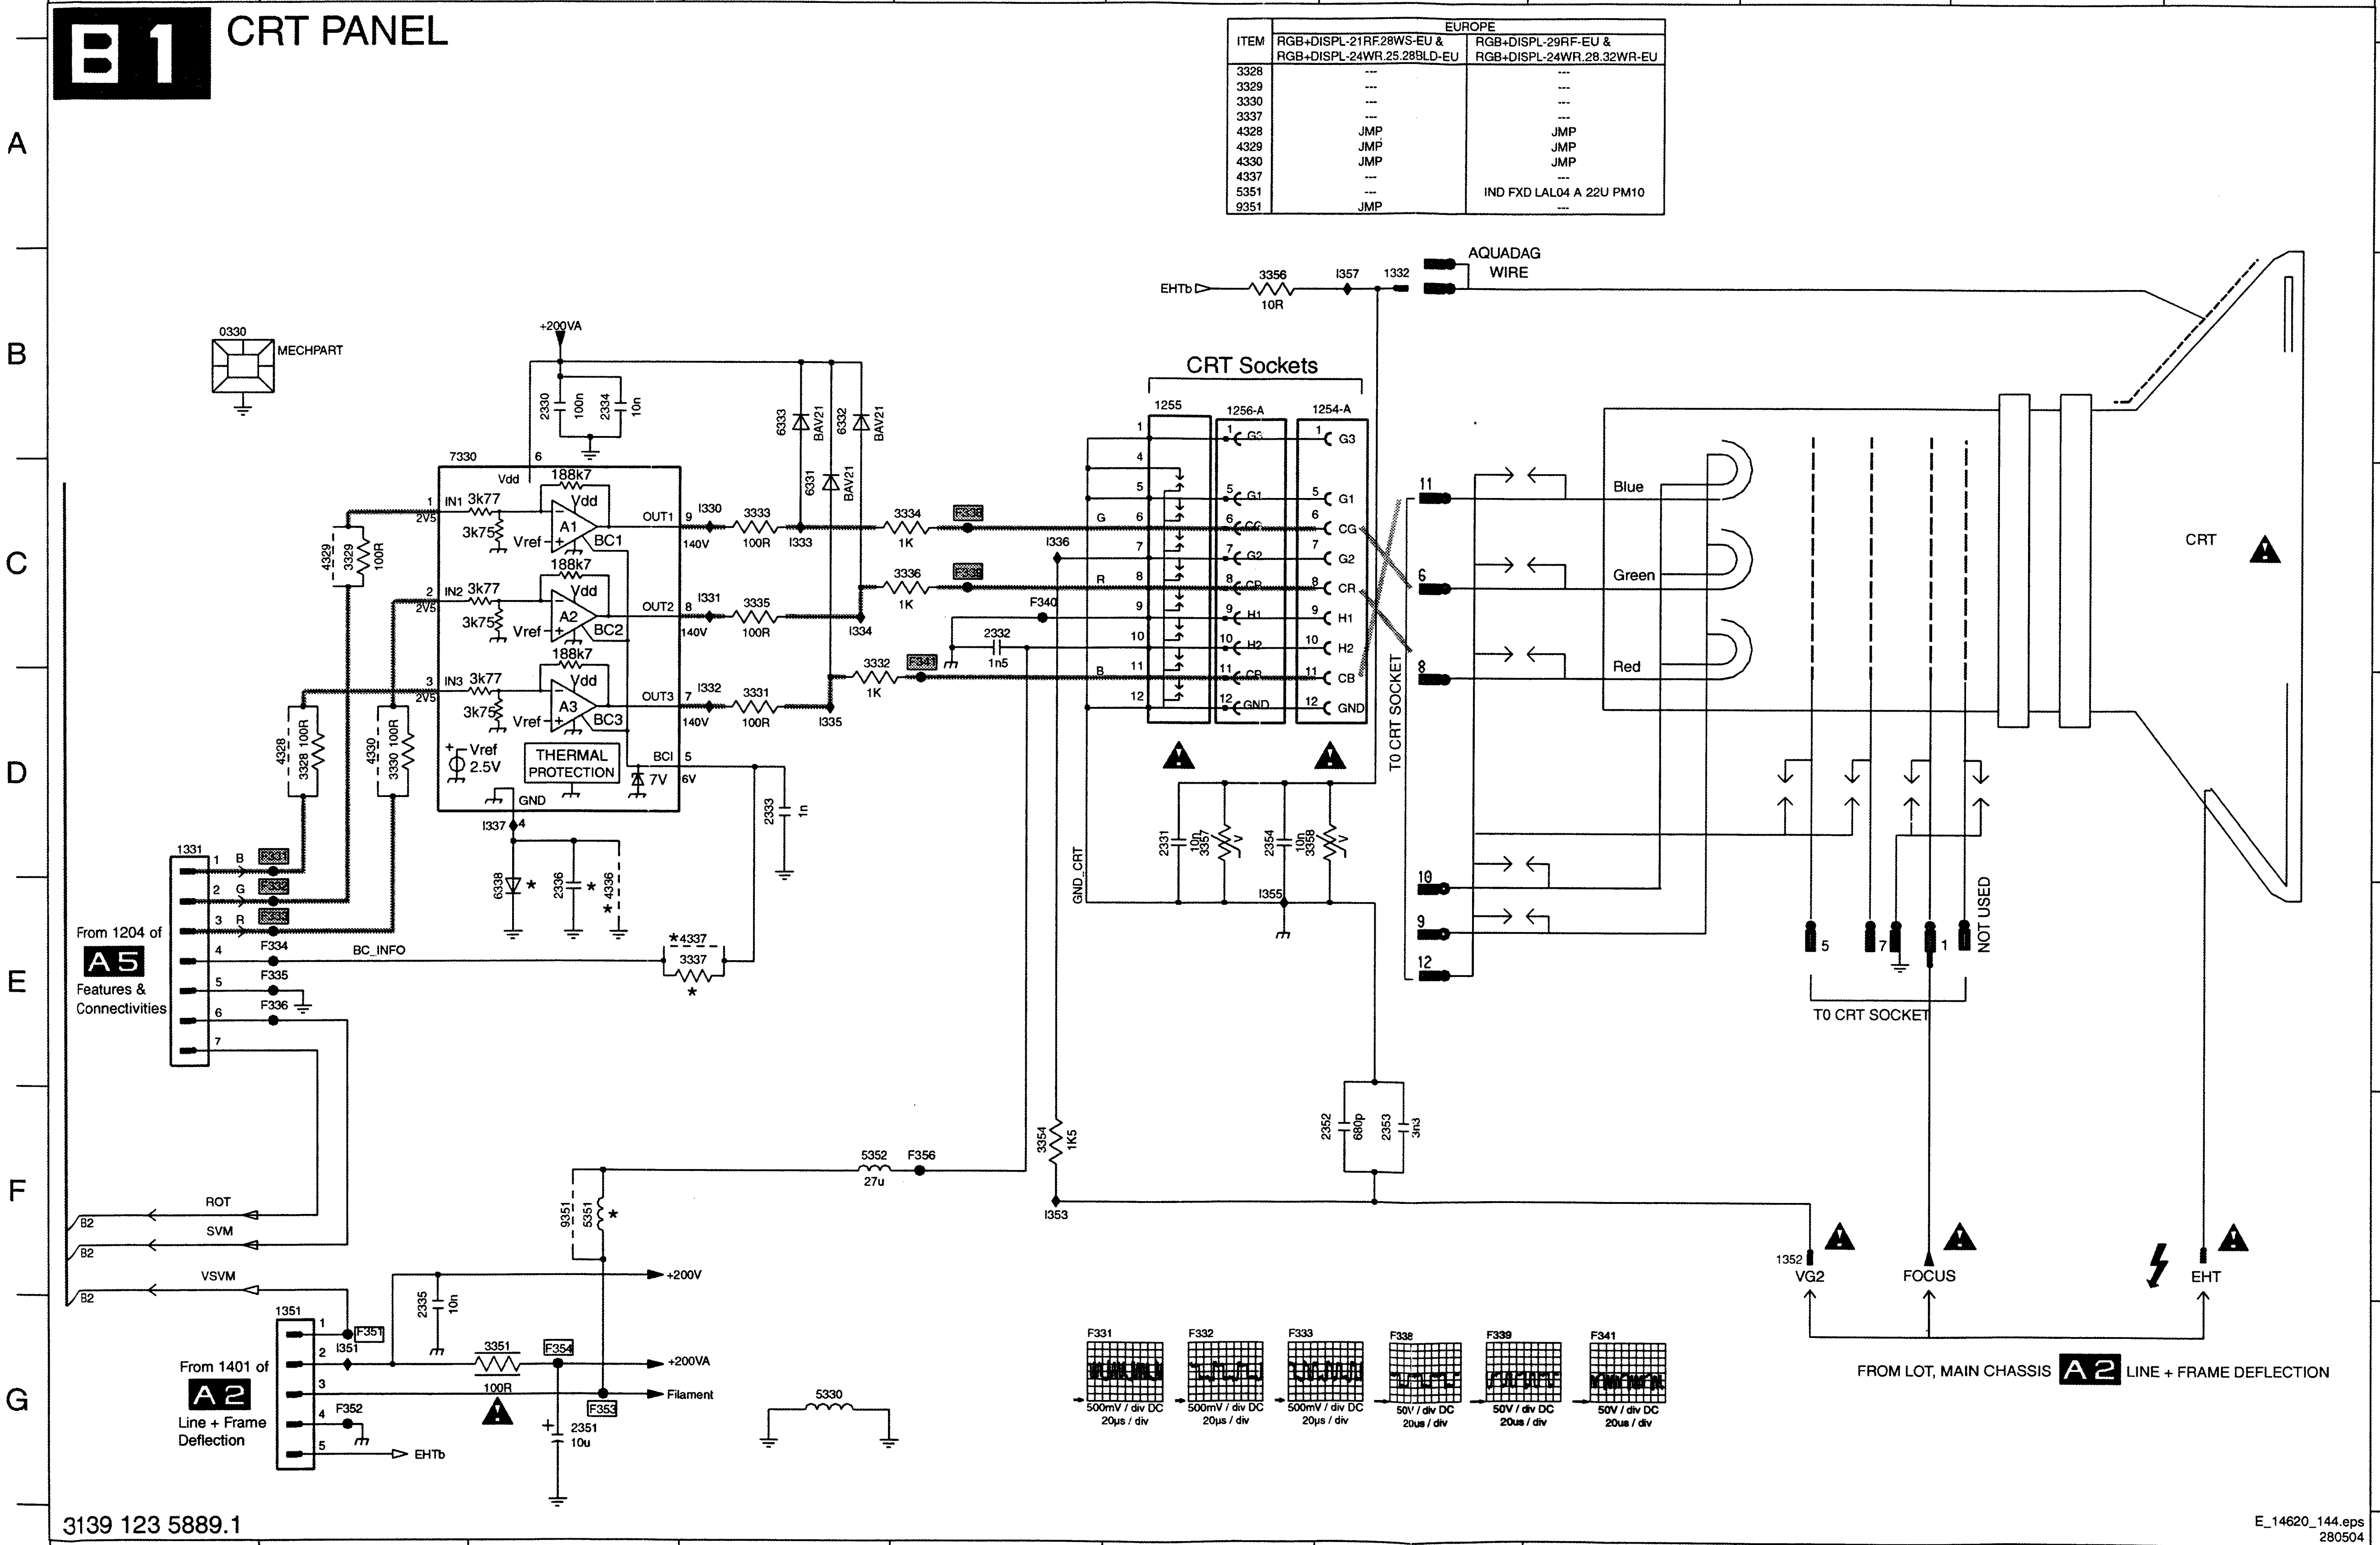
B1
CRT PANEL
1 2 3 4 5 6 7 8 9 10 11
A B C D E F G
0330 MECHPART
+200VA
2330 10n
2334 10n
6333 BAV21
6332 BAV21
6331 BAV21
7330
Vdd
188k7
IN1 3k77
3k75
Vref
A1
BC1
OUT1
IN2 3k77
A2
BC2
OUT2
IN3 3k77
A3
BC3
OUT3
2V5
140V
Vref 2.5V
THERMAL PROTECTION
BCI
7V
6V
GND
1337
4329 3329 100R
4328 3328 100R
4330 3330 100R
1330 3333 100R 1333
1331 3335 100R 1334
1332 3331 100R 1335
3334 1K F338
3336 1K F339
3332 1K F341
1336
F340
2332 1n5
2333 1n
6338
2336
4336
4337
3337
BC_INFO
1331
B F331
G F332
R F333
F334
F335
F336
From 1204 of
A5
Features & Connectivities
ROT
SVM
VSVM
B2
5352 27u
F356
9351
5351
+200V
1351
F351
F352
2335 10n
3351 100R
F354
+200VA
Filament
F353
2351 10u
EHTb
From 1401 of
A2
Line + Frame Deflection
5330
3354 1K5
1353
GND_CRT
CRT Sockets
1255
1256-A
1254-A
G3 G1 CG G2 CR H1 H2 CB GND
2331 10n
3357
2354 10n
3358
1355
EHTb
3356 10R
1357
1332
AQUADAG WIRE
TO CRT SOCKET
Blue
Green
Red
11 6 8 10 9 12
CRT
5 7 1
NOT USED
TO CRT SOCKET
2352 680p
2353 3n3
1352
VG2
FOCUS
EHT
FROM LOT, MAIN CHASSIS A2 LINE + FRAME DEFLECTION
F331 500mV / div DC 20µs / div
F332 500mV / div DC 20µs / div
F333 500mV / div DC 20µs / div
F338 50V / div DC 20us / div
F339 50V / div DC 20us / div
F341 50V / div DC 20us / div
3139 123 5889.1
E_14620_144.eps
280504

ITEM	EUROPE	
	RGB+DISPL-21RF.28WS-EU & RGB+DISPL-24WR.25.28BLD-EU	RGB+DISPL-29RF-EU & RGB+DISPL-24WR.28.32WR-EU
3328	---	---
3329	---	---
3330	---	---
3337	---	---
4328	JMP	JMP
4329	JMP	JMP
4330	JMP	JMP
4337	---	---
5351	---	IND FXD LAL04 A 22U PM10
9351	JMP	---

0330	B1
1254-A	B7
1255	B6
1256-A	B6
1331	D1
1332	B7
1351	G2
1352	F9
2330	B3
2331	D6
2332	C5
2333	D4
2334	B3
2335	G2
2336	E3
2351	G3
2352	F7
2353	F7
2354	D6
3328	D2
3329	C2
3330	D2
3331	D4
3332	C4
3333	C4
3334	C5
3335	C4
3336	C5
3337	E4
3351	G3
3354	F5
3356	B6
3357	D6
3358	D6
4328	D2
4329	C2
4330	D2
4336	E3
4337	E4
5330	G4
5351	F3
5352	F4
6331	C4
6332	B4
6333	B4
6338	E3
7330	C2
9351	F3
F331	D2
F332	E2
F333	E2
F334	E2
F335	E2
F336	E2
F338	C5
F339	C5
F340	C5
F341	C5
F351	G2
F352	G2
F353	G3
F354	G3
F356	F5
I330	C4
I331	C4
I332	D4
I333	C4
I334	C4
I335	D4
I336	C5
I337	D3
I351	G2
I353	F5
I355	E6
I357	B7

CRT Panel: Eco Scavem

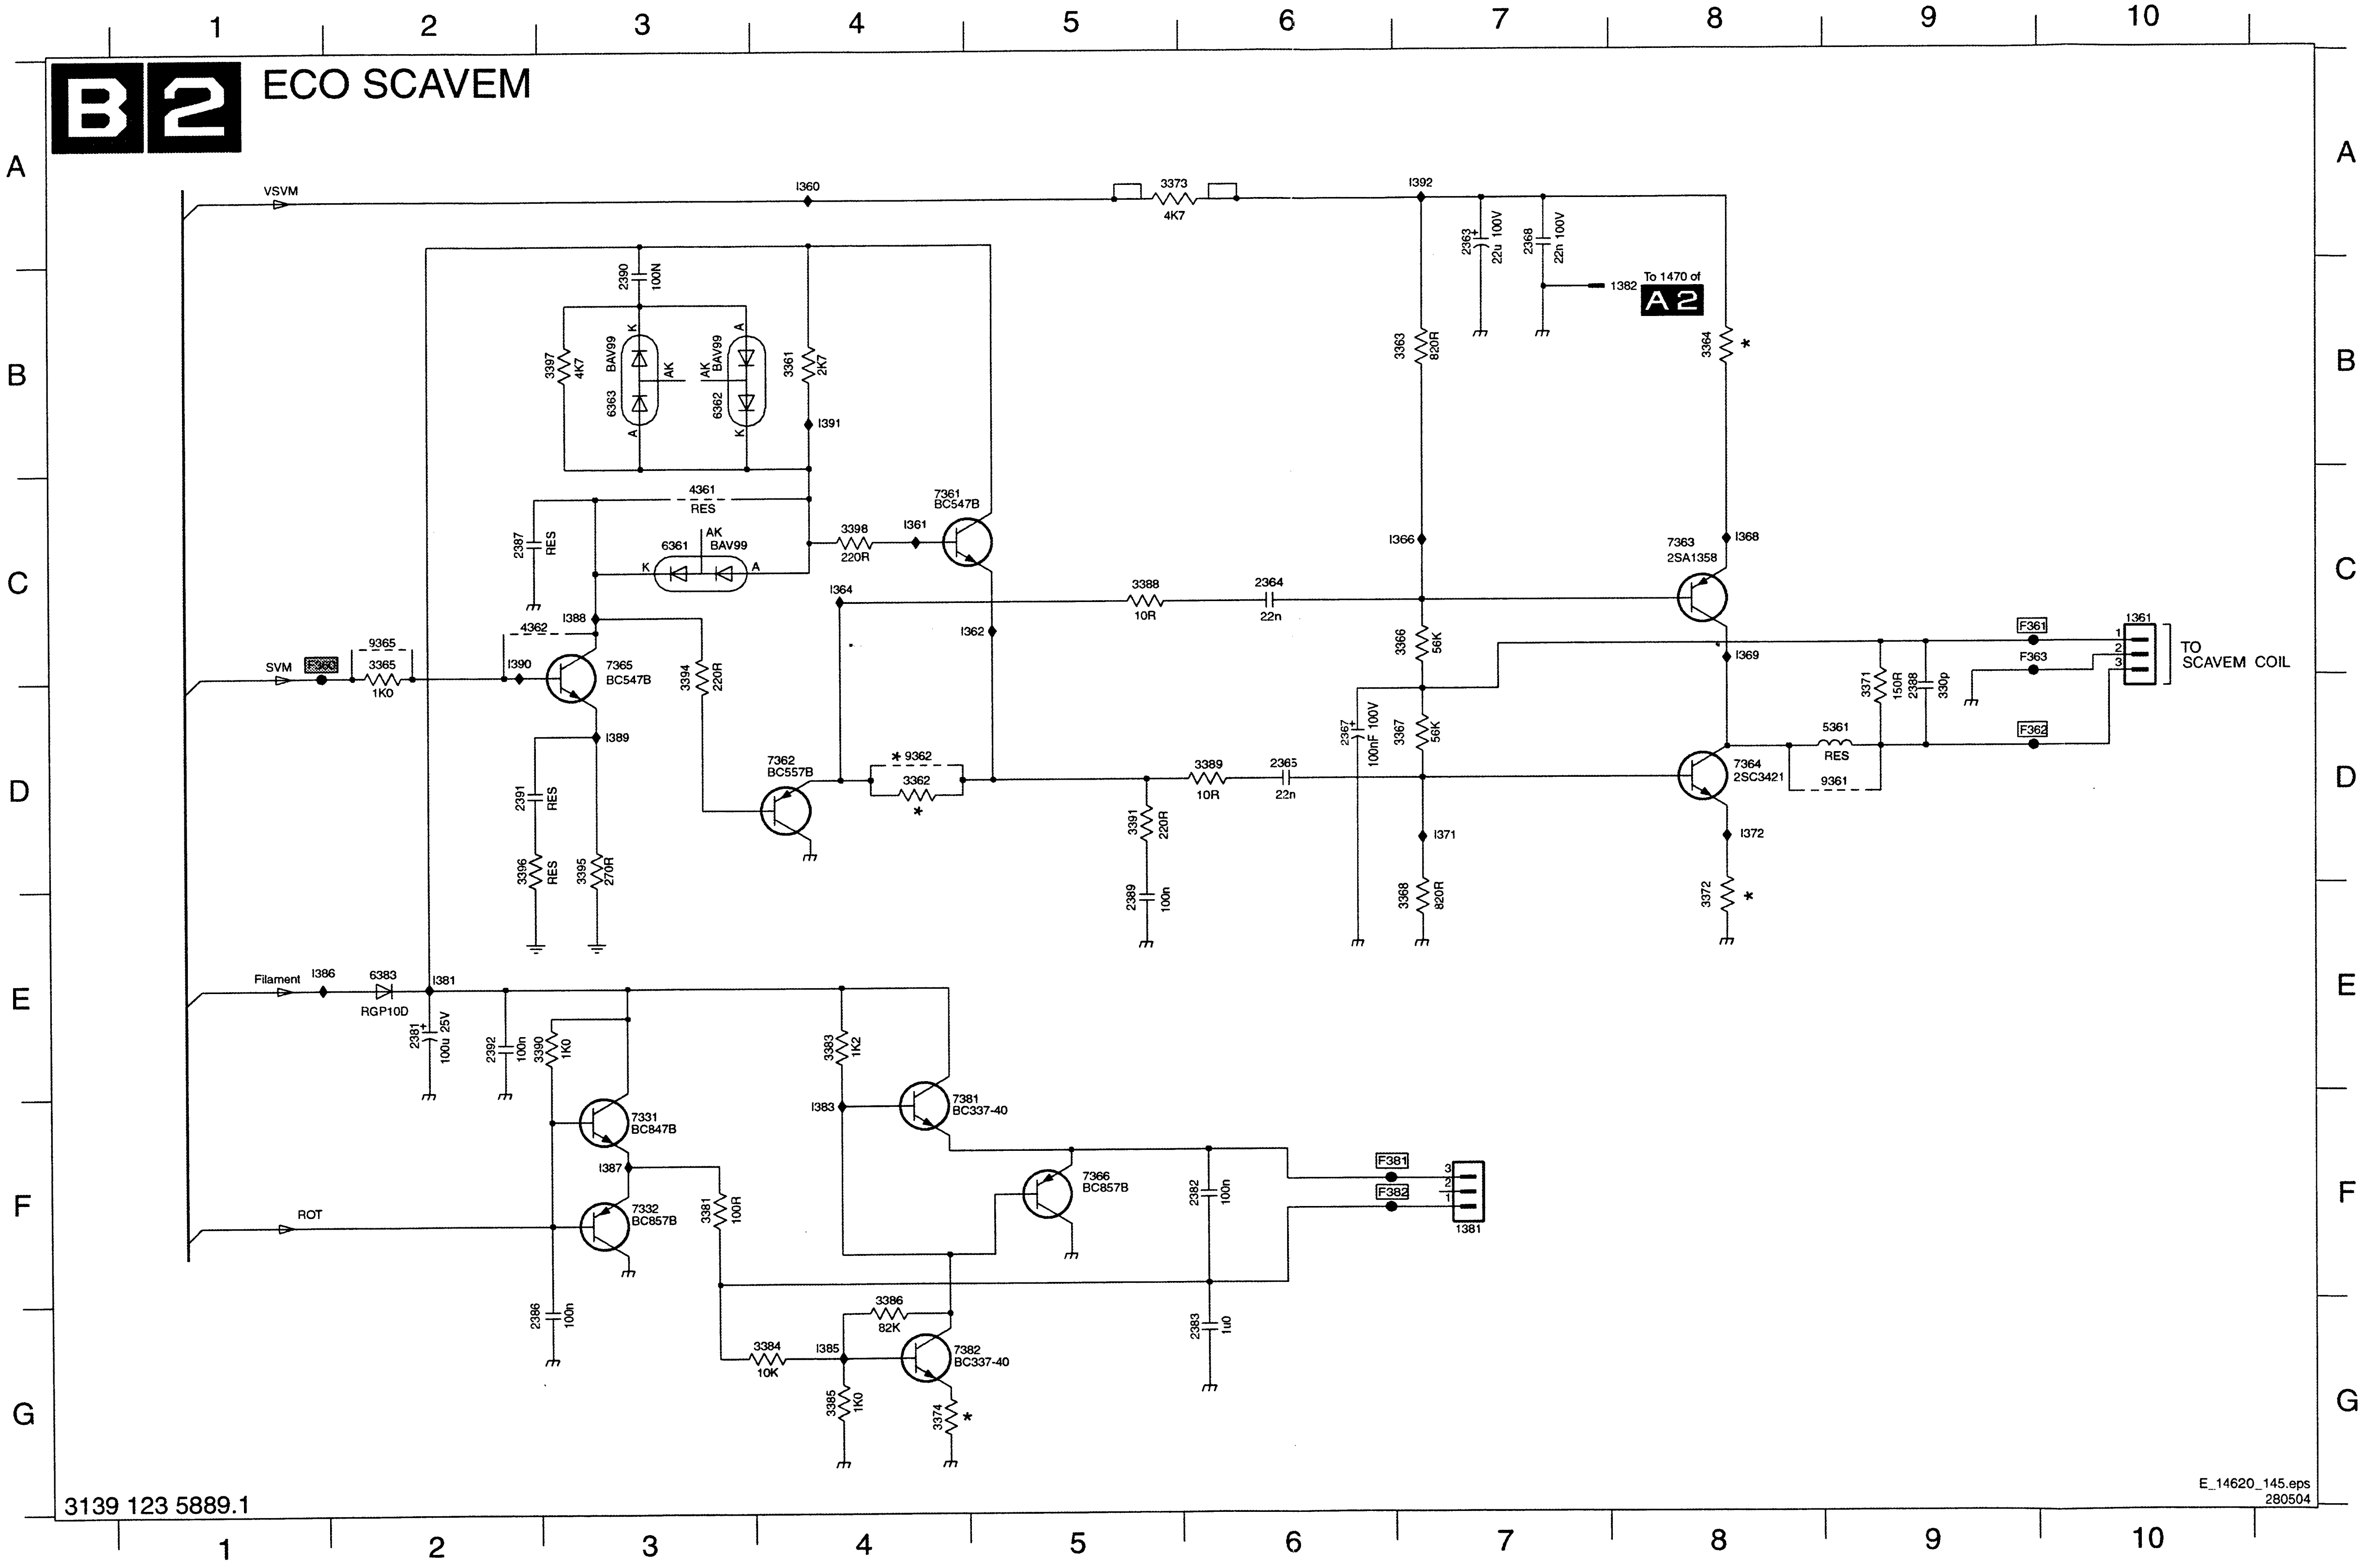
B2
ECO SCAVEM
1 2 3 4 5 6 7 8 9 10
A B C D E F G
VSVM
I360
3373 4K7
I392
2363 22u 100V
2368 22n 100V
I382
To 1470 of A2
2390 100N
3397 4K7
6363 BAV99
6362 BAV99
3361 2K7
I391
3363 820R
3364 *
4361 RES
2387 RES
6361 BAV99
3398 220R
I361
7361 BC547B
I366
I368
7363 2SA1358
I364
3388 10R
2364 22n
I362
I388
4362
9365
SVM F360
3365 1K0
I390
7365 BC547B
3394 220R
3366 56K
I369
F361
F363
1361
TO SCAVEM COIL
3371 150R
2388 330p
I389
2367 100nF 100V
3367 56K
5361 RES
9361
F362
7364 2SC3421
7362 BC557B
9362
3362 *
3389 10R
2365 22n
2391 RES
3391 220R
I371
I372
3396 RES
3395 270R
2389 100n
3368 820R
3372 *
Filament I386
6383 RGP10D
I381
2381 100u 25V
2392 100n
3390 1K0
3383 1K2
7381 BC337-40
I383
7331 BC847B
I387
7366 BC857B
2382 100n
F381
F382
1381
ROT
7332 BC857B
3381 100R
2386 100n
3386 82K
3384 10K
I385
7382 BC337-40
2383 1u0
3385 1K0
3374 *
3139 123 5889.1
E_14620_145.eps
280504

1361	C10	I388	C3
1381	F7	I389	D3
1382	B8	I390	C2
2363	A7	I391	B4
2364	C6	I392	A7
2365	D6		
2367	D6		
2368	A7		
2381	E2		
2382	F6		
2383	G6		
2386	G2		
2387	C2		
2388	D9		
2389	E5		
2390	B3		
2391	D2		
2392	E2		
3361	B4		
3362	D4		
3363	B7		
3364	B8		
3365	C2		
3366	C7		
3367	D7		
3368	E7		
3371	D9		
3372	E8		
3373	A5		
3374	G4		
3381	F3		
3383	E4		
3384	G4		
3385	G4		
3386	G4		
3388	C5		
3389	D6		
3390	E3		
3391	D5		
3394	C3		
3395	D3		
3396	D2		
3397	B3		
3398	C4		
4361	C3		
4362	C2		
5361	D9		
6361	C3		
6362	B3		
6363	B3		
6383	E2		
7331	F3		
7332	F3		
7361	C4		
7362	D4		
7363	C8		
7364	D8		
7365	C3		
7366	F5		
7381	F4		
7382	G4		
9361	D9		
9362	D4		
9365	C2		
F360	C1		
F361	C9		
F362	D9		
F363	C9		
F381	F6		
F382	F6		
I360	A4		
I361	C4		
I362	C5		
I364	C4		
I366	C7		
I368	C8		
I369	C8		
I371	D7		
I372	D8		
I381	E2		
I383	F4		
I385	G4		
I386	E1		
I387	F3		

Layout CRT Panel (Top Side)

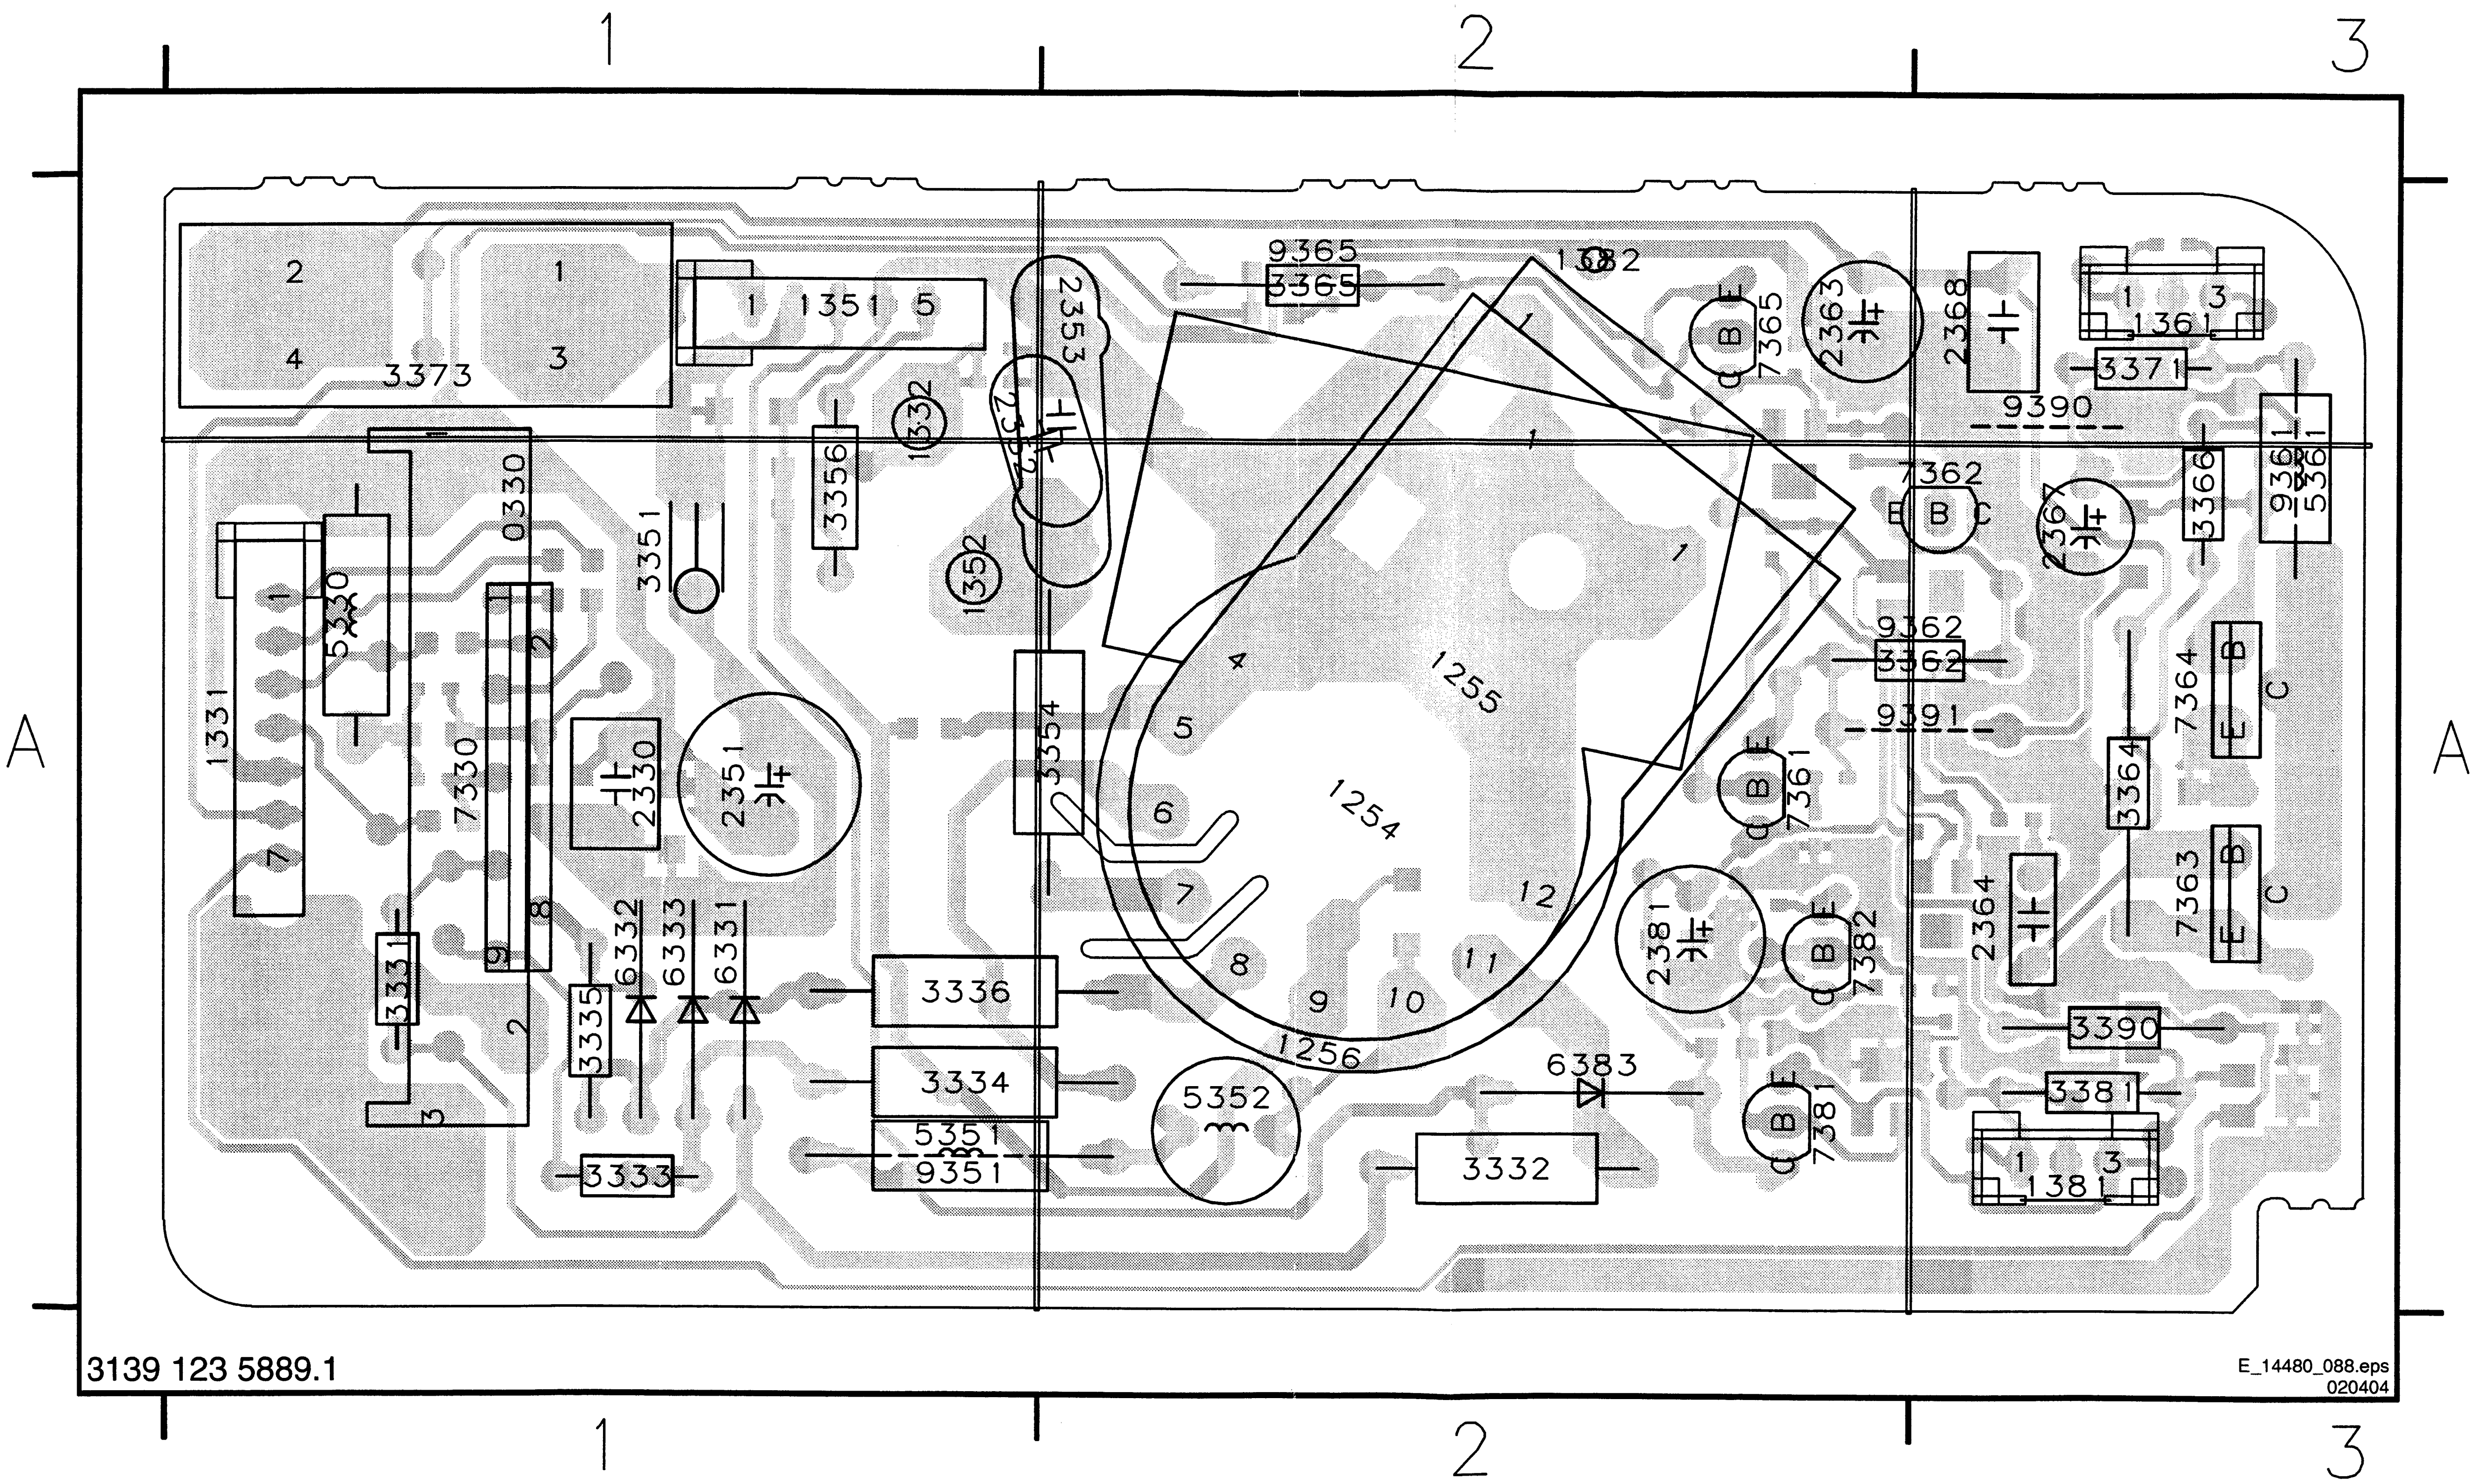
1
2
3
A
A
3373
1351
2353
9365
3365
1382
7365
2363
2368
1361
3371
9390
1332
3356
0330
3351
2352
1352
7362
2367
3366
9361
5361
1331
5330
7330
2330
2351
3354
1255
1254
9362
3362
9391
7364
7361
3364
7363
2364
2381
7382
3331
6332
6333
6331
3335
3336
3334
5351
9351
3333
5352
1256
6383
3332
7381
3390
3381
1381
E
B
C
3139 123 5889.1
E_14480_088.eps
020404

0330	A1
1254	A2
1255	A2
1256	A2
1331	A1
1332	A1
1351	A1
1352	A1
1361	A3
1381	A3
1382	A2
2330	A1
2351	A1
2352	A2
2353	A2
2363	A2
2364	A3
2367	A3
2368	A3
2381	A2
3331	A1
3332	A2
3333	A1
3334	A1
3335	A1
3336	A1
3351	A1
3354	A2
3356	A1
3362	A3
3364	A3
3365	A2
3366	A3
3371	A3
3373	A1
3381	A3
3390	A3
5330	A1
5351	A1
5352	A2
5361	A3
6331	A1
6332	A1
6333	A1
6383	A2
7330	A1
7361	A2
7362	A3
7363	A3
7364	A3
7365	A2
7381	A2
7382	A2
9351	A1
9361	A3
9362	A3
9365	A2
9390	A3
9391	A3

Layout CRT Panel (Bottom Side)

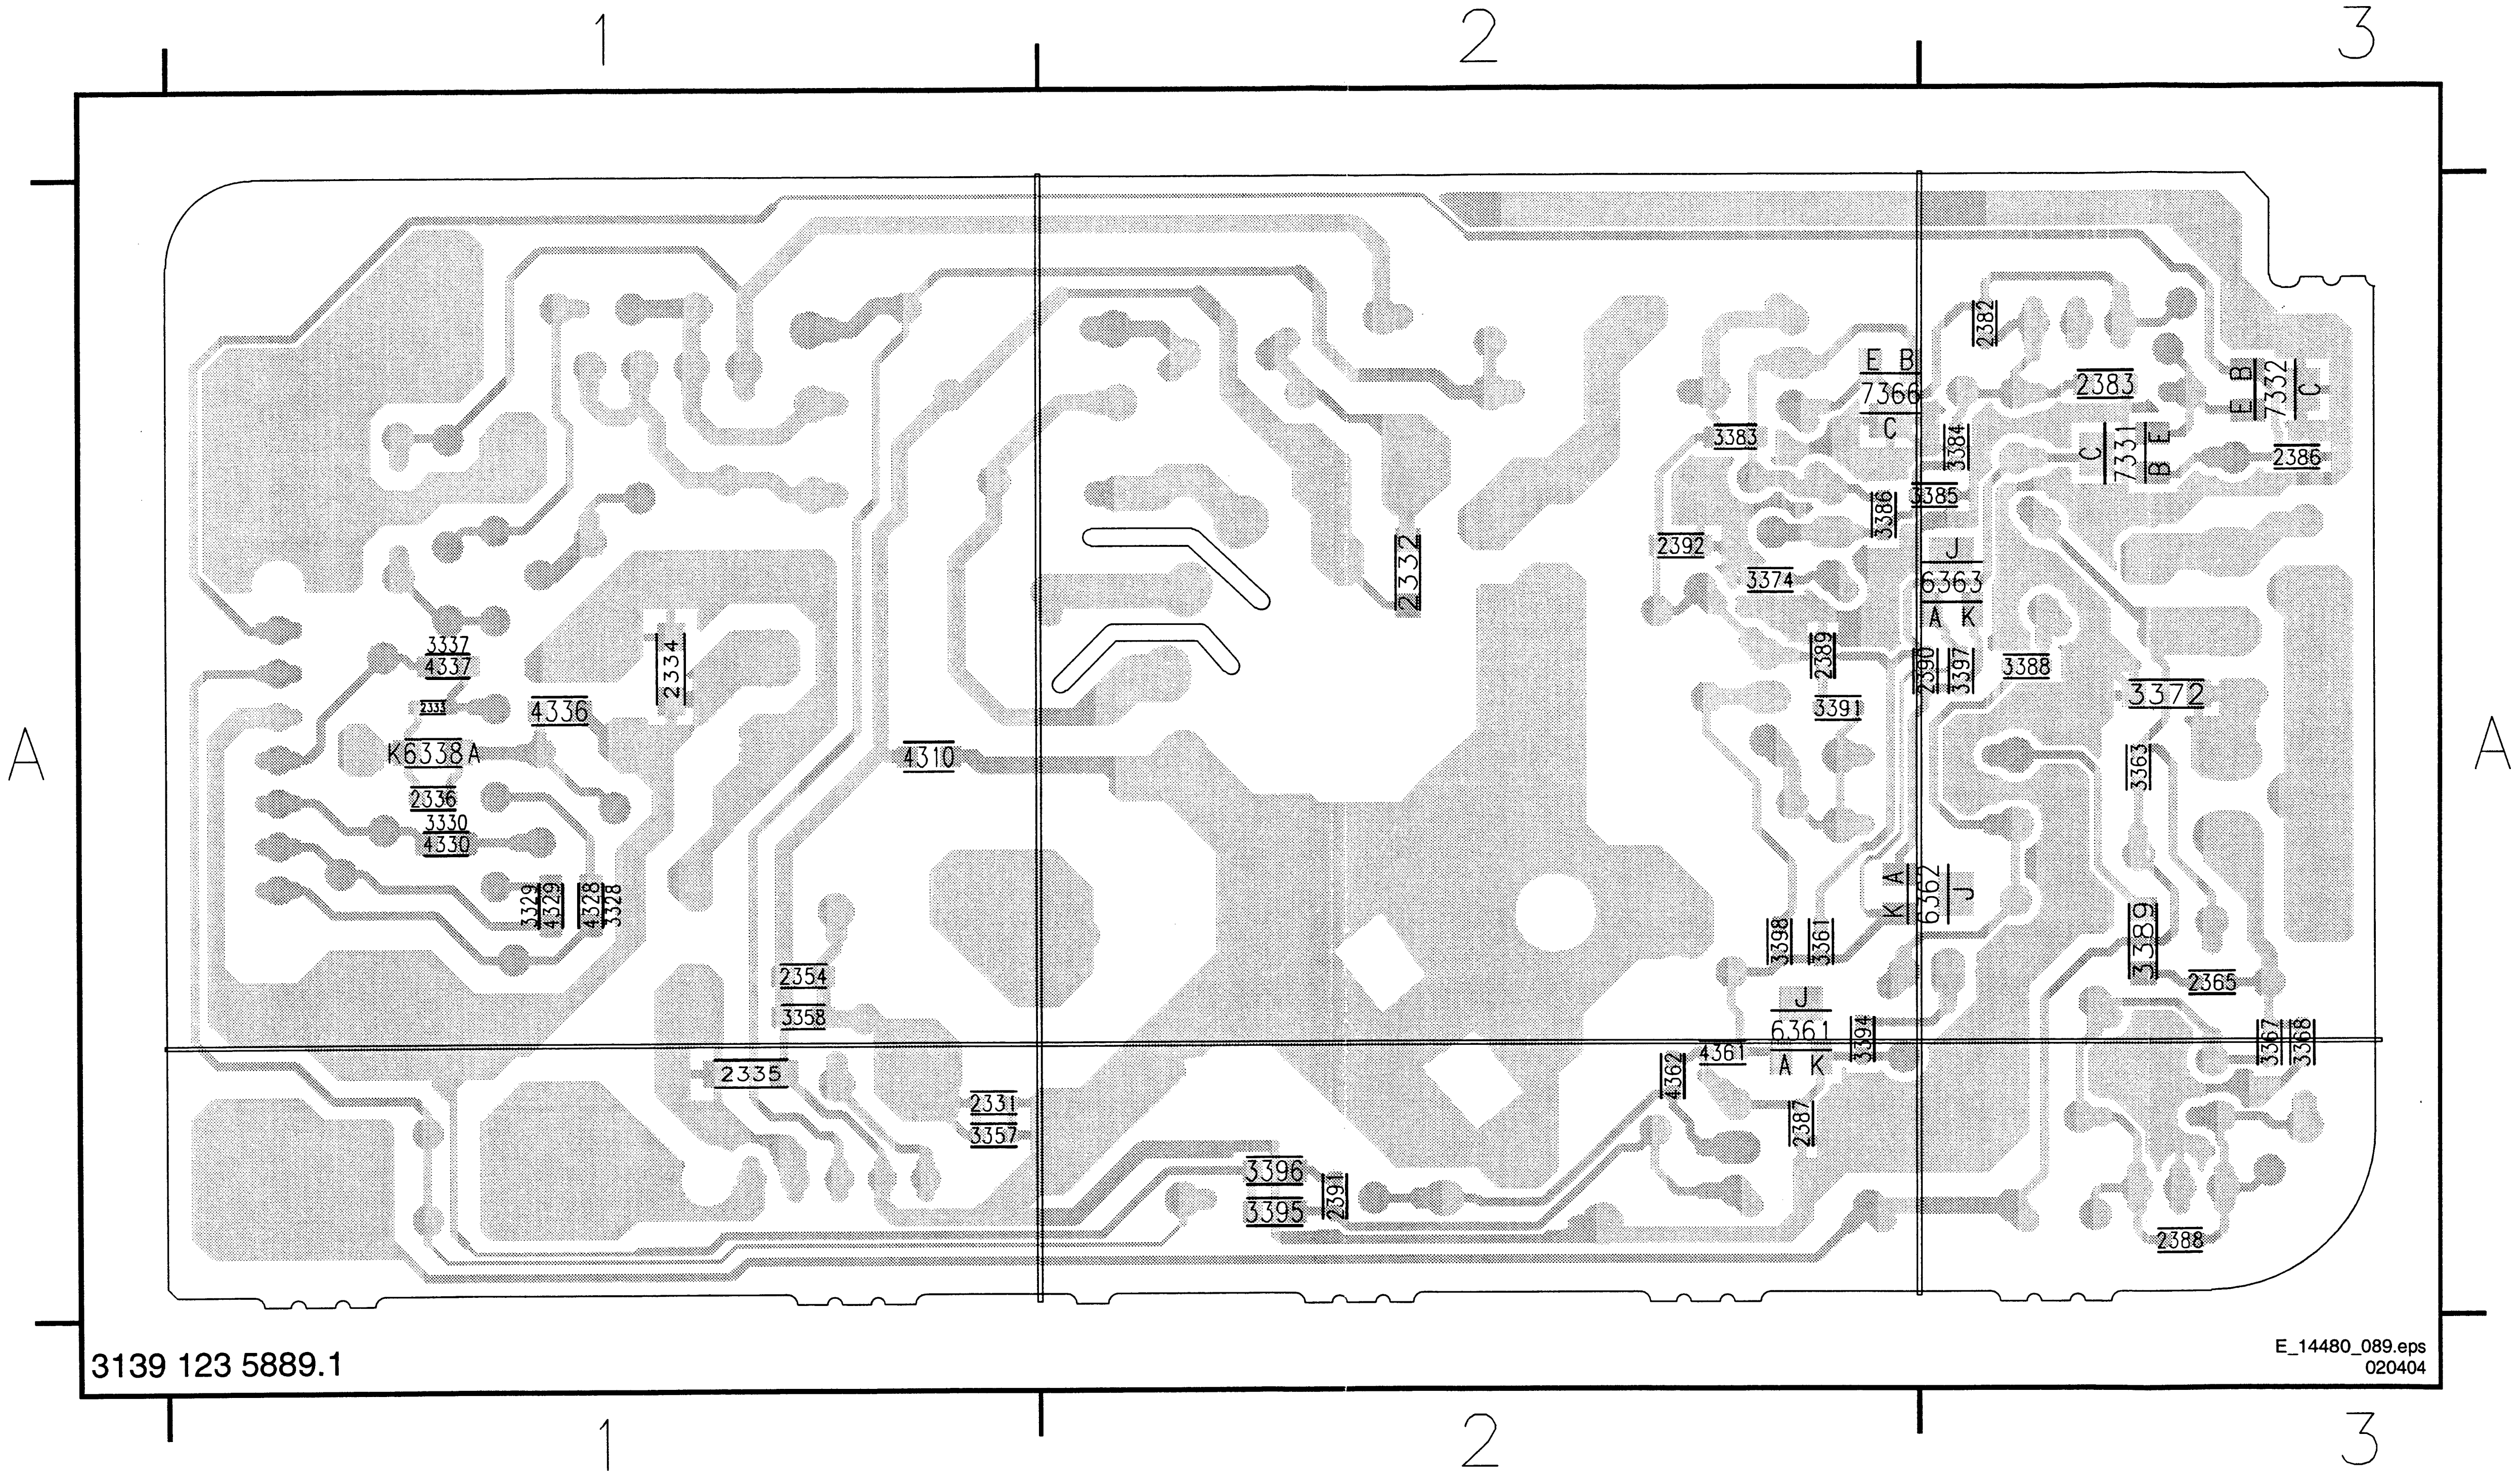
1
2
3
A
2382
E B
7366
C
2383
E B
7332
C
3383
3384
C
7331
B E
2386
3386
3385
2392
J
6363
A K
3374
2332
3337
4337
2334
2333
4336
2389
2390
3397
3388
3391
3372
K6338A
4310
2336
3330
4330
3363
3329
4329
4328
3328
K A
6362
J
3398
3361
3389
2354
3358
2365
J
6361
A K
3394
4362
4361
3367
3368
2335
2331
3357
2387
3396
3395
2391
2388
3139 123 5889.1
E_14480_089.eps
020404

2331	A1
2332	A2
2333	A1
2334	A1
2335	A1
2336	A1
2354	A1
2365	A3
2382	A3
2383	A3
2386	A3
2387	A2
2388	A3
2389	A2
2390	A3
2391	A2
2392	A2
3328	A1
3329	A1
3330	A1
3337	A1
3357	A1
3358	A1
3361	A2
3363	A3
3367	A3
3368	A3
3372	A3
3374	A2
3383	A2
3384	A3
3385	A3
3386	A2
3388	A3
3389	A3
3391	A2
3394	A2
3395	A2
3396	A2
3397	A3
3398	A2
4310	A1
4328	A1
4329	A1
4330	A1
4336	A1
4337	A1
4361	A2
4362	A2
6338	A1
6361	A2
6362	A3
6363	A3
7331	A3
7332	A3
7366	A2

Side AV + Headphone Panel (PV-2)

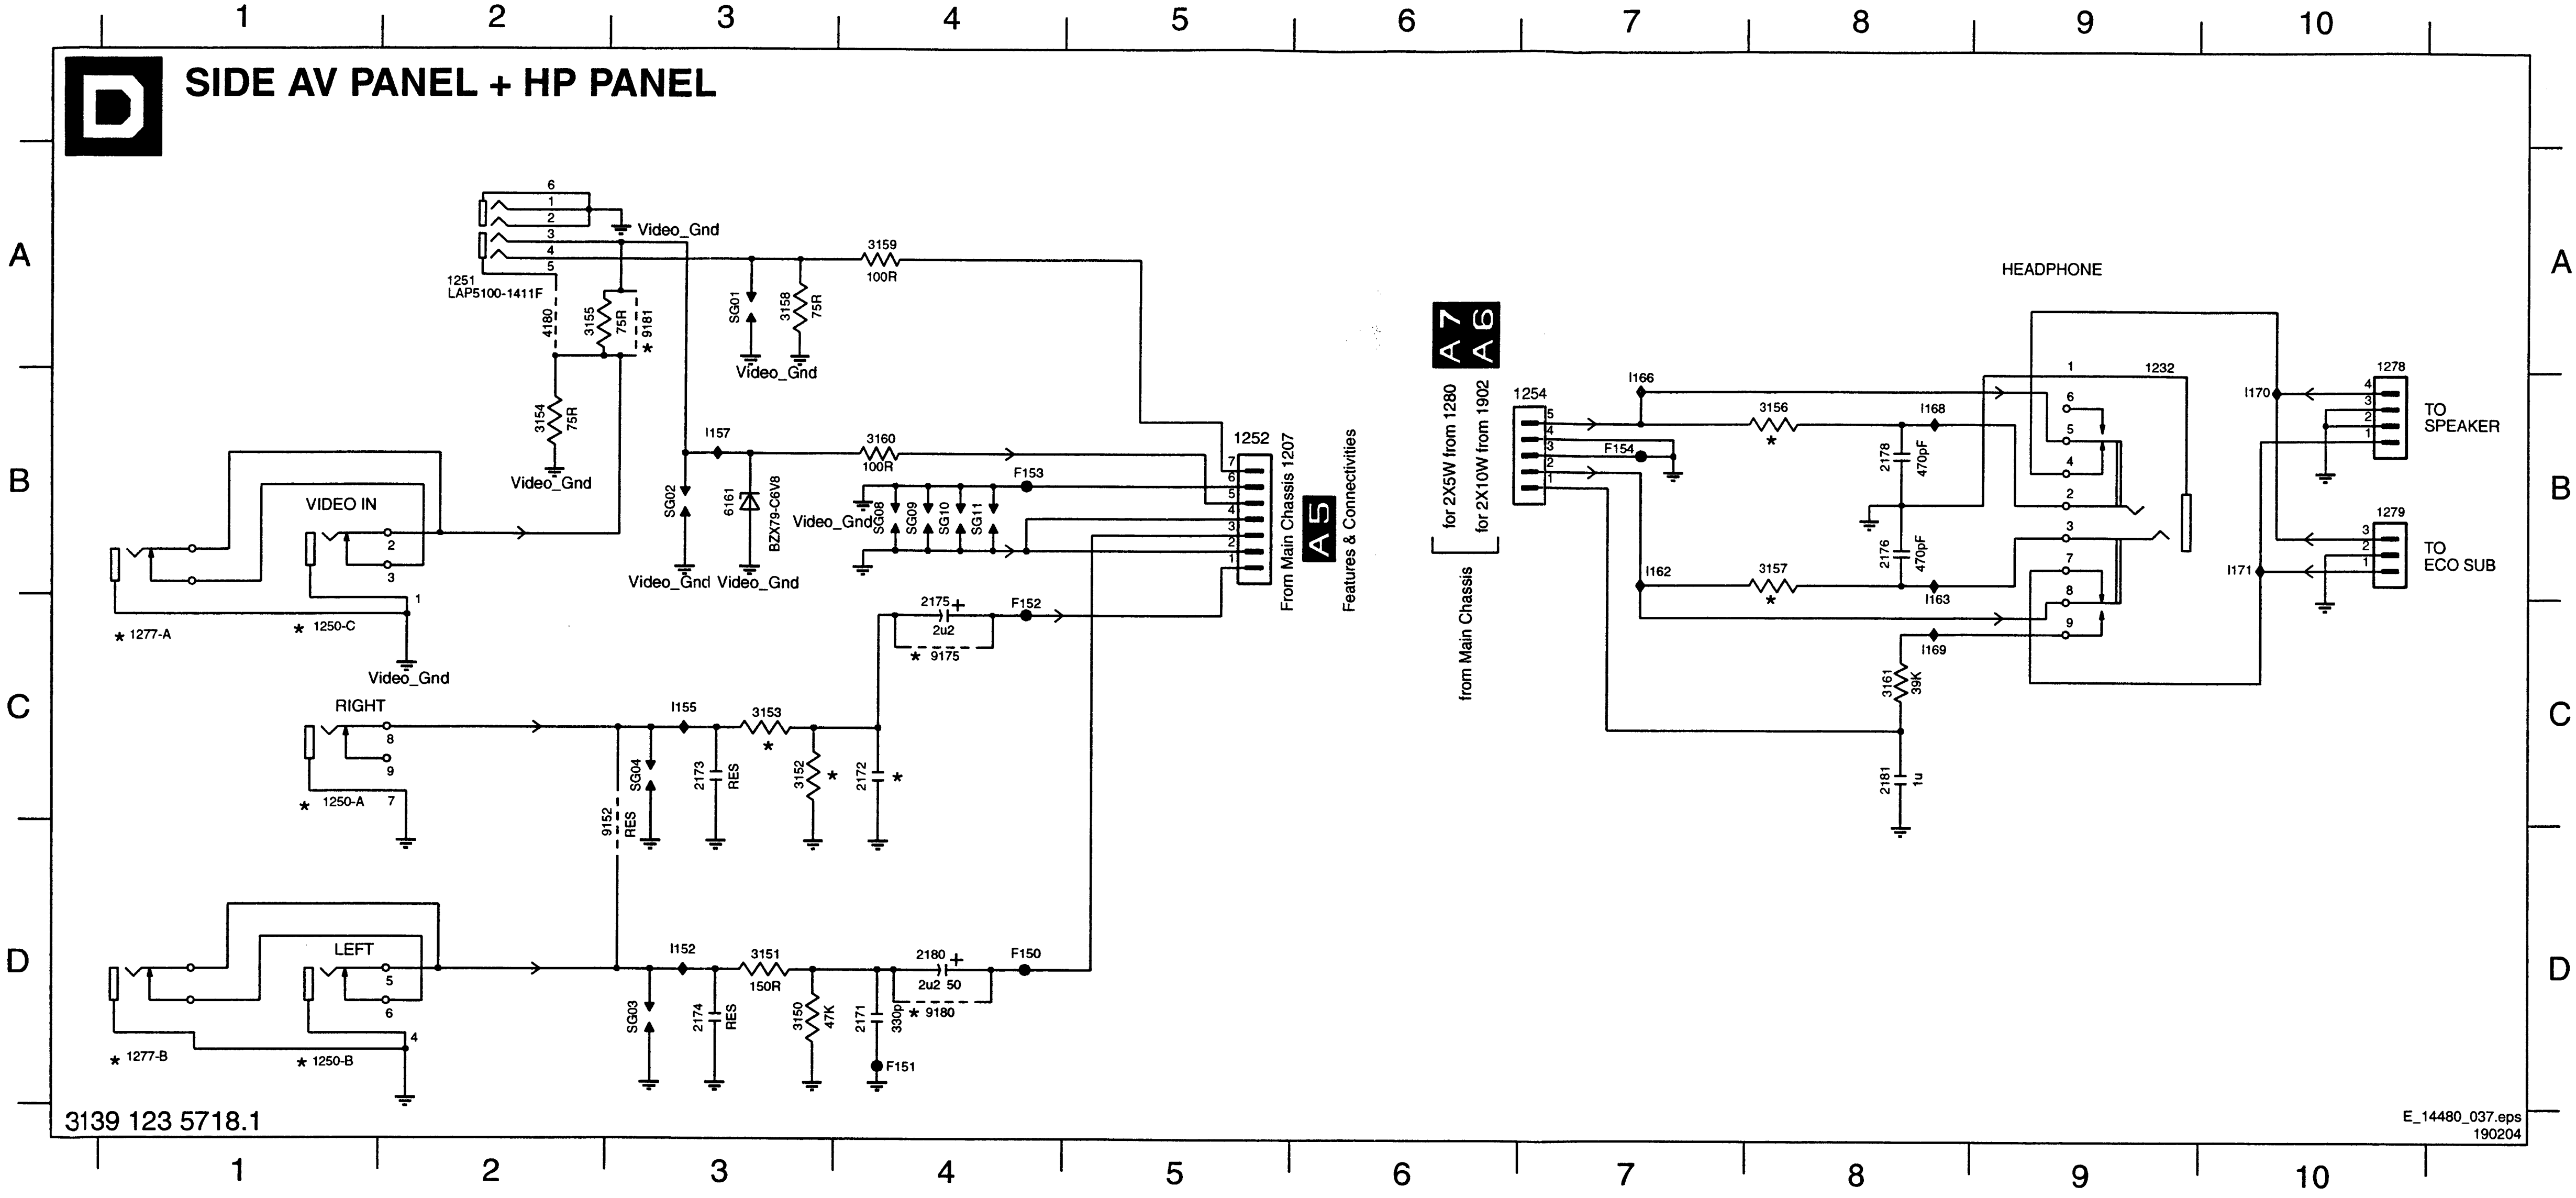
D
SIDE AV PANEL + HP PANEL
1
2
3
4
5
6
7
8
9
10
A
B
C
D
1251
LAP5100-1411F
Video_Gnd
4180
3155
75R
9181
3154
75R
3159
100R
SG01
3158
75R
I157
3160
100R
F153
SG02
6161
BZX79-C6V8
SG08
SG09
SG10
SG11
VIDEO IN
1277-A
1250-C
1252
From Main Chassis 1207
Features & Connectivities
A5
2175
2u2
9175
F152
RIGHT
1250-A
I155
3153
SG04
2173
RES
3152
2172
9152
RES
LEFT
1277-B
1250-B
I152
3151
150R
2180
2u2 50
9180
F150
SG03
2174
RES
3150
47K
2171
330p
F151
A7
A6
for 2X5W from 1280
for 2X10W from 1902
from Main Chassis
1254
I166
3156
I168
F154
2178
470pF
2176
470pF
I162
3157
I163
I169
3161
39K
2181
1u
HEADPHONE
1232
I170
1278
TO SPEAKER
1279
TO ECO SUB
I171
3139 123 5718.1
E_14480_037.eps
190204

1232	A9
1250-A	C1
1250-B	D1
1250-C	C1
1251	A2
1252	B5
1254	B6
1277-A	C1
1277-B	D1
1278	A10
1279	B10
2171	D4
2172	C4
2173	C3
2174	D3
2175	C4
2176	B8
2178	B8
2180	D4
2181	C8
3150	D3
3151	D3
3152	C3
3153	C3
3154	B2
3155	A2
3156	B8
3157	B8
3158	A3
3159	A4
3160	B4
3161	C8
4180	A2
6161	B3
9152	D3
9175	C4
9180	D4
9181	A3
F150	D4
F151	D4
F152	C4
F153	B4
F154	B7
I152	D3
I155	C3
I157	B3
I162	B7
I163	C8
I166	B7
I168	B8
I169	C8
I170	B10
I171	B10
SG01	A3
SG02	B3
SG03	D3
SG04	C3
SG08	B4
SG09	B4
SG10	B4
SG11	B4

Layout Side AV + Headphone Panel (PV-2) (Top Side)

1232	A4	1254	A3	2171	A1	2175	A2	3152	A3	3156	A4	3160	A1	9180	A1
1250	A3	1277	A2	2172	A2	2180	A1	3153	A3	3157	A4	6161	A1	9181	A1
1251	A2	1278	A4	2173	A3	3150	A2	3154	A1	3158	A1	9152	A3		
1252	A1	1279	A4	2174	A2	3151	A2	3155	A1	3159	A1	9175	A2		

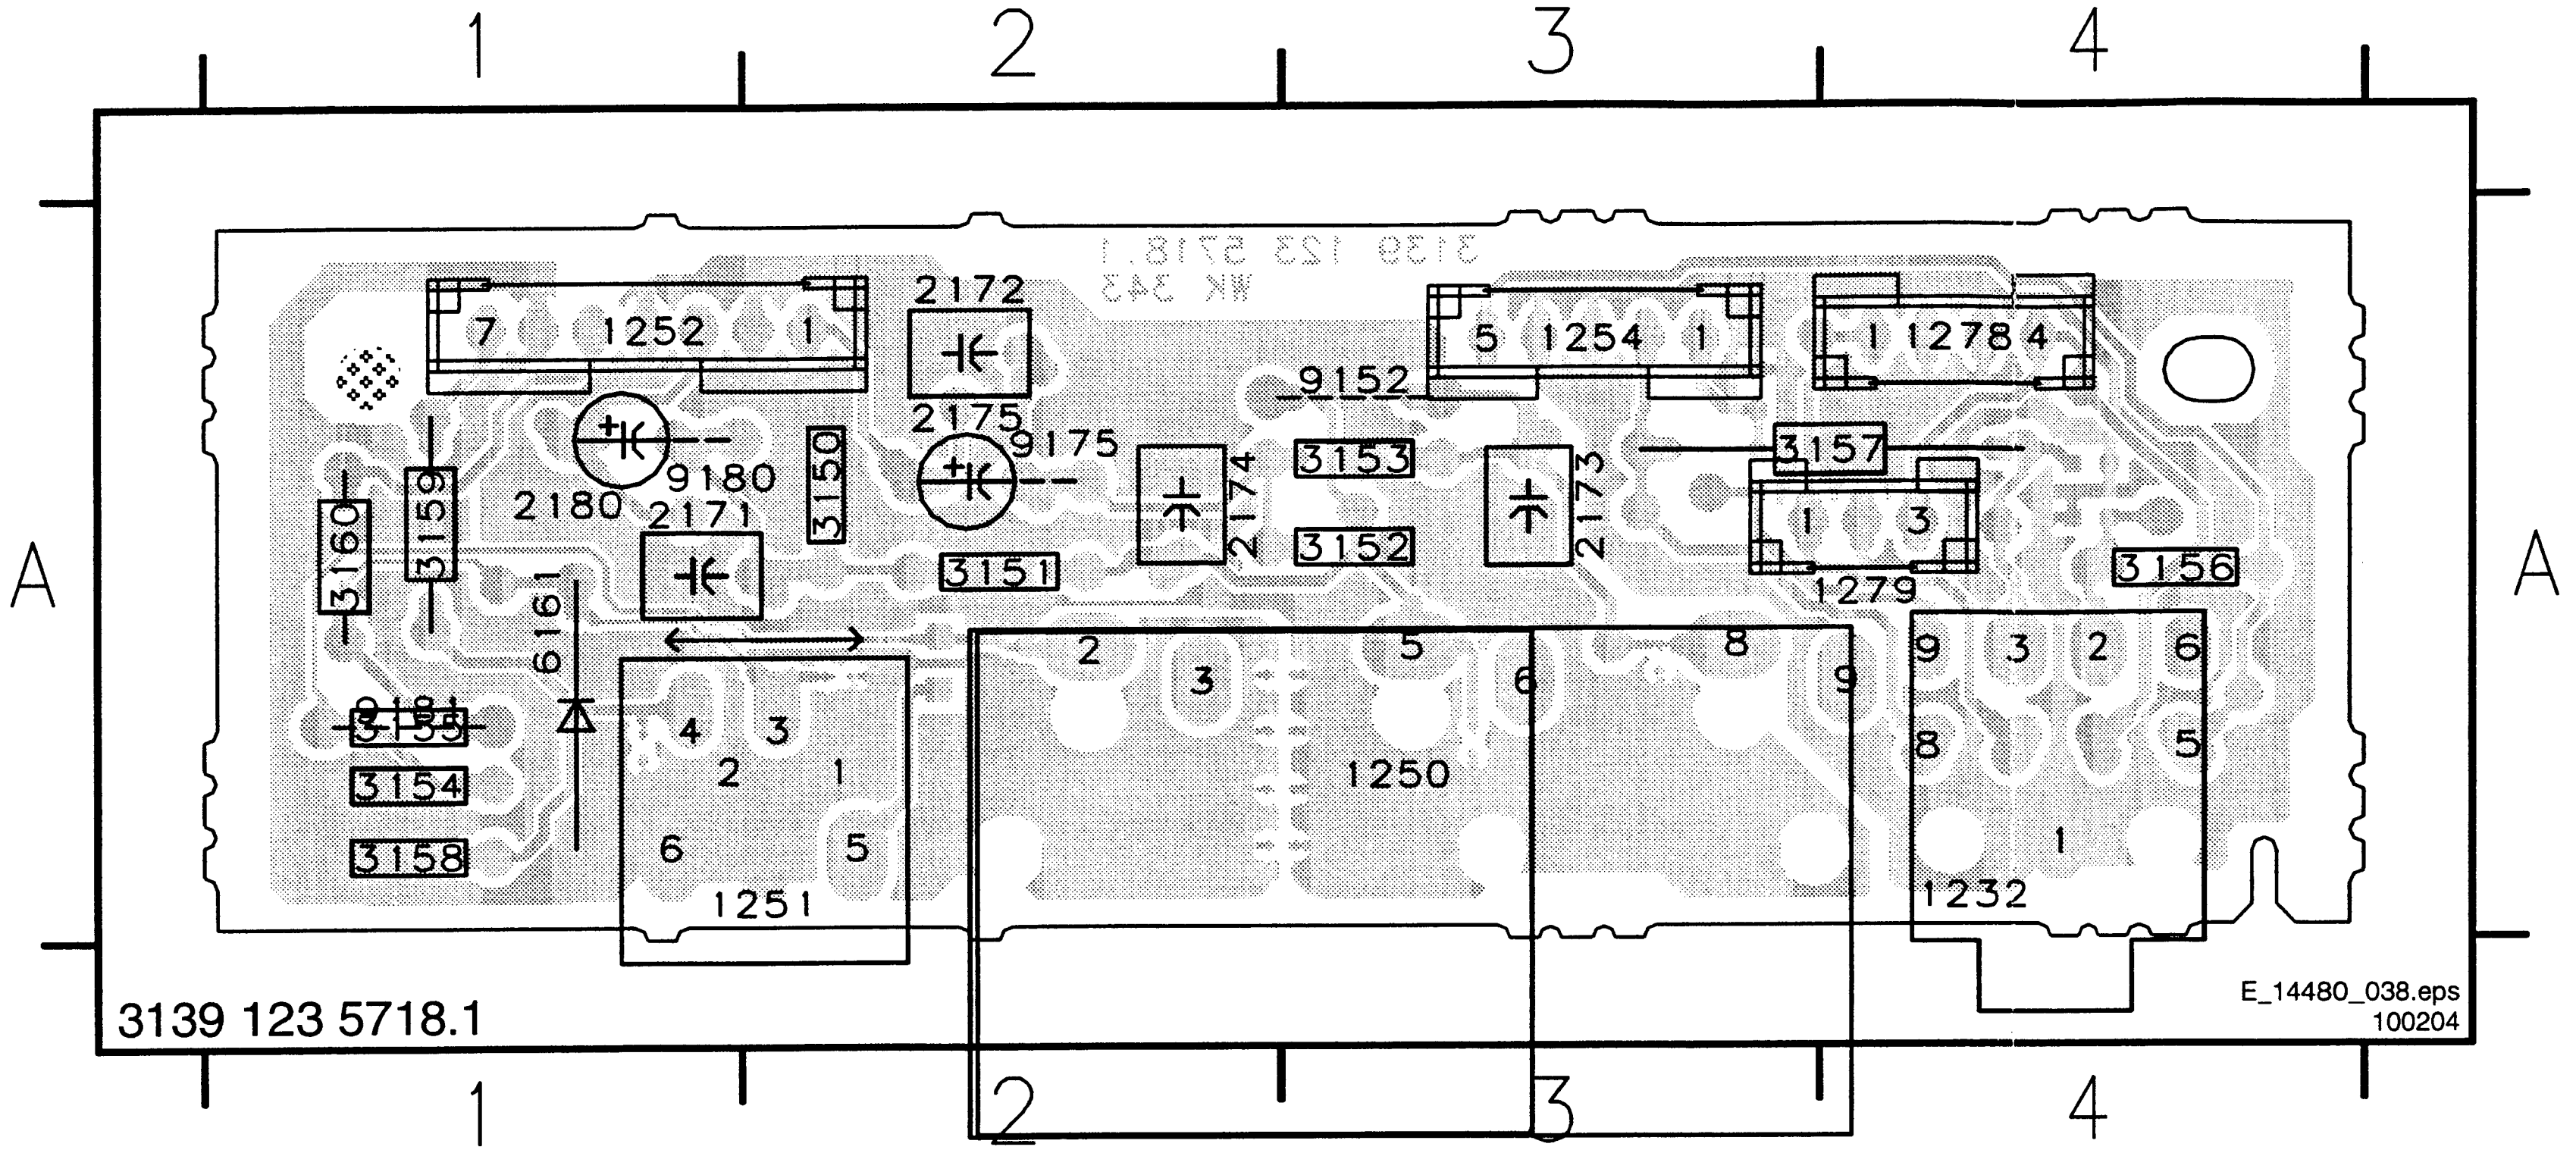
1
2
3
4
A
A
3139 123 5718.1
WK 343
1252
2172
2175
9175
9180
2180
2171
3150
3151
3160
3159
6161
9181
3155
3154
3158
1251
2174
3153
3152
9152
2173
1254
1278
3157
1279
3156
1250
1232
E_14480_038.eps
100204

Layout Side AV + Headphone Panel (PV-2) (Bottom Side)

2176	A1	2178	A1	2181	A2	3161	A2	4180	A3

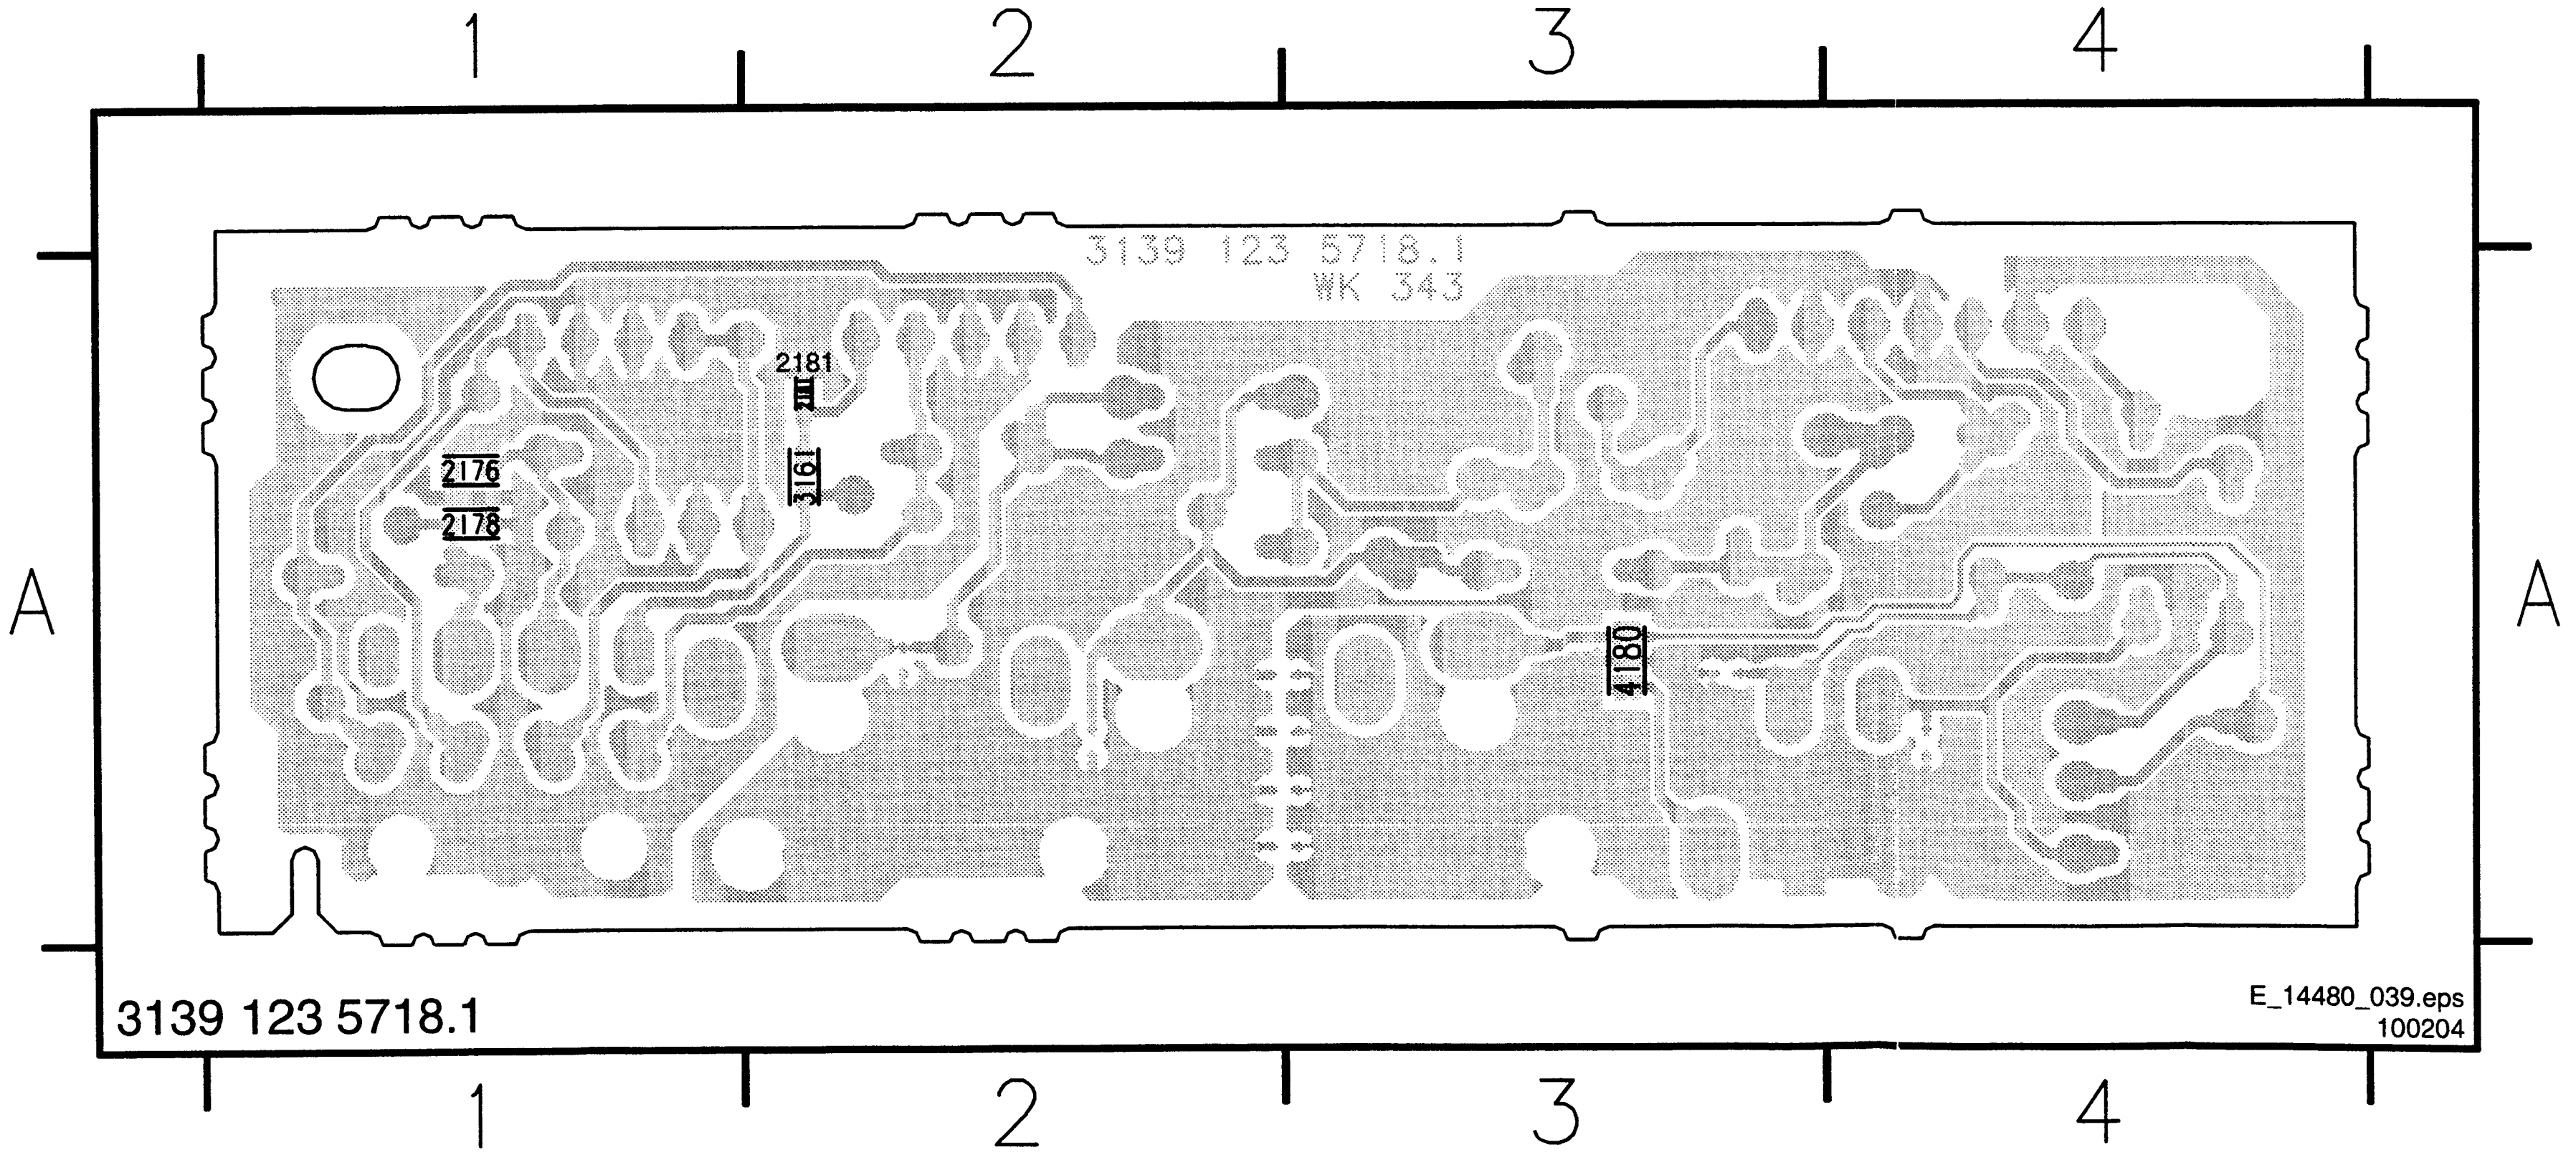
1
2
3
4
A
A
3139 123 5718.1
WK 343
2181
2176
2178
3161
4180
E_14480_039.eps
100204

Side AV + Headphone Panel (FL-13)

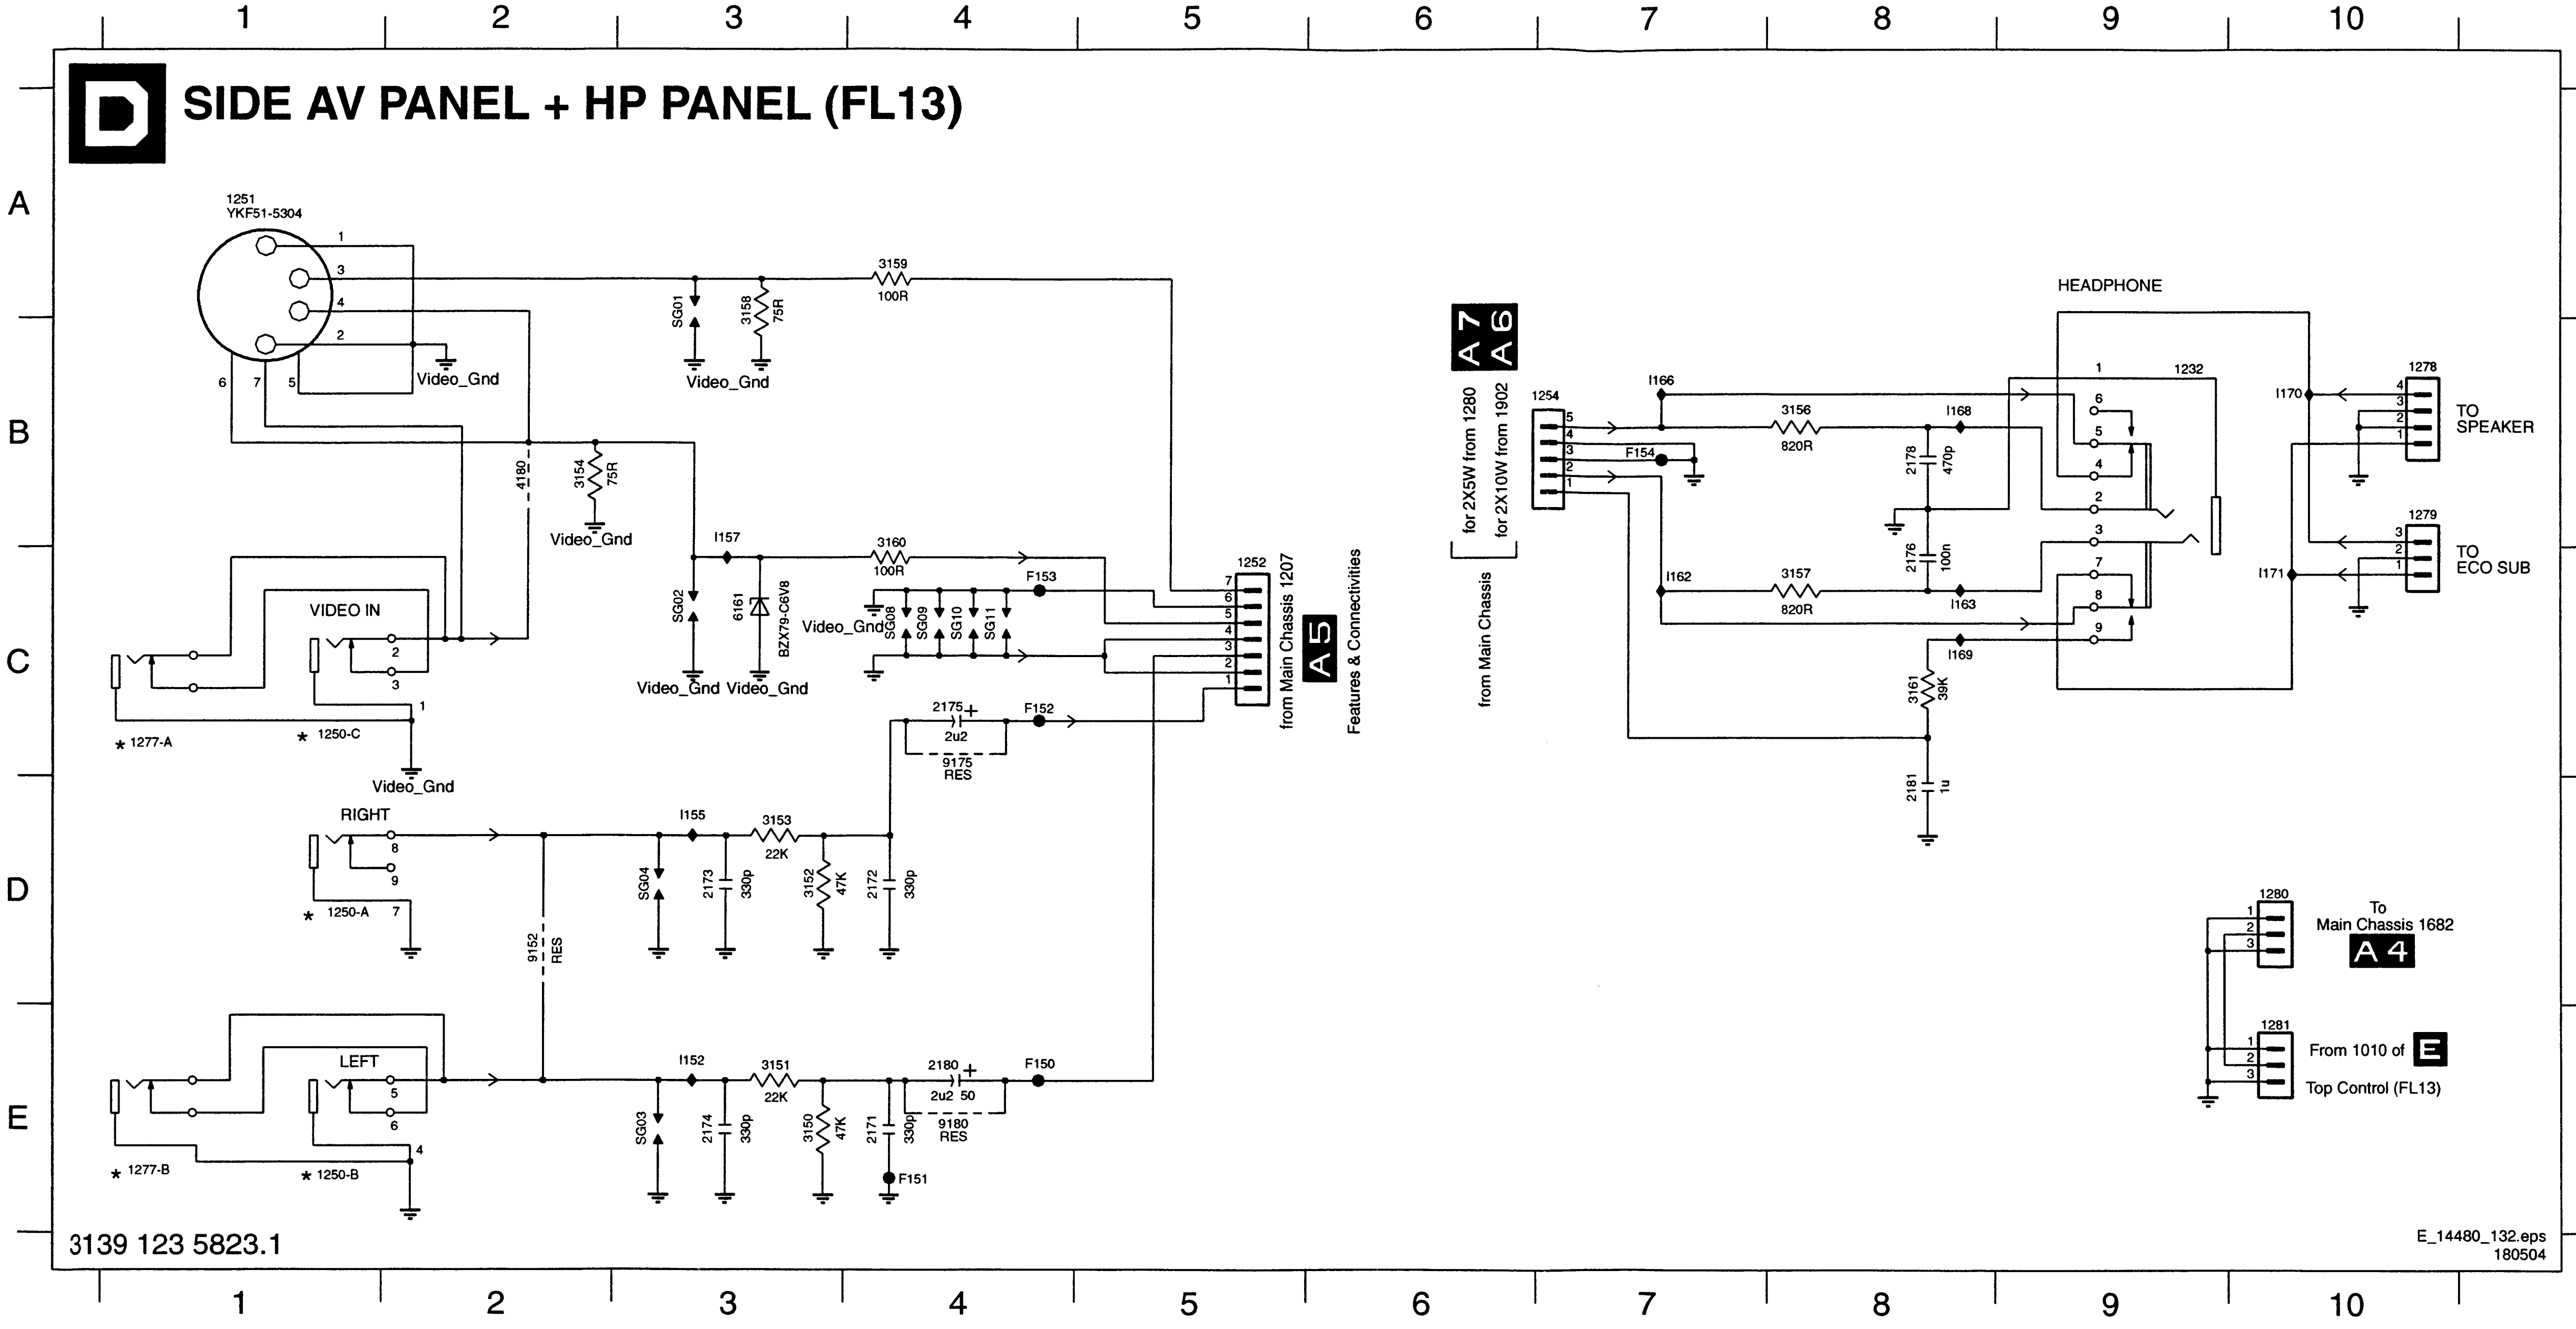
D
SIDE AV PANEL + HP PANEL (FL13)
1251
YKF51-5304
Video_Gnd
3159
100R
SG01
3158
75R
4180
3154
75R
I157
3160
100R
SG02
6161
BZX79-C6V8
Video_Gnd
SG08
SG09
SG10
SG11
F153
1252
from Main Chassis 1207
A5
Features & Connectivities
VIDEO IN
1277-A
1250-C
2175
2u2
9175
RES
F152
RIGHT
I155
3153
22K
SG04
2173
330p
3152
47K
2172
330p
1250-A
9152
RES
LEFT
I152
3151
22K
SG03
2174
330p
3150
47K
2171
330p
2180
2u2 50
9180
RES
F150
F151
1277-B
1250-B
3139 123 5823.1
A7
A6
for 2X5W from 1280
for 2X10W from 1902
from Main Chassis
1254
I166
F154
3156
820R
I168
2178
470p
2176
100n
I162
3157
820R
I163
I169
3161
39K
2181
1u
HEADPHONE
1232
I170
I171
1278
TO
SPEAKER
1279
TO
ECO SUB
1280
To
Main Chassis 1682
A4
1281
From 1010 of
E
Top Control (FL13)
E_14480_132.eps
180504

1232	B9
1250-A	D1
1250-B	E1
1250-C	C1
1251	A1
1252	C5
1254	B6
1277-A	C1
1277-B	E1
1278	B10
1279	B10
1280	D10
1281	E10
2171	E4
2172	D4
2173	D3
2174	E3
2175	C4
2176	C8
2178	B8
2180	E4
2181	D8
3150	E3
3151	E3
3152	D3
3153	D3
3154	B2
3156	B8
3157	C8
3158	A3
3159	A4
3160	C4
3161	C8
4180	B2
6161	C3
9152	D2
9175	C4
9180	E4
F150	E4
F151	E4
F152	C4
F153	C4
F154	B7
I152	E3
I155	D3
I157	B3
I162	C7
I163	C8
I166	B7
I168	B8
I169	C8
I170	B10
I171	C10
SG01	A3
SG02	C3
SG03	E3
SG04	D3
SG08	C4
SG09	C4
SG10	C4
SG11	C4

Layout Side AV + Headphone Panel (FL-13) (Top Side)

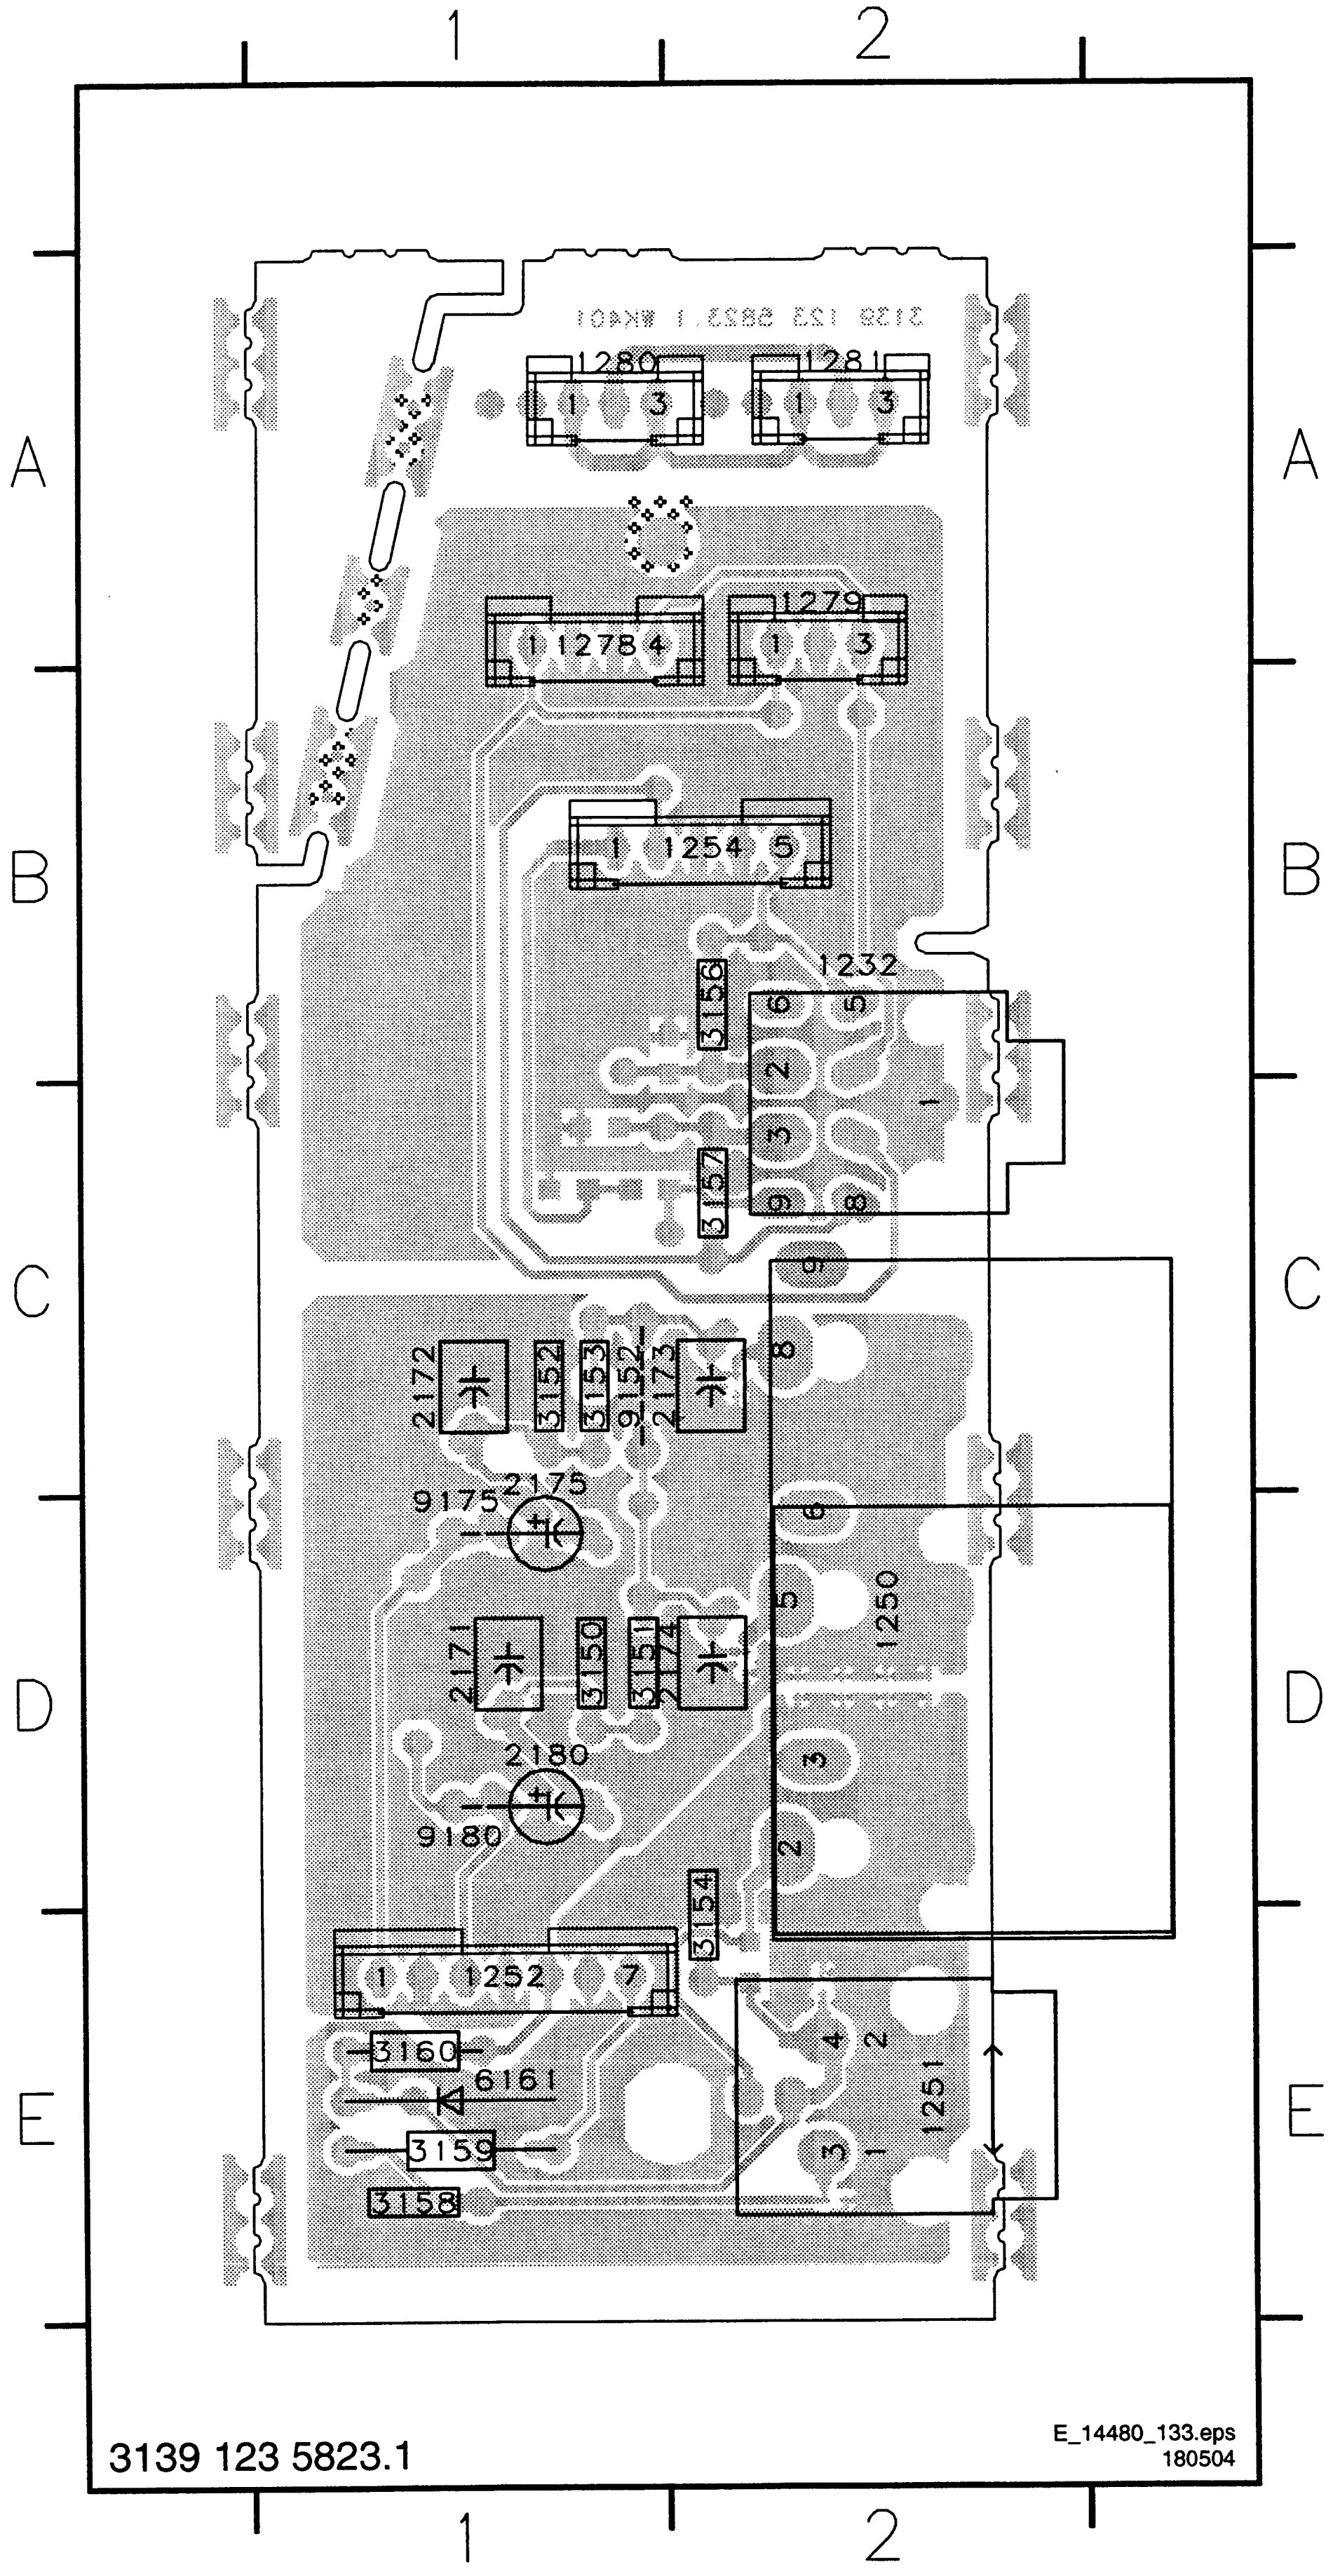
1
2
A
B
C
D
E
3139 123 5823.1 WK401
1280
1281
1278
1279
1254
1232
3156
3157
2172
3152
3153
9152
2173
9175
2175
2171
3150
3151
2174
1250
2180
9180
3154
1252
3160
6161
3159
3158
1251
3139 123 5823.1

E_14480_133.eps
180504

1232	B2
1250	D2
1251	E2
1252	E1
1254	B2
1277	D2
1278	A1
1279	A2
1280	A1
1281	A2
2171	D1
2172	C1
2173	C1
2174	D2
2175	C1
2180	D1
3150	D1
3151	D1
3152	C1
3153	C1
3154	E2
3156	B2
3157	C2
3158	E1
3159	E1
3160	E1
6161	E1
9152	C1
9175	D1
9180	D1

Layout Side AV + Headphone Panel (FL-13) (Bottom Side)

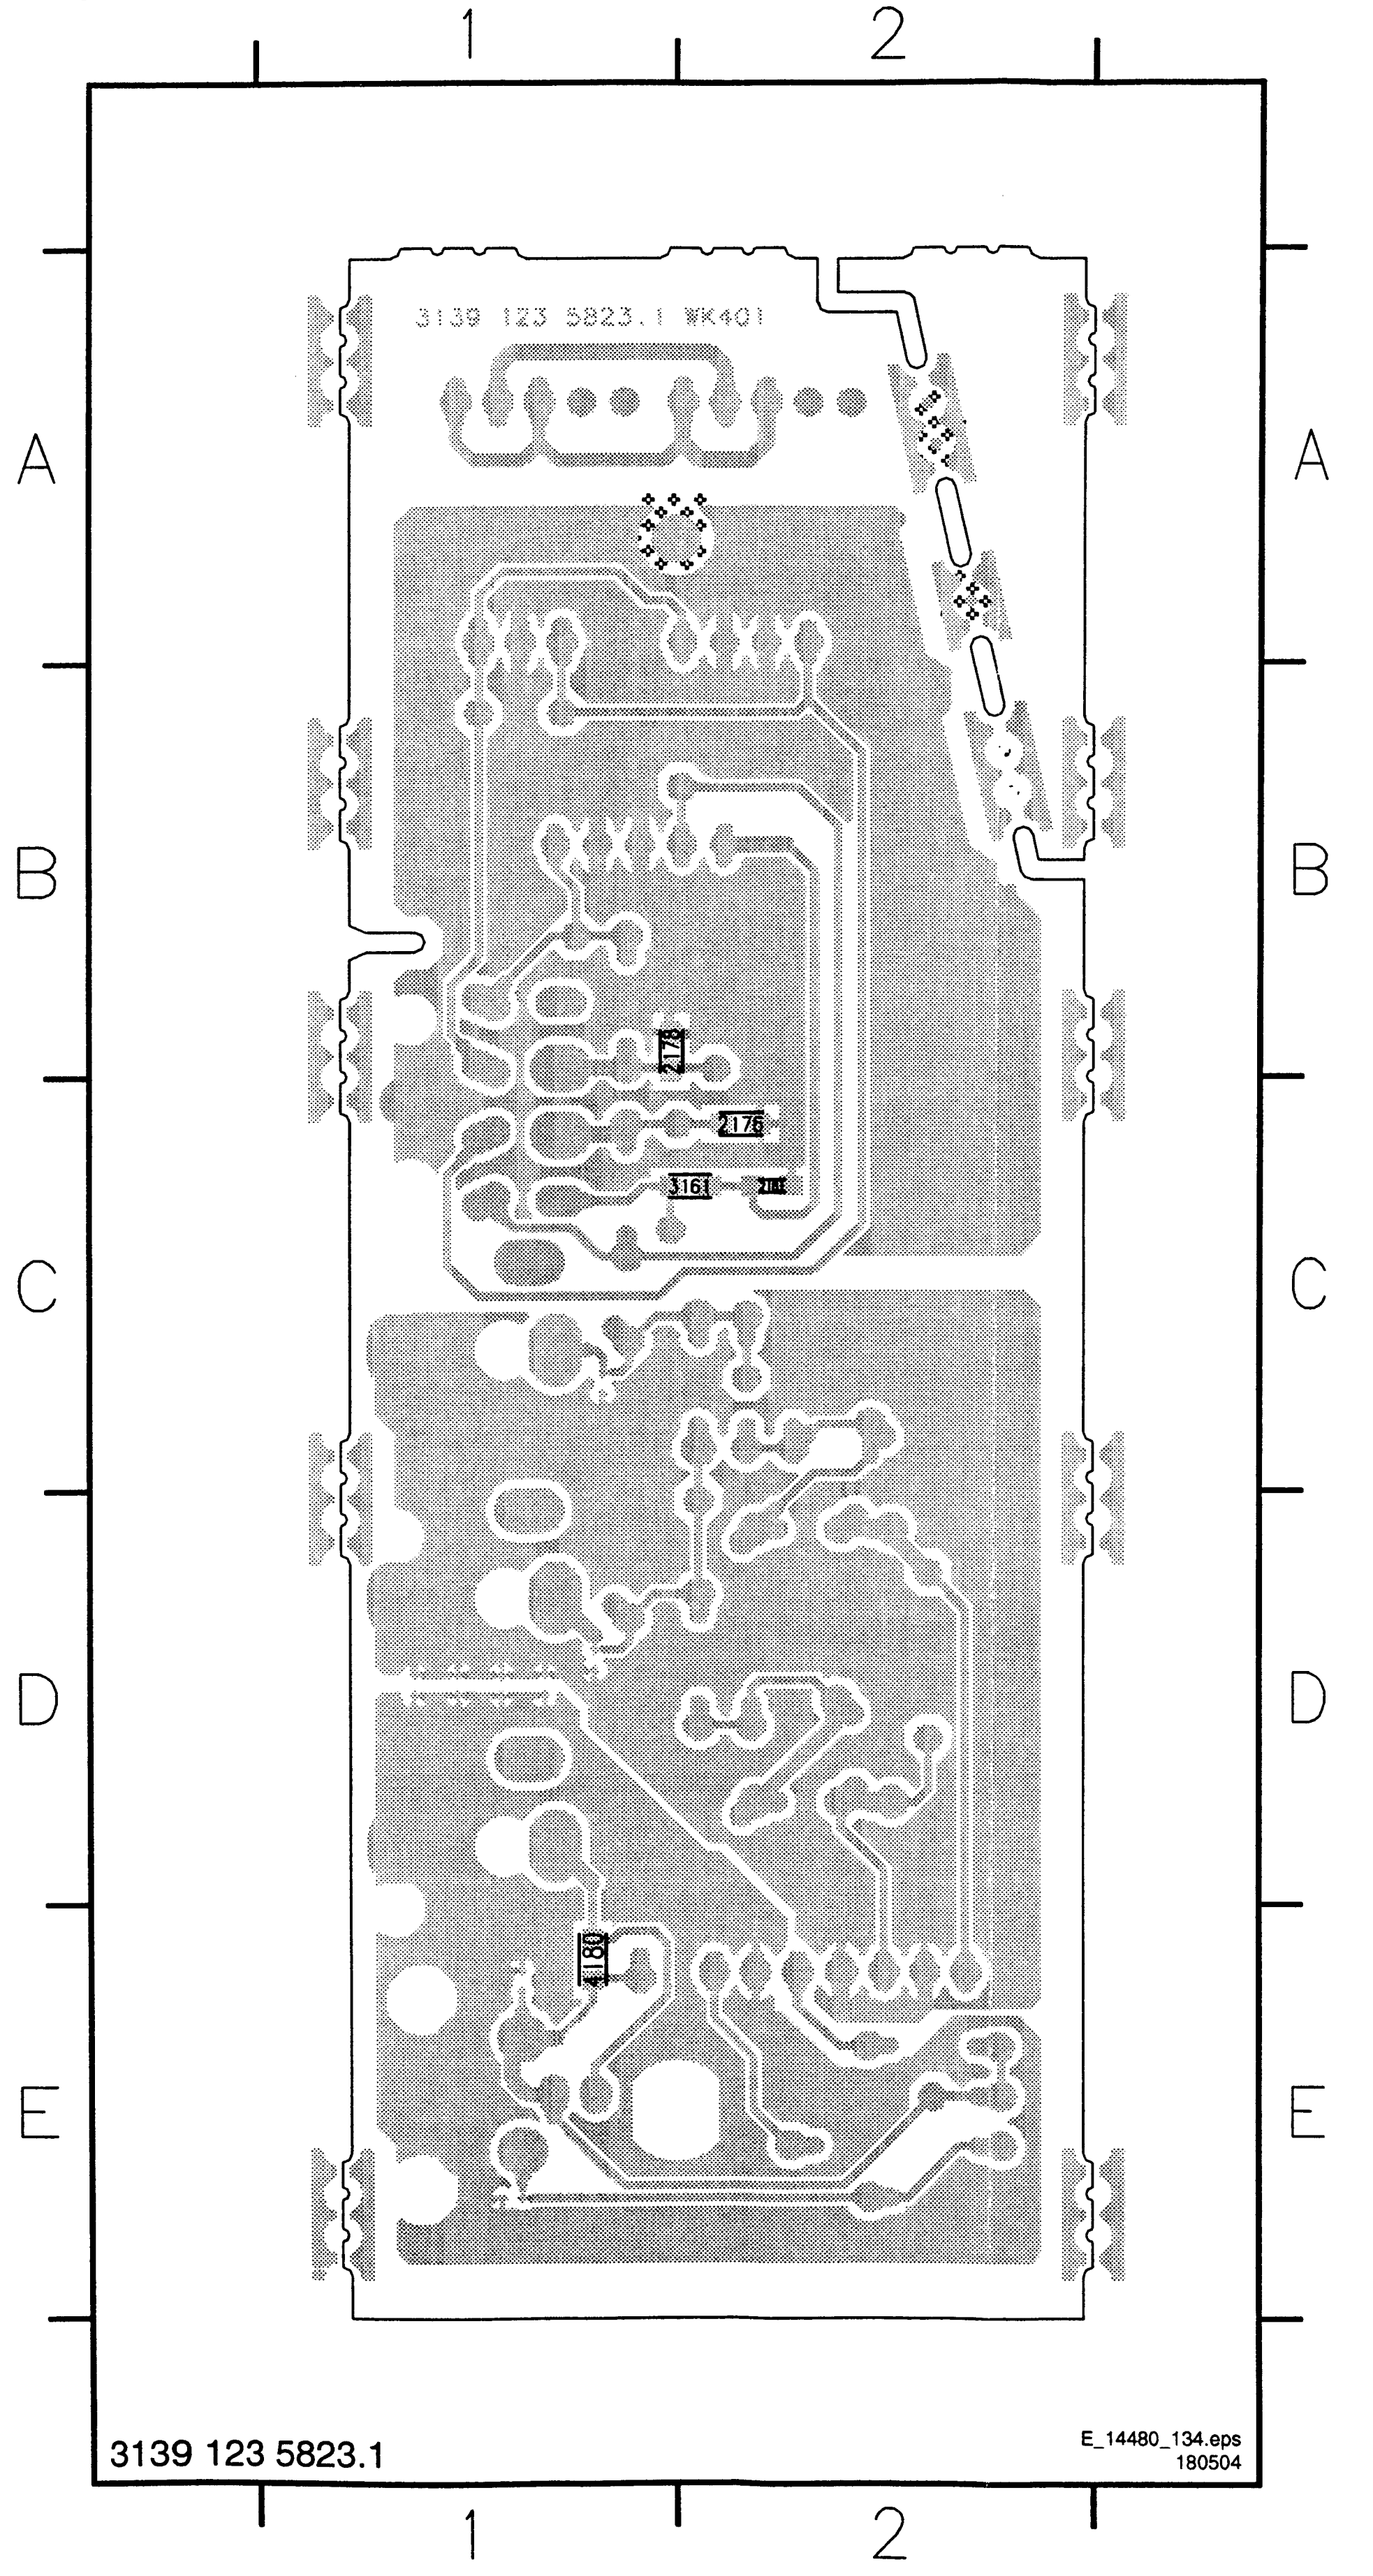
1
2
A
B
C
D
E
3139 123 5823.1 WK401
2176
3161
4180
3139 123 5823.1

E_14480_134.eps
180504

Top Control Panel (PV2)

1010 A1	1012 B3	1014 B2	3011 A2	3013 A3	3015 A3	F011 A2	I011 A2	I017 B3
1011 B3	1013 B2	3010 A2	3012 A2	3014 B3	3016 B3	F012 A3	I013 A3	I018 A3

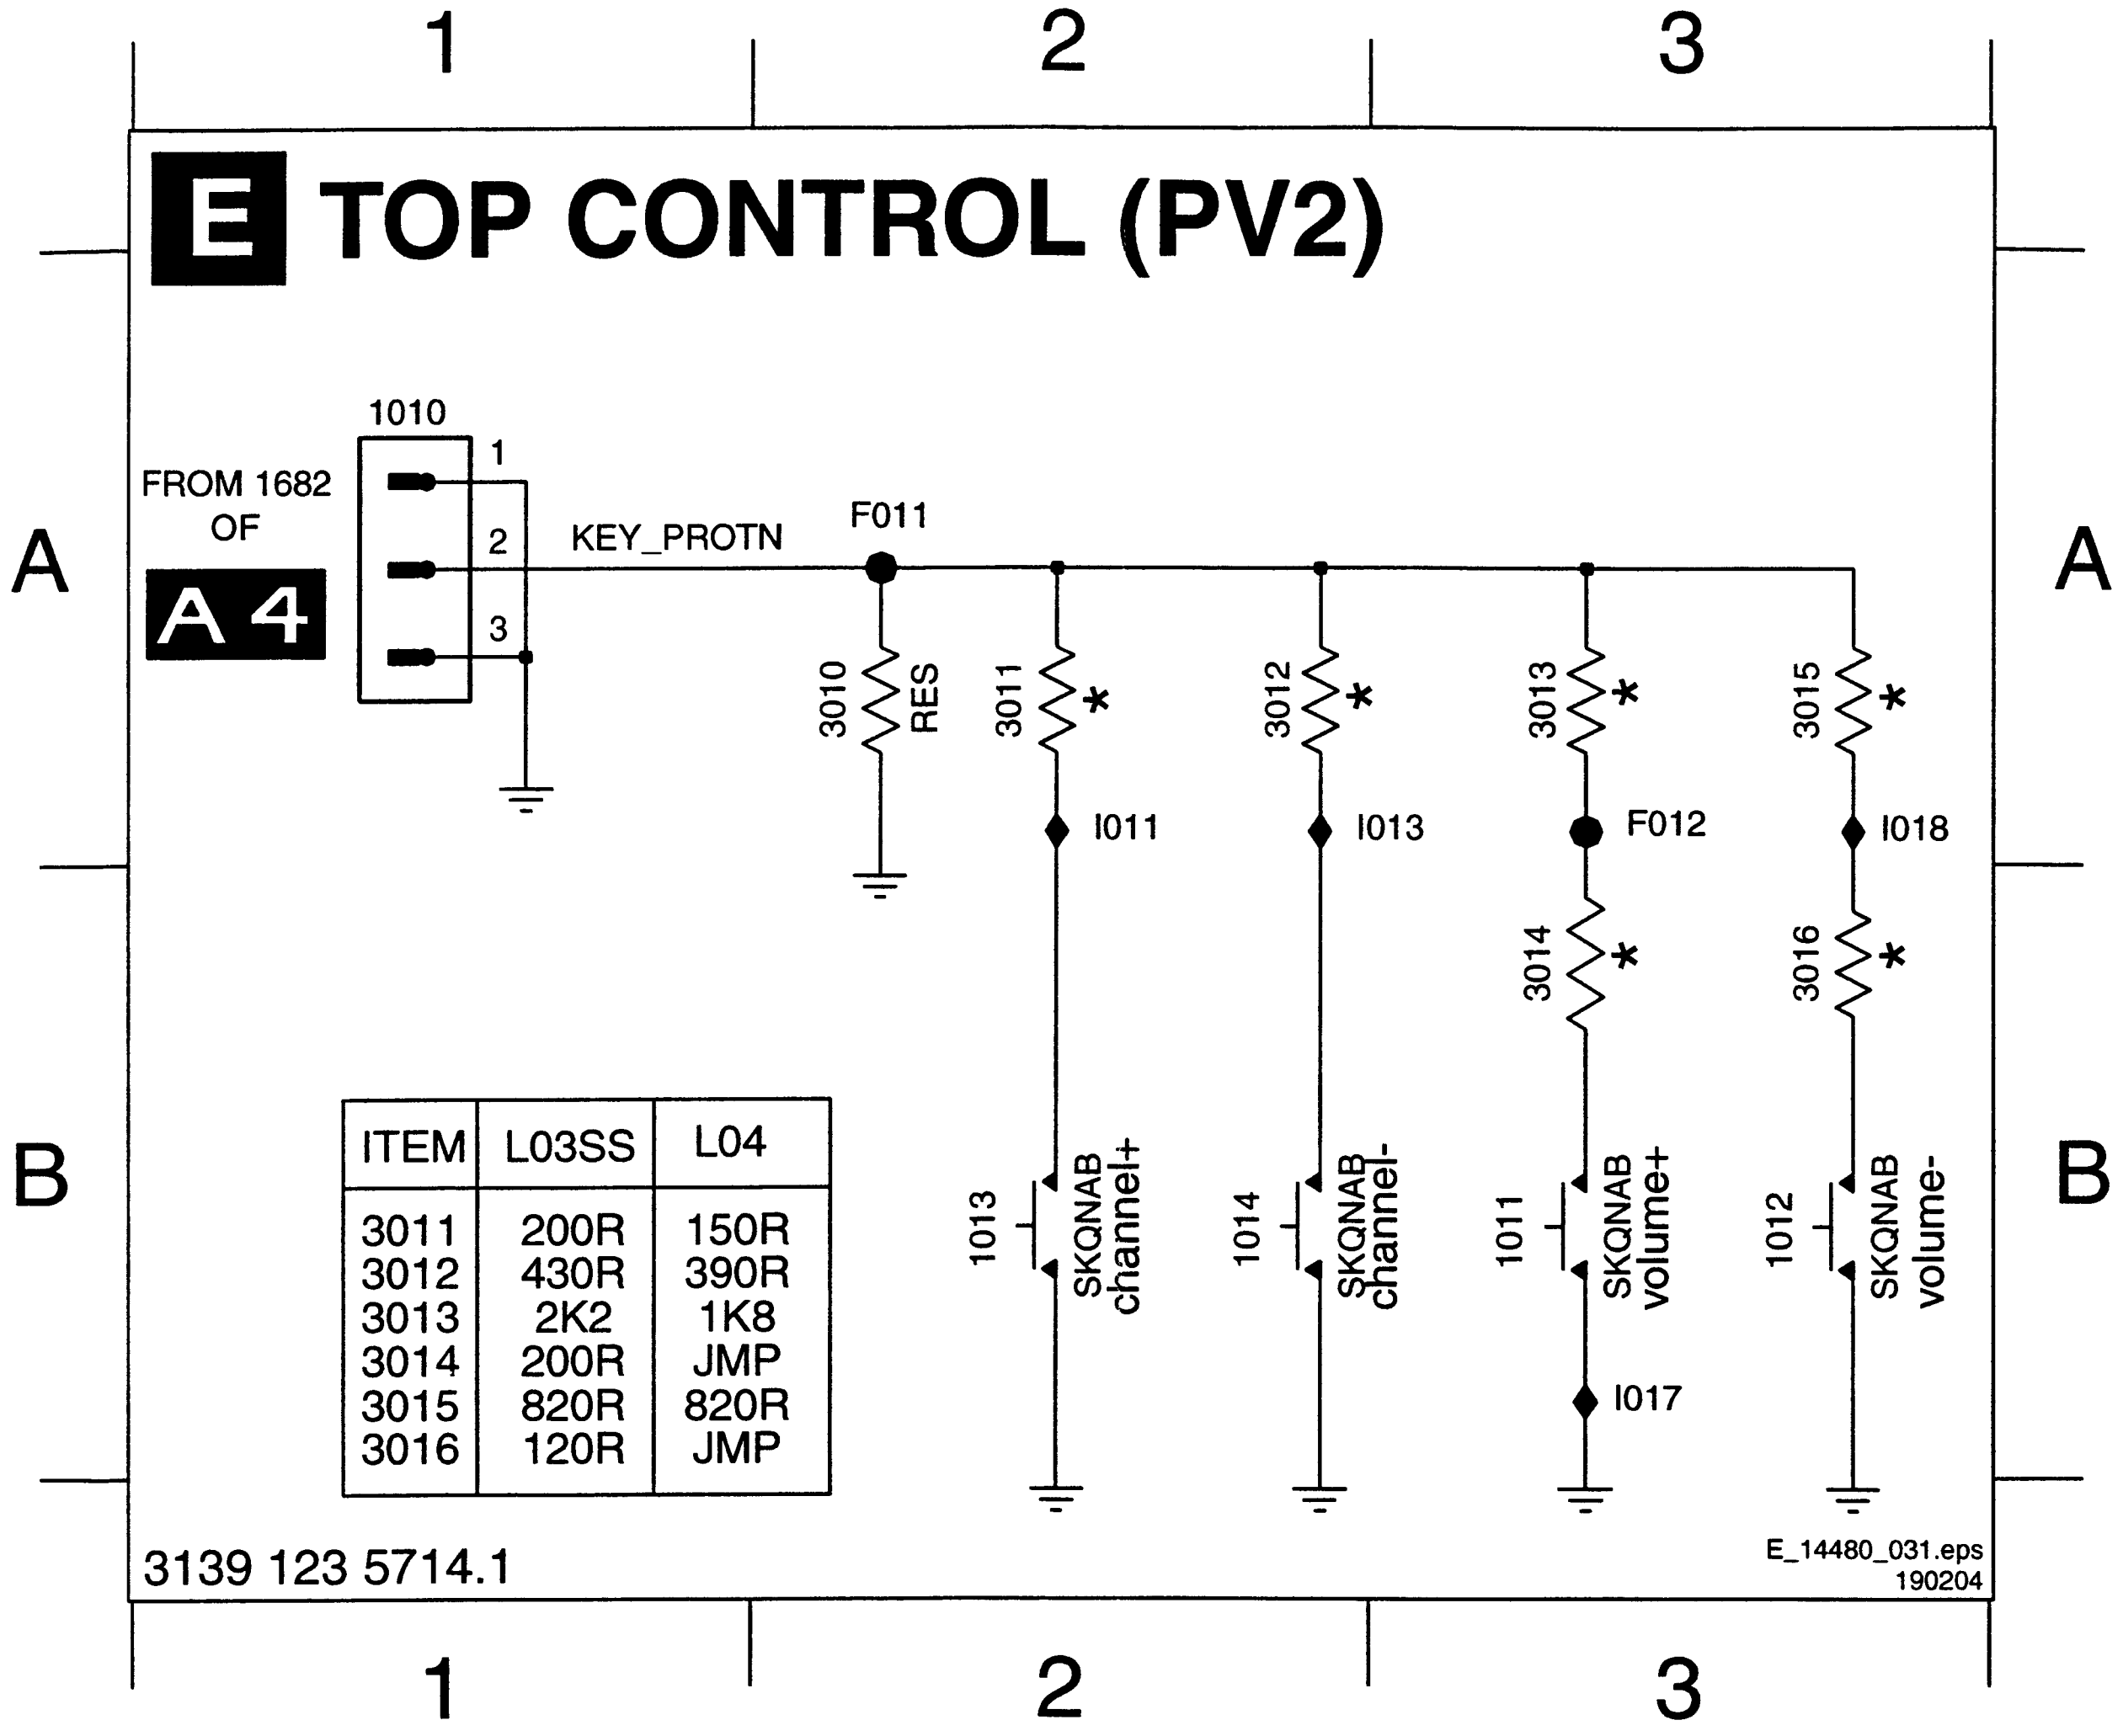
1
2
3
A
B
E TOP CONTROL (PV2)
1010
FROM 1682 OF
A4
1
2
3
KEY_PROTN
F011
3010 RES
3011 *
3012 *
3013 *
3015 *
I011
I013
F012
I018
3014 *
3016 *
1013 SKQNAB channel+
1014 SKQNAB channel-
1011 SKQNAB volume+
1012 SKQNAB volume-
I017
3139 123 5714.1
E_14480_031.eps
190204

ITEM	L03SS	L04
3011	200R	150R
3012	430R	390R
3013	2K2	1K8
3014	200R	JMP
3015	820R	820R
3016	120R	JMP

Layout Top Control Panel (PV2) (Top Side)

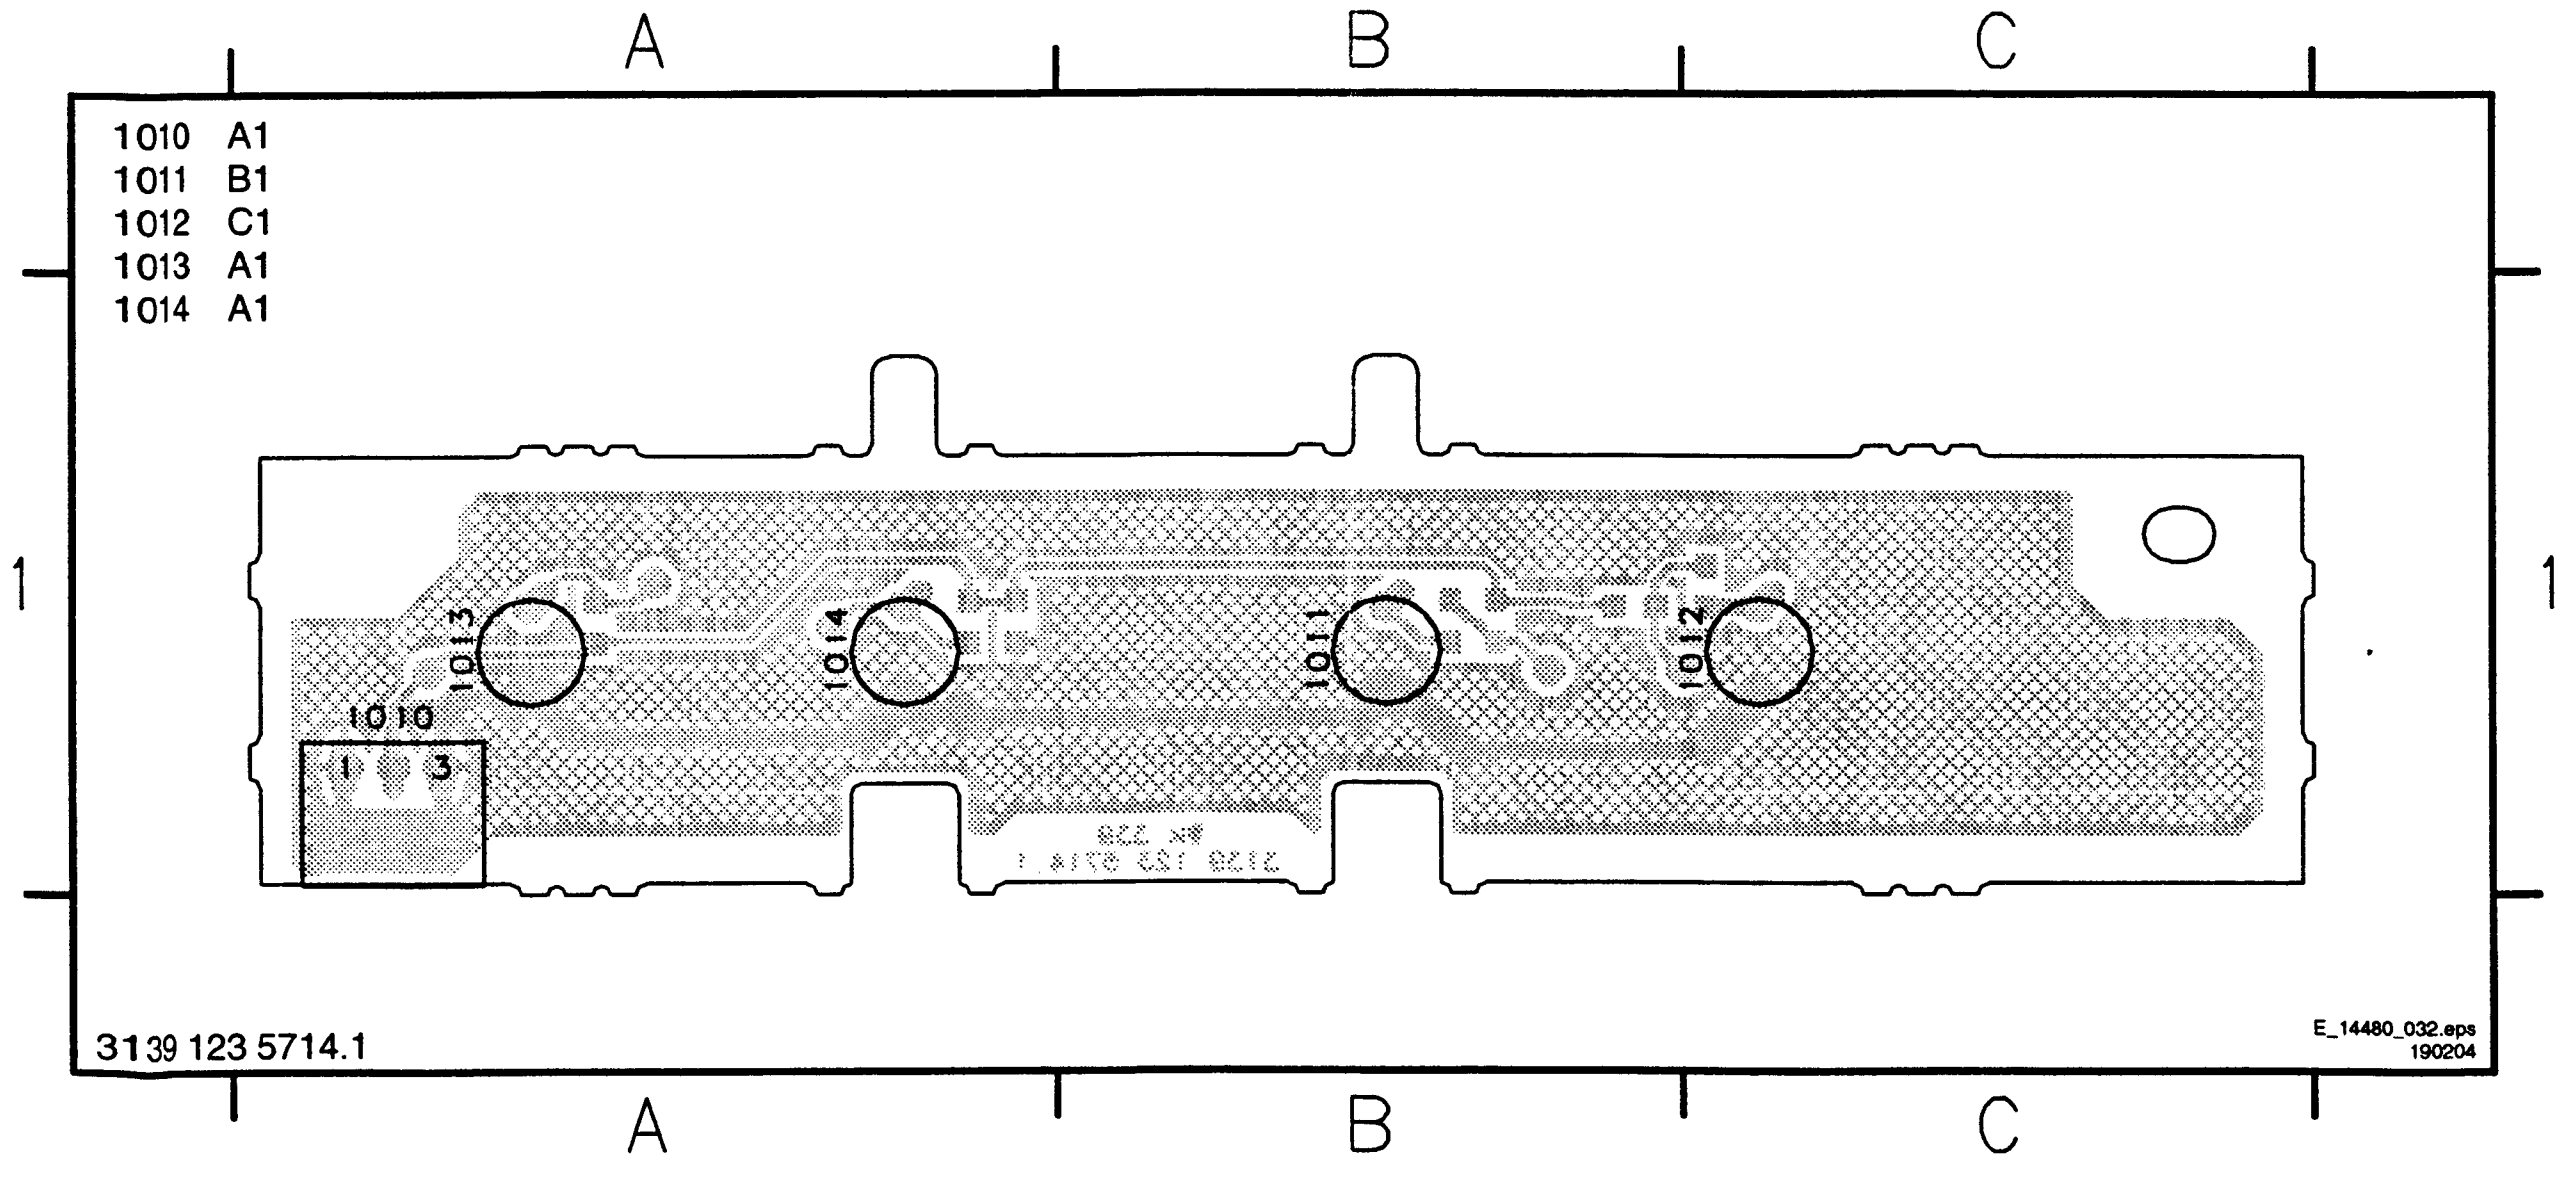
A
B
C
1
1010 A1
1011 B1
1012 C1
1013 A1
1014 A1
1013
1014
1011
1012
1010
3139 123 5714.1
E_14480_032.eps
190204

Layout Top Control Panel (PV2) (Bottom Side)

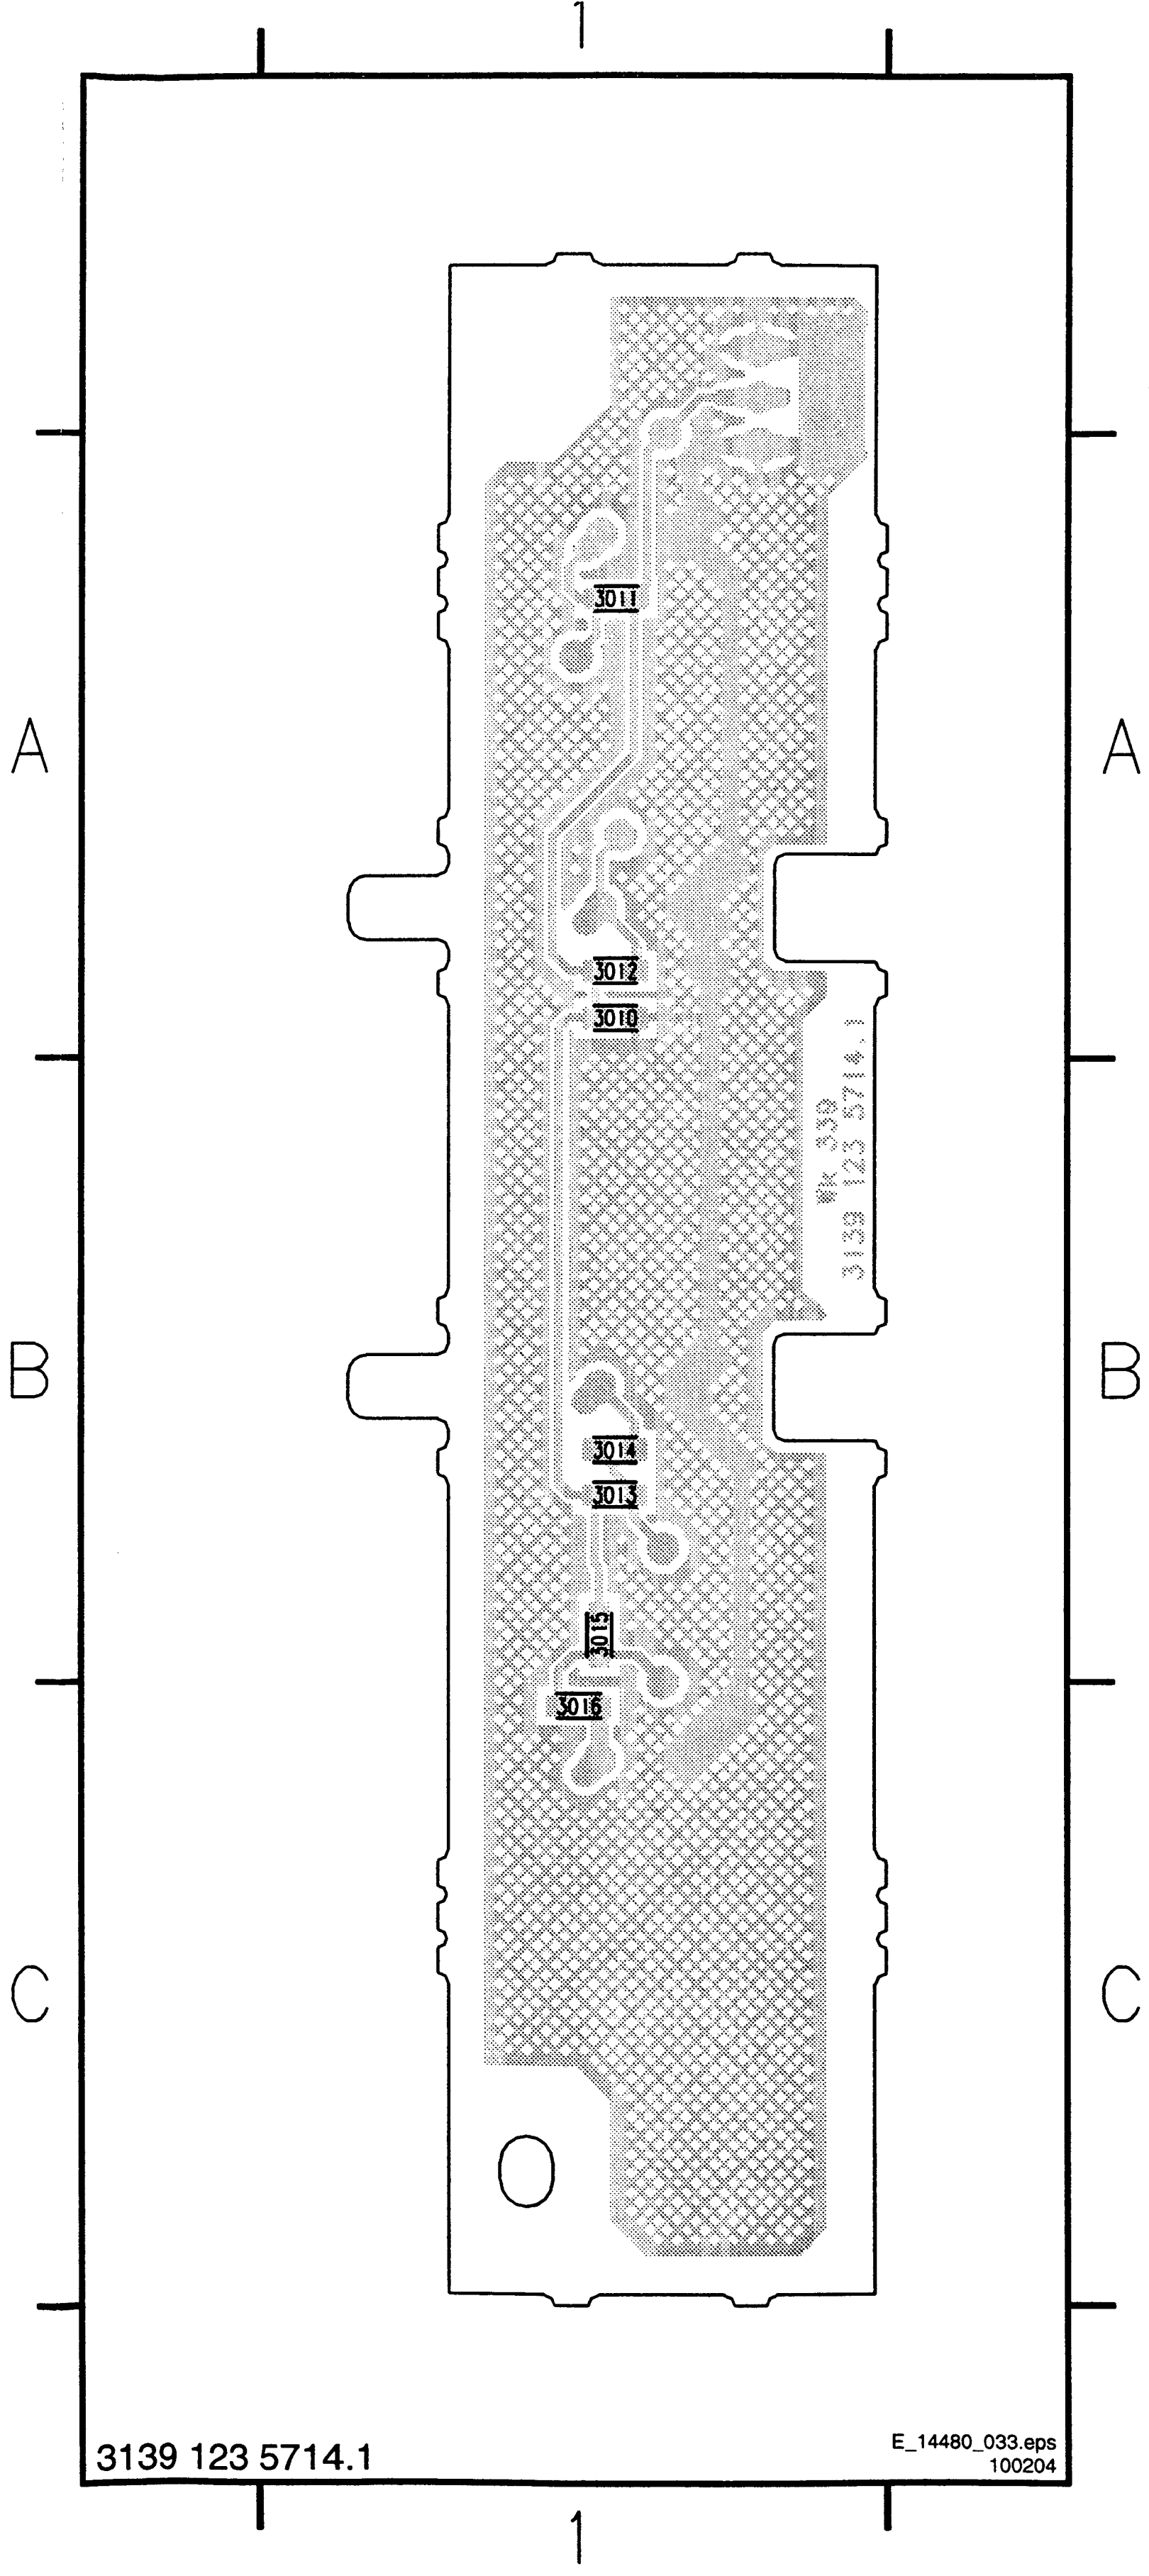
1
A
B
C
3011
3012
3010
3014
3013
3015
3016
3139 123 5714.1
E_14480_033.eps
100204

3010 A1
3011 A1
3012 A1
3013 B1
3014 B1
3015 B1
3016 C1

Top Control Panel (FL-13)

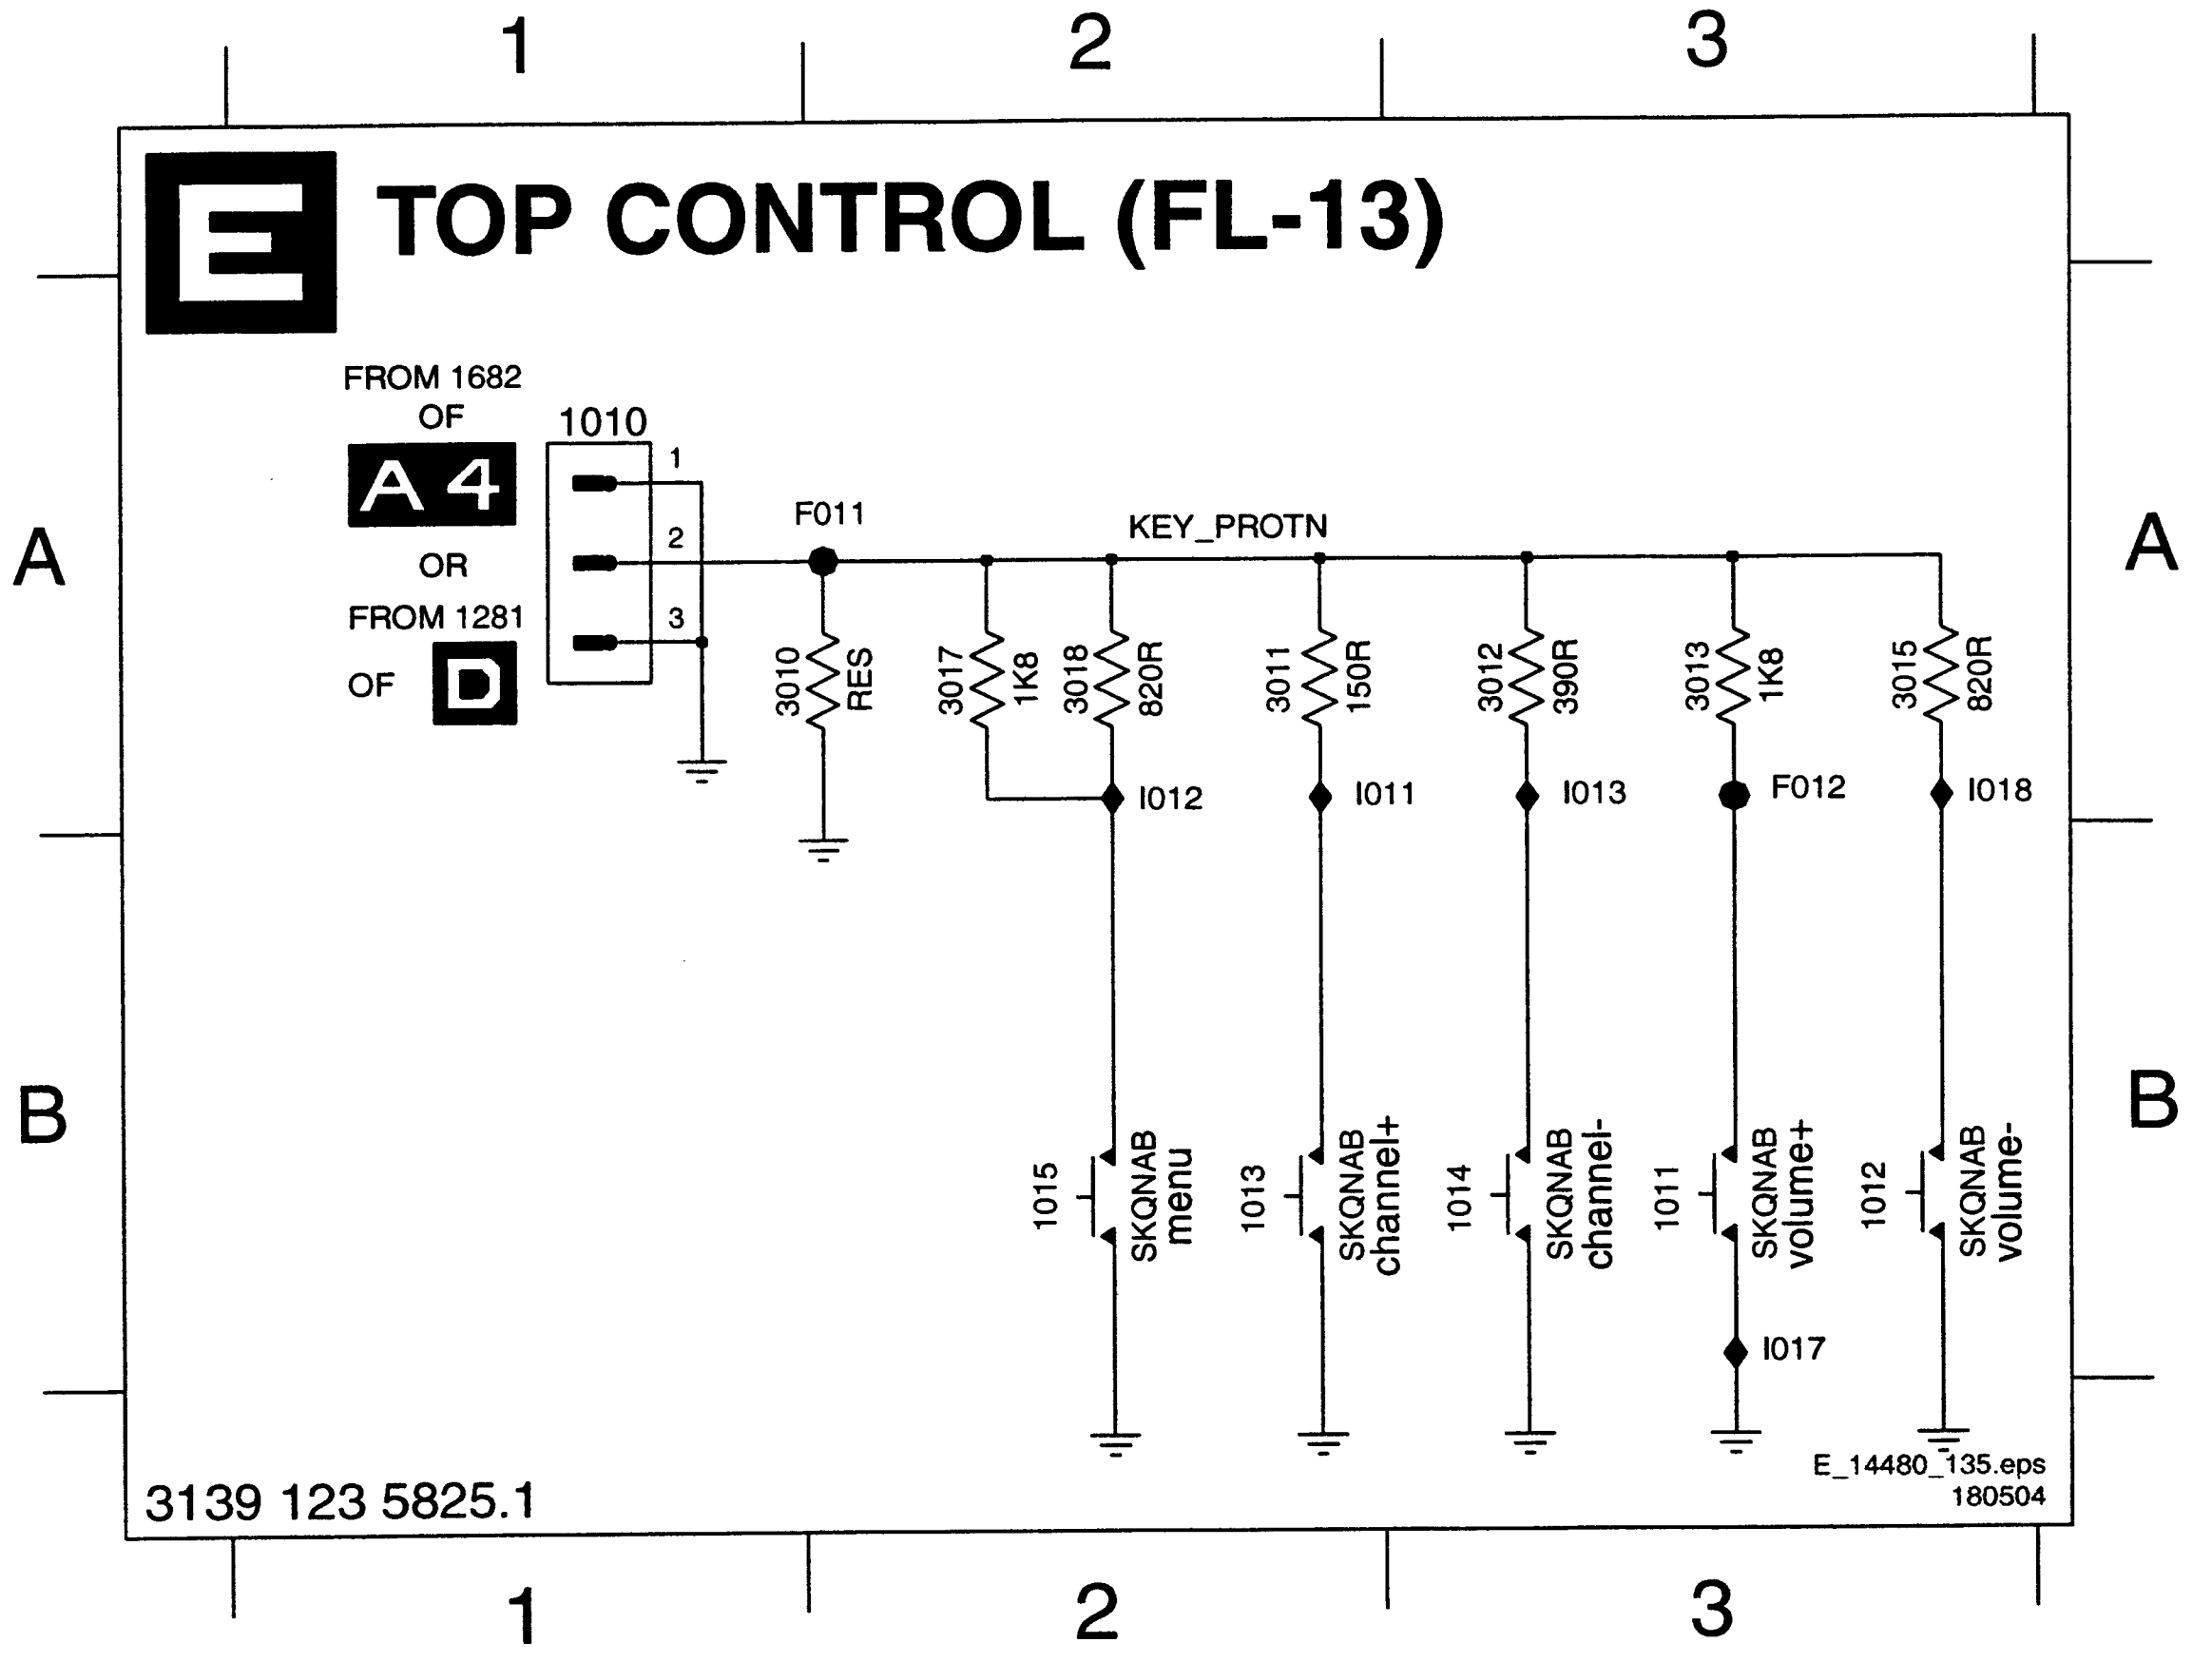
E
TOP CONTROL (FL-13)
FROM 1682 OF
A4
OR
FROM 1281 OF
D
1010
1
2
3
F011
KEY_PROTN
3010 RES
3017 1K8
3018 820R
3011 150R
3012 390R
3013 1K8
3015 820R
I012
I011
I013
F012
I018
1015 SKQNAB menu
1013 SKQNAB channel+
1014 SKQNAB channel-
1011 SKQNAB volume+
1012 SKQNAB volume-
I017
3139 123 5825.1
E_14480_135.eps
180504
1
2
3
A
B

1010	A1
1011	B3
1012	B3
1013	B2
1014	B3
1015	B2
3010	A1
3011	A2
3012	A3
3013	A3
3015	A3
3017	A2
3018	A2
F011	A2
F012	A3
I011	A3
I012	A2
I013	A3
I017	B3
I018	A3

Layout Top Control Panel (FL-13)

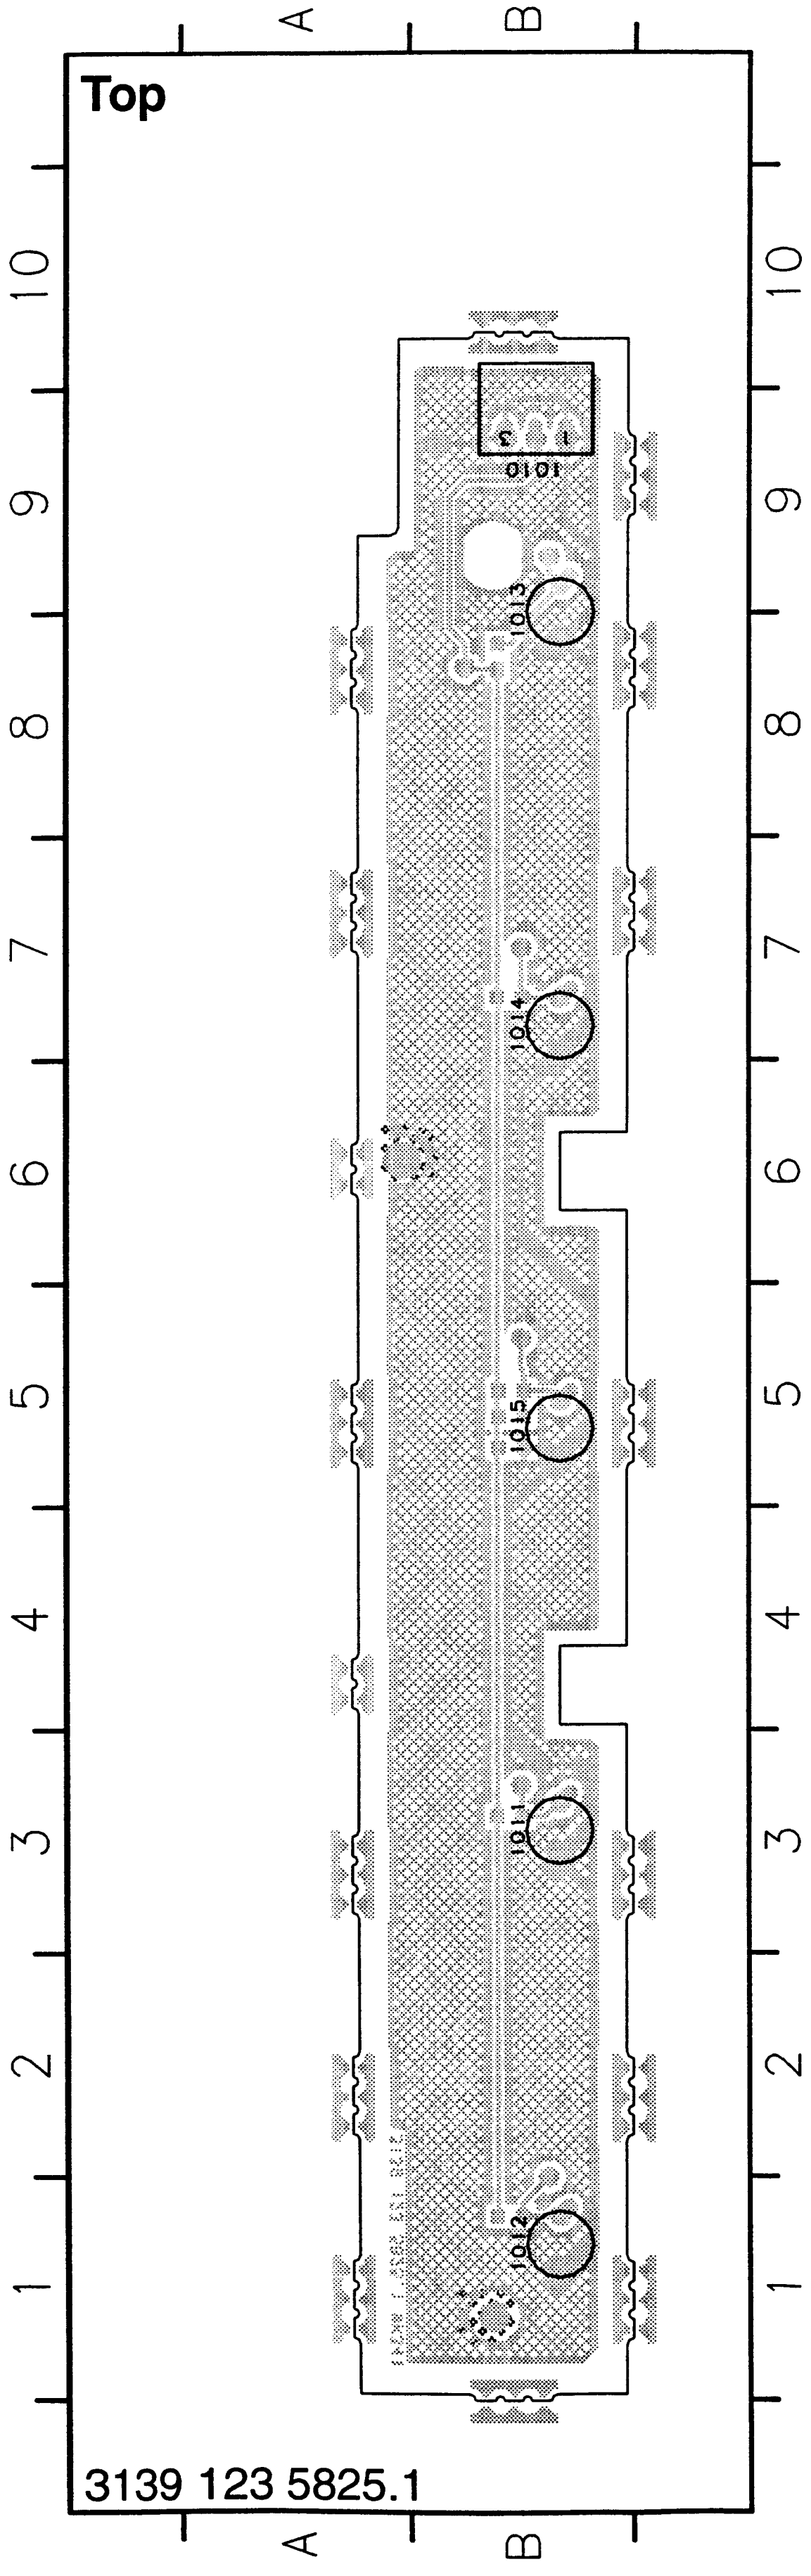
Top
A
B
1
2
3
4
5
6
7
8
9
10
1010
1013
1014
1015
1011
1012
3139 123 5825.1

1010	B9
1011	B3
1012	B1
1013	B8
1014	B7
1015	B5

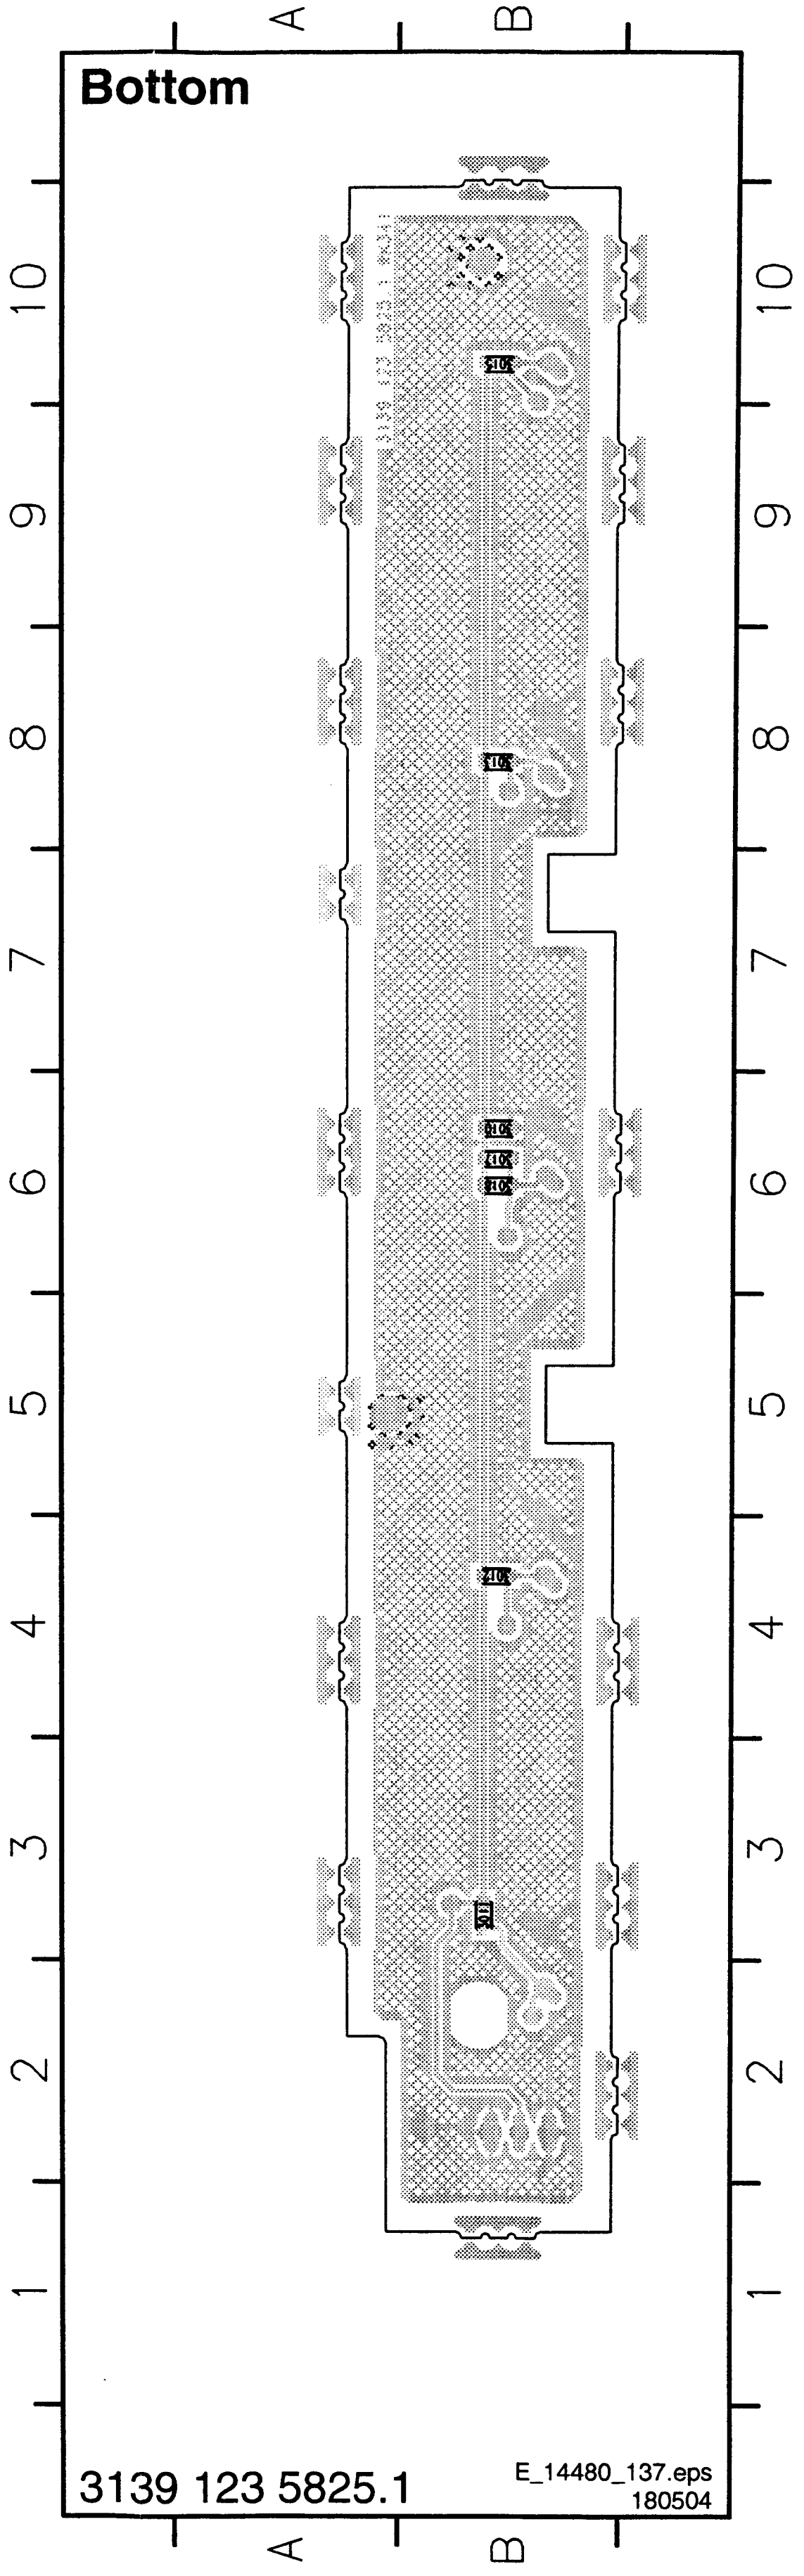
Bottom
A
B
1
2
3
4
5
6
7
8
9
10
3139 123 5825.1
E_14480_137.eps
180504

3010	B6
3011	B3
3012	B4
3013	B8
3015	B10
3017	B6
3018	B6

Power Supply PIP Panel

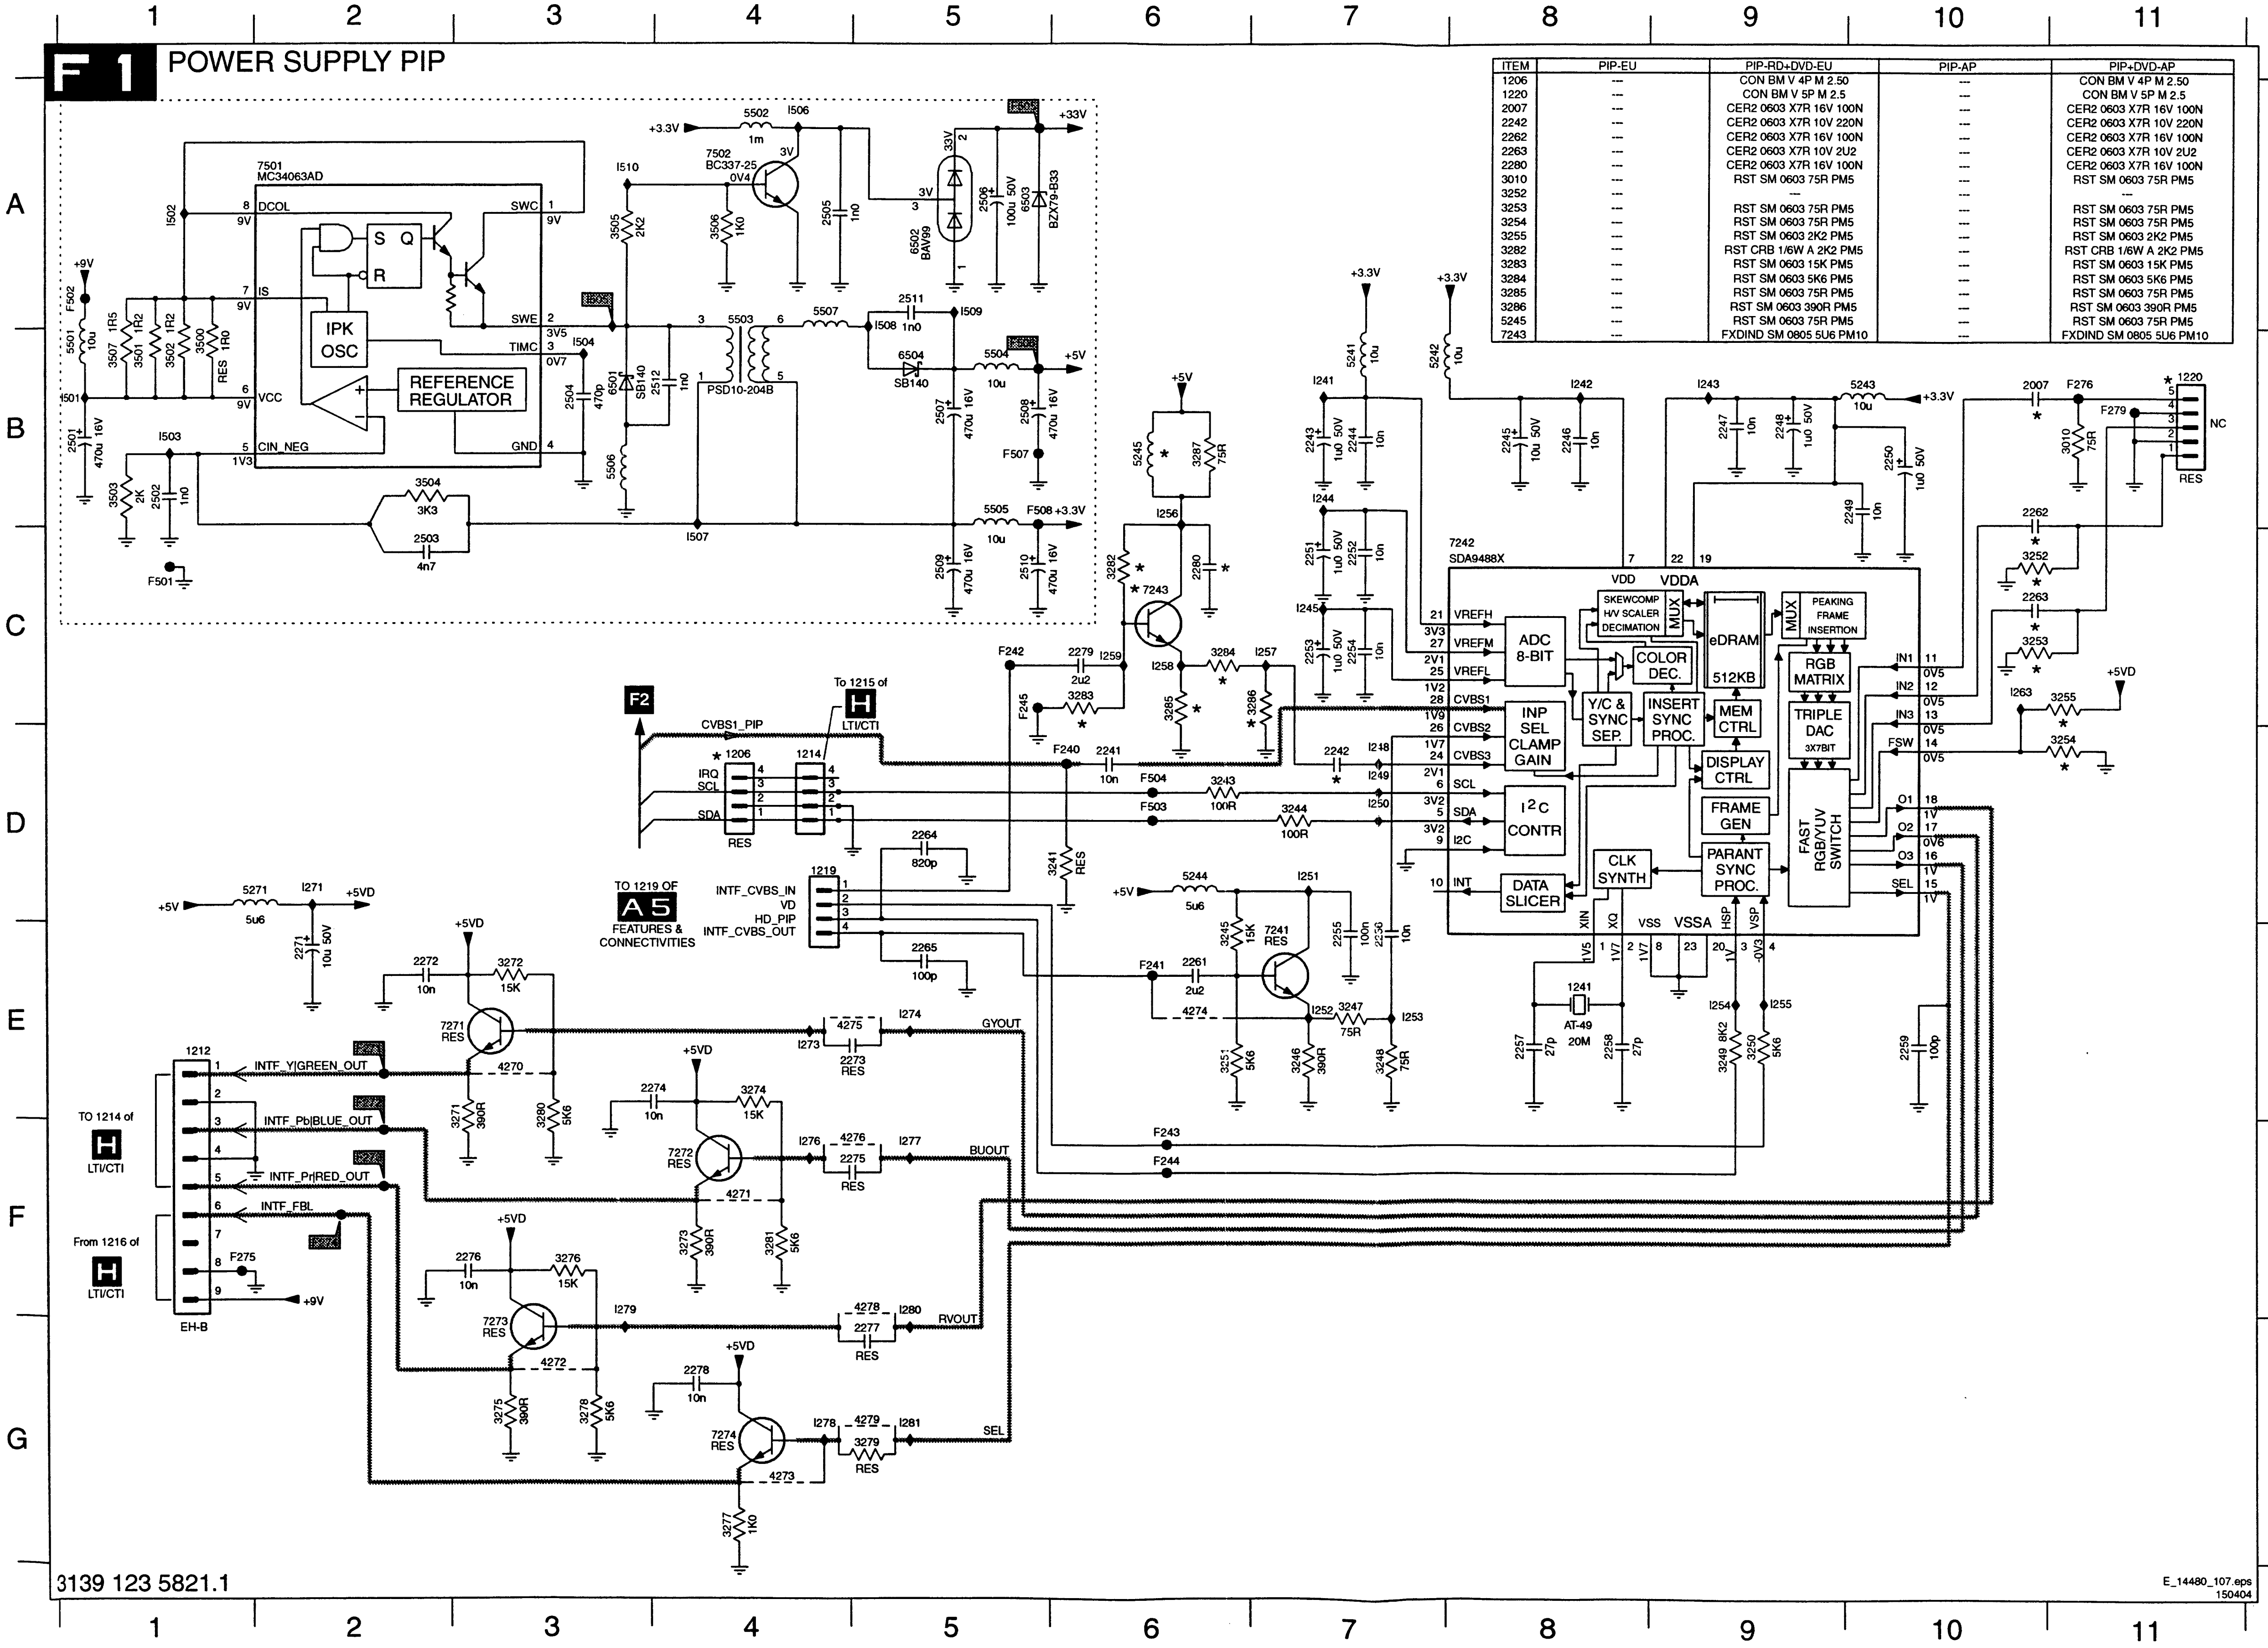
F 1
POWER SUPPLY PIP
7501
MC34063AD
DCOL
SWC
IS
SWE
TIMC
VCC
CIN_NEG
GND
IPK
OSC
REFERENCE
REGULATOR
S Q
R
7502
BC337-25
5502
1m
5503
PSD10-204B
5507
6502
BAW99
6503
BZX79-B33
6504
SB140
6501
SB140
+3.3V
+33V
+9V
+5V
5504
5505
F508 +3.3V
F501
F502
7242
SDA9488X
VDD
VDDA
VREFH
VREFM
VREFL
CVBS1
CVBS2
CVBS3
SCL
SDA
I2C
INT
ADC
8-BIT
INP
SEL
CLAMP
GAIN
I2C
CONTR
DATA
SLICER
CLK
SYNTH
SKEWCOMP
H/V SCALER
DECIMATION
MUX
COLOR
DEC.
Y/C &
SYNC
SEP.
INSERT
SYNC
PROC.
eDRAM
512KB
MEM
CTRL
DISPLAY
CTRL
FRAME
GEN
PARANT
SYNC
PROC.
PEAKING
FRAME
INSERTION
RGB
MATRIX
TRIPLE
DAC
3X9BIT
FAST
RGB/YUV
SWITCH
IN1
IN2
IN3
FSW
O1
O2
O3
SEL
XIN
XQ
VSS
VSSA
HSP
VSP
1241
AT-49
20M
7243
7241
RES
1220
NC
RES
F2
CVBS1_PIP
To 1215 of
H
LTI/CTI
1206
1214
IRQ
SCL
SDA
RES
1219
TO 1219 OF
A5
FEATURES &
CONNECTIVITIES
INTF_CVBS_IN
VD
HD_PIP
INTF_CVBS_OUT
1212
INTF_Y|GREEN_OUT
INTF_Pb|BLUE_OUT
INTF_Pr|RED_OUT
INTF_FBL
TO 1214 of
H
LTI/CTI
From 1216 of
H
LTI/CTI
EH-B
+9V
7271
RES
7272
RES
7273
RES
7274
RES
GYOUT
BUOUT
RVOUT
SEL
+5VD
F243
F244
5271
5u6
5244
5u6
3139 123 5821.1
E_14480_107.eps
150404

ITEM	PIP-EU	PIP-RD+DVD-EU	PIP-AP	PIP+DVD-AP
1206	---	CON BM V 4P M 2.50	---	CON BM V 4P M 2.50
1220	---	CON BM V 5P M 2.5	---	CON BM V 5P M 2.5
2007	---	CER2 0603 X7R 16V 100N	---	CER2 0603 X7R 16V 100N
2242	---	CER2 0603 X7R 10V 220N	---	CER2 0603 X7R 10V 220N
2262	---	CER2 0603 X7R 16V 100N	---	CER2 0603 X7R 16V 100N
2263	---	CER2 0603 X7R 10V 2U2	---	CER2 0603 X7R 10V 2U2
2280	---	CER2 0603 X7R 16V 100N	---	CER2 0603 X7R 16V 100N
3010	---	RST SM 0603 75R PM5	---	RST SM 0603 75R PM5
3252	---	---	---	---
3253	---	RST SM 0603 75R PM5	---	RST SM 0603 75R PM5
3254	---	RST SM 0603 75R PM5	---	RST SM 0603 75R PM5
3255	---	RST SM 0603 2K2 PM5	---	RST SM 0603 2K2 PM5
3282	---	RST CRB 1/6W A 2K2 PM5	---	RST CRB 1/6W A 2K2 PM5
3283	---	RST SM 0603 15K PM5	---	RST SM 0603 15K PM5
3284	---	RST SM 0603 5K6 PM5	---	RST SM 0603 5K6 PM5
3285	---	RST SM 0603 75R PM5	---	RST SM 0603 75R PM5
3286	---	RST SM 0603 390R PM5	---	RST SM 0603 390R PM5
5245	---	RST SM 0603 75R PM5	---	RST SM 0603 75R PM5
7243	---	FXDIND SM 0805 5U6 PM10	---	FXDIND SM 0805 5U6 PM10

1206	D4
1212	E1
1214	D4
1219	E4
1220	B11
1241	E8
2007	B10
2241	D6
2242	D7
2243	B7
2244	B7
2245	B8
2246	B8
2247	B9
2248	B9
2249	B10
2250	B10
2251	C7
2252	C7
2253	C7
2254	C7
2255	E7
2256	E7
2257	E8
2258	E8
2259	E10
2261	E6
2262	B10
2263	C10
2264	D5
2265	E5
2271	E2
2272	E2
2273	E5
2274	E4
2275	F5
2276	F3
2277	G5
2278	G4
2279	C6
2280	C6
2501	B1
2502	B1
2503	C2
2504	B3
2505	A4
2506	A5
2507	B5
2508	B5
2509	C5
2510	C5
2511	A5
2512	B4
3010	B11
3241	D6
3243	D6
3244	D7
3245	E6
3246	E7
3247	E7
3248	E7
3249	E9
3250	E9
3251	E6
3252	C10
3253	C10
3254	D11
3255	C11
3271	E3
3272	E3
3273	F4
3274	E4
3275	G3
3276	F3
3277	G4
3278	G3
3279	G5
3280	E3
3281	F4
3282	C6
3283	C6
3284	C6
3285	C6
3286	C7
3287	B6
3500	B1
3501	B1
3502	B1
3503	B1
3504	B2
3505	A3
3506	A4
3507	B1
4270	E3
4271	F4
4272	G3
4273	G4
4274	E6
4275	E4
4276	F5
4278	F5
4279	G5
5241	B7
5242	B7
5243	B10
5244	D6
5245	B6
5271	D2
5501	B1
5502	A4
5503	A4
5504	B5
5505	B5
5506	B3
5507	A4
6501	B3
6502	A5
6503	A5
6504	B5
7241	E7
7242	C8
7243	C6
7271	E3
7272	F4
7273	G3
7274	G4
7501	A2
7502	A4
F240	D6
F241	E6
F242	C5
F243	F6
F244	F6
F245	C5
F271	E2
F272	F2
F273	F2
F274	F2
F275	F1
F276	B11
F279	B11
F501	C1
F502	A1
F503	D6
F504	D6
F505	A5
F506	B5
F507	B5
F508	B5
I241	B7
I242	B8
I243	B9
I244	B7
I245	C7
I248	D7
I249	D7
I250	D7
I251	D7
I252	E7
I253	E7
I254	E9
I255	E9
I256	B6
I257	C7
I258	C6
I259	C6
I263	C10
I271	D2
I273	E4
I274	E5
I276	F4
I277	F5
I278	G4
I279	F3
I280	F5
I281	G5
I501	B1
I502	A1
I503	B1
I504	B3
I505	A3
I506	A4
I507	C4
I508	A5
I509	A5
I510	A3

Tuner IF and Demodulator PIP Panel

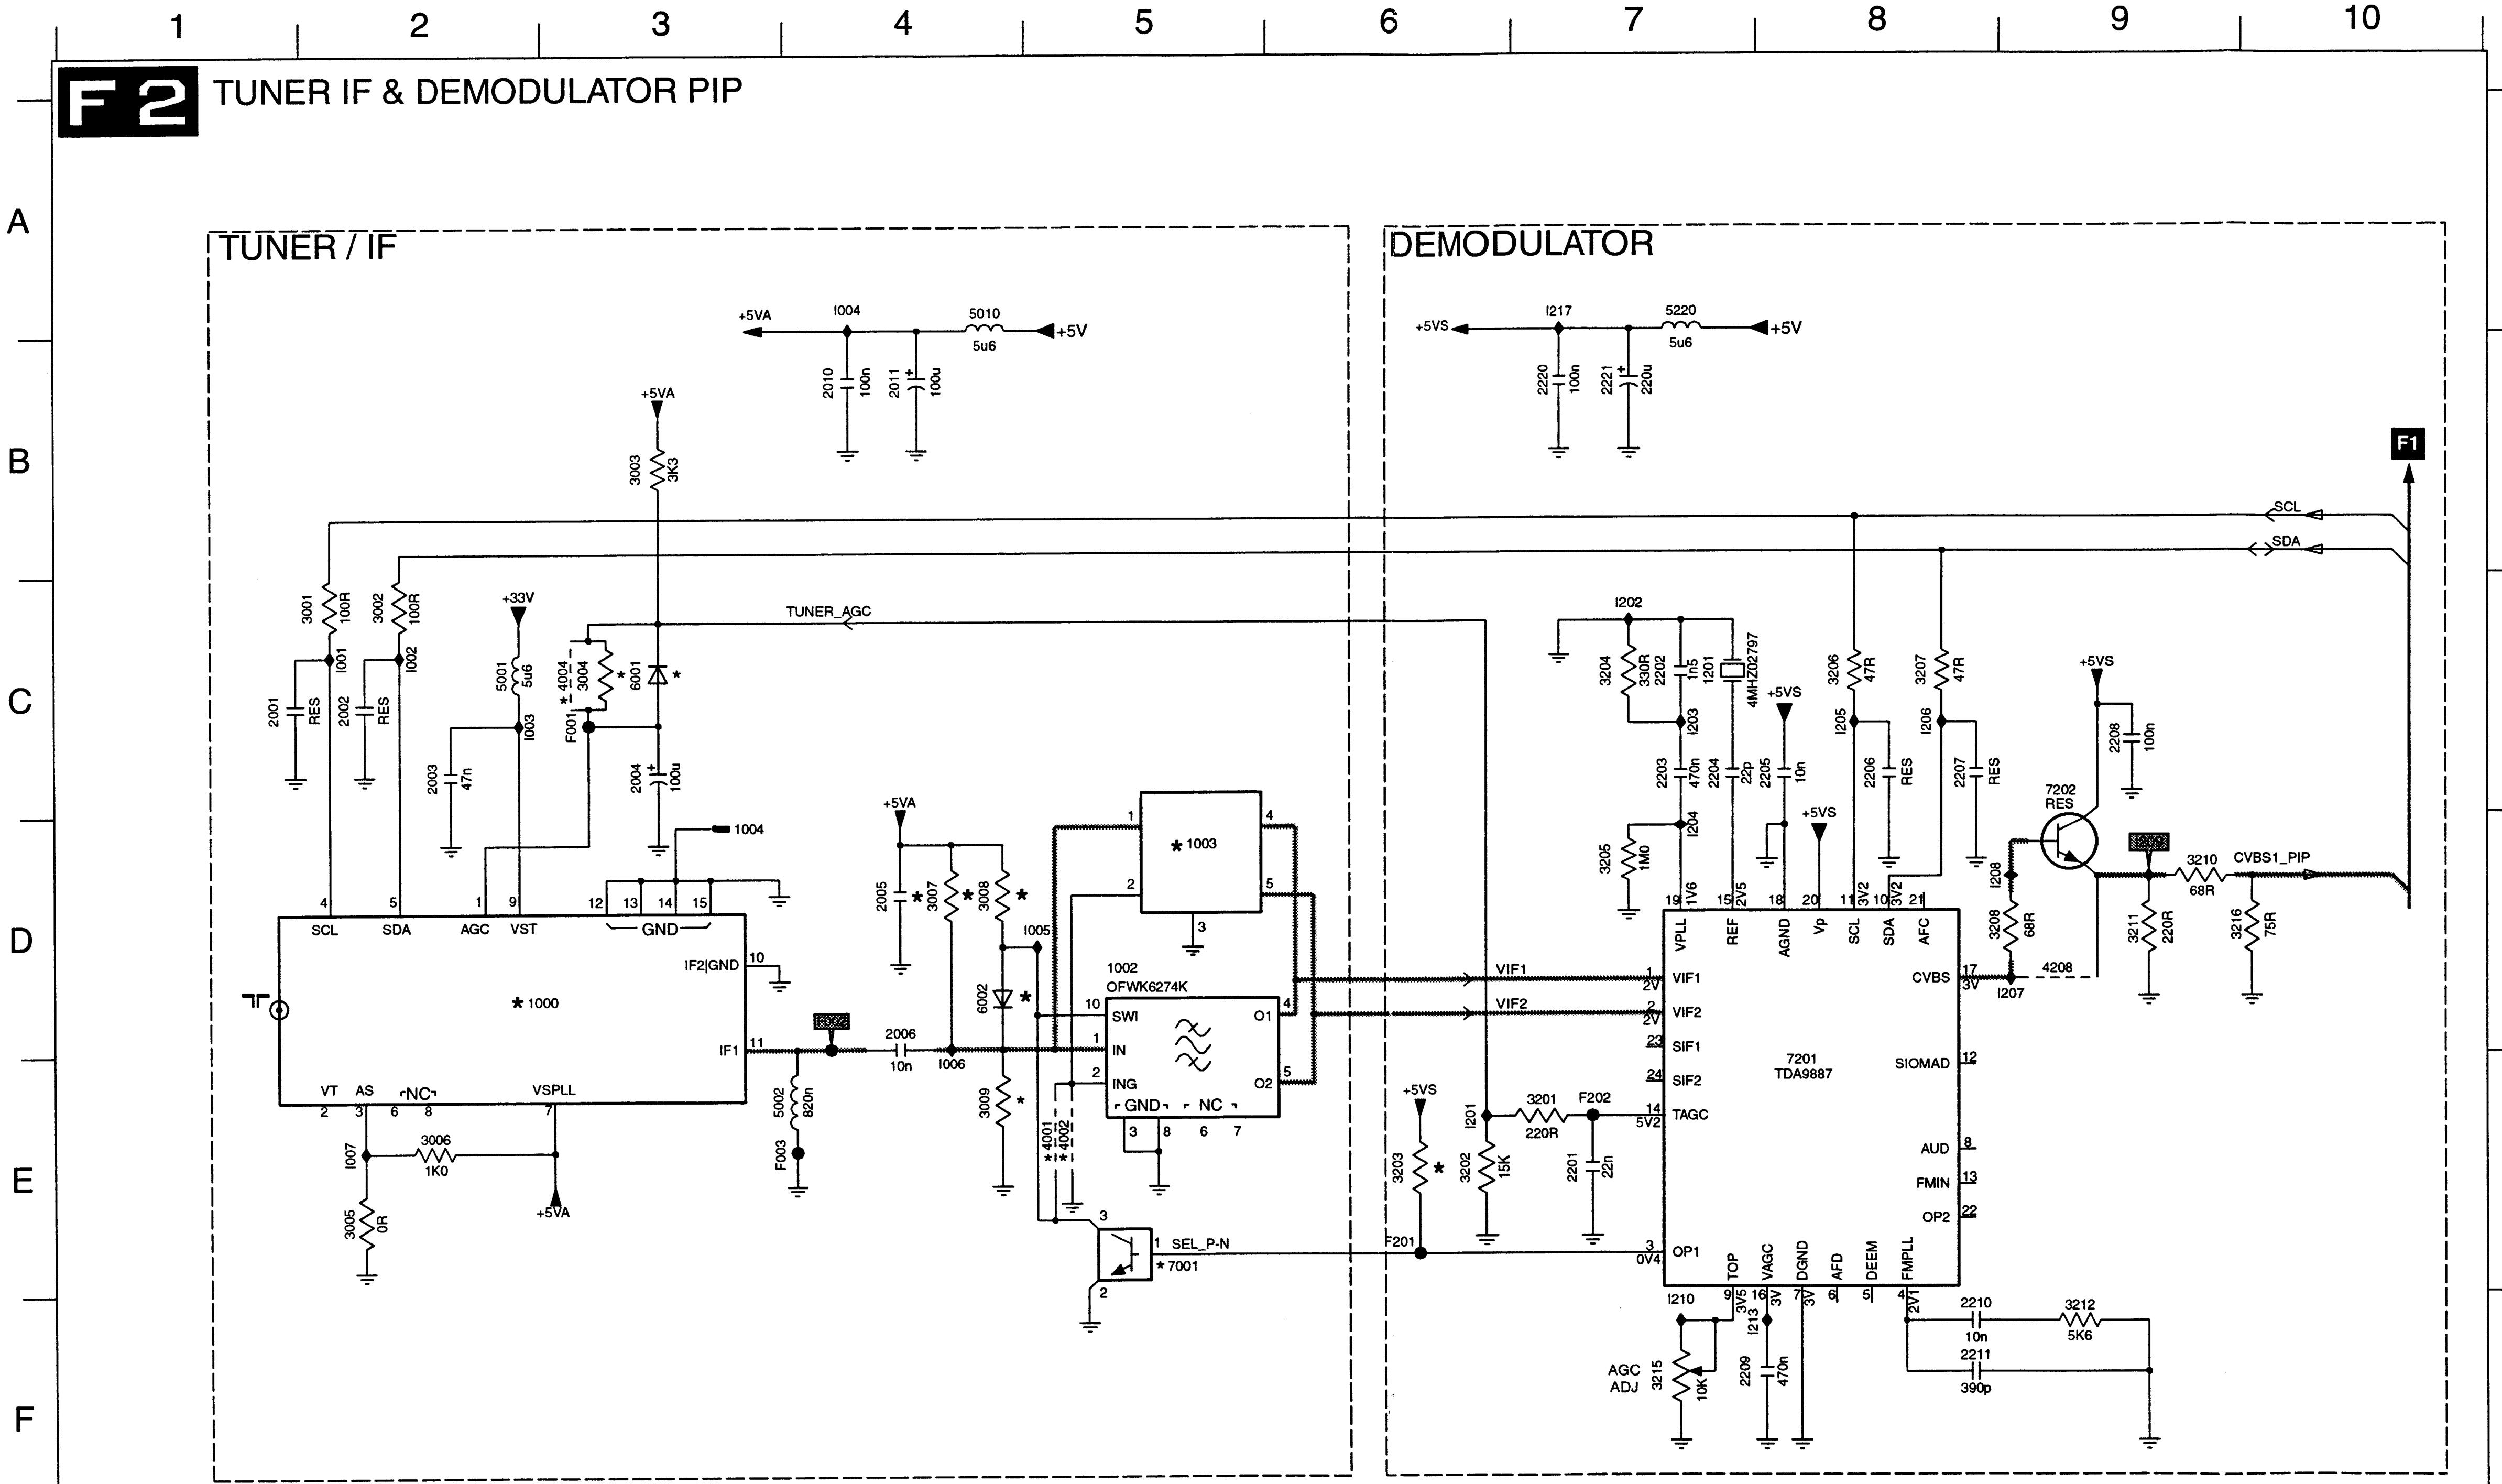
F2
TUNER IF & DEMODULATOR PIP
TUNER / IF
DEMODULATOR
1 2 3 4 5 6 7 8 9 10
A B C D E F G
+5VA
I004
5010
5u6
+5V
2010 100n
2011 100u
3003 3K3
3001 100R
3002 100R
I001
I002
2001 RES
2002 RES
+33V
5001 5u6
I003
2003 47n
4004
3004
6001
F001
2004 100u
1004
TUNER_AGC
SCL
SDA
AGC
VST
GND
IF2|GND
IF1
VT
AS
NC
VSPLL
*1000
3006 1K0
I007
3005 0R
5002 820n
F003
2006 10n
I006
2005
3007
3008
6002
3009
I005
1002
OFWK6274K
*1003
SWI
IN
ING
O1
O2
GND
NC
4001
4002
SEL_P-N
*7001
+5VS
I217
5220
5u6
2220 100n
2221 220u
F1
I202
3204 330R
2202 1n5
I201
4MHZ02797
3206 47R
3207 47R
+5VS
2208 100n
7202 RES
2203 470n
2204 22p
2205 10n
2206 RES
2207 RES
I203
I204
I205
I206
3205 1M0
VIF1
VIF2
VPLL
REF
AGND
Vp
SCL
SDA
AFC
CVBS
SIF1
SIF2
TAGC
7201
TDA9887
SIOMAD
AUD
FMIN
OP2
OP1
TOP
VAGC
DGND
AFD
DEEM
FMPLL
I208
3208 68R
I207
4208
3210 68R
CVBS1_PIP
3211 220R
3216 75R
3203
3202 15K
3201 220R
F202
2201 22n
F201
I210
AGC ADJ
3215 10K
2209 470n
I213
2210 10n
2211 390p
3212 5K6

ITEM	PIP-EU	PIP-RD+DVD-EU	PIP-AP	PIP+DVD-AP
1000	TUNER UV1316E/A I-4	TUNER UV1316T/A I X-3	TUNER UV1316T/A I-4	TUNER UV1316T/A I-4
1003	FIL SAW 38MHZ9 OFWK3953	FIL SAW 38MHZ9 OFWK3953	FIL SAW 38MHZ9 OFWK7257	FIL SAW 38MHZ9 OFWK7257
2005	---	---	CER2 0603 X7R 50V 10N	CER2 0603 X7R 50V 10N
3004	RST SM 0603 10K PM5	RST SM 0603 10K PM5	---	---
3007	---	---	RST SM 0603 6K8 PM5	RST SM 0603 6K8 PM5
3008	---	---	RST SM 0603 2K2 PM5	RST SM 0603 2K2 PM5
3009	---	---	RST SM 0603 2K2 PM5	RST SM 0603 2K2 PM5
3203	---	---	RST CRB 1/6W A 4K7 PM5	RST CRB 1/6W A 4K7 PM5
4001	---	---	RST SM 0603 JUMP 0R05	RST SM 0603 JUMP 0R05
4002	RST SM 0603 JUMP OR05	RST SM 0603 JUMP 0R05	---	---
4004	---	---	RST SM 0603 JUMP 0R05	RST SM 0603 JUMP 0R05
6001	DIO SIG SM 1SS356 (RH)	DIO SIG SM 1SS356 (RH)	---	---
6002	---	---	DIO SIG SM 1SS356 (RH)	DIO SIG SM 1SS356 (RH)
7001	---	---	TRA SIG SM PDTC124ET (C)	TRA SIG SM PDTC124ET (C)

3139 123 5821.1

E_14480_108.eps
280504

1000	D3
1002	D5
1003	D5
1004	D3
1201	C7
2001	C1
2002	C2
2003	C2
2004	C3
2005	D4
2006	D4
2010	B4
2011	B4
2201	E7
2202	C7
2203	C7
2204	C7
2205	C8
2206	C8
2207	C8
2208	C9
2209	F7
2210	F8
2211	F8
2220	B7
2221	B7
3001	C2
3002	C2
3003	B3
3004	C3
3005	E2
3006	E2
3007	D4
3008	D4
3009	E4
3201	E7
3202	E6
3203	E6
3204	C7
3205	D7
3206	C8
3207	C8
3208	D9
3210	D9
3211	D9
3212	F9
3215	F7
3216	D10
4001	E5
4002	E5
4004	C3
4208	D9
5001	C2
5002	E3
5010	A4
5220	A7
6001	C3
6002	D4
7001	E5
7201	E8
7202	C9
F001	C3
F002	D4
F003	E4
F201	E6
F202	E7
I001	C2
I002	C2
I003	C2
I004	A4
I005	D5
I006	E4
I007	E2
I201	E6
I202	C7
I203	C7
I204	D7
I205	C8
I206	C8
I207	D9
I208	D8
I209	D9
I210	F7
I213	F7
I217	A7

Layout PIP Panel (Top Side)

1000	D2	1206	A1	1241	C4	2245	B4	2271	B5	2509	C6	3006	D2	3208	B2	3247	C3	5001	D3	5243	D4	5503	C6	6504	C6	9283	B1	9288	C1
1002	C2	1212	A5	2004	C1	2248	D4	2501	B6	2510	D5	3201	B1	3210	B3	3249	B4	5010	D2	5244	B3	5504	D6	7502	B5	9284	C4	9289	B5
1003	C2	1214	B1	2011	D2	2250	C4	2506	C5	3001	C1	3203	B2	3215	C1	3250	B3	5220	B3	5271	D5	5505	C5	9280	D5	9285	B4	9290	D3
1004	D1	1219	A3	2221	B2	2251	D3	2507	D6	3002	C1	3206	B1	3243	B3	3255	B4	5241	D4	5501	A6	6501	C6	9281	C3	9286	C3	9550	B6
1201	A1	1220	B4	2243	D4	2253	D4	2508	D5	3003	C1	3207	B1	3244	B3	3505	B5	5242	B4	5502	C5	6503	D5	9282	B3	9287	C1		

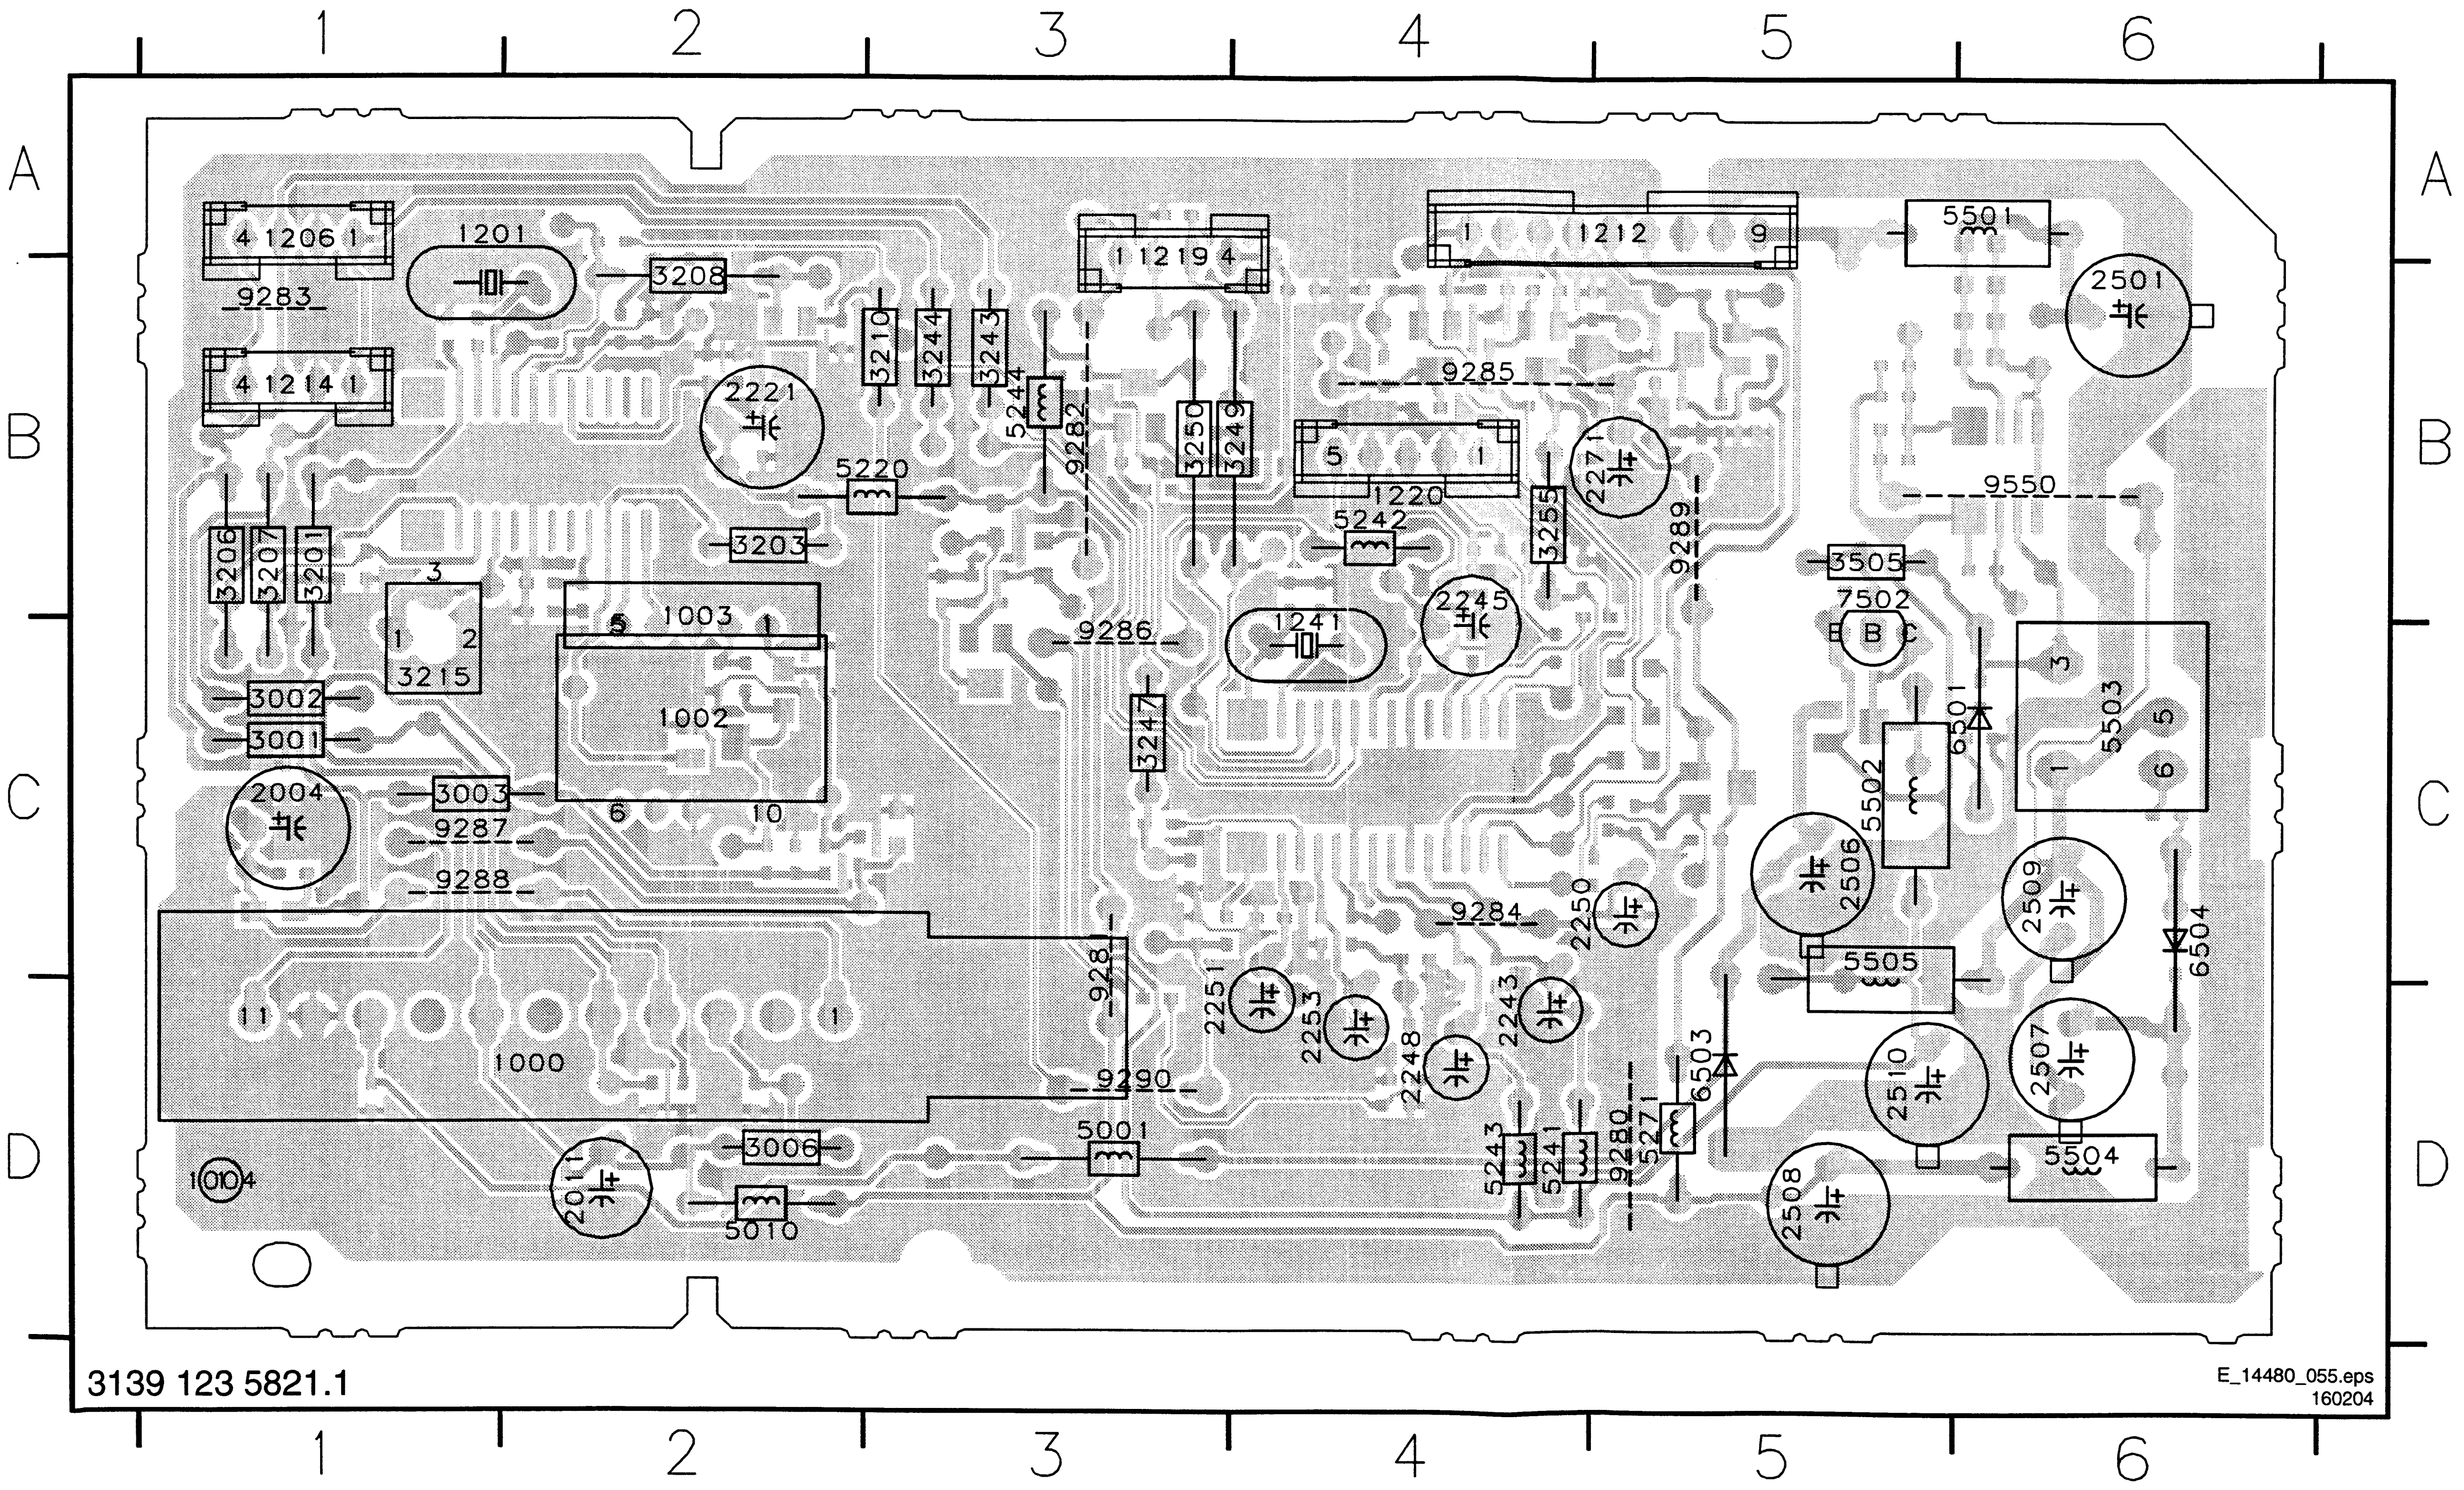
1
2
3
4
5
6
A
B
C
D
1206
1201
3208
1219
1212
5501
2501
9283
1214
2221
3210
3244
3243
5244
9282
3250
3249
9285
1220
2271
9550
5220
3203
5242
3255
9289
3505
7502
3206
3207
3201
3215
1003
1002
9286
1241
2245
3247
6501
5503
3002
3001
2004
3003
9287
9288
5502
2506
2509
9284
2250
6504
5505
1000
9281
2251
2253
2243
2248
6503
2510
2507
9290
3006
5001
5243
5241
9280
5271
5504
1004
2011
5010
2508
3139 123 5821.1
E_14480_055.eps
160204

Layout PIP Panel (Bottom Side)

2001	D5	2201	B6	2208	B5	2244	C3	2256	C4	2264	A4	2277	C2	2505	C2	3009	C5	3216	B4	3253	B3	3276	B2	3283	B4	3502	B1	4004	C6	4271	B3	4279	C2	6502	C2	7271	B3
2002	D5	2202	B5	2209	B5	2246	C3	2257	B3	2265	B3	2278	C2	2511	C1	3010	B3	3241	C4	3254	B3	3277	C2	3284	D3	3503	B2	4050	C6	4272	B2	5002	C4	7001	C5	7272	B3
2003	D6	2203	B5	2210	B5	2247	C3	2258	B3	2272	B3	2279	B4	2512	C1	3202	B6	3245	B4	3271	B3	3278	B2	3285	D3	3504	B2	4208	A5	4273	C2	5245	B4	7201	B5	7273	B2
2005	C5	2204	B6	2211	B5	2249	C2	2259	C2	2273	C2	2280	B4	3004	C6	3204	B5	3246	B4	3272	B3	3279	C2	3286	C3	3506	B2	4250	D3	4274	B4	5506	C1	7202	B5	7274	C2
2006	C5	2205	B5	2220	B5	2252	C3	2261	B3	2274	B3	2502	B2	3005	D5	3205	B5	3248	C4	3273	B2	3280	B3	3287	B4	3507	B1	4251	B2	4275	C2	5507	C1	7241	B4	7501	B1
2007	C3	2206	B6	2241	C4	2254	C3	2262	B2	2275	C2	2503	B2	3007	C5	3211	B5	3251	B4	3274	B3	3281	B3	3500	A1	4001	C5	4252	D4	4276	C2	6001	C6	7242	C3		
2010	D5	2207	B6	2242	C3	2255	B4	2263	C3	2276	B2	2504	B1	3008	C5	3212	B5	3252	B3	3275	B2	3282	B4	3501	B1	4002	C5	4270	B3	4278	C2	6002	C5	7243	C4		

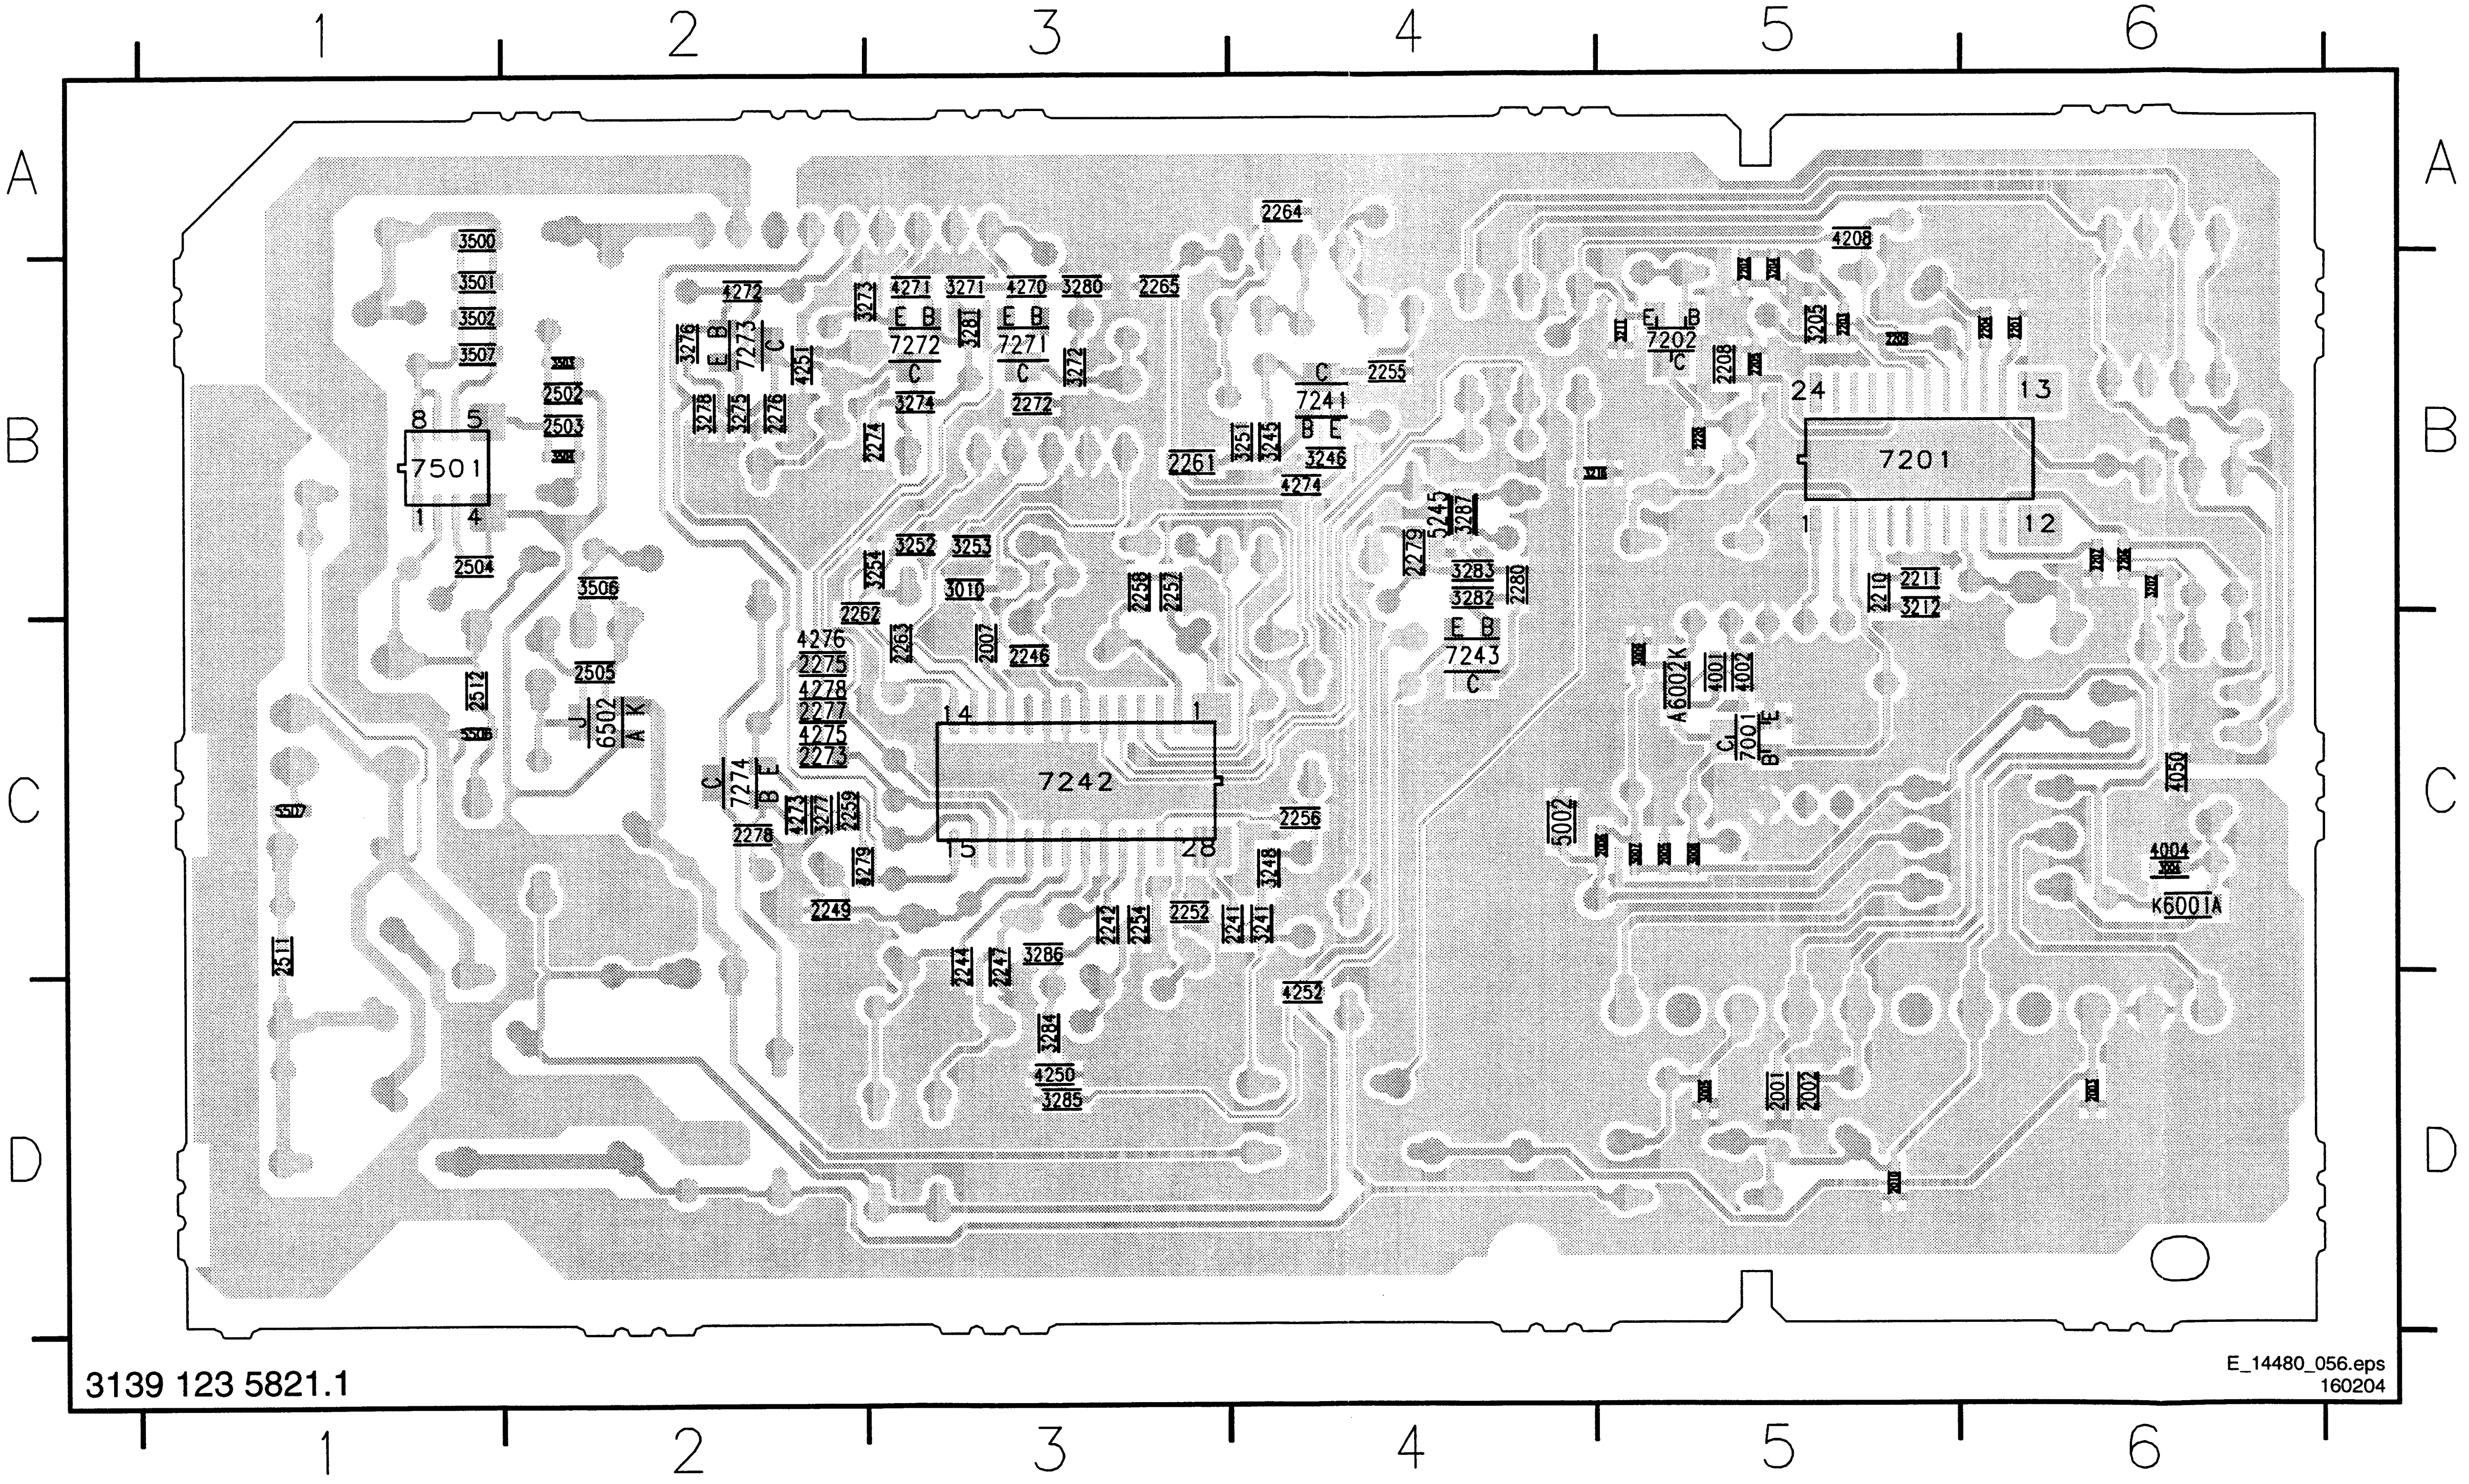

E_14480_056.eps
160204

Linearity & Panorama Panel

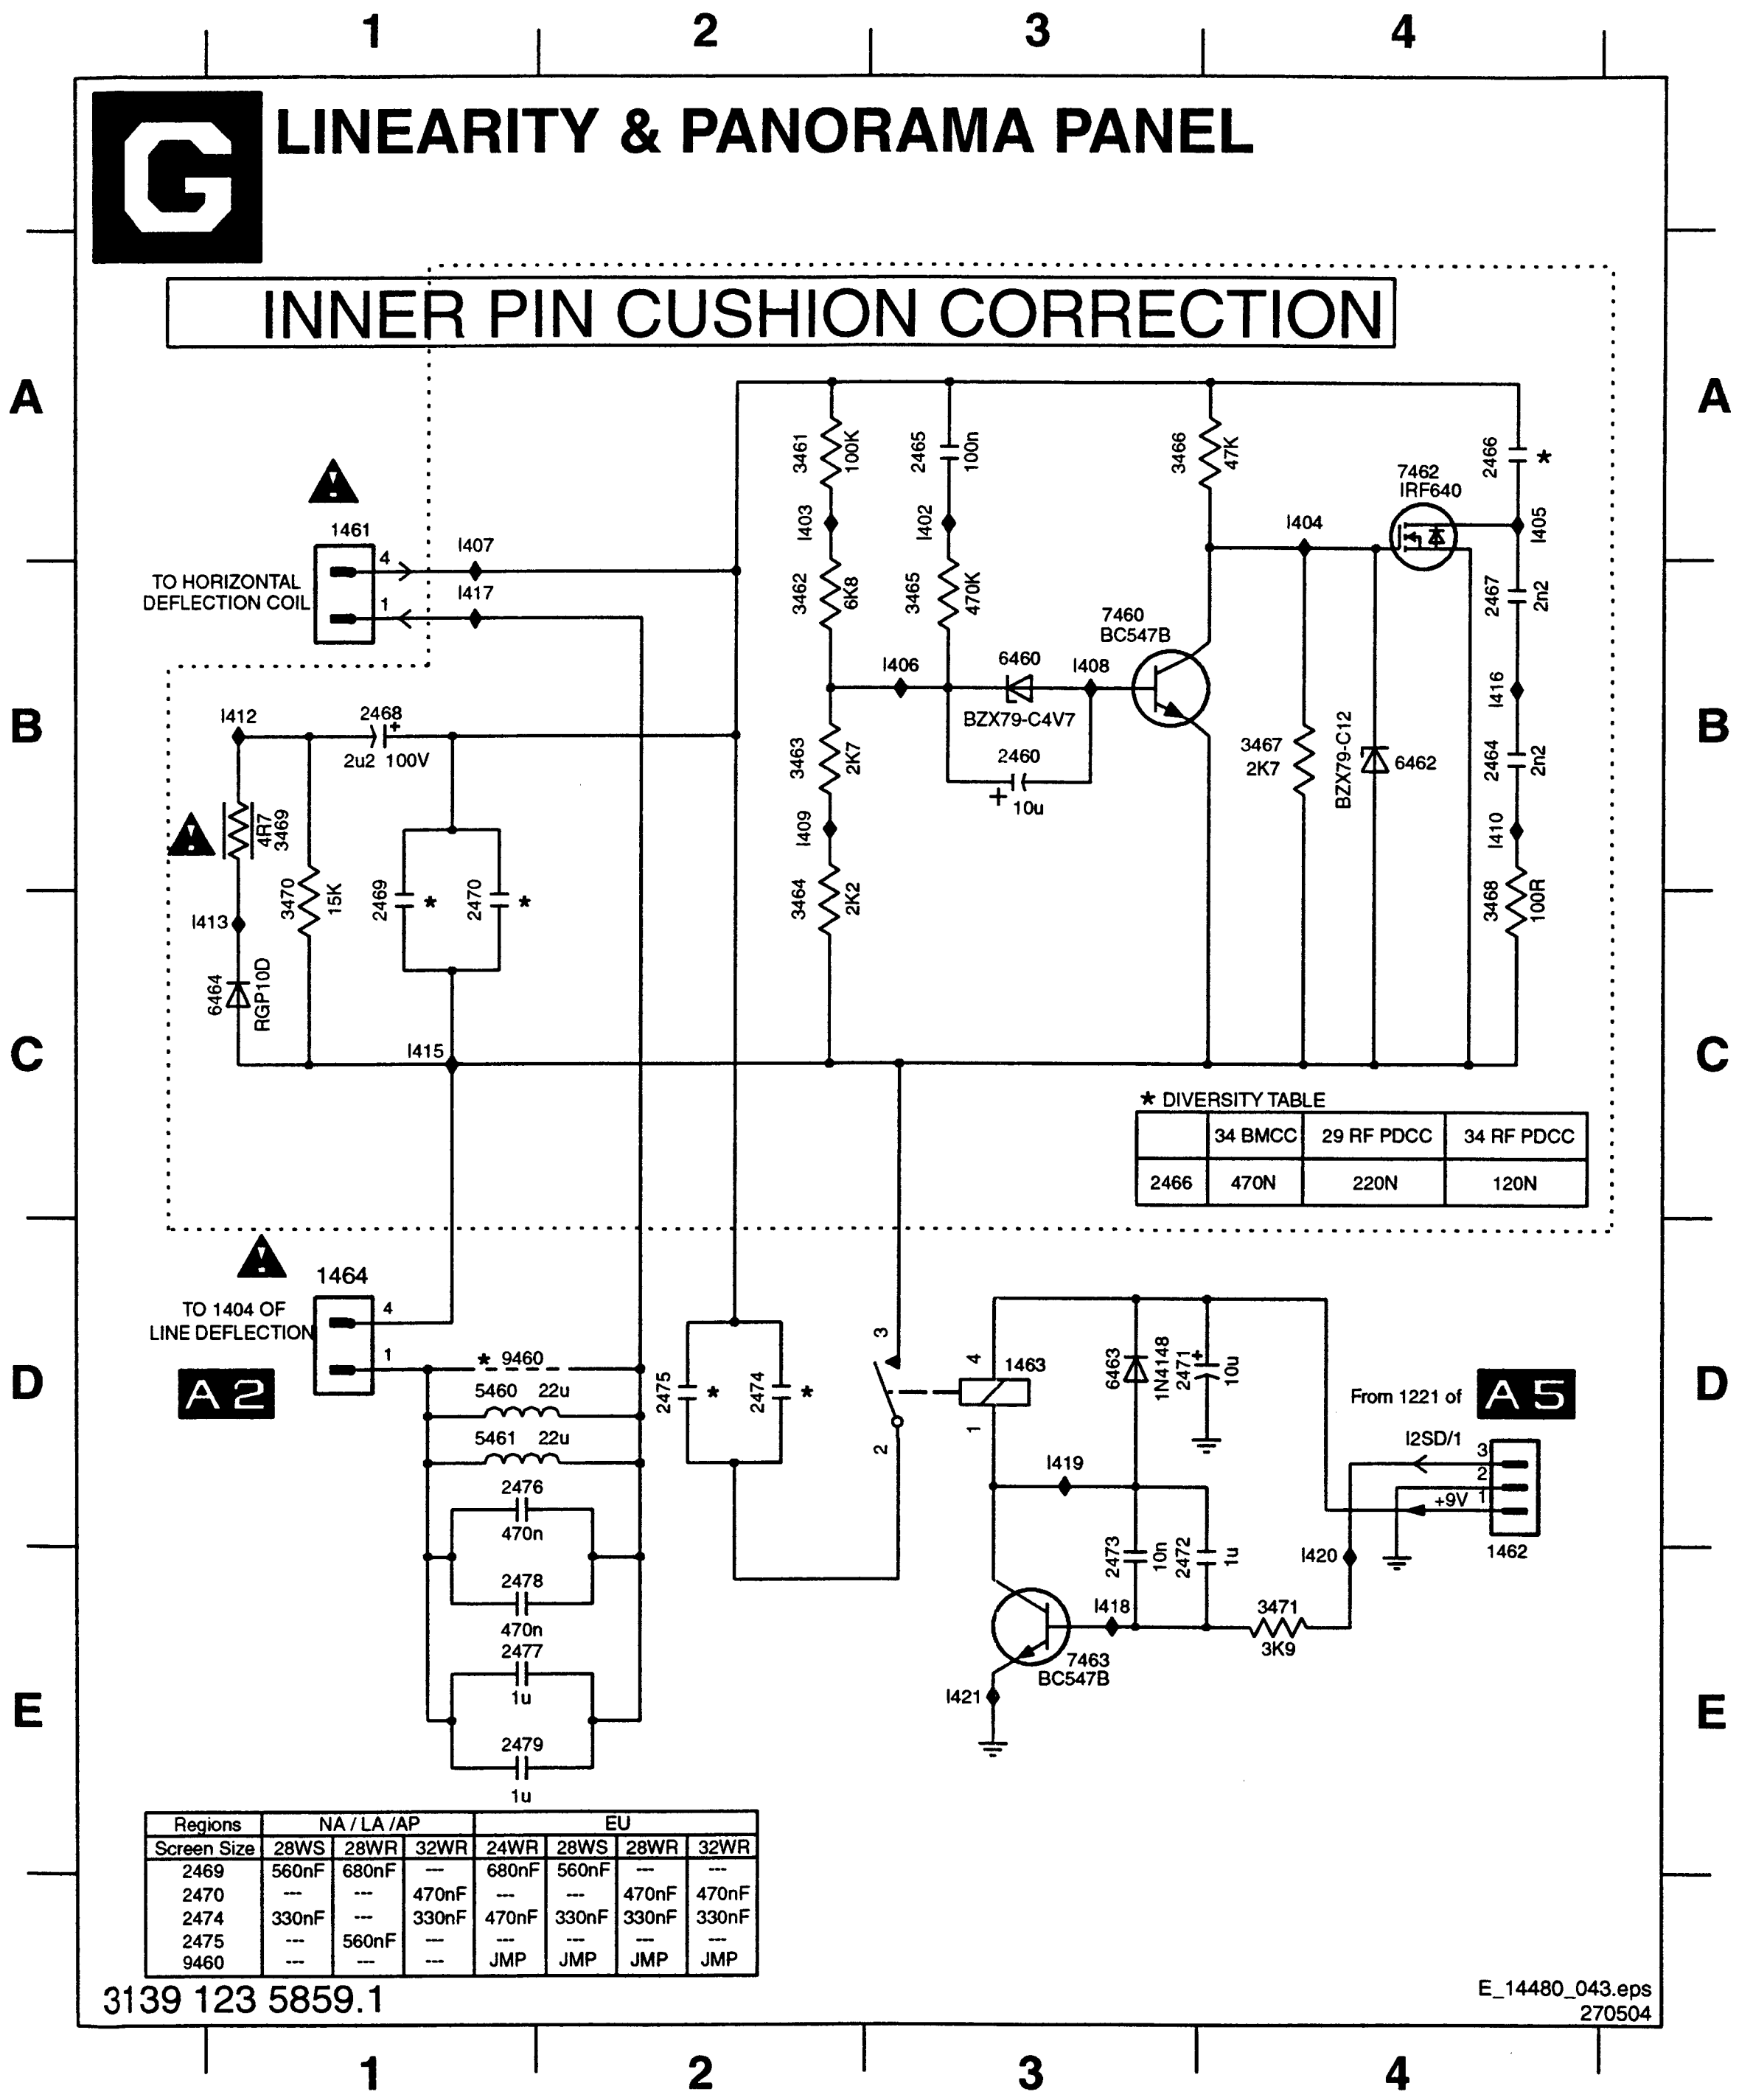
G
LINEARITY & PANORAMA PANEL
INNER PIN CUSHION CORRECTION
TO HORIZONTAL DEFLECTION COIL
1461
I407
I417
TO 1404 OF LINE DEFLECTION
1464
A2
From 1221 of A5
I2SD/1
+9V
1462
3461 100K
3462 6K8
3463 2K7
3464 2K2
3465 470K
2465 100n
3466 47K
3467 2K7
3468 100R
3469 4R7
3470 15K
3471 3K9
7460 BC547B
7462 IRF640
7463 BC547B
6460 BZX79-C4V7
6462 BZX79-C12
6463 1N4148
6464 RGP10D
2460 10u
2464 2n2
2467 2n2
2466
2468 2u2 100V
2469
2470
2471 10u
2472 1u
2473 10n
2474
2475
2476 470n
2477 1u
2478 470n
2479 1u
5460 22u
5461 22u
9460
1463
I402
I403
I404
I405
I406
I408
I409
I410
I412
I413
I415
I416
I418
I419
I420
I421
3139 123 5859.1
E_14480_043.eps
270504

★ DIVERSITY TABLE

	34 BMCC	29 RF PDCC	34 RF PDCC
2466	470N	220N	120N

Regions	NA / LA /AP			EU			
Screen Size	28WS	28WR	32WR	24WR	28WS	28WR	32WR
2469	560nF	680nF	---	680nF	560nF	---	---
2470	---	---	470nF	---	---	470nF	470nF
2474	330nF	---	330nF	470nF	330nF	330nF	330nF
2475	---	560nF	---	---	---	---	---
9460	---	---	---	JMP	JMP	JMP	JMP

1461	A1
1462	D4
1463	D3
1464	D1
2460	B3
2464	B4
2465	A3
2466	A4
2467	B4
2468	B1
2469	C1
2470	C1
2471	D3
2472	E3
2473	E3
2474	D2
2475	D2
2476	D1
2477	E1
2478	E1
2479	E1
3461	A2
3462	B2
3463	B2
3464	C2
3465	B3
3466	A3
3467	B4
3468	C4
3469	B1
3470	C1
3471	E4
5460	D1
5461	D1
6460	B3
6462	B4
6463	D3
6464	C1
7460	B3
7462	A4
7463	E3
9460	D1
I402	A3
I403	A2
I404	A4
I405	A4
I406	B3
I407	A1
I408	B3
I409	B2
I410	B4
I412	B1
I413	C1
I415	C1
I416	B4
I417	B1
I418	E3
I419	D3
I420	E4
I421	E3

Layout Linearity & Panorama Panel (Top Side)

1461	B2
1462	D2
1463	D1
1464	C2
2460	A1
2464	B2
2465	B1
2466	B2
2467	A2
2468	C2
2469	B2
2470	B1
2471	D2
2472	D2
2473	D2
2474	D2
2475	C2
2476	C2
2477	C2
2478	C2
2479	C2
3461	B2
3462	B1
3463	B1
3464	B1
3465	B1
3466	B2
3467	A2
3468	A2
3469	C2
3470	C1
3471	D2
5460	B2
5461	C2
6460	A1
6461	A2
6462	D2
6463	C1
7460	A1
7461	A2
7462	D2
9460	B2

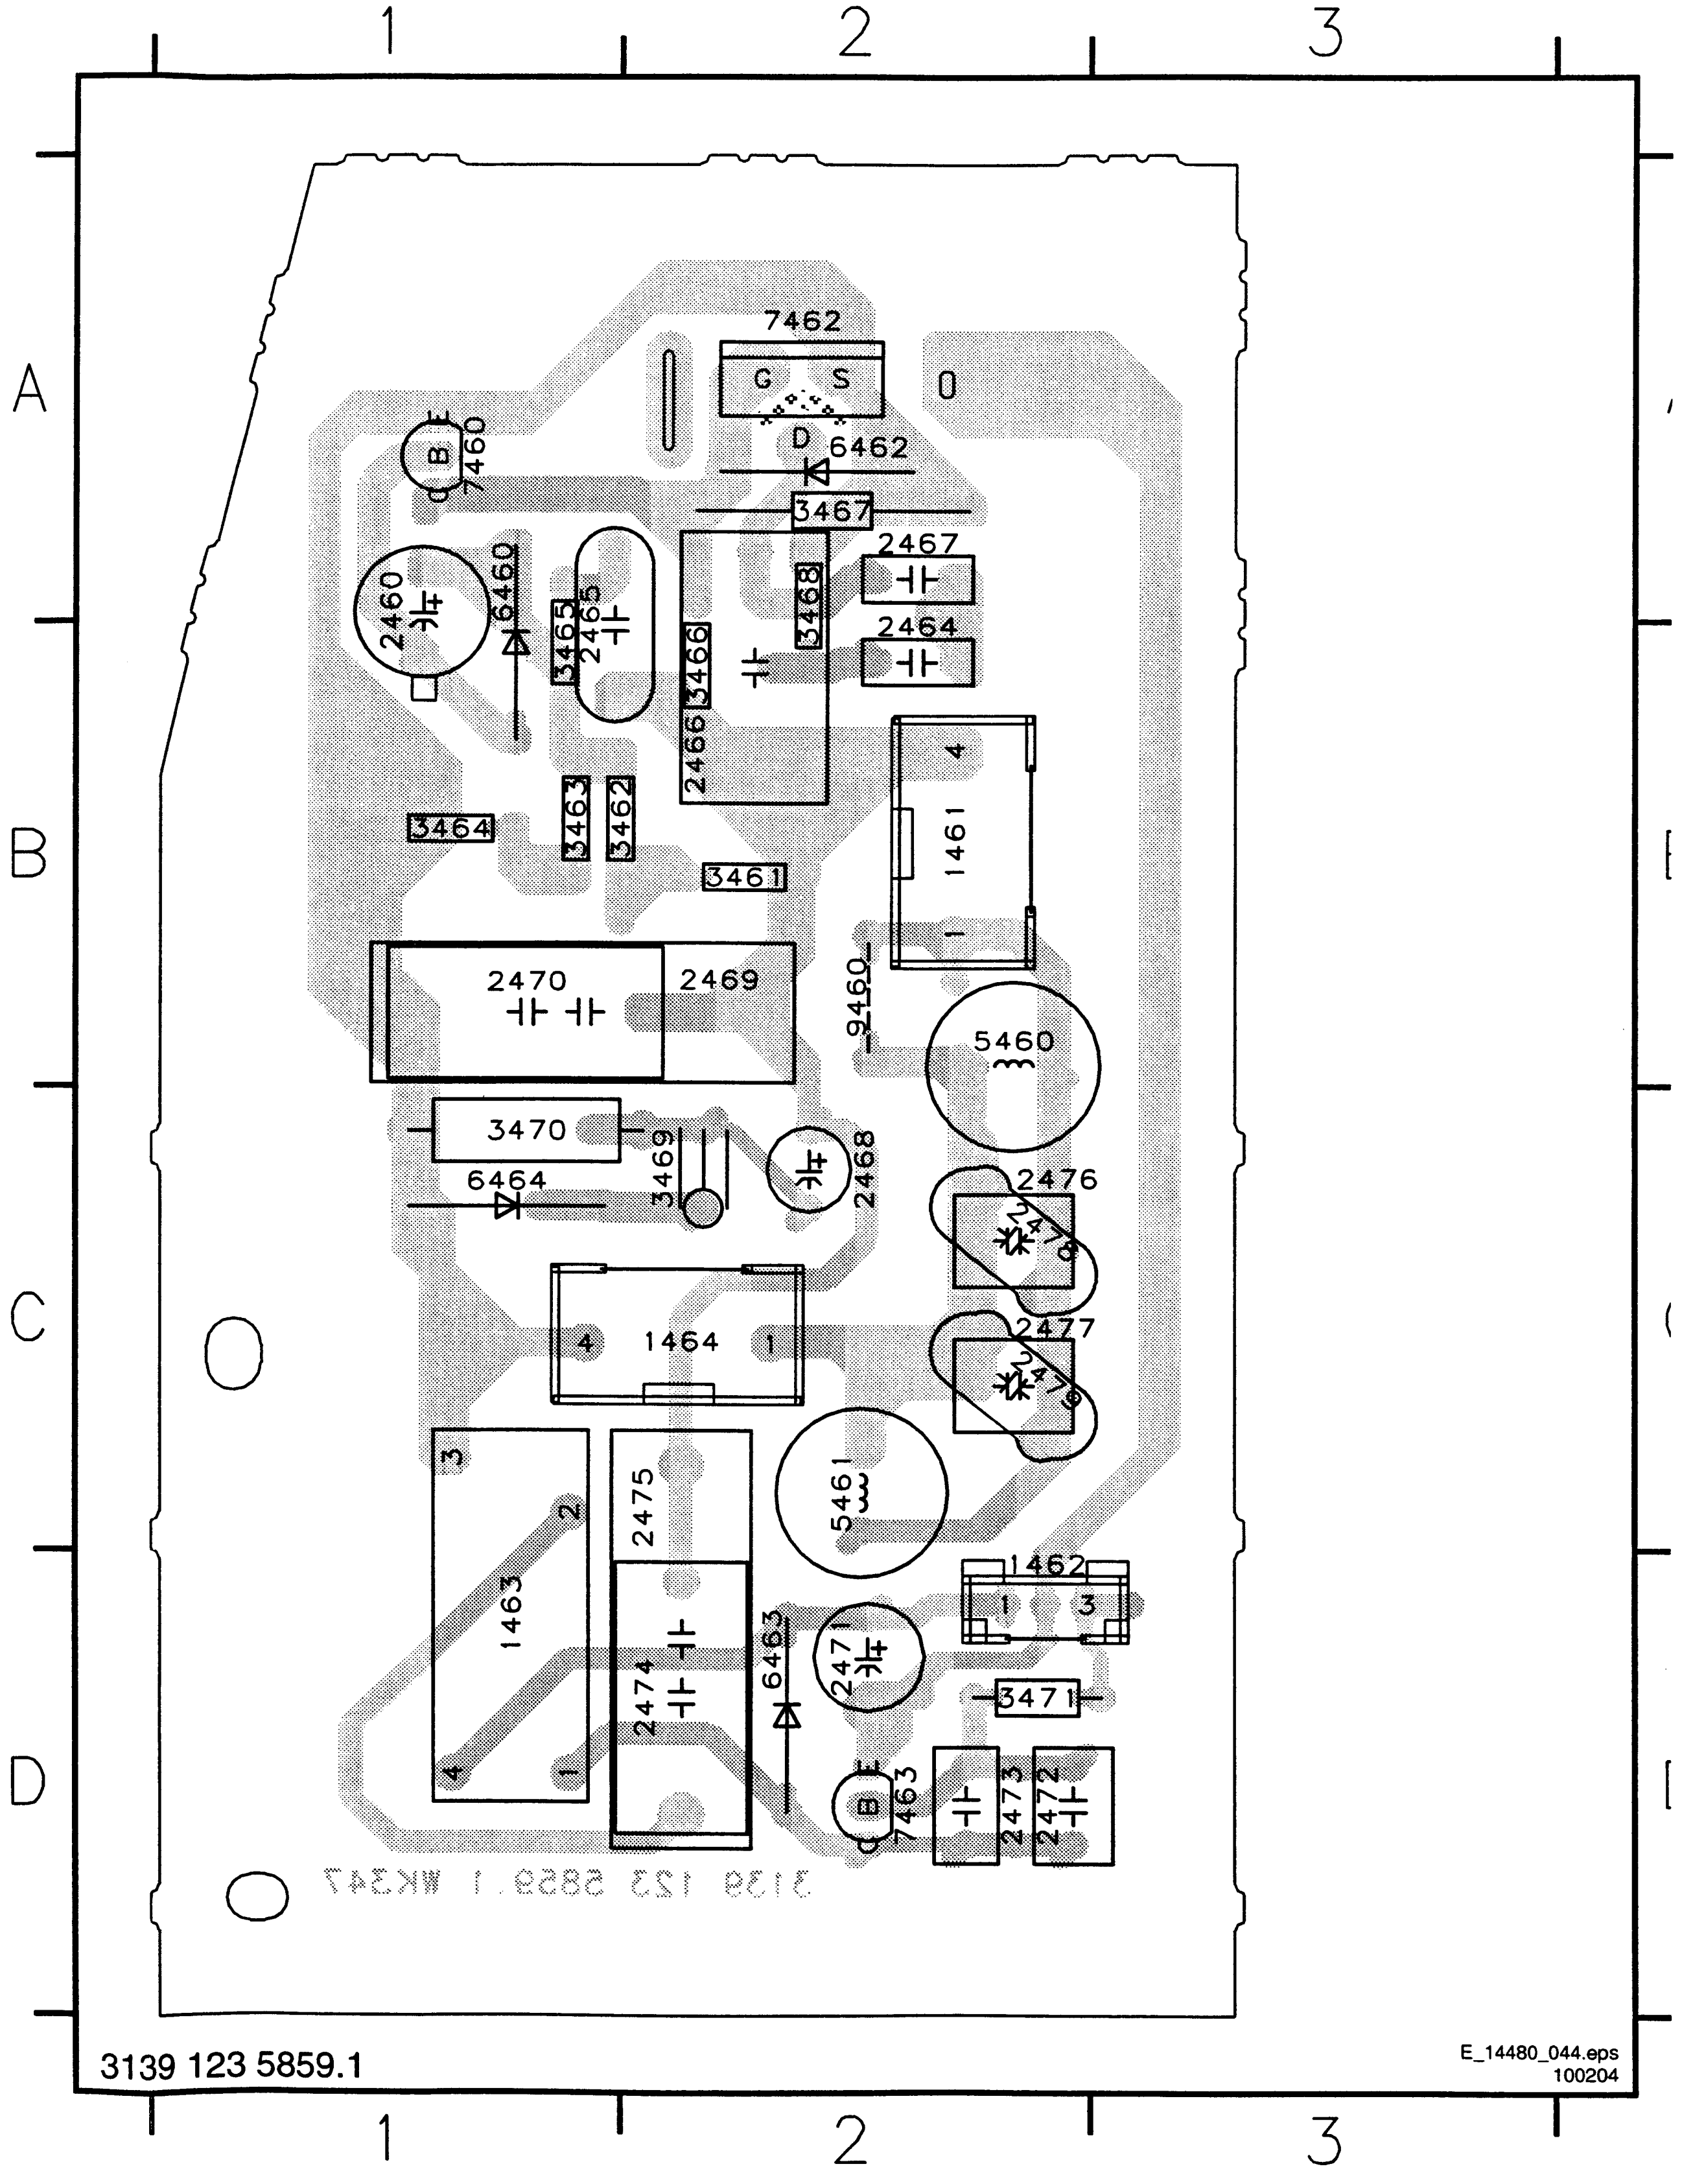
1
2
3
A
B
C
D
7462
G
S
D
6462
7460
3467
2467
2464
2460
6460
3465
2465
3466
3468
2466
1461
3464
3463
3462
3461
2470
2469
9460
5460
3470
3469
2468
6464
2476
2477
1464
1463
2475
5461
1462
2474
6463
2471
3471
7463
2473
2472
3139 123 5859.1
E_14480_044.eps
100204

LTI/CTI Interface Panel

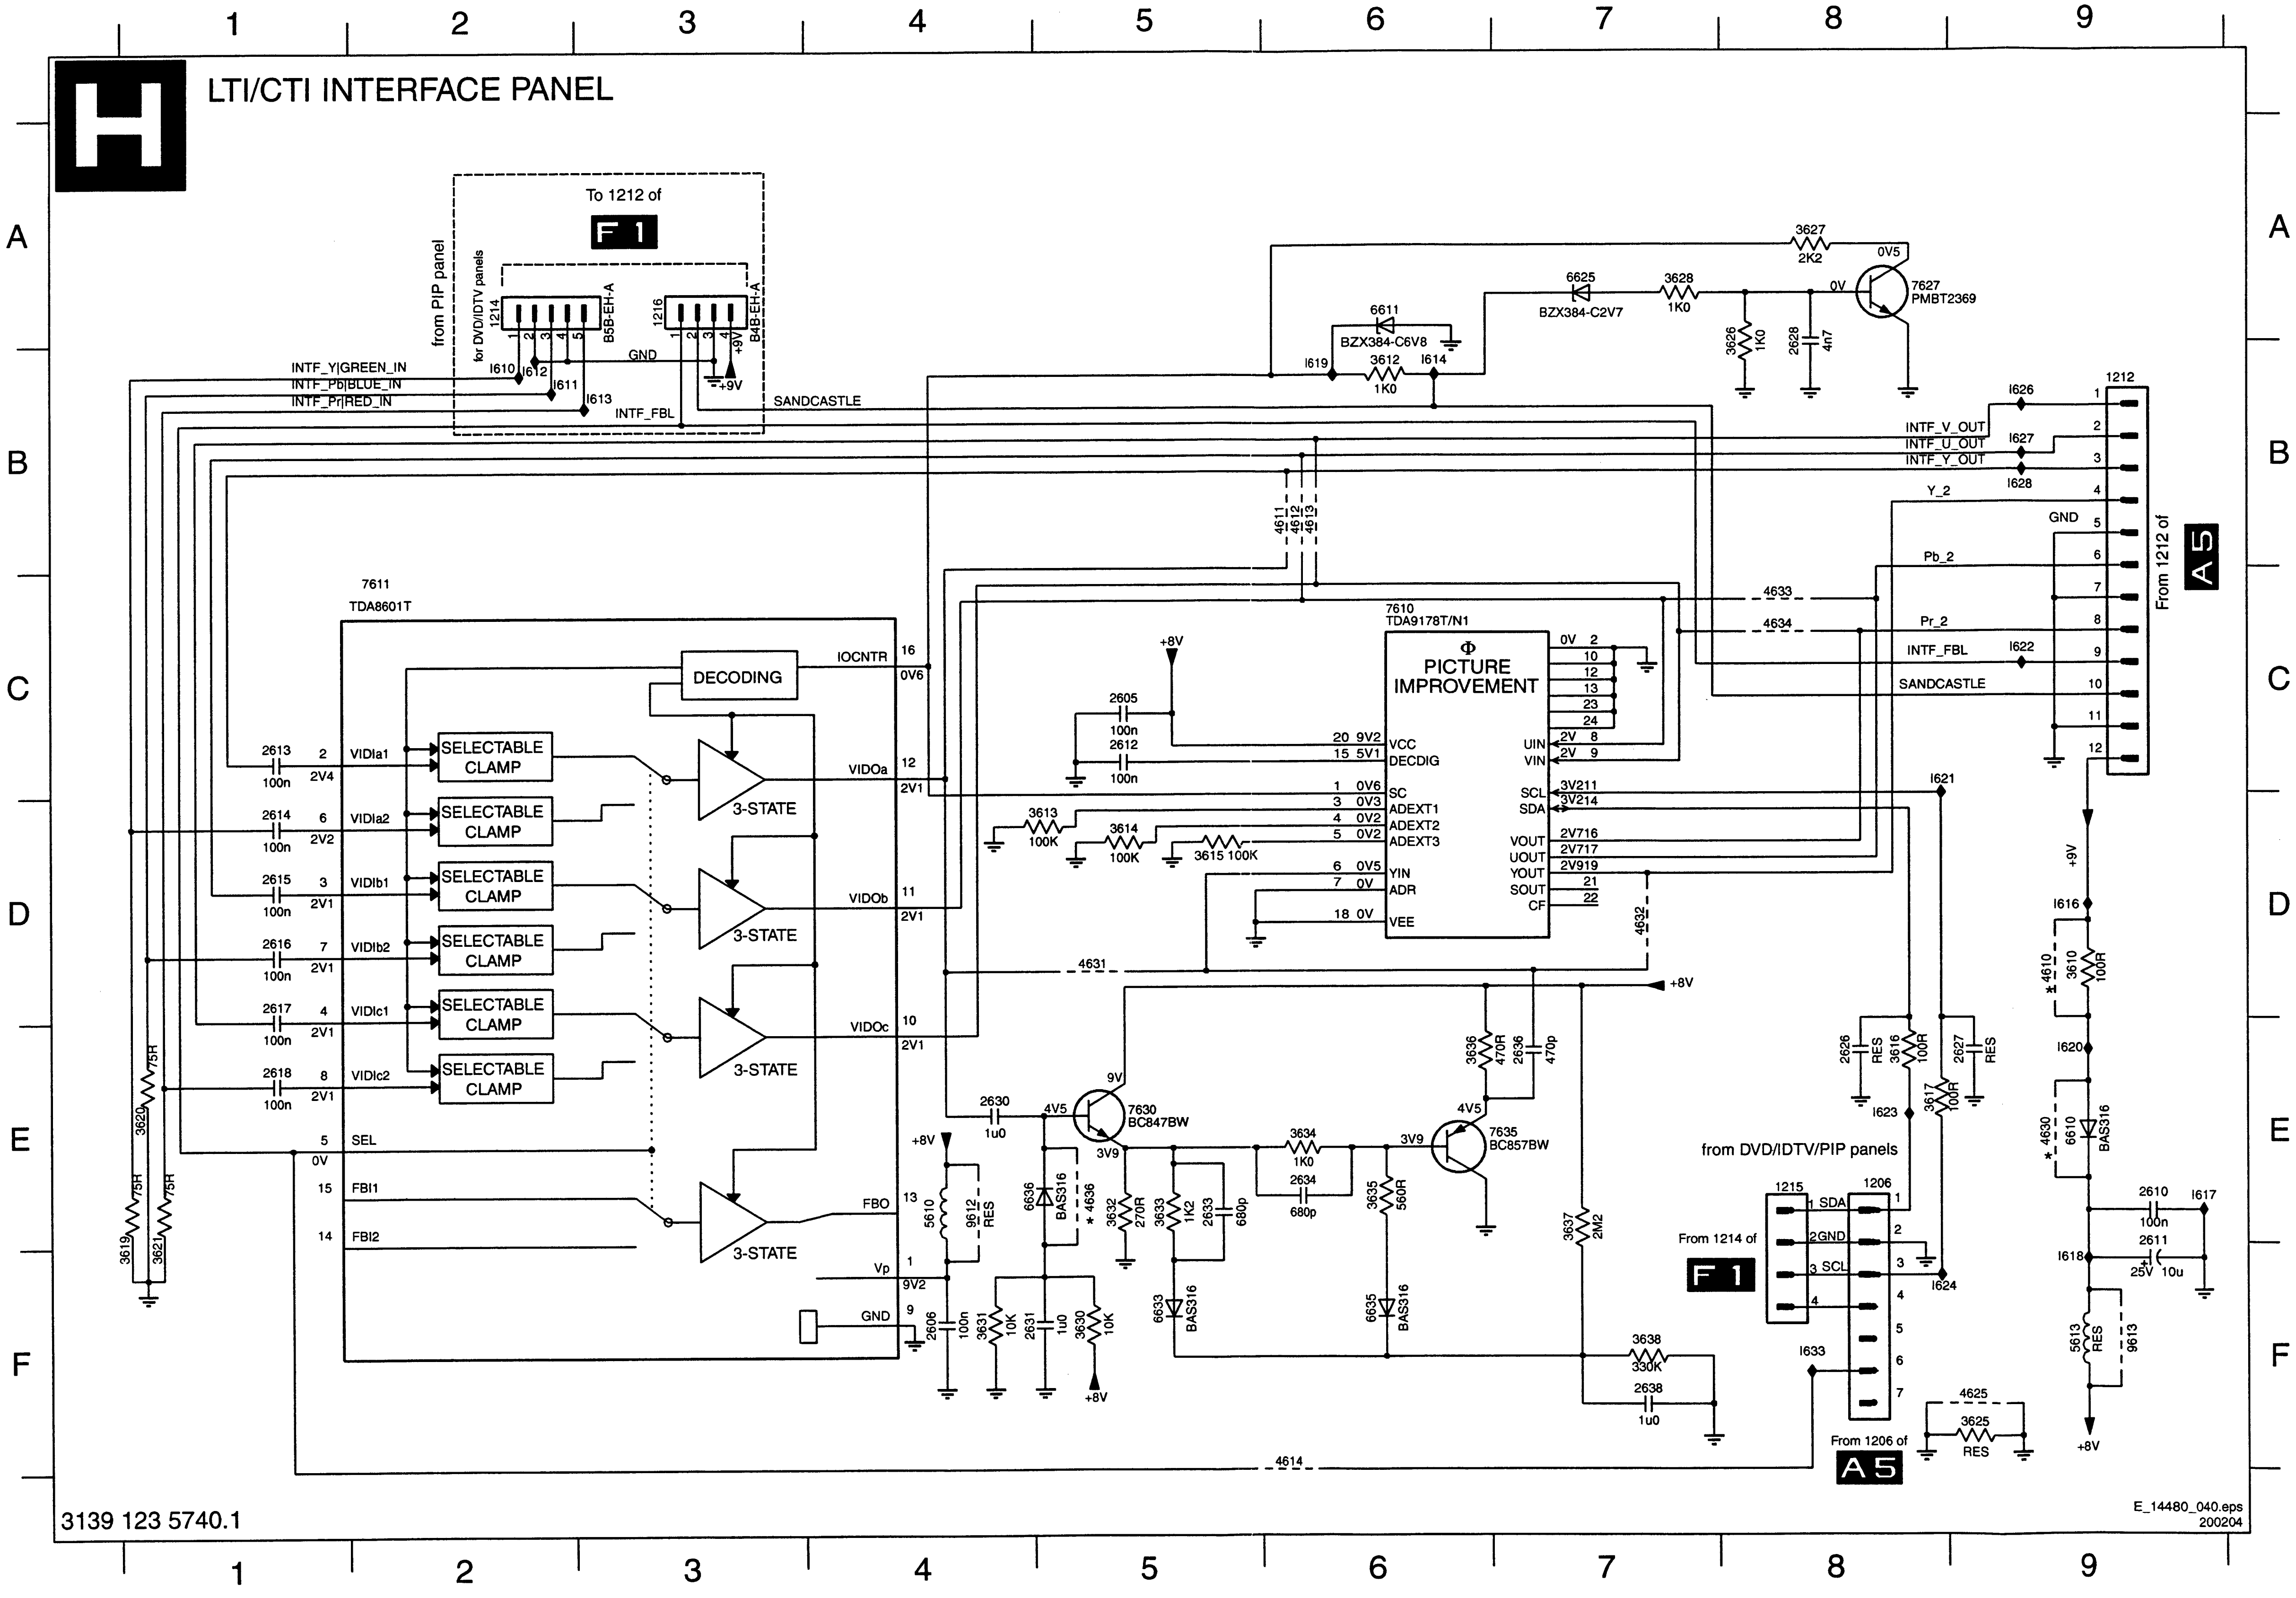
H
LTI/CTI INTERFACE PANEL
To 1212 of
F 1
from PIP panel
for DVD/IDTV panels
1214
B5B-EH-A
1216
B4B-EH-A
INTF_Y|GREEN_IN
INTF_Pb|BLUE_IN
INTF_Pr|RED_IN
INTF_FBL
SANDCASTLE
GND
+9V
7611
TDA8601T
SELECTABLE CLAMP
DECODING
3-STATE
IOCNTR
VIDOa
VIDOb
VIDOc
VIDIa1
VIDIa2
VIDIb1
VIDIb2
VIDIc1
VIDIc2
SEL
FBI1
FBI2
FBO
Vp
7610
TDA9178T/N1
PICTURE IMPROVEMENT
VCC
DECDIG
SC
ADEXT1
ADEXT2
ADEXT3
YIN
ADR
VEE
UIN
VIN
SCL
SDA
VOUT
UOUT
YOUT
SOUT
CF
7627
PMBT2369
7630
BC847BW
7635
BC857BW
BZX384-C6V8
BZX384-C2V7
BAS316
1212
INTF_V_OUT
INTF_U_OUT
INTF_Y_OUT
Y_2
Pb_2
Pr_2
INTF_FBL
SANDCASTLE
From 1212 of
A 5
from DVD/IDTV/PIP panels
From 1214 of
F 1
1215
1206
SDA
GND
SCL
From 1206 of
A 5
+8V
+9V
3139 123 5740.1
E_14480_040.eps
200204

1206	E8
1212	B9
1214	A2
1215	E8
1216	A3
2605	C5
2606	F4
2610	E9
2611	E9
2612	C5
2613	C1
2614	D1
2615	D1
2616	D1
2617	D1
2618	E1
2626	E8
2627	E9
2628	A8
2630	E4
2631	F4
2633	E5
2634	E6
2636	E7
2638	F7
3610	D9
3612	B6
3613	D5
3614	D5
3615	D5
3616	E8
3617	E8
3619	E1
3620	E1
3621	E1
3625	F9
3626	A8
3627	A8
3628	A7
3630	F5
3631	F4
3632	E5
3633	E5
3634	E6
3635	E6
3636	E6
3637	E7
3638	F7
4610	D9
4611	B6
4612	B6
4613	B6
4614	F6
4625	F9
4630	E9
4631	D5
4632	D7
4633	C8
4634	C8
4636	E5
5610	E4
5613	F9
6610	E9
6611	A6
6625	A7
6633	F5
6635	F6
6636	E4
7610	C6
7611	C2
7627	A8
7630	E5
7635	E6
9612	E4
9613	F9
I610	B2
I611	B2
I612	B2
I613	B3
I614	B6
I616	D9
I617	E9
I618	F9
I619	B6
I620	E9
I621	C8
I622	C9
I623	E8
I624	F8
I626	B9
I627	B9
I628	B9
I633	F8

Layout LTI/CTI Interface Panel (Top Side)

1206	A1	1216	A1	5613	A2	9615	A2
1212	A2	2611	A2	9612	A2	9616	A2
1214	A1	2636	A2	9613	A2	9617	A2
1215	A1	5610	A2	9614	A2	9618	A2

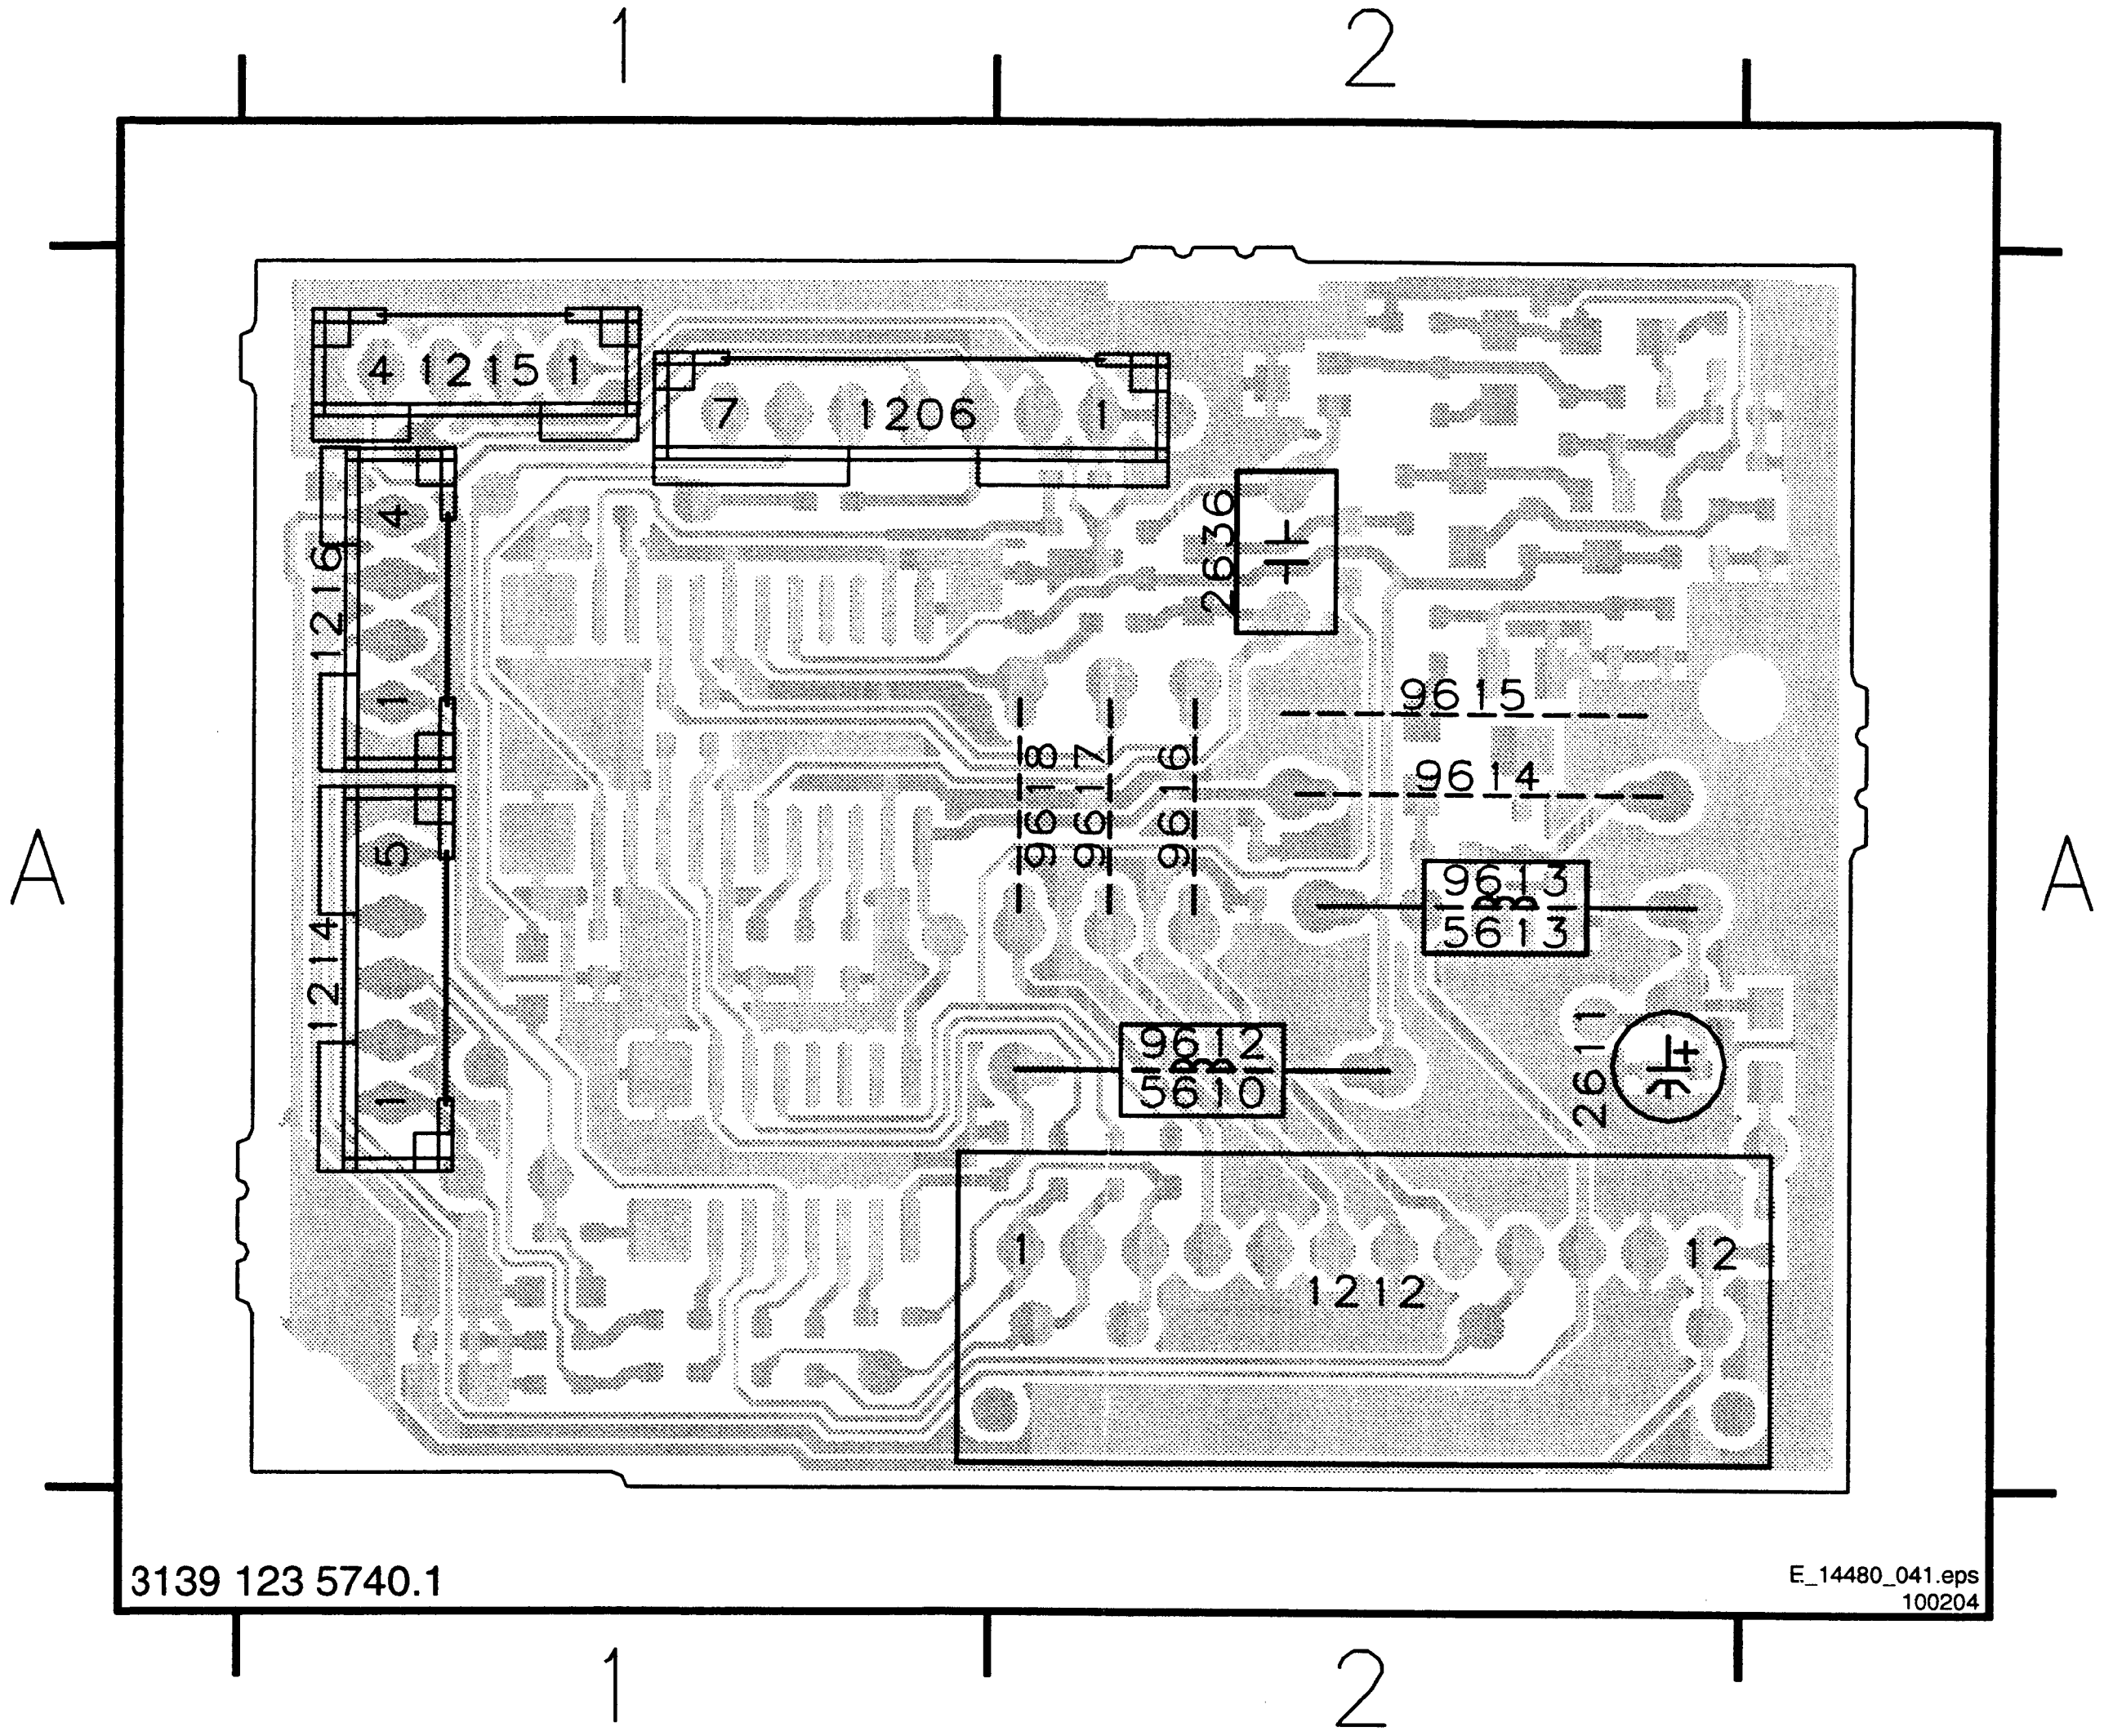
1
2
A
A
4 1215 1
7 1206 1
1216
4
1
5
1214
1
2636
9615
9614
9618
9617
9616
9613
5613
9612
5610
2611
1212
1
12
3139 123 5740.1
E_14480_041.eps
100204
1
2

Layout LTI/CTI Interface Panel (Bottom Side)

2605	A1	2616	A2	2631	A1	3614	A2	3625	A2	3633	A1	4611	A1	4631	A1	6610	A1	7611	A2
2606	A1	2617	A2	2633	A1	3615	A2	3626	A1	3634	A1	4612	A1	4632	A1	6611	A1	7627	A1
2610	A1	2618	A2	2634	A1	3616	A1	3627	A1	3635	A1	4613	A1	4633	A2	6625	A1	7630	A1
2612	A2	2626	A1	2638	A1	3617	A2	3628	A1	3636	A1	4614	A2	4634	A2	6633	A1	7635	A1
2613	A2	2627	A2	3610	A1	3619	A2	3630	A1	3637	A1	4617	A2	4635	A1	6635	A1		
2614	A2	2628	A1	3612	A1	3620	A2	3631	A1	3638	A1	4625	A2	4636	A1	6636	A1		
2615	A2	2630	A1	3613	A2	3621	A2	3632	A1	4610	A1	4630	A1	4637	A1	7610	A2		

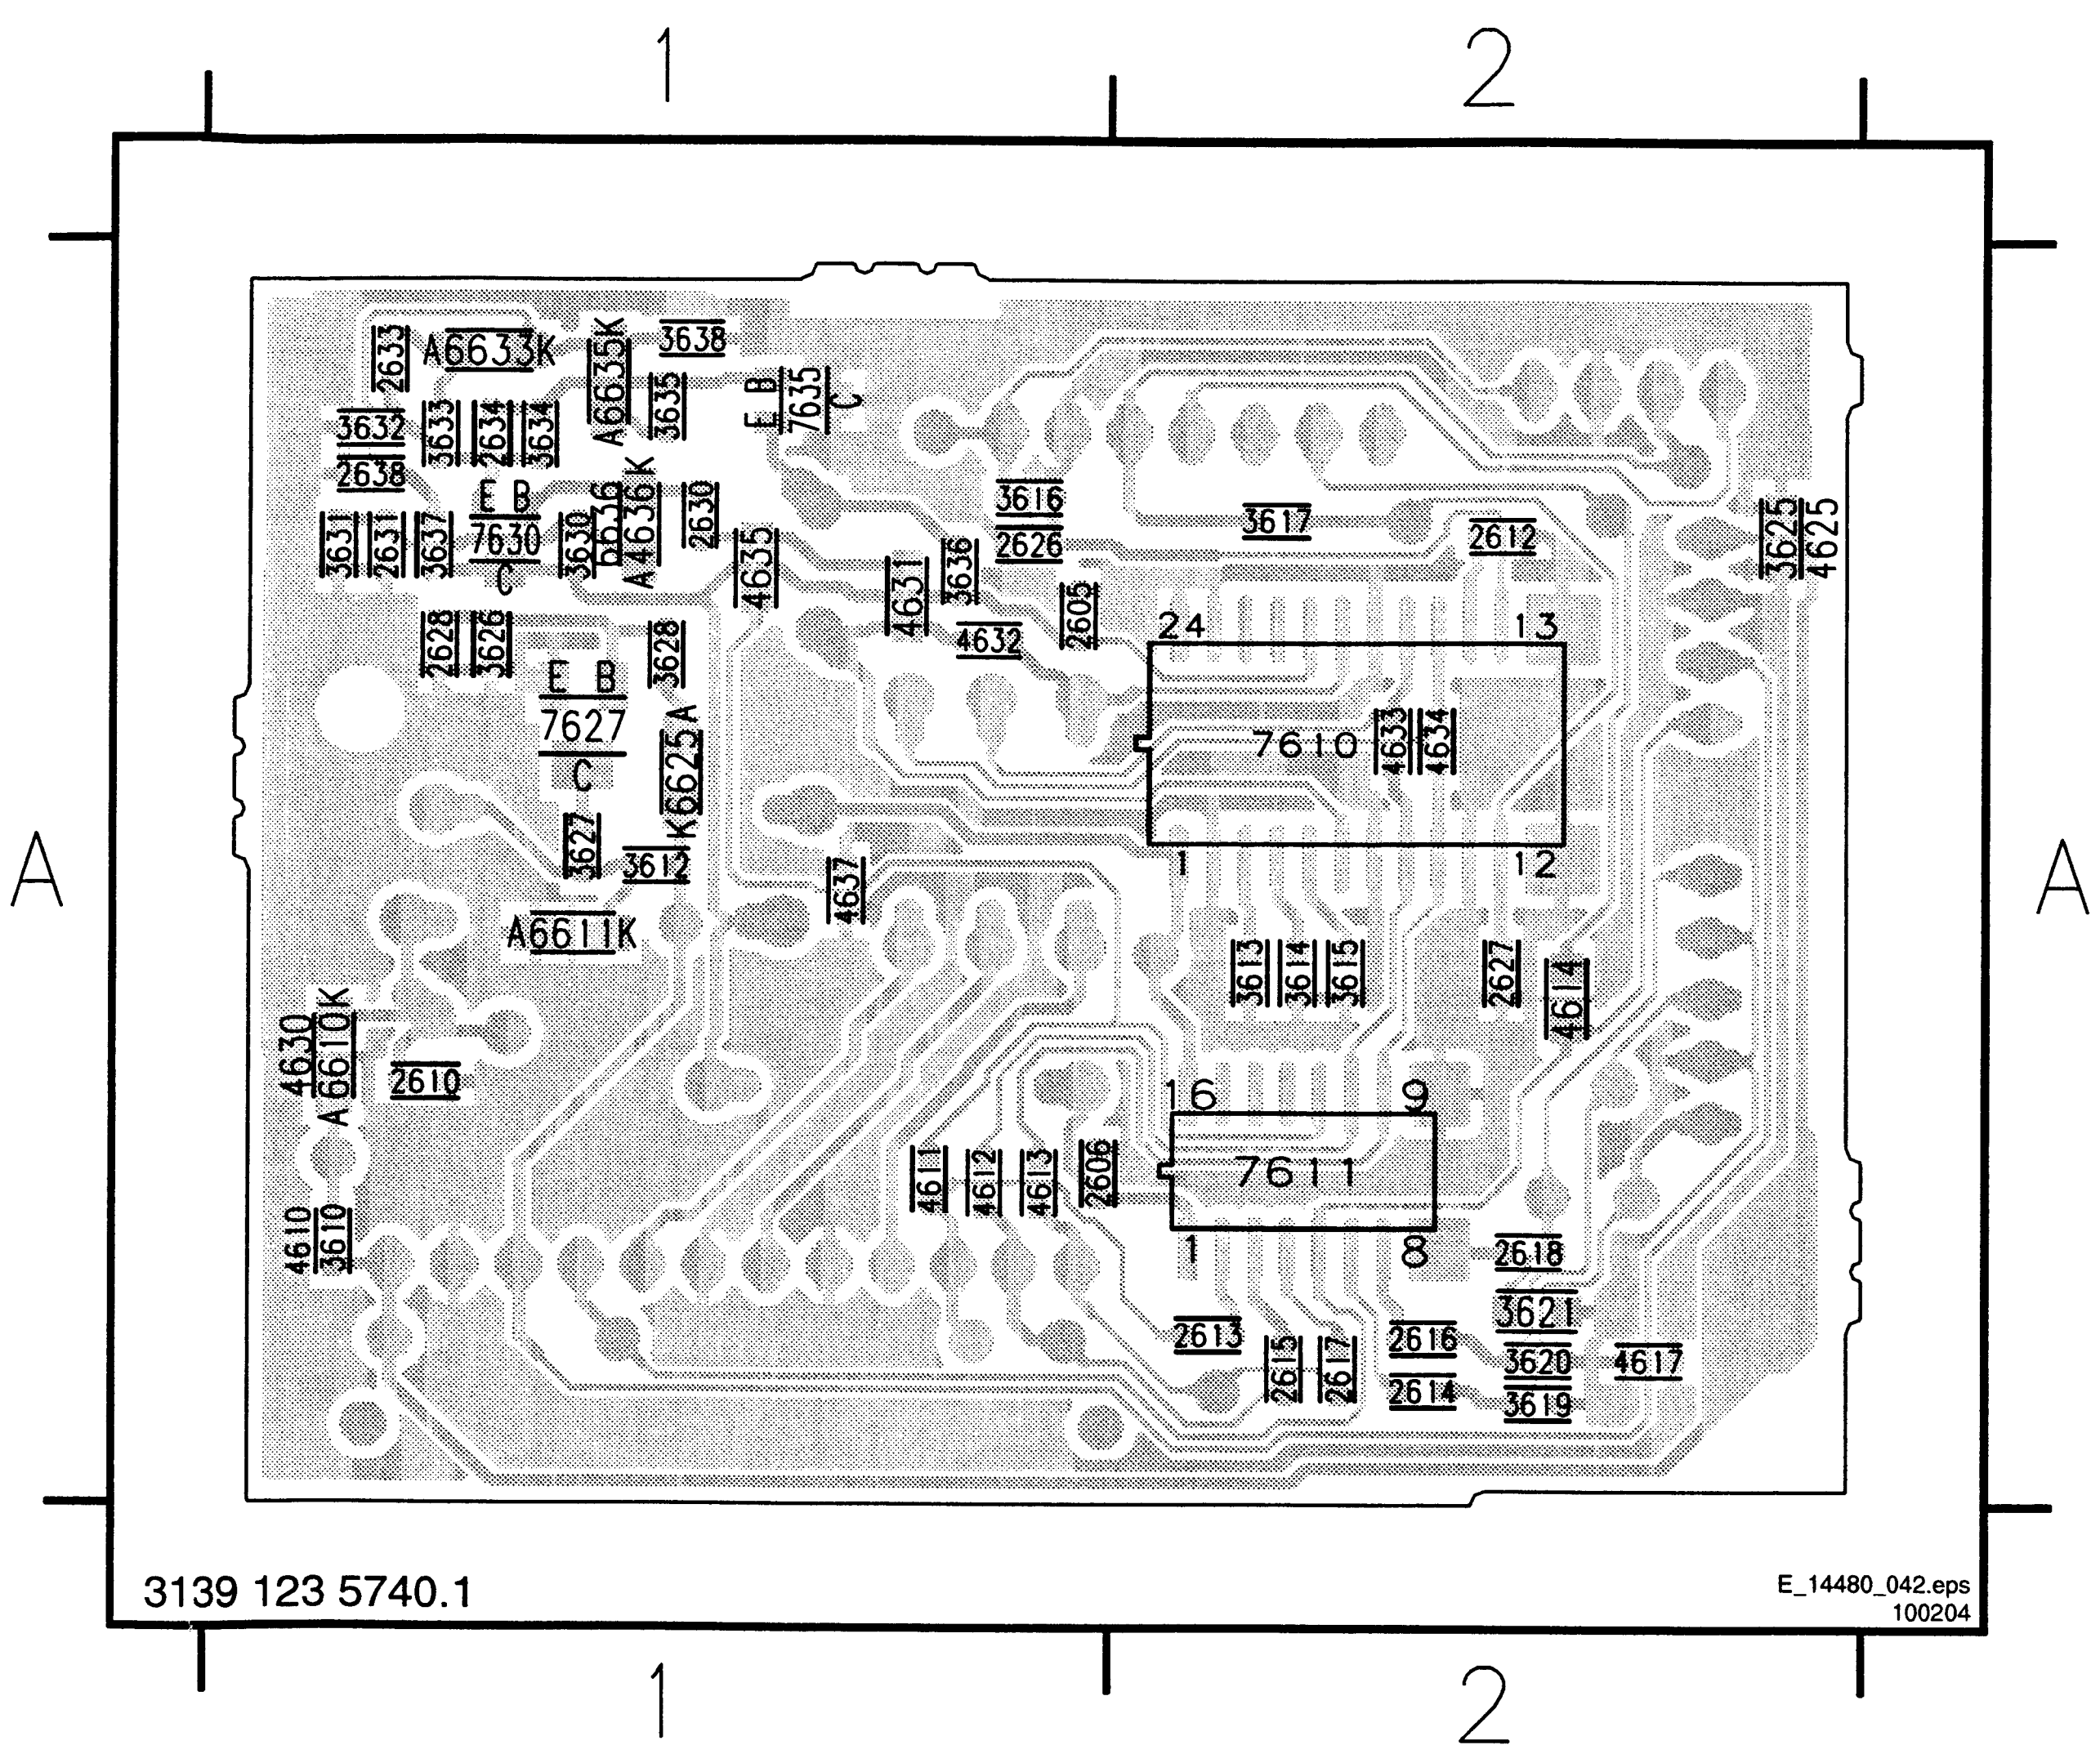
1
2
A
A
2633
A6633K
3638
A6635K
3635
7635
3632
2638
3633
2634
3634
7630
3636
A6636K
2630
4635
3631
2631
3637
2628
3626
3628
7627
K6625A
3627
3612
A6611K
4637
3616
2626
3617
2612
4631
3636
4632
2605
3625
4625
7610
4633
4634
24
13
1
12
3613
3614
3615
2627
4614
4630
A6610K
2610
4610
3610
4611
4612
4613
2606
7611
16
9
8
2618
3621
2613
2615
2617
2616
2614
3620
3619
4617
3139 123 5740.1
E_14480_042.eps
100204
1
2

Front Interface Panel (FL-13)

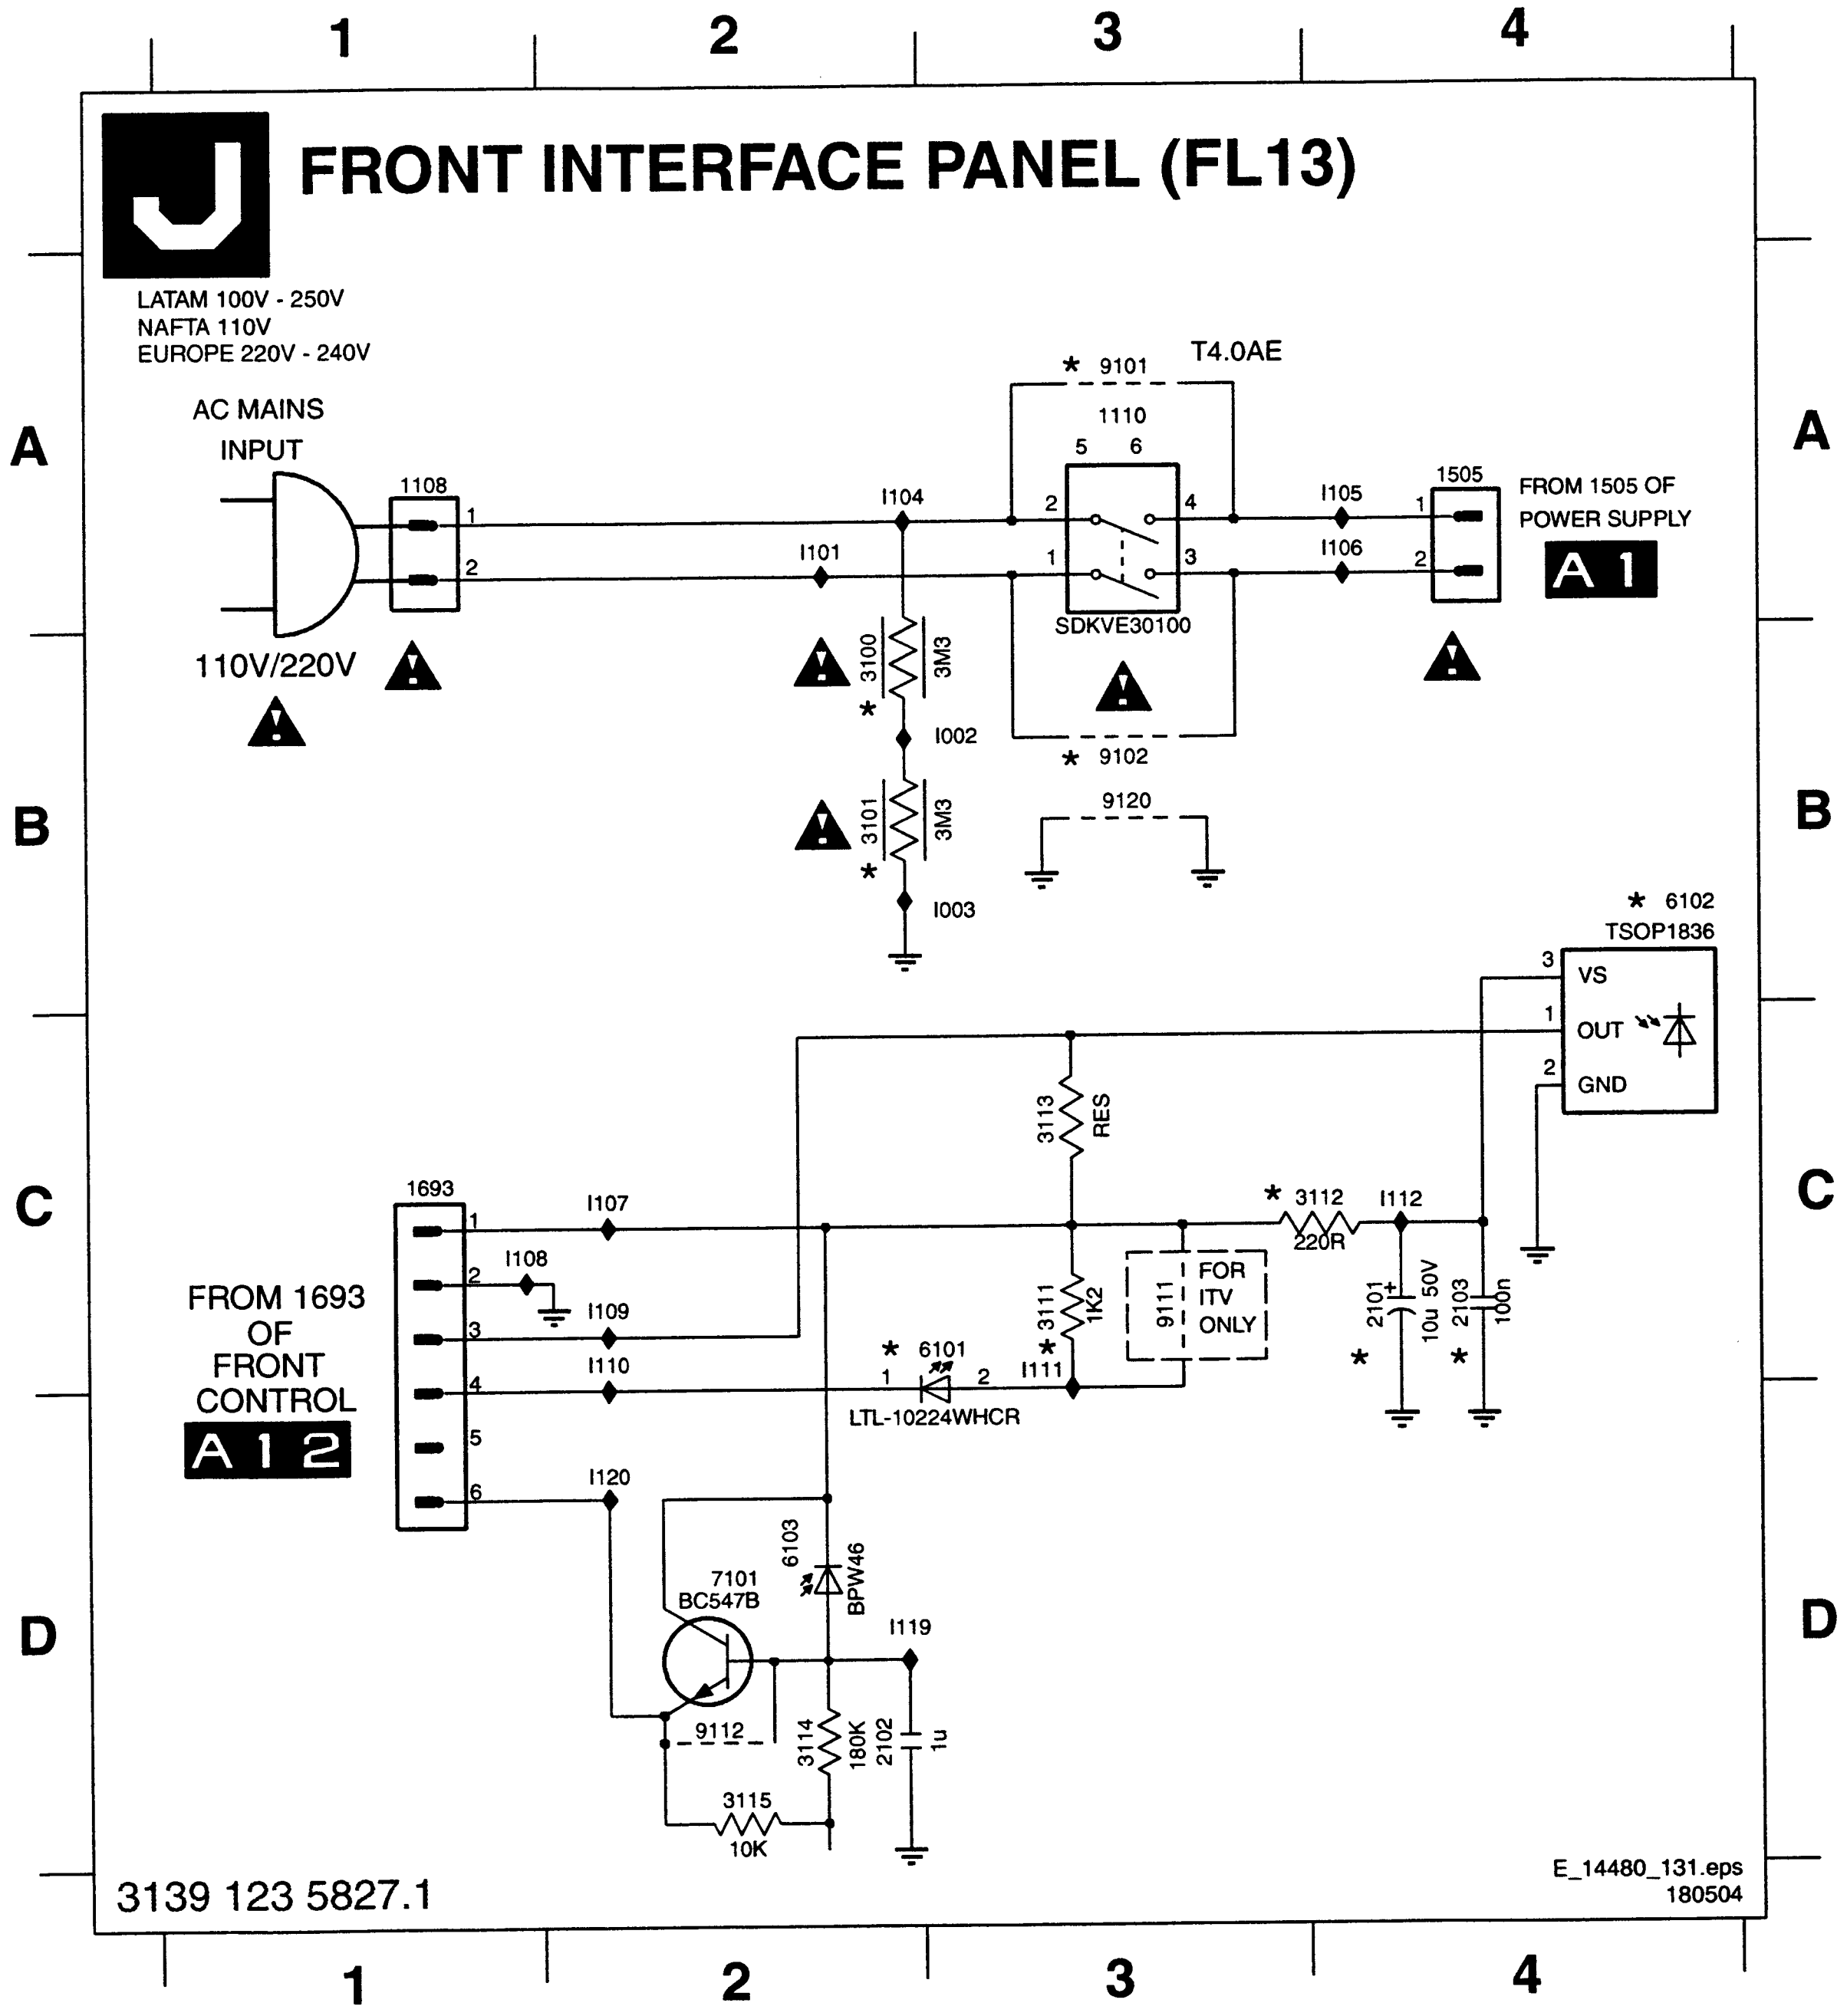
1
2
3
4
J
FRONT INTERFACE PANEL (FL13)
LATAM 100V - 250V
NAFTA 110V
EUROPE 220V - 240V
AC MAINS
INPUT
110V/220V
1108
I101
I104
3100 3M3
I002
3101 3M3
I003
9101
T4.0AE
1110
SDKVE30100
9102
9120
I105
I106
1505
FROM 1505 OF POWER SUPPLY
A1
6102
TSOP1836
VS
OUT
GND
3113 RES
3112 220R
I112
3111 1K2
9111 FOR ITV ONLY
2101 10u 50V
2103 100n
1693
I107
I108
I109
I110
I111
I120
FROM 1693 OF FRONT CONTROL
A12
6101
LTL-10224WHCR
6103 BPW46
7101 BC547B
I119
9112
3114 180K
2102 1u
3115 10K
A
B
C
D
3139 123 5827.1
E_14480_131.eps
180504

1108	A1
1110	A3
1505	A4
1693	C1
2101	C4
2102	D2
2103	C4
3100	B2
3101	B2
3111	C3
3112	C4
3113	C3
3114	D2
3115	D2
6101	C3
6102	B4
6103	D2
7101	D2
9101	A3
9102	B3
9111	C3
9112	D2
9120	B3
I002	B3
I003	B3
I101	A2
I104	A2
I105	A4
I106	A4
I107	C2
I108	C1
I109	C2
I110	C2
I111	C3
I112	C4
I119	D2
I120	D2

Layout Front Interface Panel (FL-13) (Top Side)

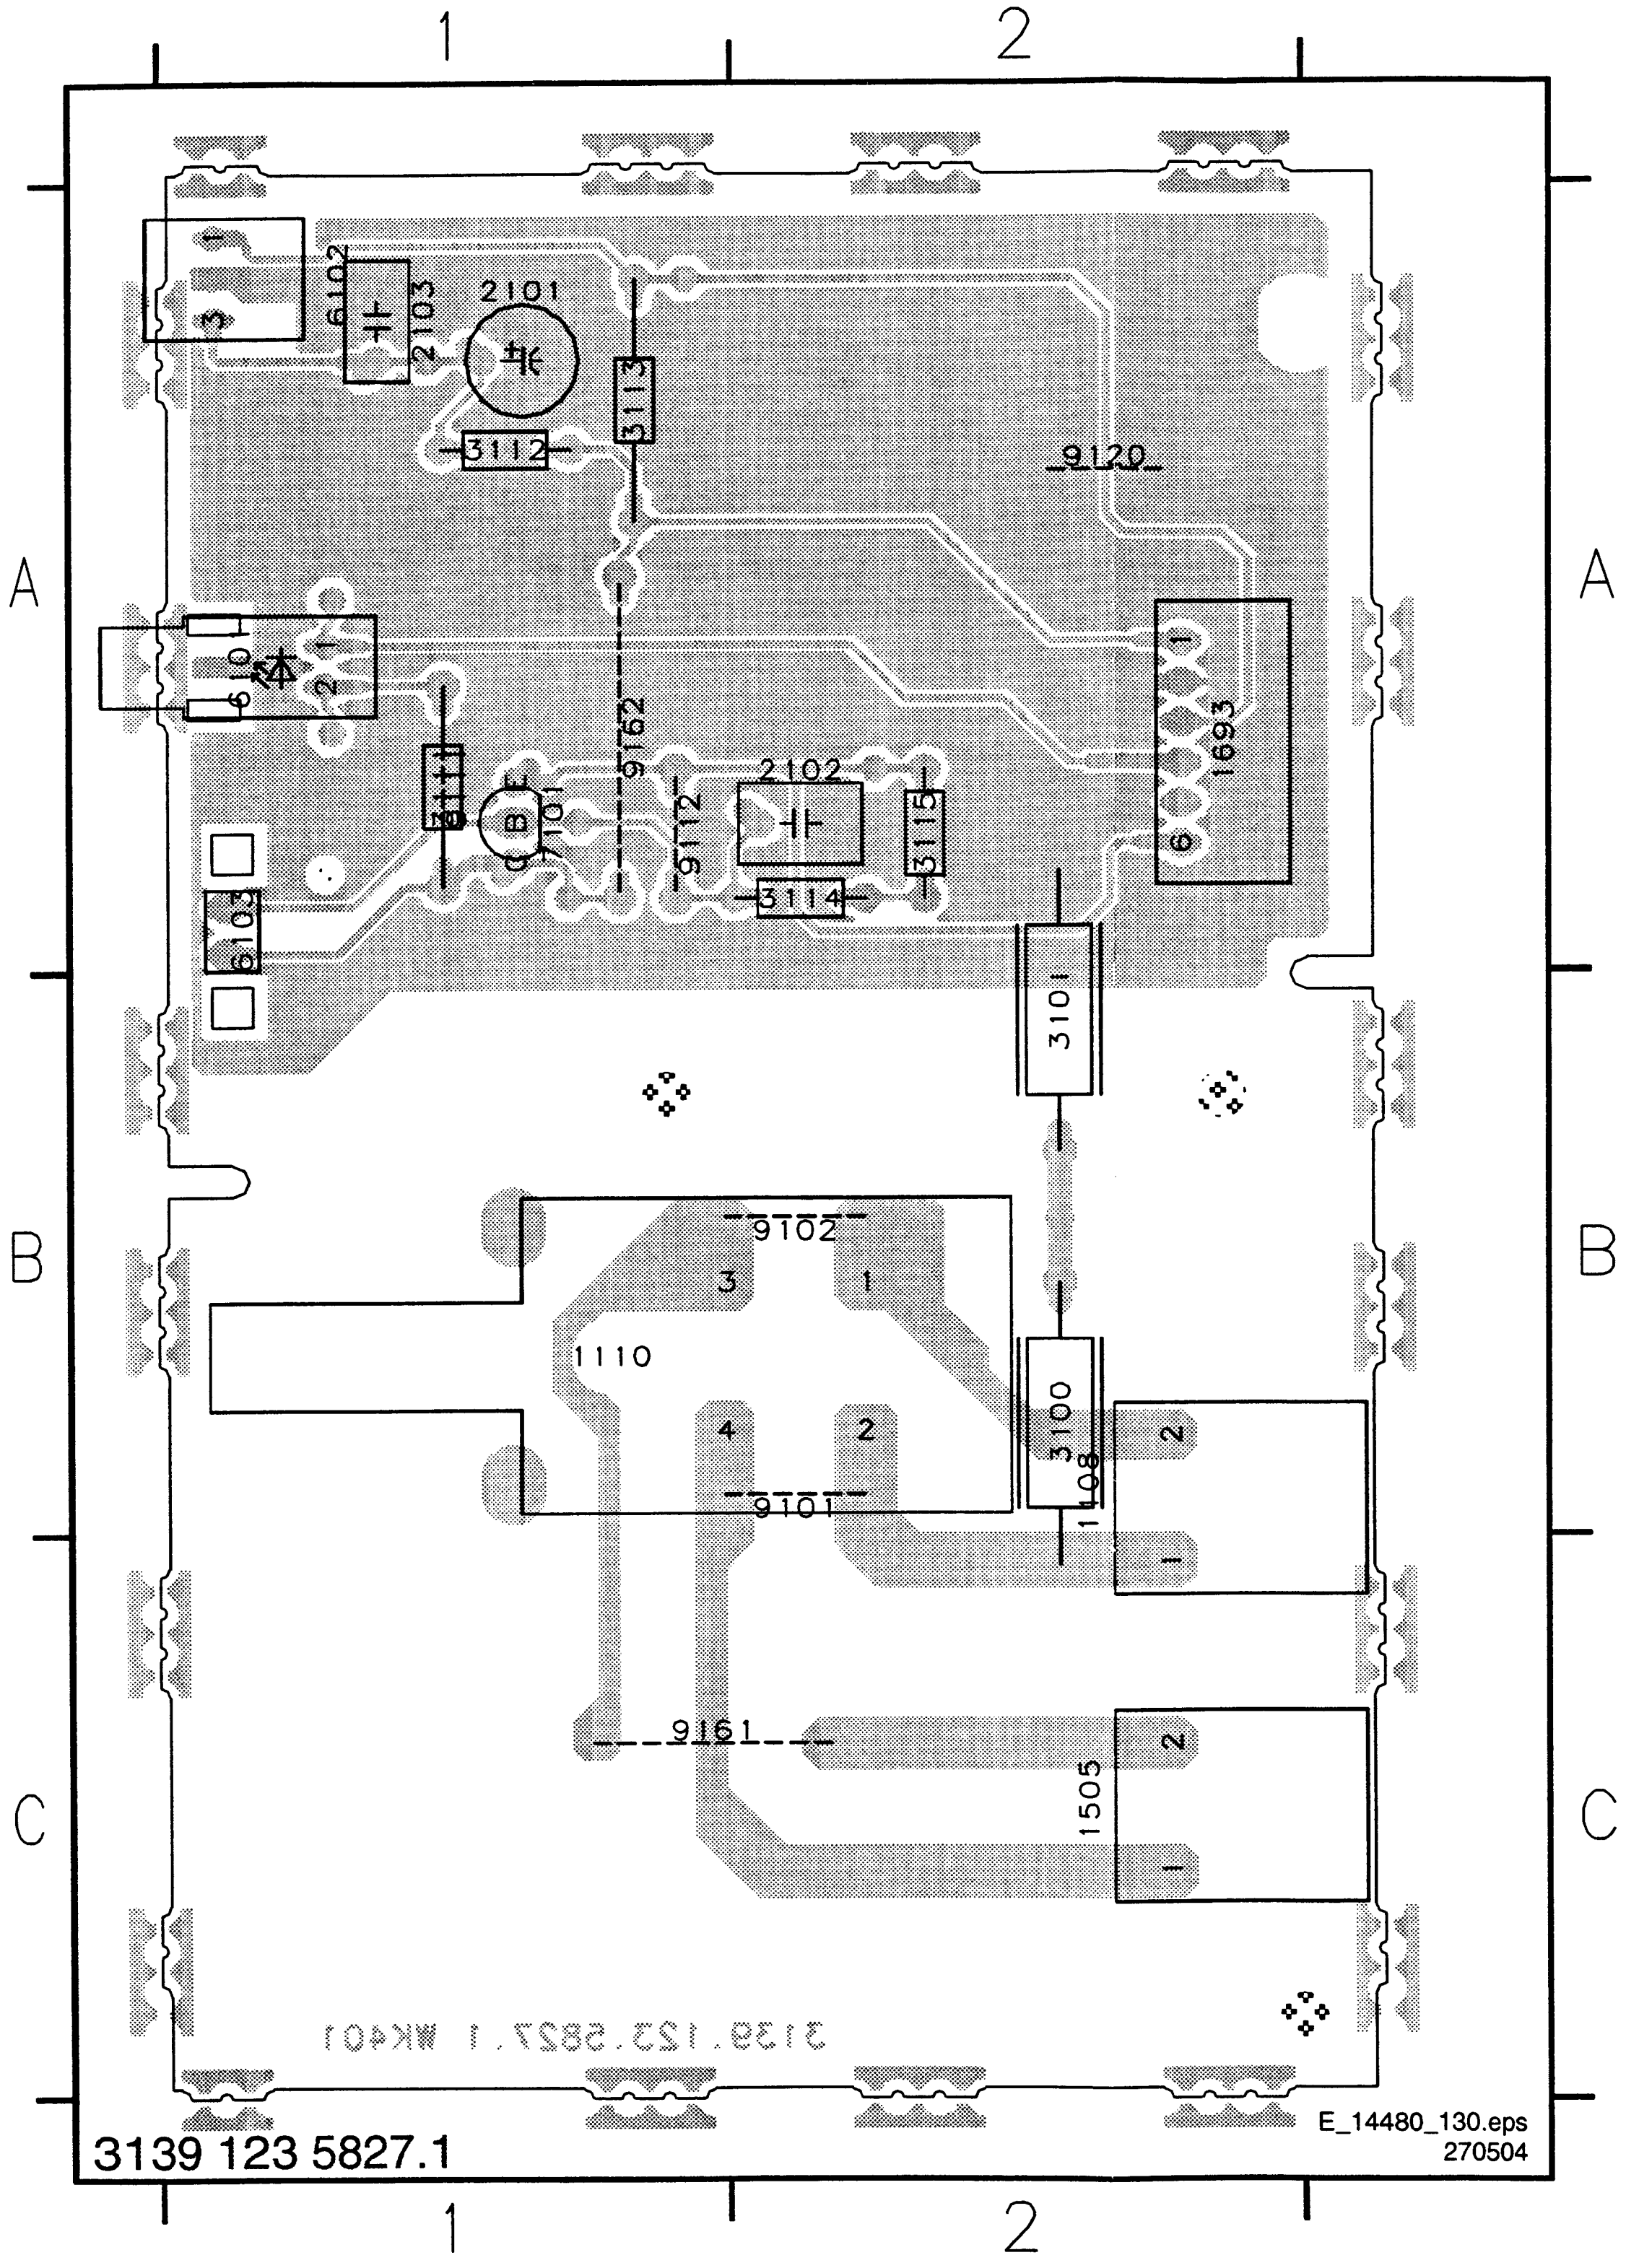
1
2
A
B
C
6102
2103
2101
3113
3112
9120
6101
1693
9162
3111
7101
9112
2102
3115
3114
6103
3101
9102
1110
9101
3100
1108
9161
1505
3139.123.5827.1 WK401
3139 123 5827.1
E_14480_130.eps
270504

1108	B2
1110	B1
1505	C2
1693	A2
2101	A1
2102	A2
2103	A1
3100	B2
3101	B2
3111	A1
3112	A1
3113	A1
3114	A2
3115	A2
6101	A1
6102	A1
6103	A1
7101	A1
9101	B2
9102	B2
9111	A1
9112	A1
9120	A2
9161	C1
9162	A1

Front Interface Panel (PV-2)

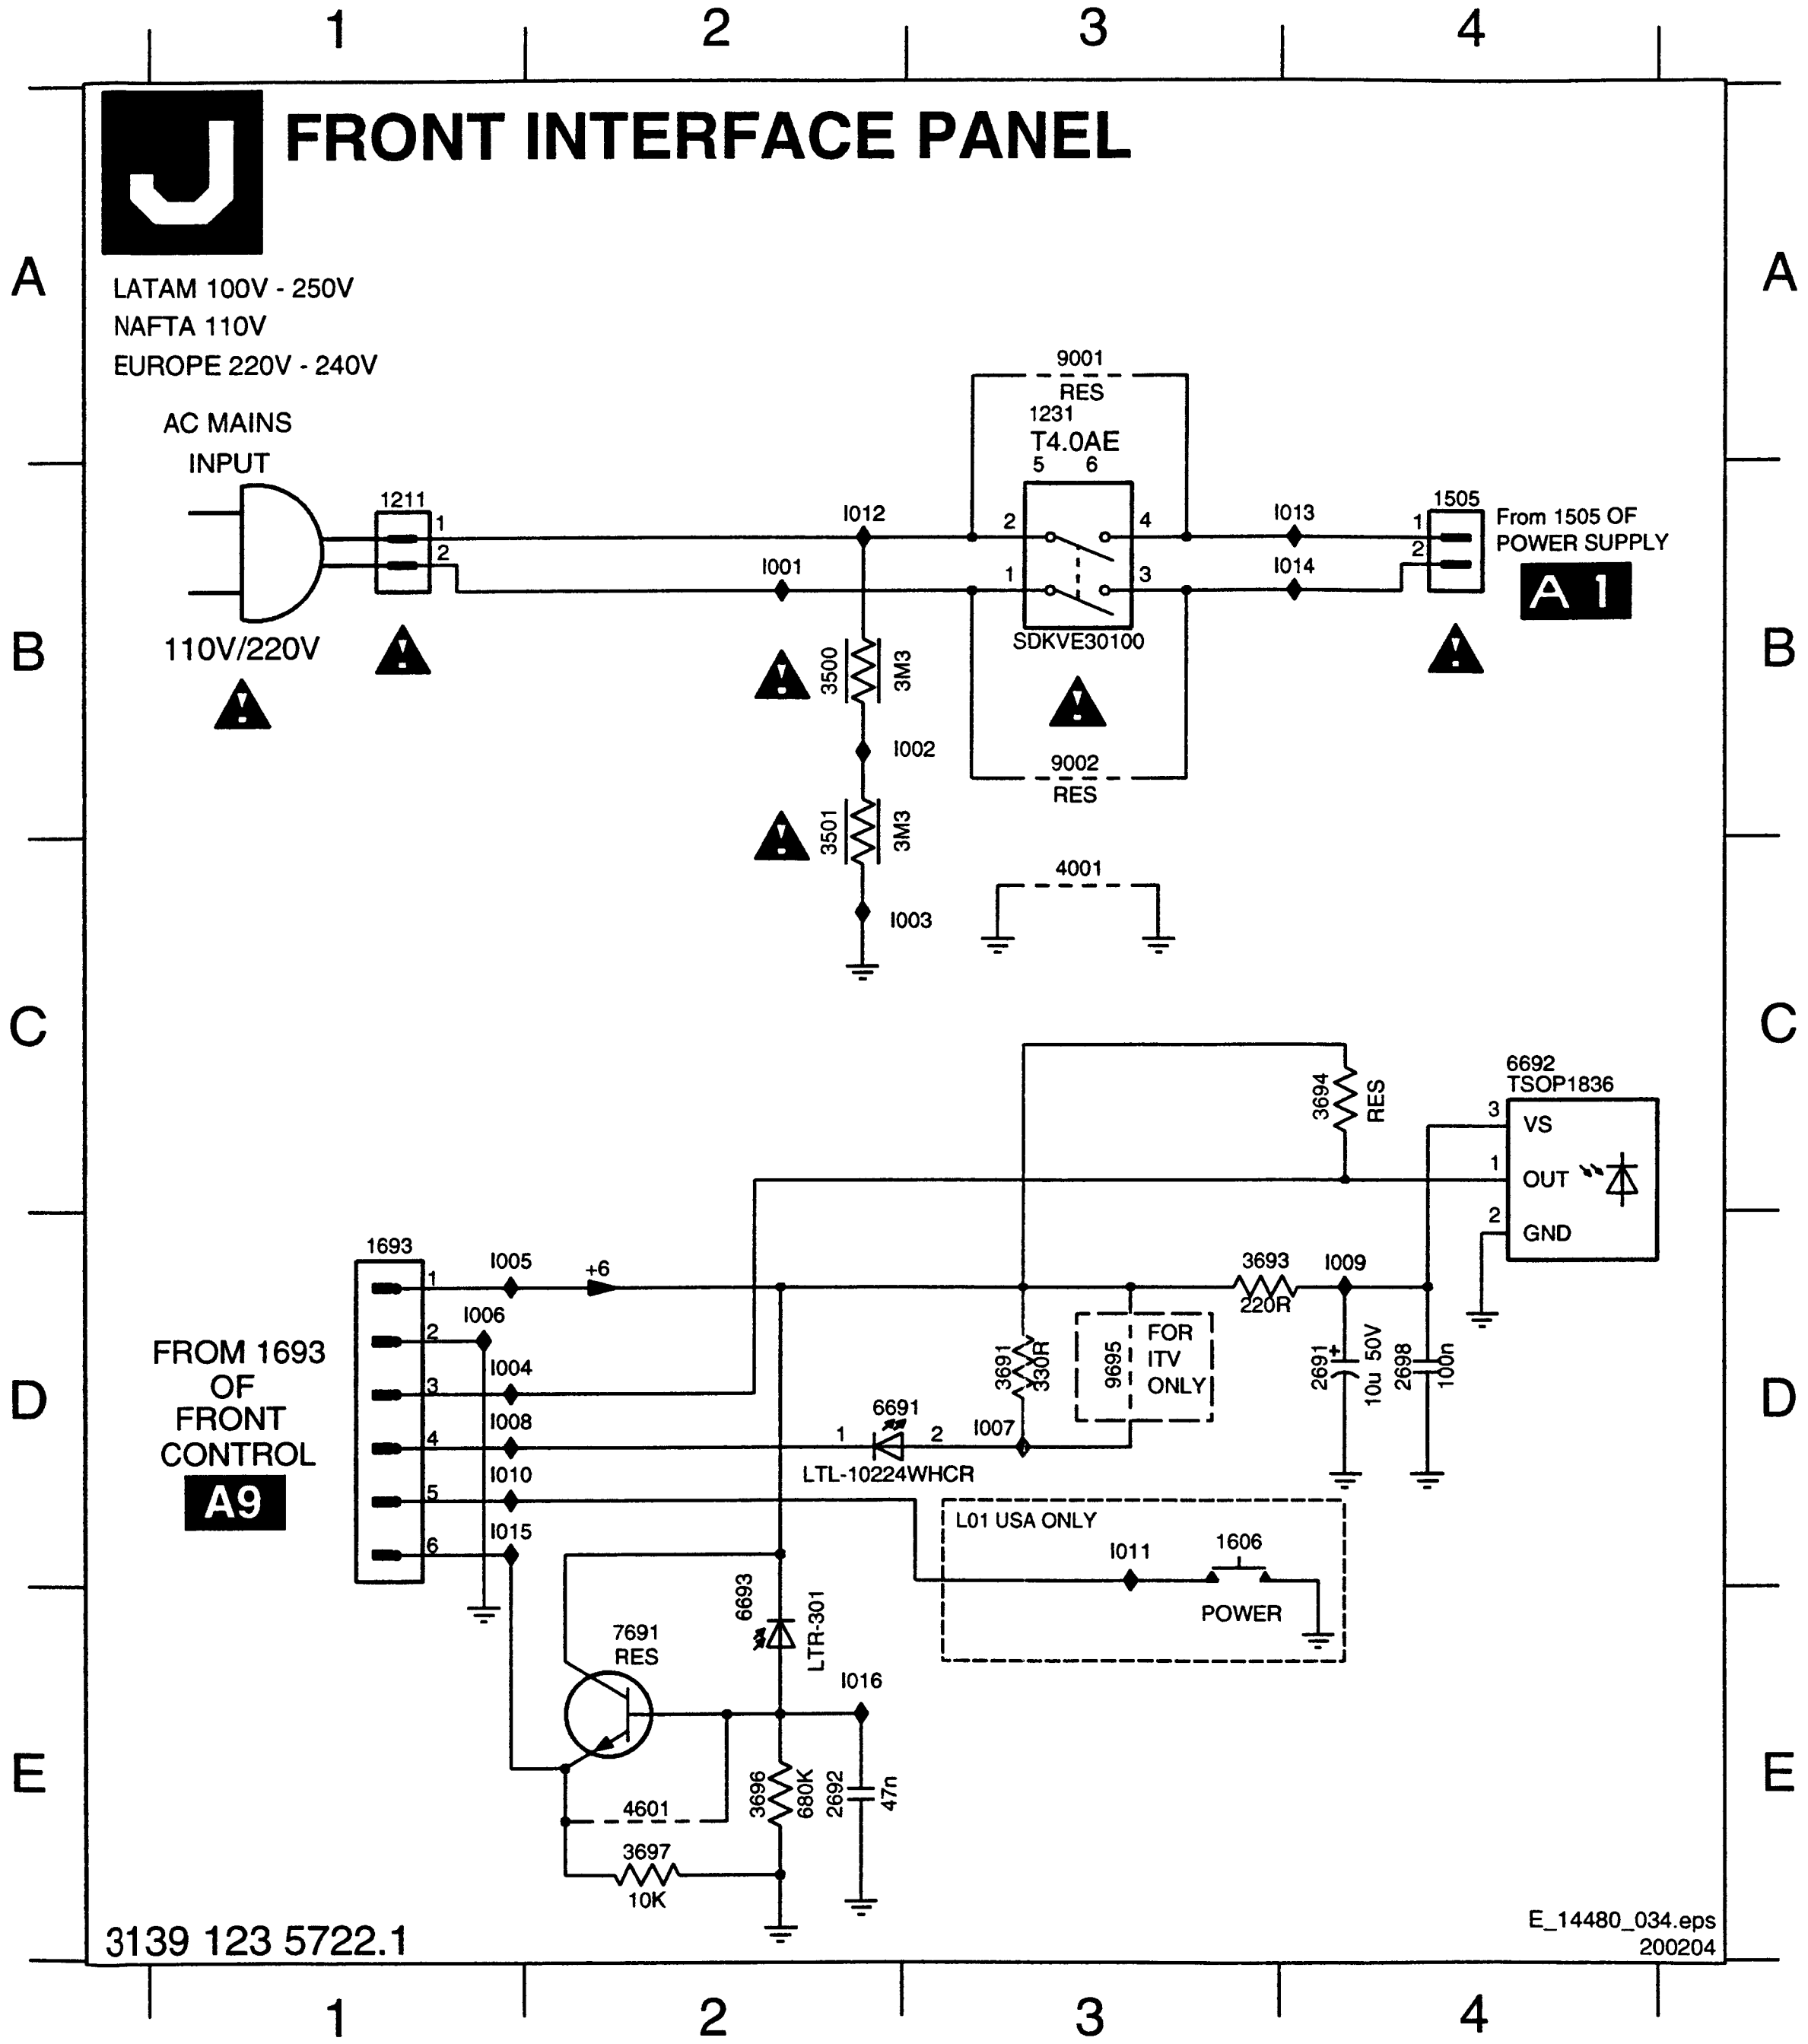
J
FRONT INTERFACE PANEL
LATAM 100V - 250V
NAFTA 110V
EUROPE 220V - 240V
AC MAINS
INPUT
110V/220V
1211
I012
I001
9001
RES
1231
T4.0AE
SDKVE30100
9002
RES
I013
I014
1505
From 1505 OF
POWER SUPPLY
A1
3500
3M3
I002
3501
3M3
I003
4001
3694
RES
6692
TSOP1836
VS
OUT
GND
1693
I005
+6
I006
I004
I008
I010
I015
FROM 1693
OF
FRONT
CONTROL
A9
3693
220R
I009
3691
330R
9695
FOR
ITV
ONLY
2691
10u 50V
2698
100n
6691
I007
LTL-10224WHCR
L01 USA ONLY
I011
1606
POWER
6693
LTR-301
7691
RES
I016
4601
3696
680K
2692
47n
3697
10K
3139 123 5722.1
E_14480_034.eps
200204

1211	B1
1231	A3
1505	B4
1606	D3
1693	D1
2691	D4
2692	E2
2698	D4
3500	B2
3501	B2
3691	D3
3693	D3
3694	C4
3696	E2
3697	E2
4001	C3
4601	E2
6691	D3
6692	C4
6693	E2
7691	E2
9001	A3
9002	B3
9695	D3
I001	B2
I002	B3
I003	C3
I004	D1
I005	D1
I006	D1
I007	D3
I008	D1
I009	D4
I010	D1
I011	D3
I012	B2
I013	B4
I014	B4
I015	D1
I016	E2

Layout Front Interface Panel (PV-2) (Top Side)

1211	D1	1606	D4	2698	A3	3691	B3	6691	B4	9001	C1	9695	B3
1231	C3	1693	A3	3500	B2	3693	B3	6692	B4	9002	D2	9696	A3
1505	A1	2691	A4	3501	B3	3694	B3	6693	A4	9685	B3		

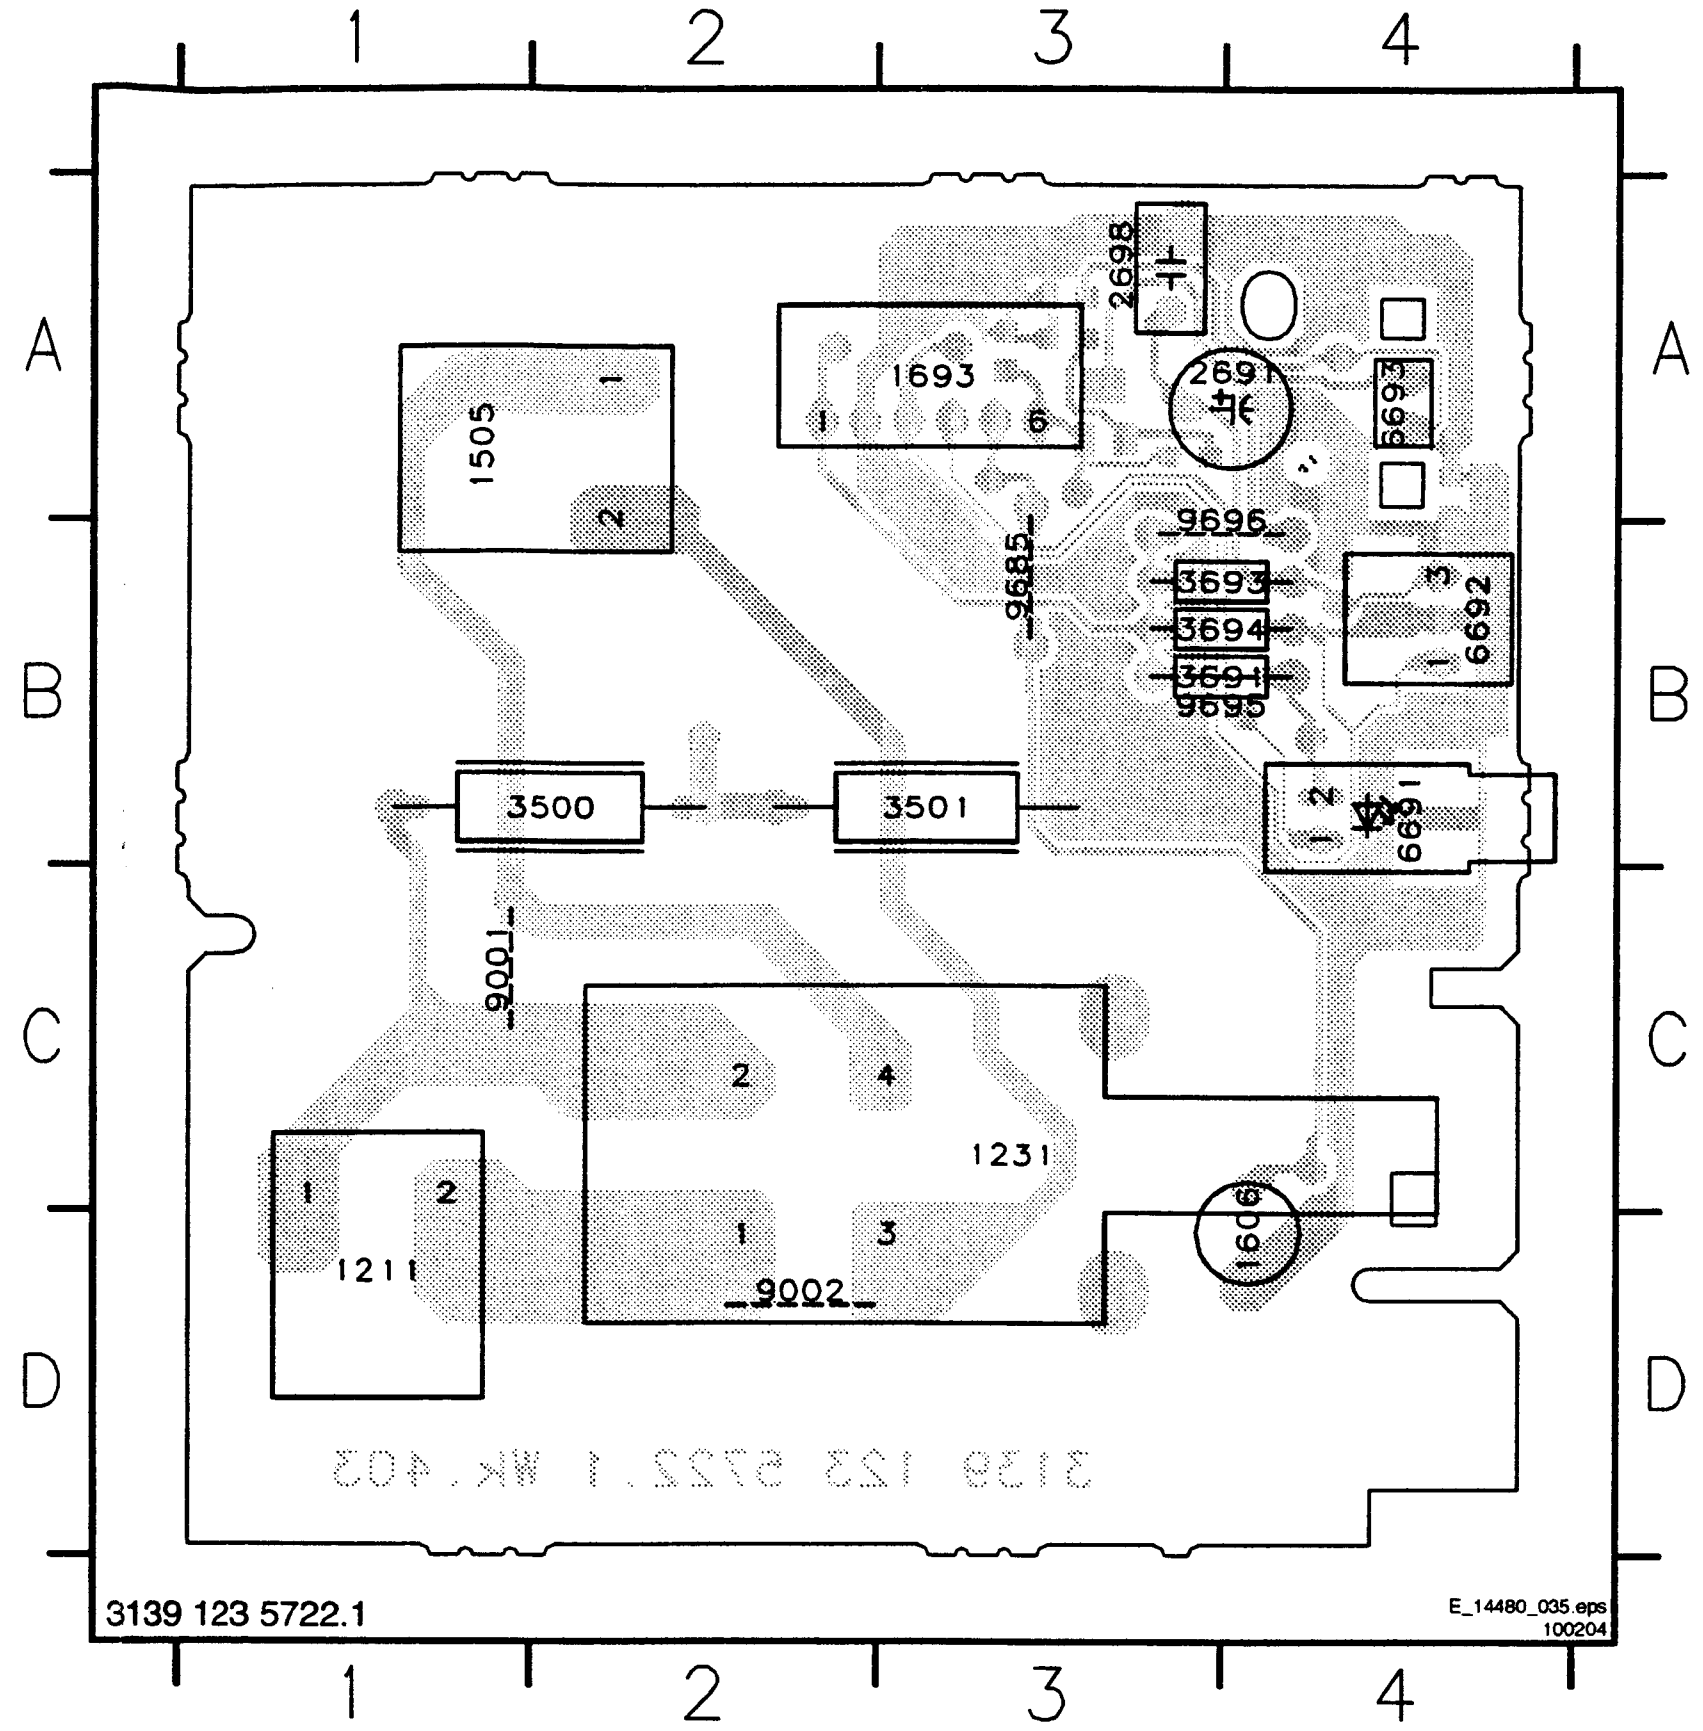
2698
1693
2691
6693
1505
9696
9685
3693
3694
3691
9695
6692
3500
3501
6691
9001
1231
1211
1606
9002
3139 123 5722.1 Wk.403
3139 123 5722.1
E_14480_035.eps
100204

Layout Front Interface Panel (PV-2) (Bottom Side)

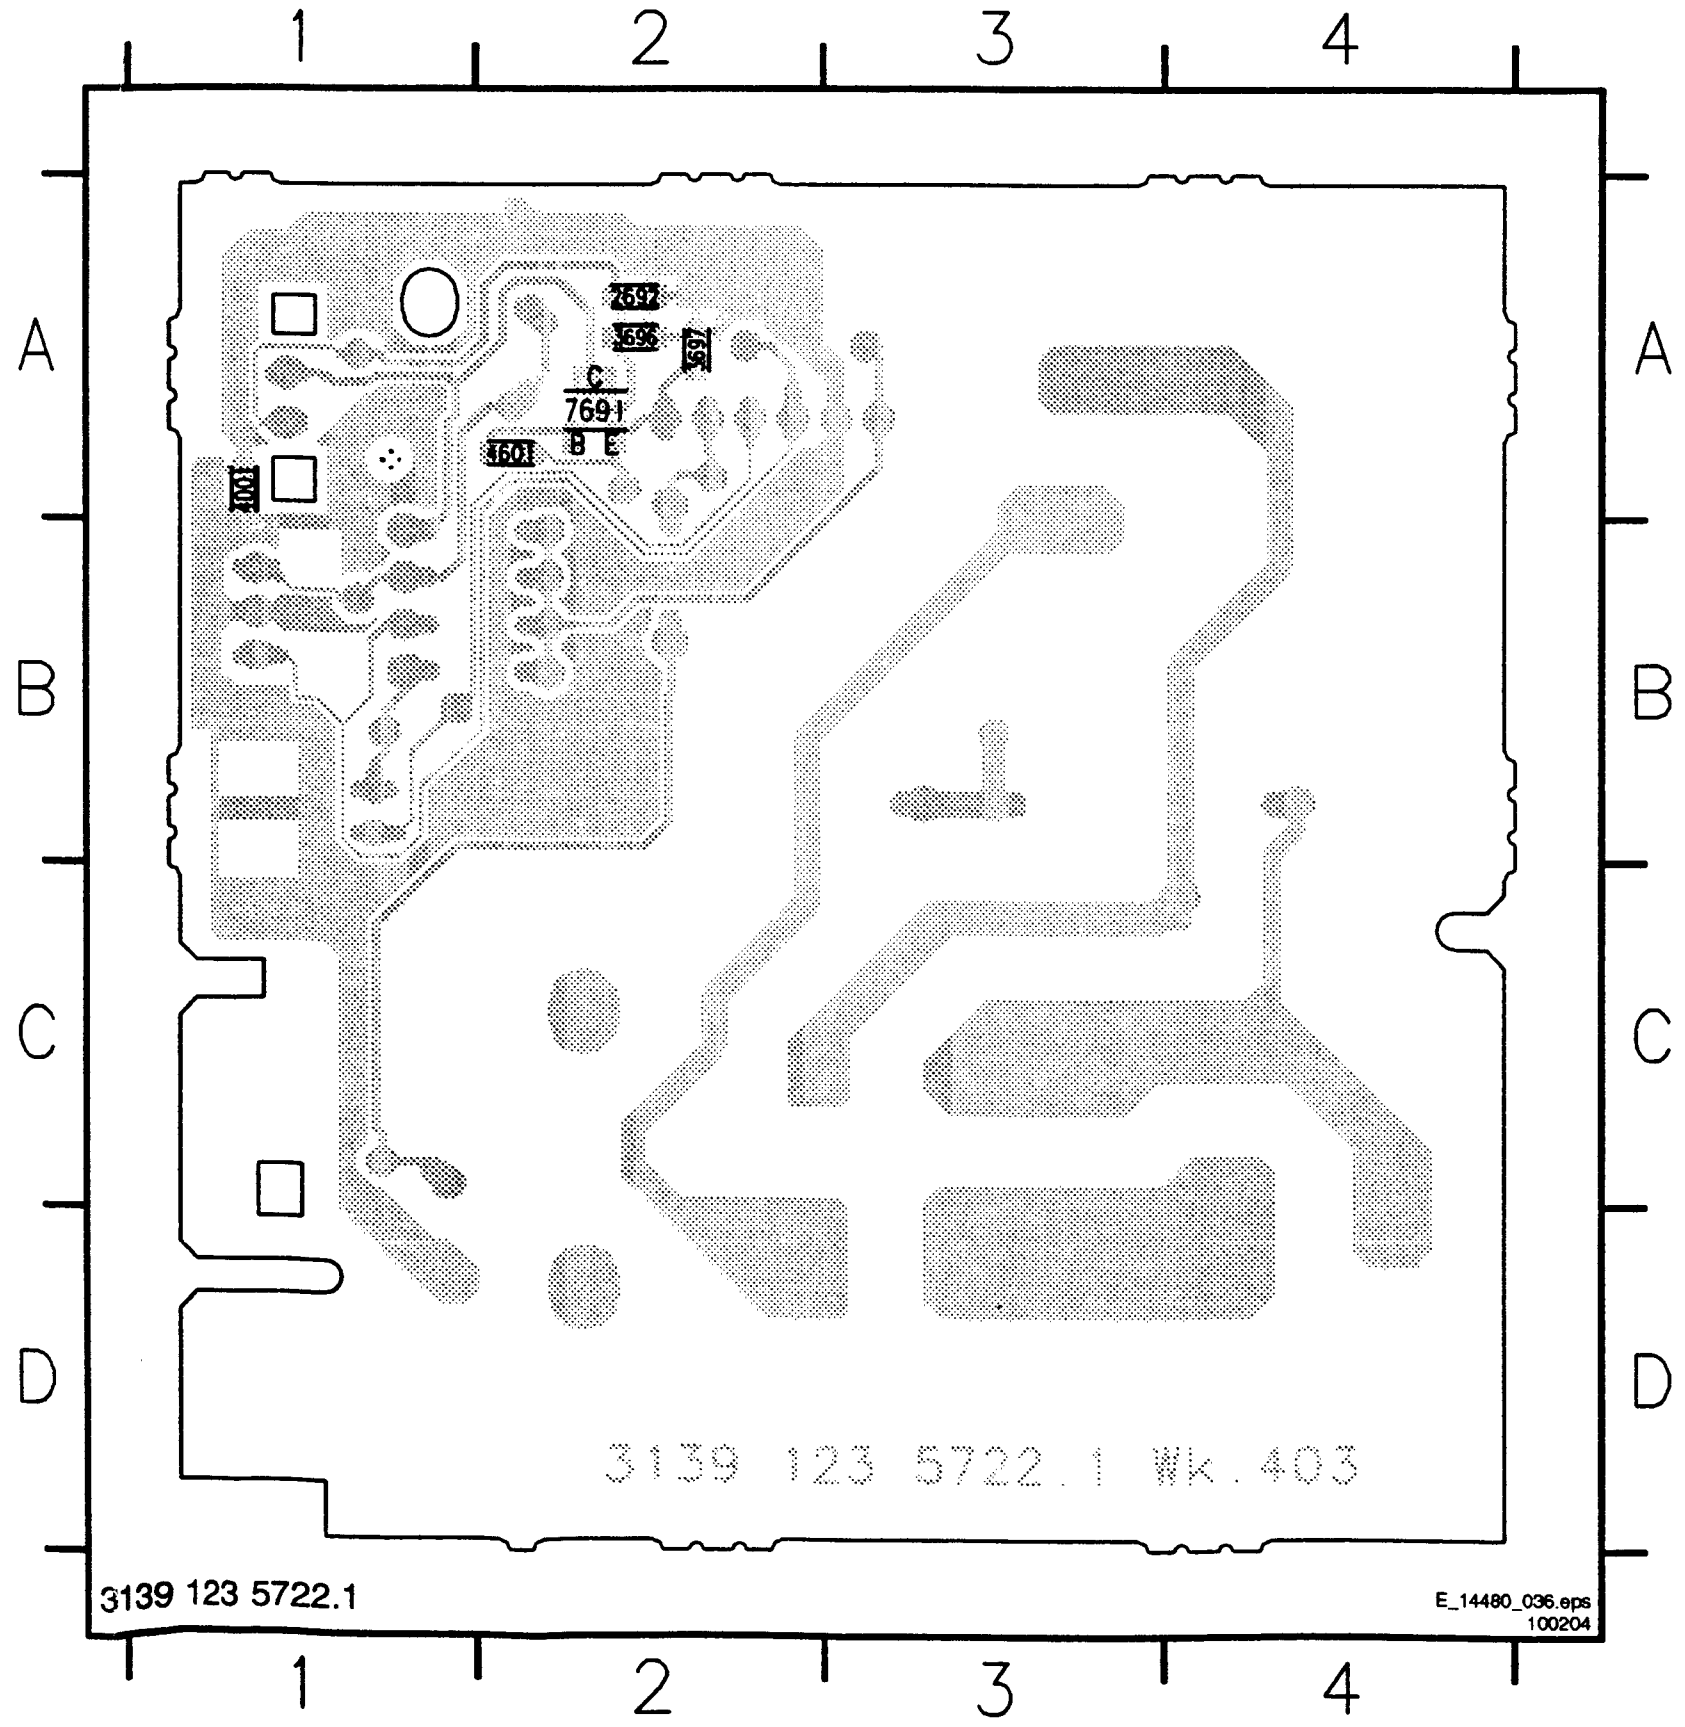
7691
4601
3139 123 5722.1 Wk.403
3139 123 5722.1
E_14480_036.eps
100204

Front Interface and Keyboard Panel

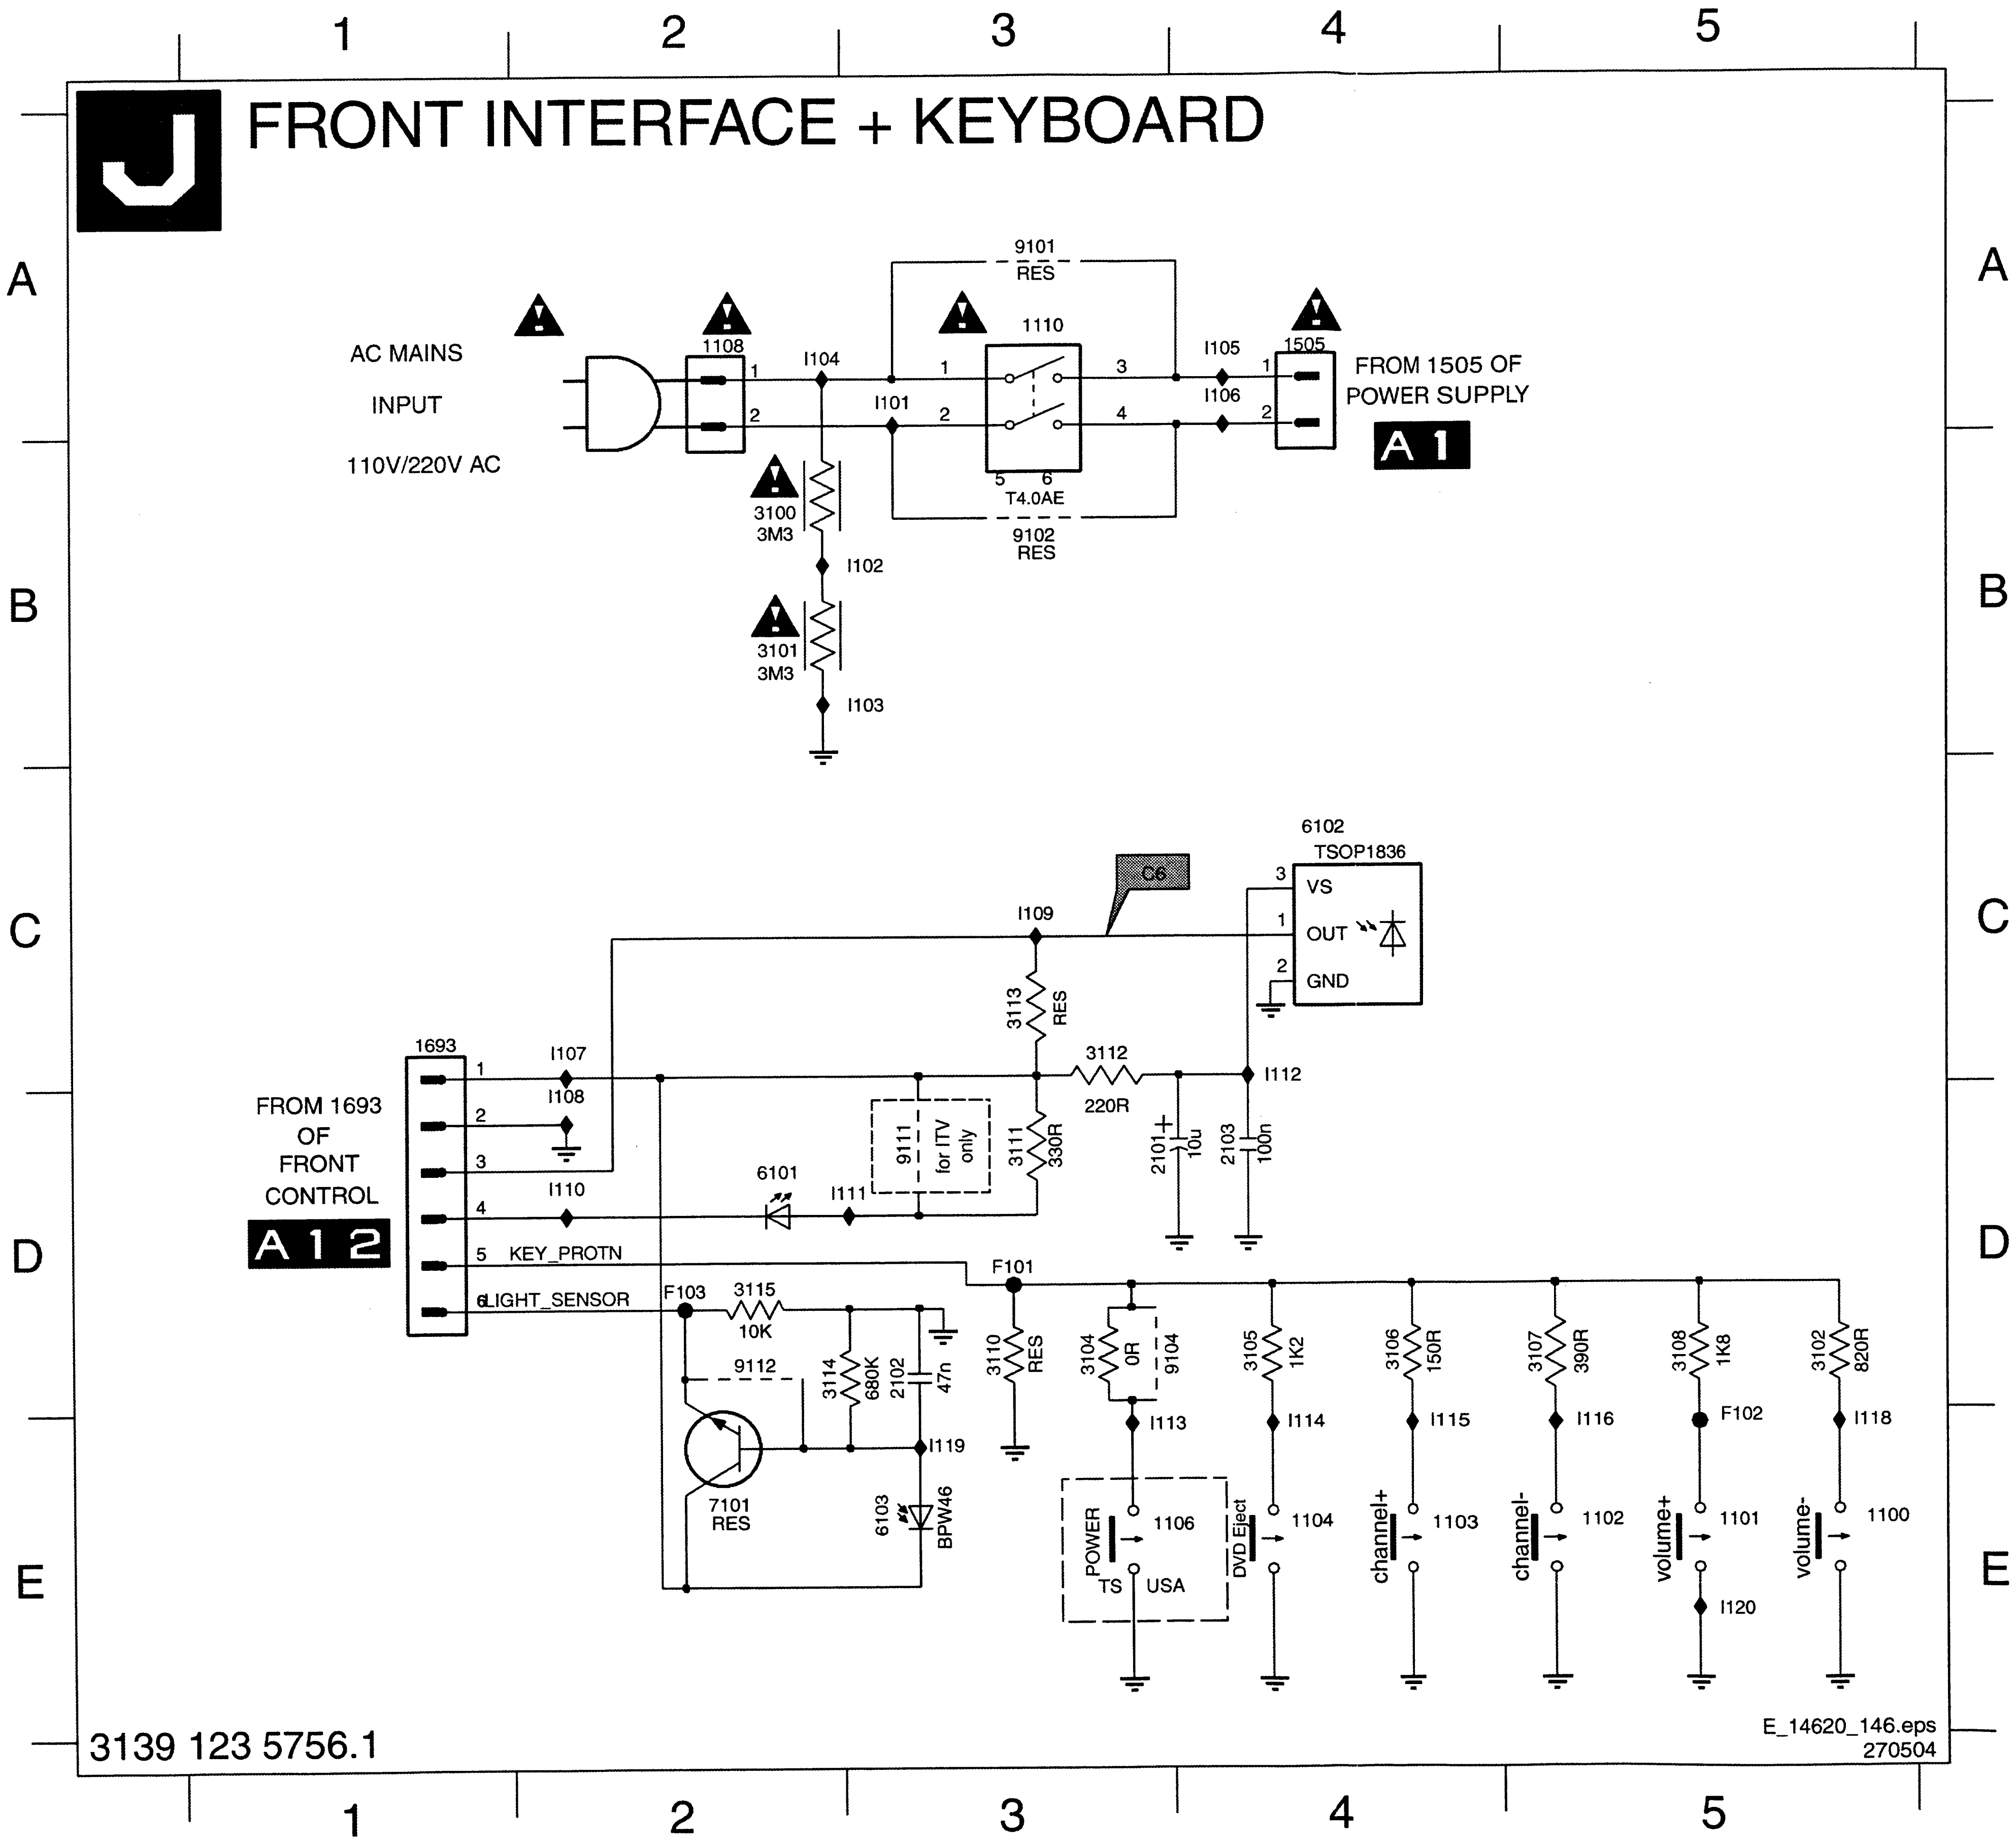

1
2
3
4
5
A
B
C
D
E
J
FRONT INTERFACE + KEYBOARD
AC MAINS
INPUT
110V/220V AC
1108
I104
I101
9101
RES
1110
T4.0AE
9102
RES
I105
I106
1505
FROM 1505 OF
POWER SUPPLY
A1
3100
3M3
I102
3101
3M3
I103
6102
TSOP1836
VS
OUT
GND
C6
I109
3113
RES
3112
220R
I112
2101
10u
2103
100n
1693
I107
I108
FROM 1693
OF
FRONT
CONTROL
A12
I110
6101
I111
9111
for ITV only
3111
330R
5 KEY_PROTN
6 LIGHT_SENSOR
F103
3115
10K
9112
3114
680K
2102
47n
I119
7101
RES
6103
BPW46
F101
3110
RES
3104
0R
9104
I113
POWER
TS
USA
1106
3105
1K2
I114
DVD Eject
1104
3106
150R
I115
channel+
1103
3107
390R
I116
channel-
1102
3108
1K8
F102
volume+
1101
I120
3102
820R
I118
volume-
1100
3139 123 5756.1
E_14620_146.eps
270504

1100	E5
1101	E5
1102	E5
1103	E4
1104	E4
1106	E3
1108	A2
1110	A3
1505	A4
1693	C1
2101	D3
2102	D3
2103	D4
3100	B2
3101	B2
3102	D5
3104	D3
3105	D4
3106	D4
3107	D5
3108	D5
3110	D3
3111	D3
3112	C3
3113	C3
3114	D2
3115	D2
6101	D2
6102	C4
6103	E3
7101	E2
9101	A3
9102	B3
9104	D4
9111	D3
9112	D2
F101	D3
F102	D5
F103	D2
I101	A3
I102	B3
I103	B3
I104	A2
I105	A4
I106	A4
I107	C2
I108	D2
I109	C3
I110	D2
I111	D3
I112	C4
I113	E3
I114	E4
I115	E4
I116	E5
I118	E5
I119	E3
I120	E5

Layout Front Interface and Keyboard Panel (Top Side)

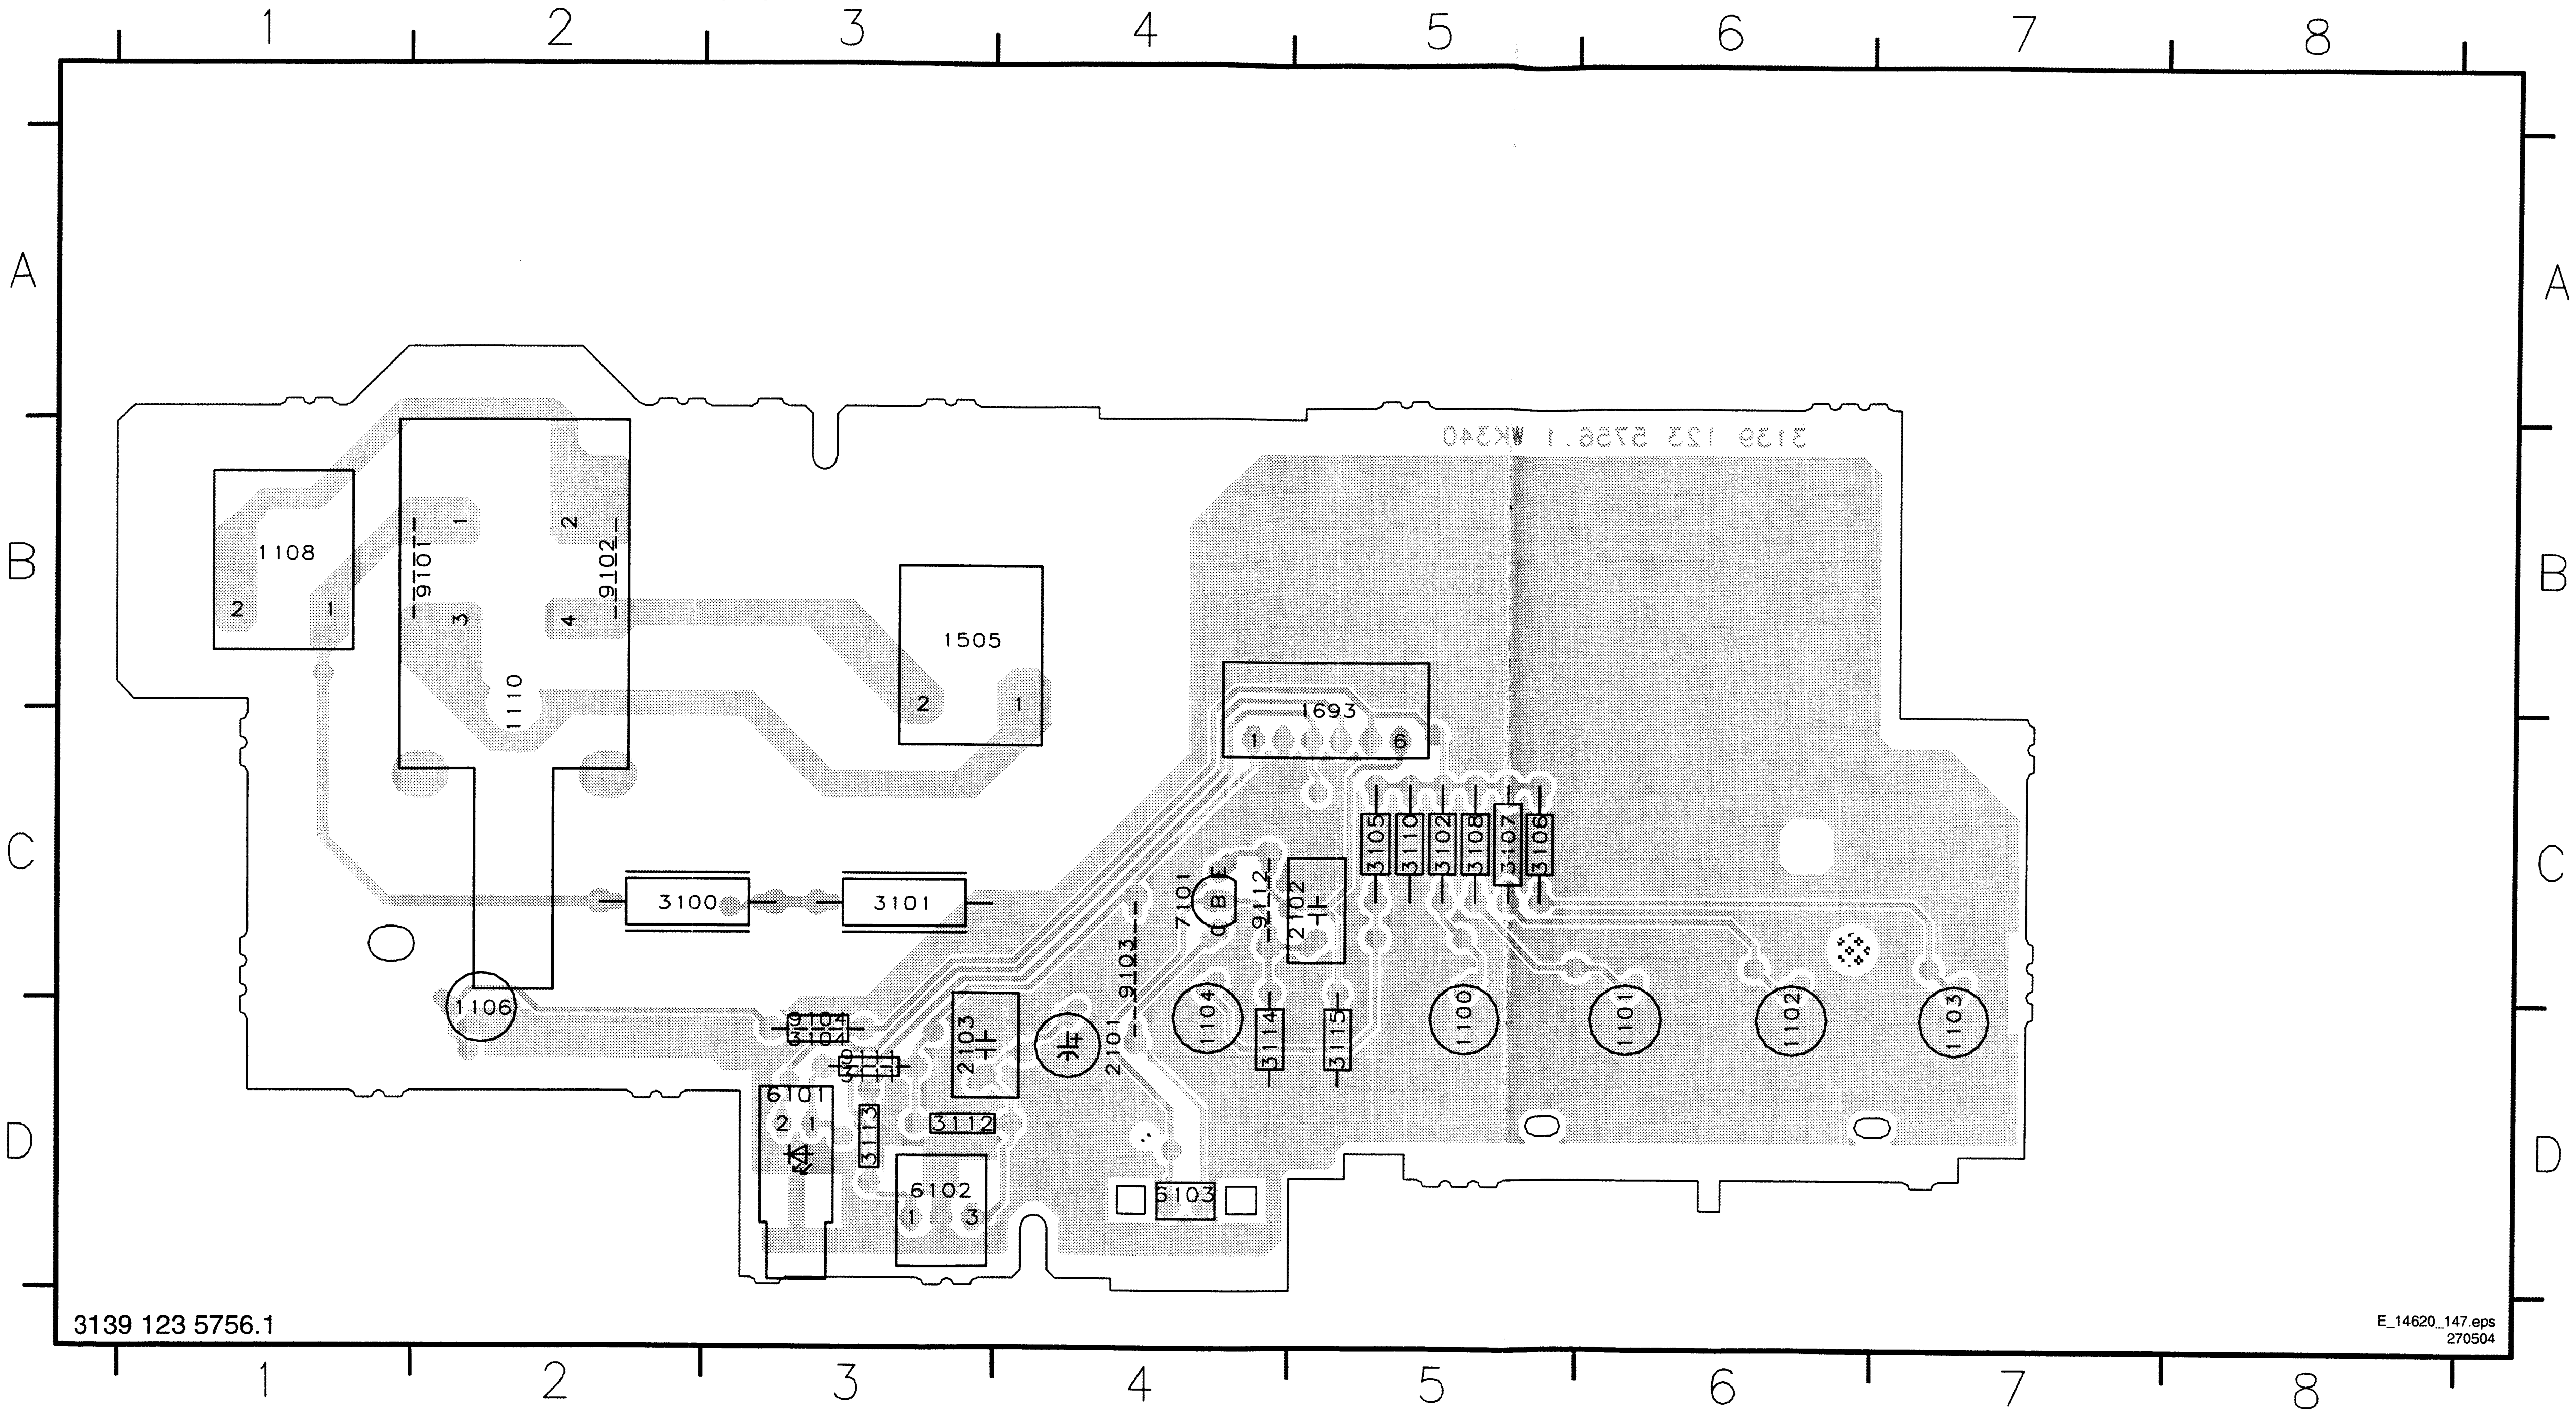
1
2
3
4
5
6
7
8
A
B
C
D
1108
1110
9101
9102
1505
1693
3100
3101
1106
9104
3104
6101
3113
3112
2103
6102
5103
2101
9103
7101
9112
2102
1104
3114
3115
3105
3110
3102
3108
3107
3106
1100
1101
1102
1103
3139 123 5756.1
E_14620_147.eps
270504

1100	D5
1101	D6
1102	D6
1103	D7
1104	D4
1106	D2
1108	B1
1110	B2
1505	B3
1693	B5
2101	D4
2102	C5
2103	D3
3100	C2
3101	C3
3102	C5
3104	D3
3105	C5
3106	C5
3107	C5
3108	C5
3110	C5
3111	D3
3112	D3
3113	D3
3114	D4
3115	D5
6101	D3
6102	D3
6103	D4
7101	C4
9101	B2
9102	B2
9103	C4
9104	D3
9111	D3
9112	C4

8. Alignments

Index of this chapter:
1. General Alignment Conditions
2. Hardware Alignments
3. Software Alignments and Settings

Note:
- The Service Default Mode (SDM) and Service Alignment Mode (SAM) are described in chapter 5 "Service Modes, ...".
- Menu navigation is done with the CURSOR UP, DOWN, LEFT, or RIGHT keys of the remote control transmitter.

8.1 General Alignment Conditions

Perform all electrical adjustments under the following conditions:
- AC voltage and frequency: 120 V_ac / 60 Hz or 240 V_ac / 50 Hz (region dependent).
- Connect the set to the Mains voltage via an isolation transformer with a low internal resistance.
- Allow the set to warm up for approximately 20 minutes.
- Measure the voltages and waveforms in relation to chassis ground (with the exception of the voltages on the primary side of the power supply). Never use the cooling fins / plates as ground.
- Test probe: Ri > 10 Mohm; Ci < 2.5 pF.
- Use an isolated trimmer / screwdriver to perform the alignments.

8.2 Hardware Alignments

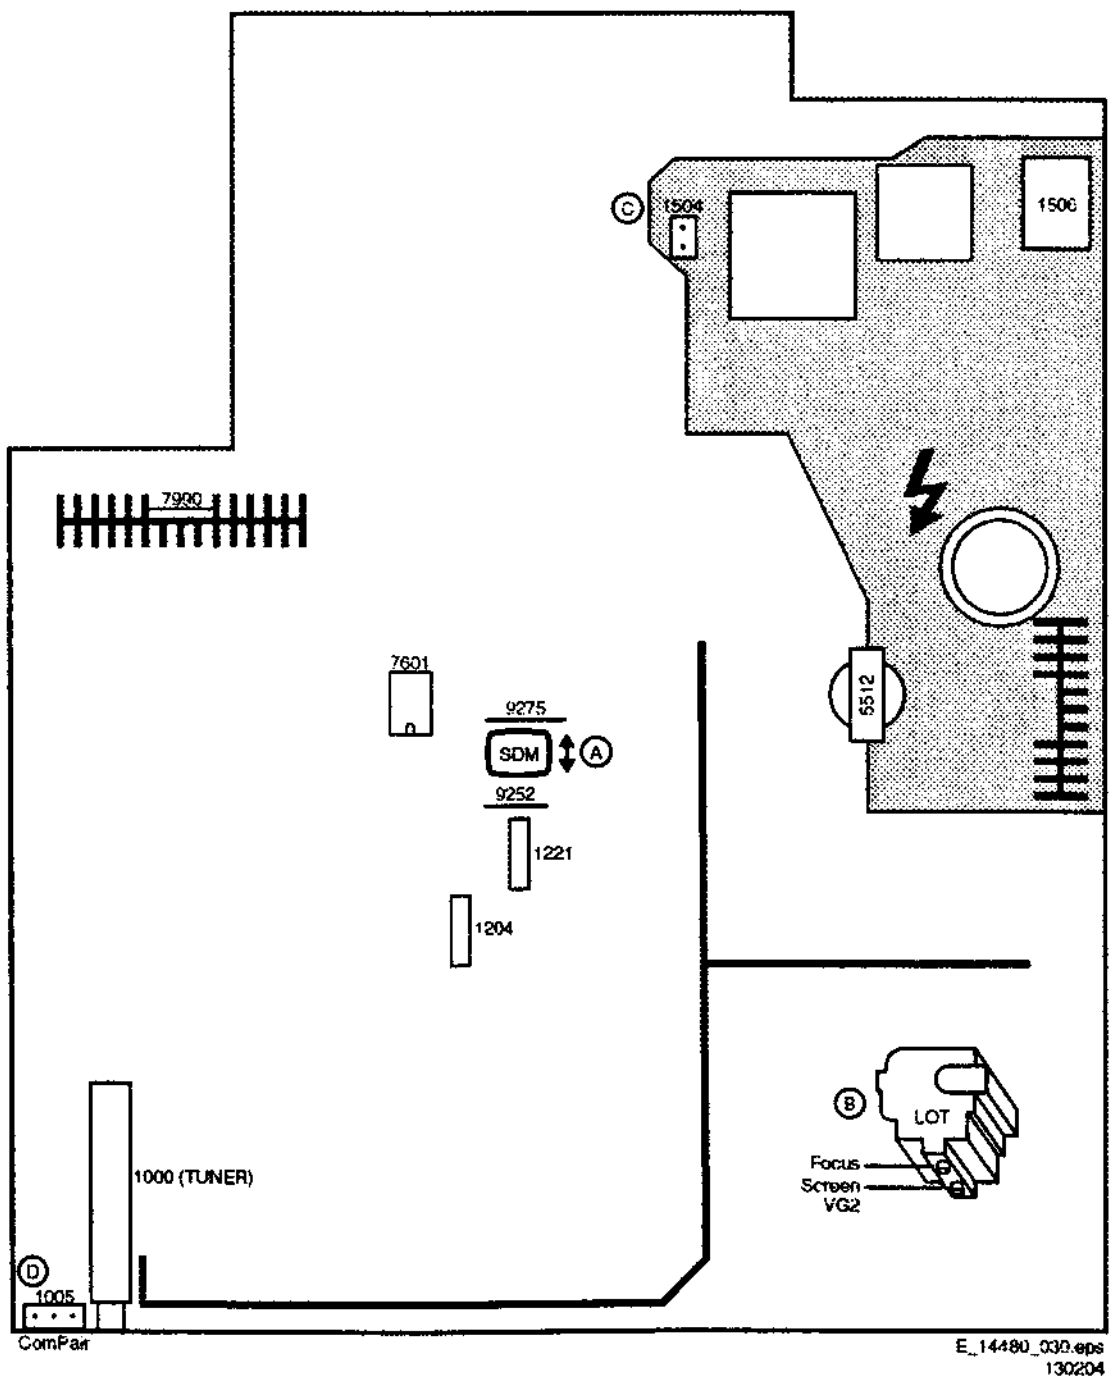

Figure 8-1 Top view family board

8.2.1 Vg2 Adjustment

1. Activate the SAM.
2. Go to the WHITE TONE sub menu.
3. Set the values of NORMAL RED, GREEN and BLUE to "32".
4. Go, via the MENU key, to the normal user menu and set
5. SATURATION/COLOR to "0".
6. CONTRAST to "0".
7. BRIGHTNESS to minimum (OSD just visible).
8. Return to the SAM via the MENU key.
9. Connect the RF output of a pattern generator to the antenna input. Test pattern is a 'black' picture (blank screen on CRT without any OSD info) with a signal strength of 1 V_pp.
10. Set the channel of the oscilloscope to 50 V/div and the time base to 0.2 ms (external triggering on the vertical pulse). Ground the scope at the CRT panel and connect a 10:1 probe to one of the cathodes of the picture tube socket (see diagram B).
11. Measure the cut off pulse during first full line after the frame blanking (see figure "V_cutoff waveform"). You will see two pulses, one being the "cut off" pulse and the other being the "white drive" pulse. Choose the one with the lowest value; this is the "cut off" pulse.
12. Select the cathode with the highest V_dc value for the alignment. Adjust the V_cutoff of this gun with the SCREEN potentiometer (see figure "Top view family board") on the LOT to 160 V_dc, except for the 25/28BLD picture tube (Black Line Display, for EU only); this tube must be aligned to 140 V_dc.
13. Restore BRIGHTNESS and CONTRAST to normal (= 31).

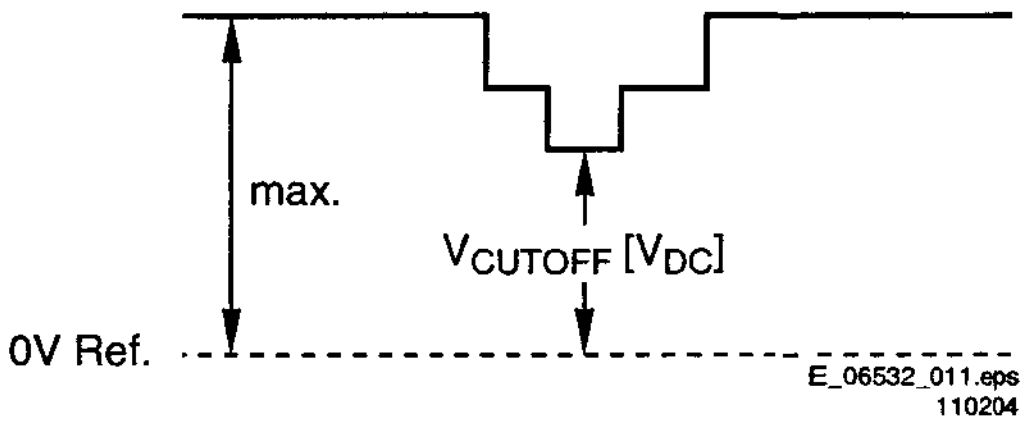

Figure 8-2 V_cutoff waveform

8.2.2 Focusing

1. Tune the set to a circle or crosshatch test pattern (use an external video pattern generator).
2. Choose picture mode NATURAL (or MOVIES) with the SMART PICTURE button on the remote control transmitter.
3. Adjust the FOCUS potentiometer (see figure "Top view family board") until the vertical lines at 2/3 from east and west, at the height of the centreline, are of minimum width without visible haze.

8.3 Software Alignments and Settings

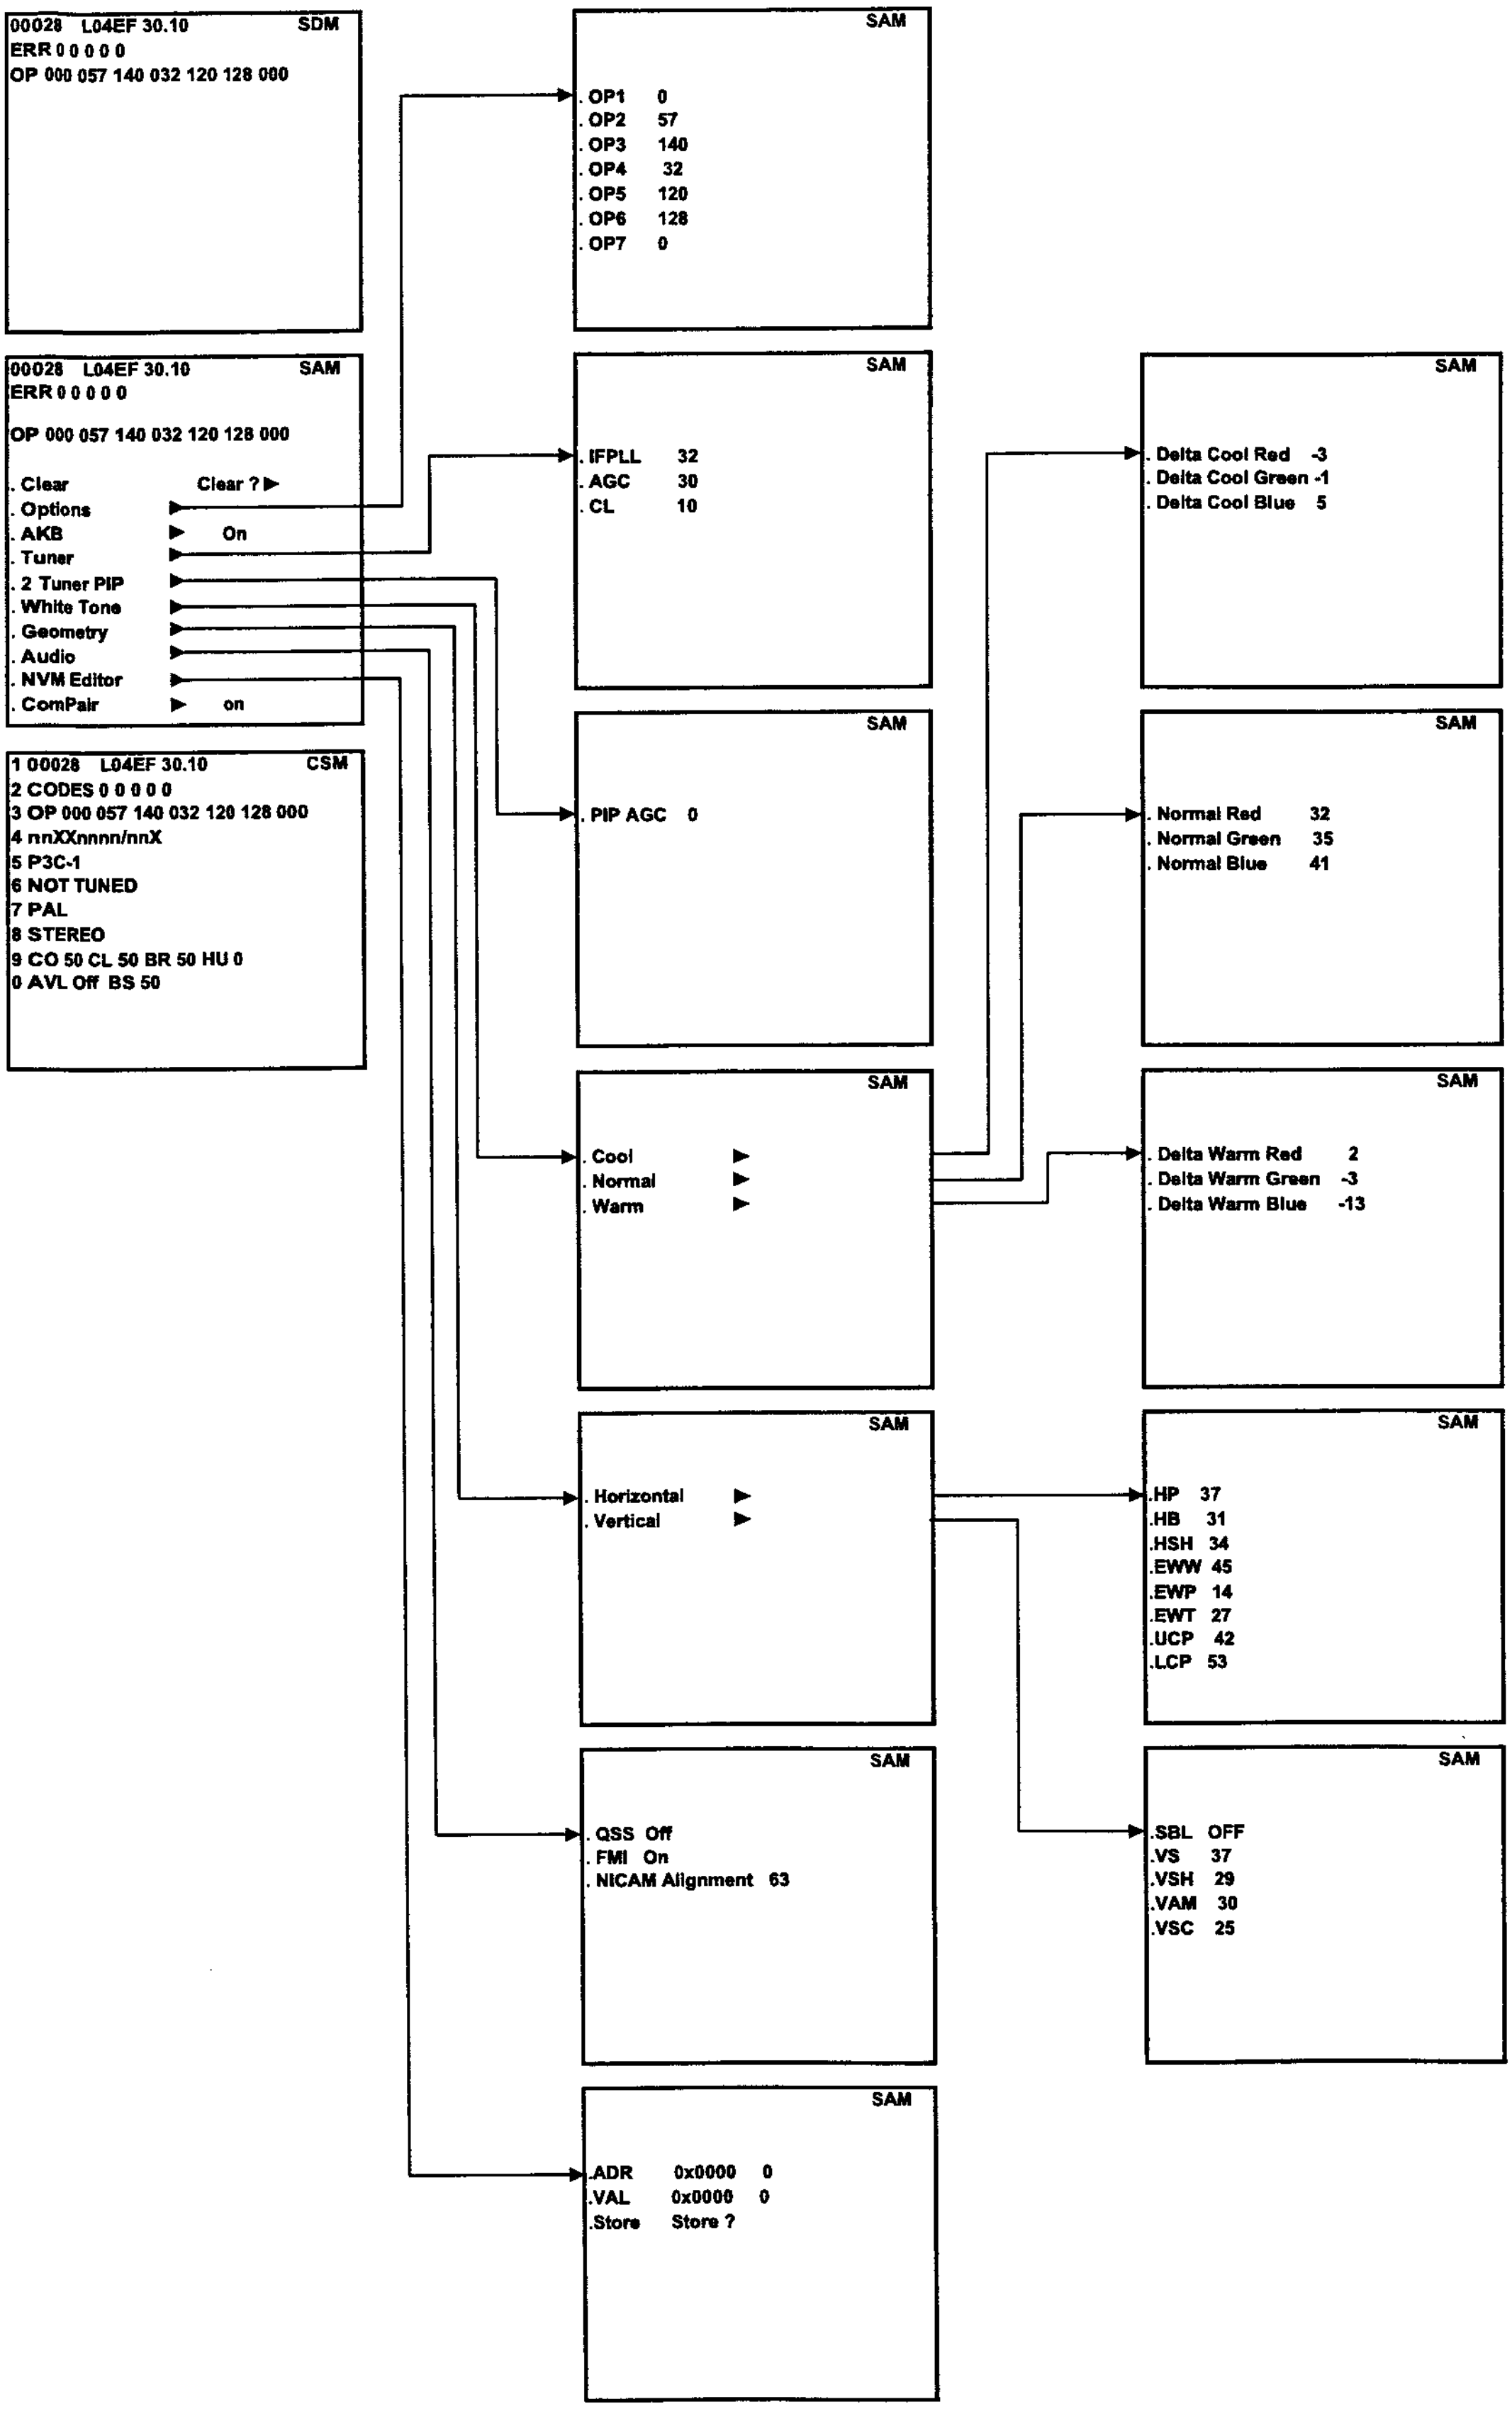

```
00028  L04EF 30.10           SDM
ERR 0 0 0 0 0
OP 000 057 140 032 120 128 000
```

```
00028  L04EF 30.10           SAM
ERR 0 0 0 0 0

OP 000 057 140 032 120 128 000

. Clear              Clear ? ▶
. Options         ▶
. AKB             ▶    On
. Tuner           ▶
. 2 Tuner PIP     ▶
. White Tone      ▶
. Geometry        ▶
. Audio           ▶
. NVM Editor      ▶
. ComPair         ▶    on
```

```
1 00028   L04EF 30.10        CSM
2 CODES 0 0 0 0 0
3 OP 000 057 140 032 120 128 000
4 nnXXnnnn/nnX
5 P3C-1
6 NOT TUNED
7 PAL
8 STEREO
9 CO 50 CL 50 BR 50 HU 0
0 AVL Off  BS 50
```

```
                              SAM
. OP1    0
. OP2    57
. OP3    140
. OP4     32
. OP5    120
. OP6    128
. OP7    0
```

```
                              SAM
. IFPLL     32
. AGC       30
. CL        10
```

```
                              SAM
. PIP AGC   0
```

```
                              SAM
. Cool          ▶
. Normal        ▶
. Warm          ▶
```

```
                              SAM
. Horizontal    ▶
. Vertical      ▶
```

```
                              SAM
. QSS  Off
. FMI  On
. NICAM Alignment  63
```

```
                              SAM
.ADR      0x0000    0
.VAL      0x0000    0
.Store    Store ?
```

```
                              SAM
. Delta Cool Red  -3
. Delta Cool Green -1
. Delta Cool Blue   5
```

```
                              SAM
. Normal Red       32
. Normal Green     35
. Normal Blue      41
```

```
                              SAM
. Delta Warm Red       2
. Delta Warm Green    -3
. Delta Warm Blue    -13
```

```
                              SAM
.HP   37
.HB   31
.HSH  34
.EWW  45
.EWP  14
.EWT  27
.UCP  42
.LCP  53
```

```
                              SAM
.SBL  OFF
.VS   37
.VSH  29
.VAM  30
.VSC  25
```

E_14480_143.eps
260504

Figure 8-3 Service Mode overview

Enter the Service Alignment Mode (see also chapter 5 "Service Modes, ..."). The SAM menu will now appear on the screen. Select one of the following alignments:

- Options
- Tuner
- White Tone
- Geometry
- Audio

8.3.1 Options

Options are used to control the presence/absence of certain features and hardware.

How to change an Option Byte

An Option Byte represents a number of different options. Changing these bytes directly, makes it possible to set all options very fast. All options are controlled via seven option bytes. Select the option byte (OP1.. OP7) with the MENU UP/ DOWN keys, and enter the new value.

Leaving the OPTION submenu saves the changes in the Option Byte settings. Some changes will only take effect after the set has been switched "off" and "on" with the AC power switch (cold start).

How to calculate the value of an Option Byte

- Calculate an Option Byte value (OP1 .. OP7) in the following way:
- Check the status of the single option bits (OB): are they enabled (1) or disabled (0).
- When an option bit is enabled (1) it represents a certain value (see column "Bit value" in table below). When an option bit is disabled, its value is 0.
- The total value of an Option Byte (decimal) is formed by the sum of its eight option bits. The factory values are printed on a sticker on the CRT.

Table 8-1 Option Byte calculation

Bit (value)	OP1	OP2	OP3	OP4	OP5	OP6	OP7
0 (1)	OB10	OB20	OB30	OB40	OB50	OB60	OB70
1 (2)	OB11	OB21	OB31	OB41	OB51	OB61	OB71
2 (4)	OB12	OB22	OB32	OB42	OB52	OB62	OB72
3 (8)	OB13	OB23	OB33	OB43	OB53	OB63	OB73
4 (16)	OB14	OB24	OB34	OB44	OB54	OB64	OB74
5 (32)	OB15	OB25	OB35	OB45	OB55	OB65	OB75
6 (64)	OB16	OB26	OB36	OB46	OB56	OB66	OB76
7 (128)	OB17	OB27	OB37	OB47	OB57	OB67	OB77
Total:	**Sum**	**Sum**	**Sum**	**Sum**	**Sum**	**Sum**	**Sum**

Option Bit Assignment

Following are the option bit assignments for all software clusters.

Table 8-2 Option code overview per model

Bit	Byte_0	Description	21PT5458/01	21PT5509/01	21PT5518/01	21PT5518/05	21PT5518/58	21PT5618/01	21PT5618/05	21PT5618/58	25PT4458/01	25PT4458/05	28PT4458/01	28PT4458/05	28PT5008/01	28PT5008/05	28PT4408/01	28PT4418/01	29PT5408/01	29PT5408/58	29PT5458/01	29PT5509/01	29PT5518/01	29PT5518/05	29PT5518/58	29PT5618/01	29PT5618/05	29PT5618/58	24PW6518/01	24PW6518/05	28PW5408/01	28PW6008/01	28PW6008/05	28PW6008/58	28PW6408/01	28PW6408/05	28PW6408/58	28PW6508/01	28PW6518/01	28PW6518/05	28PW6518/58	28PW6558/01	28PW6618/01	28PW6618/05	28PW6618/58	32PW6408/01	32PW6408/05	32PW6518/01	32PW6518/05	32PW6618/01	32PW6618/05
7	MVK		0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
6	OSVE	Black current measuring in overscan	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
5	TFR	DC transfer ratio of luminance signal	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
4	FSL	Forced slicing level for vertical sync	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
3	HP2	Synchronization of OSD/Text display	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
2	HCO	EHT tracking mode	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
1	FMI	Connection of output of QSS amplifier	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
0	QSS	Mode of quasi split sound amplifier	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
	Decimal		5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5
	Hex		0 5	0 5	0 5	0 5	0 5	0 5	0 5	0 5	0 5	0 5	0 5	0 5	0 5	0 5	0 5	0 5	0 5	0 5	0 5	0 5	0 5	0 5	0 5	0 5	0 5	0 5	0 5	0 5	0 5	0 5	0 5	0 5	0 5	0 5	0 5	0 5	0 5	0 5	0 5	0 5	0 5	0 5	0 5	0 5	0 5	0 5	0 5	0 5	0 5
Bit	Byte_1	Description																																																	
7	SVMA	Scavem On / Off	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
6	SAM Mode	Service Align mode on/off	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
5	SDM Mode	Service default mode on/off	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
4	White Pattern On	Last colour pattern status in factory mode	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
3	Continuous Factory	Continuous factory mode	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
2	Reserved		0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
1	Reserved		0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
0	Reserved		0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
	Decimal		0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
	Hex		0 0	0 0	0 0	0 0	0 0	0 0	0 0	0 0	0 0	0 0	0 0	0 0	0 0	0 0	0 0	0 0	0 0	0 0	0 0	0 0	0 0	0 0	0 0	0 0	0 0	0 0	0 0	0 0	0 0	0 0	0 0	0 0	0 0	0 0	0 0	0 0	0 0	0 0	0 0	0 0	0 0	0 0	0 0	0 0	0 0	0 0	0 0	0 0	0 0
Bit	Byte_2	Description																																																	
7	PSNS	For PAL colour enhancement in ES4	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
6	Factory Mode	Factory mode on	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
5	Surf Mode	Surf mode on/off	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
4	Child Lock Mode	Child lock enabled	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
3	Last Power Mode	Last power status of the set	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
2	Cable Mode	Cable/Antenna mode	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Bit	Byte_0	Description	21PT5458/01	21PT5509/01	21PT5518/01	21PT5518/05	21PT5518/58	21PT5618/01	21PT5618/05	21PT5618/58	25PT4458/01	25PT4458/05	28PT4458/01	28PT4458/05	28PT5008/01	28PT5008/05	28PT4408/01	28PT4418/01	29PT5408/01	29PT5408/58	29PT5458/01	29PT5509/01	29PT5518/01	29PT5518/05	29PT5518/58	29PT5618/01	29PT5618/05	29PT5618/58	24PW6518/01	24PW6518/05	28PW5408/01	28PW6008/01	28PW6008/05	28PW6008/58	28PW6408/01	28PW6408/05	28PW6408/58	28PW6508/01	28PW6518/01	28PW6518/05	28PW6518/58	28PW6558/01	28PW6618/01	28PW6618/05	28PW6618/58	32PW6408/01	32PW6408/05	32PW6518/01	32PW6518/05	32PW6618/01	32PW6618/05
1	Tuner Auto Mode	Auto mode	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
0	Mute Status	Mute status	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
	Decimal		8	8	8	8	8	8	8	8	8	8	8	8	8	8	8	8	8	8	8	8	8	8	8	8	8	8	8	8	8	8	8	8	8	8	8	8	8	8	8	8	8	8	8	8	8	8	8	8	8
	Hex		08	08	08	08	08	08	08	08	08	08	08	08	08	08	08	08	08	08	08	08	08	08	08	08	08	08	08	08	08	08	08	08	08	08	08	08	08	08	08	08	08	08	08	08	08	08	08	08	08
Bit	Byte_3	Description																																																	
7	CFA0	Comb filter On/Off	1	1	1	1	1	0	0	0	1	1	1	1	1	1	1	1	1	1	1	0	0	0	0	0	0	0	0	0	1	1	1	1	1	1	1	0	0	0	0	0	0	0	0	1	1	0	0	0	0
6	Reserved		0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
5	BLS	Blue stretch mode	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
4	LNA Last Status		0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
3	Hotel KBD Lock	Keyboard locked	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
2	Hotel Mode	TV in Hotel mode	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
1	Wake Up Mode		0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
0	Radio/TV Mode	Radio mode or TV mode	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
	Decimal		128	128	128	128	128	0	0	0	128	128	128	128	128	128	128	128	128	128	128	0	0	0	0	0	0	0	0	0	128	128	128	128	128	128	128	0	0	0	0	0	0	0	0	128	128	0	0	0	0
	Hex		80	80	80	80	80	00	00	00	80	80	80	80	80	80	80	80	80	80	80	00	00	00	00	00	00	00	00	00	80	80	80	80	80	80	80	00	00	00	00	00	00	00	00	80	80	00	00	00	00
Bit	Byte_4	Description																																																	
7	PIP QSS	PIP QSS	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	1	1	1	0	0	0	0	0	0	0	0	0	0	0	0	1	1	1	0	0	0	0	1	1
6	CRA0	Coring on SVM	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
5	BSD	Black Stretch Depth	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
4	BKS	Black Stretch Mode	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
3	SCRSAVER Mode	Screen saver mode	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
2	DVD Tray Lock	Lock/Unlock DVD tray	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
1	LPG		0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
0	Signal Strength	Signal Strength Switch in MK2	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
	Decimal		0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	128	128	128	0	0	0	0	0	0	0	0	0	0	0	0	128	128	128	0	0	0	0	128	128
	Hex		00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	80	80	80	00	00	00	00	00	00	00	00	00	00	00	00	80	80	80	00	00	00	00	80	80
Bit	Byte_5	Description																																																	
7	DSK	Dynamic Skin Control	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
6	DSA	Dynamic skin tone angle	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
5	LLB	Low level of beam current limiter	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
4	CBS	Control sequence of beam current limiting	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
3	GAM	Gamma control	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
2	MUS	NTSC matrix	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
1	NRR	No red reduction during blue stretch	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
0	FFI	Fast Filter	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
	Decimal		6	6	6	6	6	6	6	6	6	6	6	6	6	6	6	6	6	6	6	6	6	6	6	6	6	6	6	6	6	6	6	6	6	6	6	6	6	6	6	6	6	6	6	6	6	6	6	6	6
	Hex		06	06	06	06	06	06	06	06	06	06	06	06	06	06	06	06	06	06	06	06	06	06	06	06	06	06	06	06	06	06	06	06	06	06	06	06	06	06	06	06	06	06	06	06	06	06	06	06	06
Bit	Byte_6	Description																																																	
7	Reserved		0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
6	Reserved		0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
5	Reserved		0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
4	Reserved		0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
3	Reserved		0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
2	Reserved		0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
1	Reserved		0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
0	LTI Status	LTI last status	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
	Decimal		0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
	Hex		00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00

- Option Byte 1 (OP1)
  - OB17: PHILIPS TUNER
  - OB16: FM RADIO
  - OB15: LNA
  - OB14: ATS (EU)
  - OB13: ACI
  - OB12: UK PNP
  - OB11: VIRGIN MODE
  - OB10: CHINA
- Option Byte 2 (OP2)
  - OB27: SC
  - OB26: GREEN UI
  - OB25: CHANNEL NAMING
  - OB24: LTI
  - OB23: TILT
  - OB22: FINE TUNING
  - OB21: PIP PHILIPS TUNER
  - OB20: HUE
- Option Byte 3 (OP3)
  - OB37: EW FUNCTION
  - OB36: 2 TUNER PIP
  - OB35: PIP SPLITTER
  - OB34: SPLITTER
  - OB33: VIRTUAL DOLBY
  - OB32: WIDE SCREEN
  - OB31: WSSB (EU)
  - OB30: ECO SUBWOOFER
- Option Byte 4 (OP4)
  - OB47: Reserved (value= 0)
  - OB46: Reserved (value= 0)
  - OB45: ULTRA BASS
  - OB44: DELTA VOLUME
  - OB43: Reserved (value= 0)
  - OB42: VOLUME LIMITER
  - OB41: Reserved (value= 0)
  - OB40: STEREO NICAM 2CS
- Option Byte 5 (OP5)
  - OB57: AV1
  - OB56: AV2
  - OB55: AV3
  - OB54: CVI
  - OB53: SVHS2
  - OB52: SVHS3
  - OB51: HOTEL MODE
  - OB50: Reserved (value= 0)
- Option Byte 6 (OP6)
  - OB67: PERSONAL ZAPPING
  - OB66: Reserved (value= 0)
  - OB65: FM TRAP
  - OB64: COMB FILTER
  - OB63: ACTIVE CONTROL
  - OB62: VIDEO TEXT
  - OB61: LIGHT SENSOR
  - OB60: DUAL TEXT
- Option Byte 7 (OP7)
  - OB77: TIME WIN1
  - OB76: Reserved (value= 0)
  - OB75: Reserved (value= 0)
  - OB74: Reserved (value= 0)
  - OB73: Reserved (value= 0)
  - OB72: Reserved (value= 0)
  - OB71: Reserved (value= 0)
  - OB70: Reserved (value= 0)

Option bit definition

Option Byte 1 (OP1)

- OB17: PHILIPS TUNER
  - 0 : ALPS / MASCO compatible tuner is in use.
  - 1 : Philips compatible tuner is in use.
- OB16: FM RADIO
  - 0 : FM radio feature is disabled or not applicable.
  - 1 : FM radio feature is enabled.
- OB15: LNA
  - 0 : Auto Picture Booster is not available or not applicable.
  - 1 : Auto Picture Booster is available.
- OB14: ATS
  - 0 : Automatic Tuning System (ATS) feature is disabled or not applicable.
  - 1 : ATS feature is enabled. When ATS is enabled, it sorts the program in an ascending order starting from program “1”.
- OB13: ACI
  - 0 : Automatic Channel Installation (ACI) feature is disabled or not applicable.
  - 1 : ACI feature is enabled.
- OB12: UK PNP
  - 0 : UK's default Plug and Play setting is not available or not applicable.
  - 1 : UK's default Plug and Play setting is available.
  - When UK PNP and VIRGIN MODE are set to “1” at the initial setup and after exiting from menu, VIRGIN MODE will be set automatically to “0” while UK PNP remains “1”.
- OB11: VIRGIN MODE
  - 0 : Virgin mode is disabled or not applicable.
  - 1 : Virgin mode is enabled. Plug and Play menu item will be displayed to perform installation at the initial startup of the TV when VIRGIN MODE is set to “1”. After installation is finished, this option bit will be automatically set to “0”.
- OB10: CHINA
  - 0 : Tuning is not for China set, or this option bit is not applicable.
  - 1 : Tuning is for China set.

Option Byte 2 (OP2)

- OB27: SC
  - 0 : Soft clipping is disabled.
  - 1 : Soft clipping is enabled.
- OB26: GREEN UI
  - 0 : Green UI is disabled (for Philips brand).
  - 1 : Green UI is enabled (for Magnavox brand).
  - Note: only for NAFTA region.
- OB25: CHANNEL NAMING
  - 0 : Name FM Channel is disabled or not applicable.
  - 1 : Name FM Channel is enabled.
  - Note : Name FM channel can be enabled only when FM RADIO= “1”.
- OB24: LTI
  - 0 : Luminance Transient Improvement (LTI) is disabled or not applicable.
  - 1 : LTI is enabled.
- OB23: TILT
  - 0 : Rotate Picture is disabled or not applicable.
  - 1 : Rotate Picture is enabled.
- OB22: FINE TUNING
  - 0 : Fine Tuning for Channel Offset is disabled or not applicable.
  - 1 : Fine Tuning for Channel Offset is enabled.
- OB21: PIP PHILIPS TUNER
  - 0 : ALPS / MASCO compatible tuner is in use for PIP module.
  - 1 : Philips compatible tuner is in use for PIP module.
- OB20: HUE
  - 0 : Hue/Tint Level is disabled or not applicable.
  - 1 : Hue/Tint Level is enabled.

Option Byte 3 (OP3)

- OB37: EW FUNCTION
  - 0 : EW function is disabled. In this case, only Expand 4:3 is allowed, Compress 16:9 is not applicable.
  - 1 : EW function is enabled. In this case, both Expand 4:3 and Compress 16:9 are applicable.
- OB36: 2 TUNER PIP
  - 0 : Software selection no PIP
  - 1 : Software selection with PIP

  - Note: Only for EU/AP region for sets with PIP.
- OB35: PIP SPLITTER
  - 0 : Normal Tuner in PIP
  - 1 : Splitter in PIP
  - Note: Only for EU/AP region. For PIP sets and build in with Splitter in PIP tuner.
- OB34: SPLITTER
  - 0 : Normal Tuner for main chassis
  - 1 : Splitter Tuner for main chassis
  - Note: Only for EU/AP region.
- OB33: VIRTUAL DOLBY
  - 0 : Virtual Dolby is not applicable.
  - 1 : Virtual Dolby is applicable.
- OB32: WIDE SCREEN
  - 0 : Software is used for 4:3 sets or not applicable.
  - 1 : Software is used for 16:9 sets.
- OB31: WSSB (EU)
  - 0 : WSSB is disabled or not applicable.
  - 1 : WSSB is enabled.
  - Note : This option bit can be set to "1" only when WIDE SCREEN= "1".
- OB30: ECO SUBWOOFER
  - 0 : Feature is disabled or not applicable.
  - 1 : Feature is enabled.

Option Byte 4 (OP4)

- OB47: Reserved
  - Default setting is "0".
- OB46: Reserved
  - Default setting is "0".
- OB45: ULTRA BASS
  - 0 : Ultra Bass is disabled or not applicable.
  - 1 : Ultra Bass is enabled.
  - Default setting is "0".
- OB44: DELTA VOLUME
  - 0 : Delta Volume Level is disabled or not applicable.
  - 1 : Delta Volume Level is enabled.
- OB43: Reserved
  - Default setting is "0".
- OB42: VOLUME LIMITER
  - 0 : Volume Limiter Level is disabled or not applicable.
  - 1 : Toggle Volume Limiter Level is enabled.
- OB41: Reserved
  - Default setting is "0".
- OB40: STEREO NICAM 2CS
  - 0 : For AV Stereo.
  - 1 : For NICAM Stereo 2CS.

Option Byte 5 (OP5)

- OB57: AV1
  - 0 : AV1 source is not present.
  - 1 : AV1 source is present.
- OB56: AV2
  - 0 : AV2 source is not present.
  - 1 : AV2 source is present.
  - Note : For EU, when AV2="1", both EXT2 and SVHS2 should be included in the OSD loop.
- OB55: AV3
  - 0 : Side/Front AV3 source is not present.
  - 1 : Side/Front AV3 source is present.
- OB54: CVI
  - 0 : CVI source is not available.
  - 1 : CVI source is available.
- OB53: SVHS2
  - 0 : SVHS2 source is not available.
  - 1 : SVHS2 source is available.
  - Note : This option bit is not applicable for EU.
- OB52: SVHS3
  - 0 : SVHS3 source is not available.
  - 1 : SVHS3 source is available.
  - Note : This option bit is not applicable for EU.
- OB51: HOTEL MODE
  - 0 : Hotel mode is disabled or not applicable.
  - 1 : Hotel mode is enabled.
- OB50: Reserved
  - Default setting is "0".

Option Byte 6 (OP6)

- OB67: PERSONAL ZAPPING
  - 0 : Personal Zapping feature is disabled or not applicable.
  - 1 : Personal Zapping feature is enabled.
- OB66: Reserved
  - Default setting is "0".
- OB65: FM TRAP
  - 0 : FM Trap is not present.
  - 1 : FM Trap is present.
  - Note: Only for LATAM region.
- OB64: COMBFILTER
  - 0 : 3D-combfilter is not present.
  - 1 : 3D-combfilter is present.
- OB63: ACTIVE CONTROL
  - 0 : Active Control feature is disabled or not applicable.
  - 1 : Active Control feature is enabled.
- OB62: VIDEO TEXT
  - 0 : Video Text (DW with TXT) is disabled or not applicable.
  - 1 : Video Text (DW with TXT) is enabled.
  - Note: For EU only.
- OB61: LIGHT SENSOR
  - 0 : Light sensor feature is disabled or not applicable.
  - 1 : Light sensor feature is enabled.
- OB60: DUAL TEXT
  - 0 : Dual Text and Text Dual Screen are disabled or not applicable.
  - 1: Dual Text and Text Dual Screen are enabled.

Option Byte 7 (OP7)

- OB77: TIME WIN1
  - 00 : The time window is set to 1.2 s.
  - 01 : The time window is set to 2 s.
  - Note :The time-out for all digit entries depends on this setting.
- OB76: Reserved
  - Default setting is "0".
- OB75: Reserved
  - Default setting is "0".
- OB74: Reserved
  - Default setting is "0".
- OB73: Reserved
  - Default setting is "0".
- OB72 Reserved
  - Default setting is "0".
- OB71 Reserved
  - Default setting is "0".
- OB70: Reserved
  - Default setting is "0".

8.3.2 Tuner

Note: Described alignments are only necessary when the NVM (item 7601) is replaced.

IF PLL

This adjustment is auto-aligned. Therefore, no action is required.

AGC (AGC take over point)

1. Set the external pattern generator to a colour bar video signal and connect the RF output to aerial input. Set amplitude to 10 mV and set frequency to 475 MHz.
2. Connect a DC multimeter to pin 1 of the tuner (item 1000 on the main panel).
3. Activate the SAM.
4. Go to the TUNER sub menu.
5. Select AGC with the UP/DOWN cursor keys.

6. Adjust the AGC-value with the LEFT/ RIGHT cursor keys until the voltage at pin 1 of the tuner lies between 3.8 and 2.3 V (default value is "20").
7. Switch the set to STANDBY, in order to store the alignments.

CL (Cathode drive level)

Always set to "5".

8.3.3 White Tone

In the WHITE TONE sub menu, the values of the black cut off level can be adjusted. Normally, no alignment is needed, and you can use the given default values.
The colour temperature mode (NORMAL, COOL and WARM) and the colour (R, G, and B) can be selected with the UP/ DOWN RIGHT/LEFT cursor keys. The value can be changed with the LEFT/RIGHT cursor keys. First, select the values for the NORMAL colour temperature. Then select the values for the COOL and WARM mode. After alignment, switch the set to STANDBY, in order to store the alignments.

Default settings:

- NORMAL:
  - NORMAL R= "26"
  - NORMAL G= "32"
  - NORMAL B= "27"
- COOL:
  - DELTA COOL R= "-3"
  - DELTA COOL G= "0"
  - DELTA COOL B= "5"
- WARM:
  - DELTA WARM R= "2"
  - DELTA WARM G= "0"
  - DELTA WARM B= "-6"

8.3.4 Geometry

The geometry alignments menu contains several items to align the set, in order to obtain correct picture geometry.

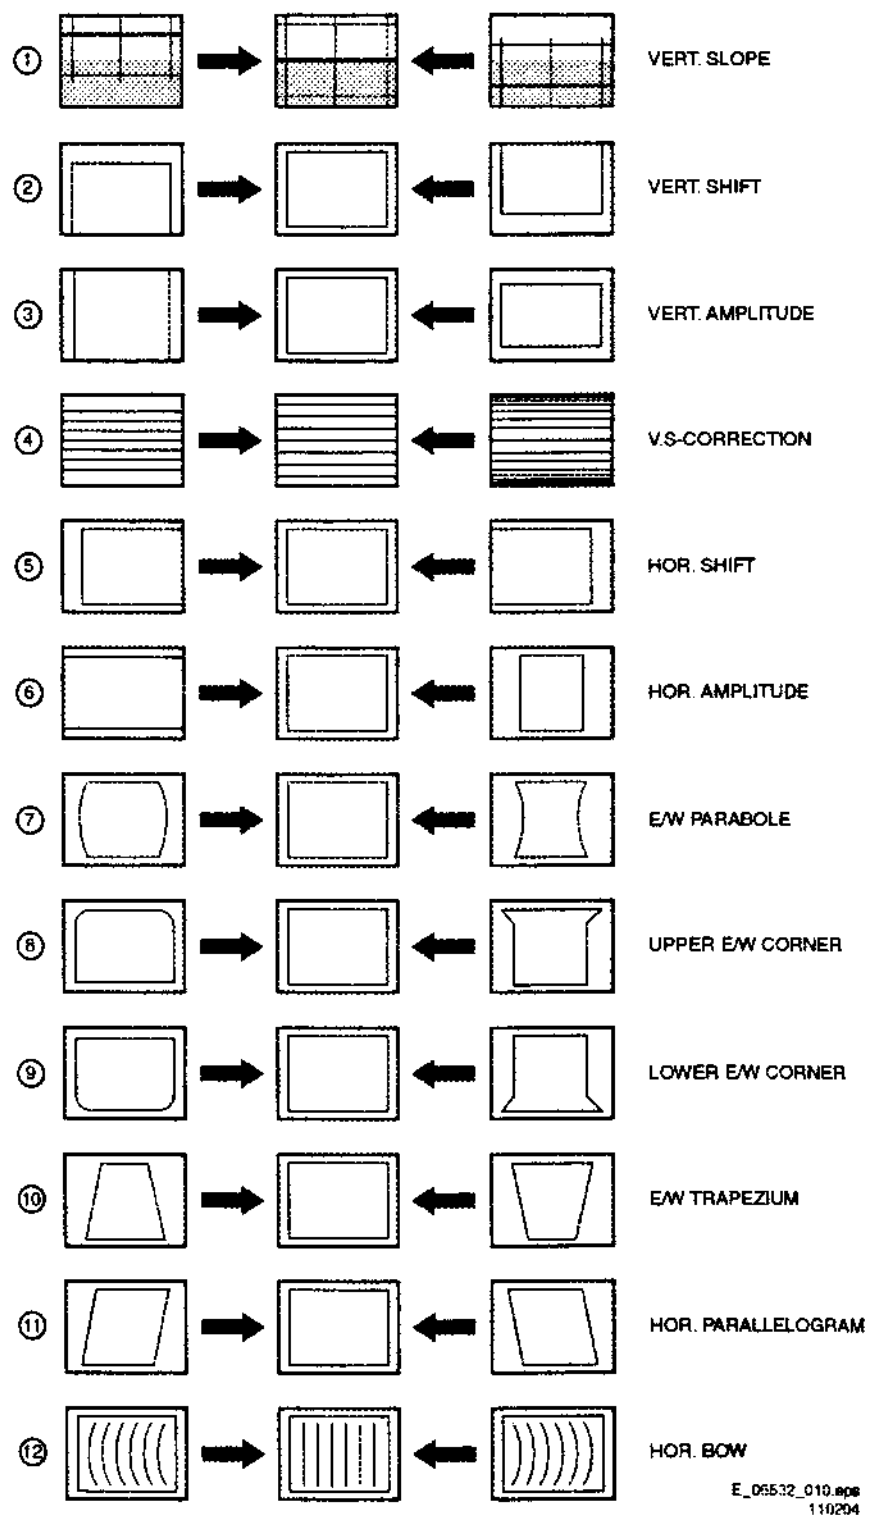

Figure 8-4 Geometry alignments

1. Connect an external video pattern generator to the aerial input of the TV-set and input a crosshatch test pattern. Set the generator amplitude to at least 1 mV and set frequency to 475 MHz.
2. Set 'Smart Picture' to NATURAL (or MOVIES).
3. Activate the SAM menu (see chapter 5 "Service Modes, ...").
4. Go to the GEOMETRY sub menu.
5. Choose HORIZONTAL or VERTICAL alignment.

Now the following alignments can be performed:

Horizontal

- **Horizontal Parallelogram (HP).** Align straight vertical lines in the top and the bottom; vertical rotation around the centre.
- **Horizontal Bow (HB).** Align straight horizontal lines in the top and the bottom; horizontal rotation around the centre.
- **Horizontal Shift (HSH).** Align the horizontal centre of the picture to the horizontal centre of the CRT.
- **East West Width (EWW).** Align the picture width until the complete test pattern is visible.
- **East West Parabola (EWP).** Align straight vertical lines at the sides of the screen.
- **Upper Corner Parabola (UCP).** Align straight vertical lines in the upper corners of the screen.
- **Lower Corner Parabola (LCP).** Align straight vertical lines in the lower corners of the screen.
- **East West Trapezium (EWT).** Align straight vertical lines in the middle of the screen.
- **H60 (Delta HSH for 60Hz, if present).** Align straight horizontal lines if NTSC system is used (60 Hz) i.s.o. PAL (50 Hz). Default value is "9".

Vertical

- **Service blanking (SBL).** Switch the blanking of the lower half of the screen "on" or "off" (to be used in combination with the vertical slope alignment).
- **Vertical Shift (VSH).** Align the vertical centring so that the test pattern is located vertically in the middle. Repeat the 'vertical amplitude' alignment if necessary.
- **Vertical slope (VS).** Align the vertical centre of the picture to the vertical centre of the CRT. This is the first of the vertical alignments to perform. For an easy alignment, set SBL to "on".
- **Vertical Amplitude (VAM).** Align the vertical amplitude so that the complete test pattern is visible.
- **Vertical S-Correction (VSC).** Align the vertical linearity, meaning that vertical intervals of a grid pattern must be equal over the entire screen height.
- **Vertical Zoom (VX, if present).** The vertical zoom is added in for the purpose of development. It helps the designer to set proper values for the movie expand or movie (16x9) compress. Default value is "25".
- **V60 (Delta VAM for 60Hz, if present).** Align straight vertical lines if NTSC system (60 Hz) is used i.s.o. PAL (50 Hz). Default value is "-2".

In the next table, you will find the GEOMETRY default values for the different sets.

Table 8-3 Default geometry values

Alignment	Default values (hex)	Default values (dec)
HP (Horizontal parallelogram)	1F	31
HB (Horizontal Bow)	1F	31
HS (Horizontal shift)	1A	26
EWW (EW width)	25	37
EWP (EW parabola width)	0A	10
EWT (EW trapezium)	1A	26
UCP (EW upper corner parabola)	1E	30
LCP (EW lower corner parabola)	28	40
VSH (Vertical Shift)	1A	26
VS (Vertical slope)	25	37
VAM (Vertical amplitude)	1E	30
VSC (Vertical S-Correction)	19	25

8.3.5 Audio

No alignments are needed for the audio sub menu. Use the given default values.

QSS (Quasi Split Sound)
- For NICAM/2CS sound system (EU/AP, except for APNTSC), set to “On”.
- For AV-Stereo sound system (sets without NICAM), set to “On”.
- For all other sets (NAFTA/LATAM/AP-NTSC), set to “Off”.

FMI (Freq. Modulation Intercarrier)
- For NICAM/2CS sound system (EU/AP, except for APNTSC), set to “On”.
- For AV-Stereo sound system (sets without NICAM), set to “Off”.
- For dBx/non-dBx sound systems, set to “On”.

NICAM Alignment
- For sets with NICAM/2CS (EU/AP, except for AP-NTSC) sound system, set to “79”.
- For all other sets (NAFTA/LATAM/AP-NTSC), set to “63” (= don’t care).

9. Circuit Descriptions, List of Abbreviations, and IC Data Sheets

Index of this chapter:

1. Introduction
2. Power Supply
3. Deflection
4. Control
5. Tuner and IF
6. Source Selection
7. Video Processing
8. Audio Processing
9. Picture in Picture (PIP)
10. Abbreviations
11. IC Data Sheets

Notes:

- Only **new** (not recently published) circuits are described in this chapter. For the other circuit descriptions, see the L01.1/M8 Service Manual.
- The descriptions below are a copy from the L04U manual, therefore sometimes a reference is made to region specific terminology or chassis (like the M8). Only the PIP description is new.
- Figures can deviate slightly from the actual situation, due to different set executions.
- For a good understanding of the following circuit descriptions, please use the diagrams in sections “Block Diagrams, ...”, and/or “Electrical Diagrams”. Where necessary, you will find a separate drawing for clarification.

9.1 Introduction

The "L04" chassis is a global TV chassis for the model year 2004 and is used for TV sets with large screen sizes (from 21 to 36 inch), in Super Flat and Real Flat executions (both in 4:3 and 16:9 variants).
There are three types of CRT namely the 100 degrees, 110 degrees and Wide Screen CRT.

- **The 100 deg. 4:3 CRT** is raster-correction-free and does not need East/West Correction (except when used in AP regions), therefore the corrections needed are Horizontal Shift, Vertical Slope, Vertical Amplitude, Vertical S-Correction, Vertical Shift, and Vertical Zoom for geometry corrections.
- **The 110 deg. 4:3 CRT** comes with East/West Correction. In addition to the parameter mentioned above, it also needs the Horizontal Parallelogram, Horizontal Bow, Horizontal Shift, East/West Width, East/West Parabola, East/West Upper and Lower Corners, and East/West Trapezium correction.
- **The Wide Screen TV sets** have all the correction of the 110 deg. 4:3 CRTs and also have additional picture format like the 4:3 format, 16:9, 14:9, 16:9 zoom, subtitle zoom, and the Super-Wide picture format.

In comparison to its predecessor (the L01.1/M8), this chassis is has the following (new) features:

- **Audio:** The sound processor is part of the UOC processor (called “Hercules”).
- **Video:** Enhanced video features, video drivers, and Active Control.
- **Control:** Comparable to L01.1/M8 (e.g. Dual clock, I/O mapping, I/O switching).
- **Power Supply:** Adapted to supply the Hercules IC, and to enable 0.5 W Standby power dissipation. Also provisions are made for future extensions like DVD and iDTV.

The standard architecture consists of a Main panel (called "family board"), a Picture Tube panel, a Side I/O panel, and a Top Control panel. The Main panel consists primarily of conventional components with some surface mounted devices in the audio and video processing part.

The functions for video/audio processing, microprocessor (P), and CC/Teletext (TXT) decoder are all combined in one IC (TDA1200x, item 7200), the so-called third generation Ultimate One Chip (UOC-III) or “Hercules”. This chip is mounted on the “solder” side of the main panel, and has the following features:

- Control, small signal, mono/stereo, and extensive Audio/ Video switching in one IC.
- Upgrade with digital sound & video processing.
- Alignment free IF, including SECAM-L/L1 and AM.
- FM sound 4.5/5.5/6.0/6.5, no traps/bandpass filters.
- Full multi-standard color decoder.
- One Xtal reference for all functions (microprocessor, RCP, TXT/CC, RDS, color decoder, and stereo sound processor).

The tuning system features 181 channels with on-screen display. The main tuning system uses a tuner, a microcomputer, and a memory IC mounted on the main panel. The microcomputer communicates with the memory IC, the customer keyboard, remote receiver, tuner, signal processor IC and the audio output IC via the I2C bus. The memory IC retains the settings for favorite stations, customer-preferred settings, and service / factory data.
The on-screen graphics and closed caption decoding are done within the microprocessor where they are added to the main signal.

The chassis uses a Switching Mode Power Supply (SMPS) for the main voltage source. The chassis has a 'hot' ground reference on the primary side and a cold ground reference on the secondary side of the power supply and the rest of the chassis.

9.2 Power Supply

9.2.1 Block Diagram

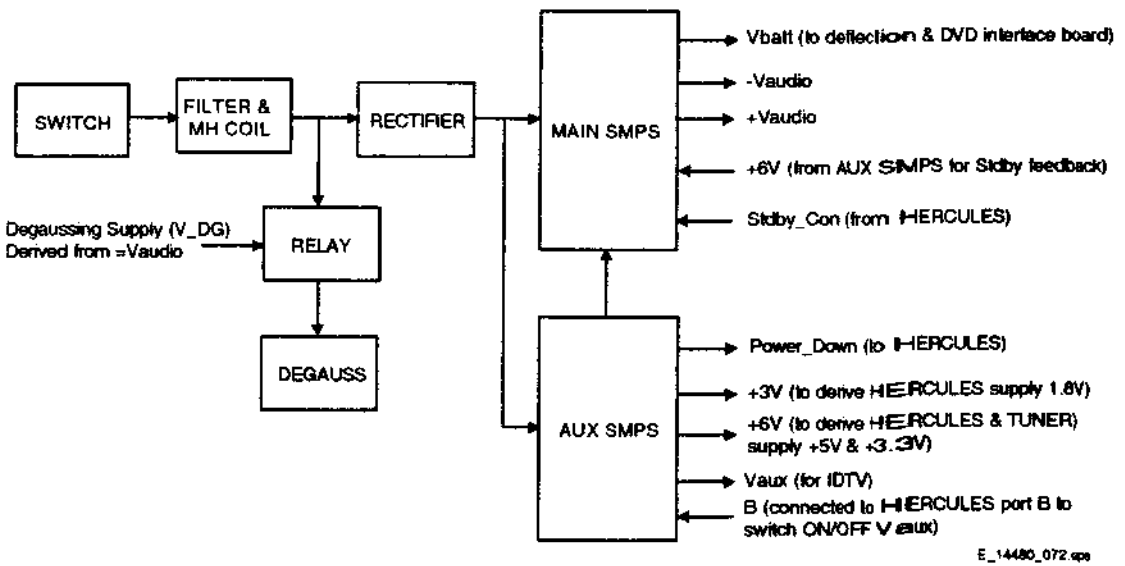
SWITCH
FILTER & MH COIL
RECTIFIER
MAIN SMPS
Degaussing Supply (V_DG) Derived from ±Vaudio
RELAY
DEGAUSS
AUX SMPS
Vbatt (to deflection & DVD interface board)
-Vaudio
+Vaudio
+6V (from AUX SMPS for Stdby feedback)
Stdby_Con (from HERCULES)
Power_Down (to HERCULES)
+3V (to derive HERCULES supply 1.8V)
+6V (to derive HERCULES & TUNER) supply +5V & +3.3V)
Vaux (for IDTV)
B (connected to HERCULES port B to switch ON/OFF V aux)
E_14480_072.eps
120504

Figure 9-1 Block diagram power supply

Stdby_con signal

The Hercules generates this signal. This line is logic “low” (0 V) under normal operation and in semi-Standby of the TV, and is “high” (3.3 V) during Standby.

Power_down signal

The AUX SMPS generates this signal. It is logic “high” (3.3 V) under normal operation of the TV and goes “low” (0 V) when the AC power (or Mains) input voltage supply goes below 70 V_ac.

B (Hercules port)

This port is used to switch the AUX SMPS output “V_aux “On/Off”. This is required for DVD and iDTV (for future extensions).

9.2.2 Timing Diagrams

Power ON - To Standby - Out of Standby - Power OFF

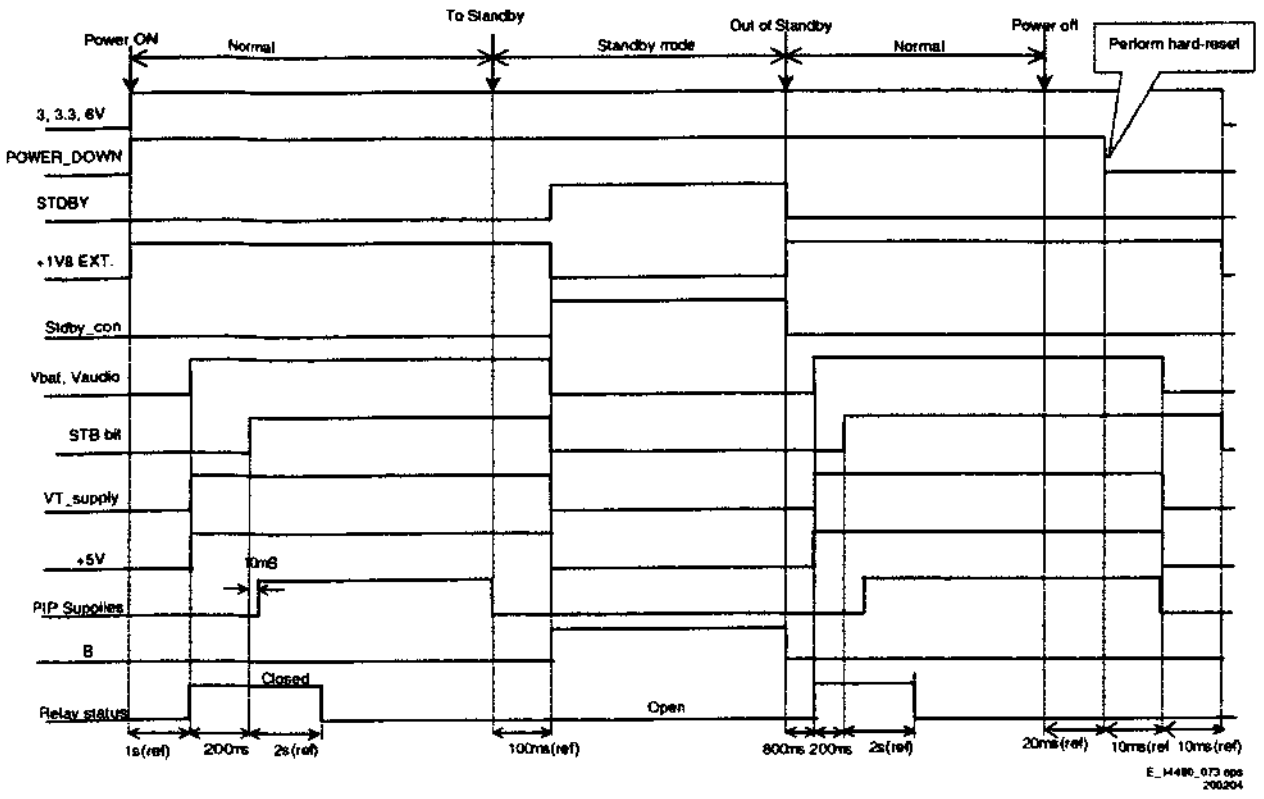
Power ON
Normal
To Standby
Standby mode
Out of Standby
Normal
Power off
Perform hard-reset
3, 3.3, 6V
POWER_DOWN
STDBY
+1V8 EXT.
Stdby_con
Vbat, Vaudio
STB bit
VT_supply
+5V
10mS
PIP Supplies
B
Closed
Open
Relay status
1s(ref)
200ms
2s(ref)
100ms(ref)
800ms
200ms
2s(ref)
20ms(ref)
10ms(ref)
10ms(ref)
E_14480_073.eps
200204

Figure 9-2 Timing diagram Standby

Power ON - To Semi Standby - Out of Semi Standby - Power OFF

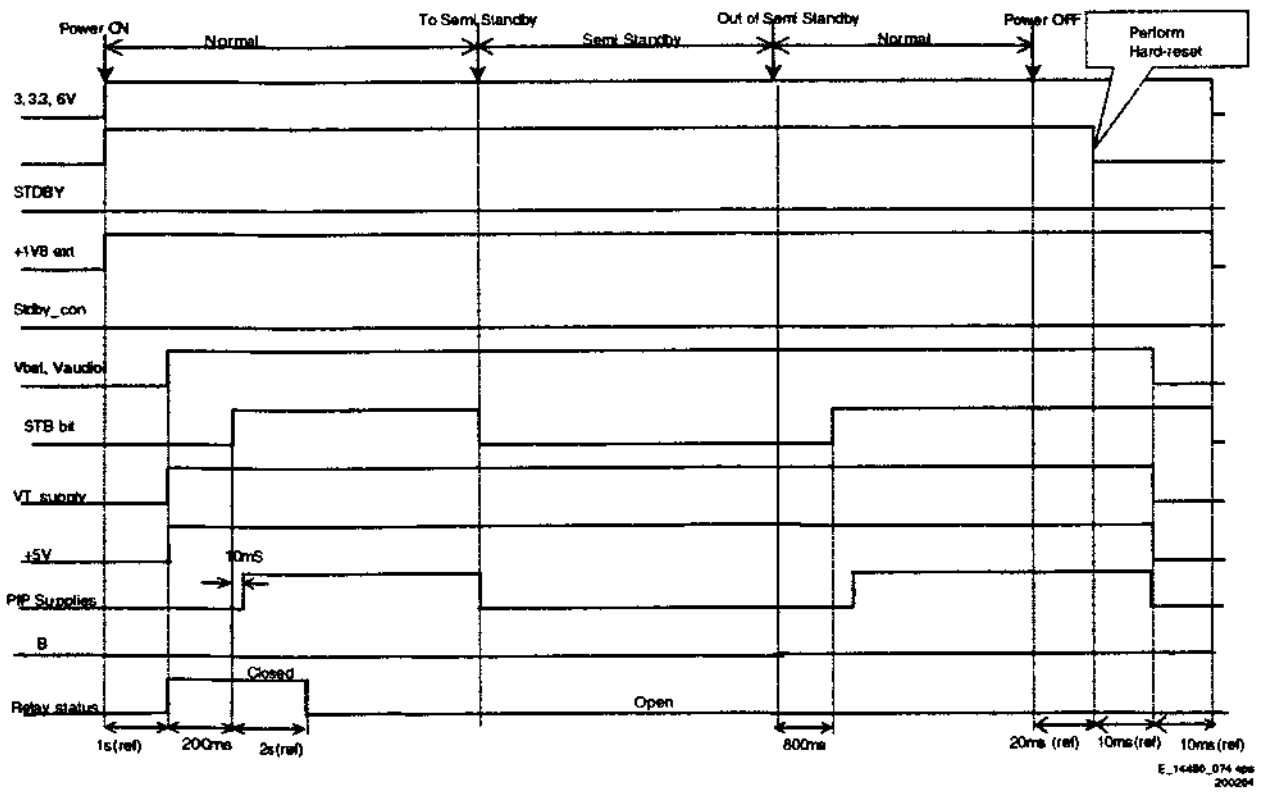
Power ON
Normal
To Semi Standby
Semi Standby
Out of Semi Standby
Normal
Power OFF
Perform Hard-reset
3,3.3, 6V
STDBY
+1V8 ext
Stdby_con
Vbat, Vaudio
STB bit
VT_supply
+5V
10mS
PIP Supplies
B
Closed
Open
Relay status
1s(ref)
200ms
2s(ref)
800ms
20ms (ref)
10ms(ref)
10ms(ref)
E_14480_074.eps
200204

Figure 9-3 Timing diagram Semi Standby

9.2.3 Startup Sequence

When the set is connected to the AC power, the rectified line voltage (via winding 4-5 of L5531 connected to pin 14 of IC7531) will start the internal voltage source to charge the V_cc capacitor (C2532). The IC starts to switch as soon as the V_cc reaches the V_cc start level of 9.5 V. This supply is automatically taken over by winding 1-2, as soon as the V_cc is high enough, and the internal supply source will stop (for high efficiency switching).

Table 9-1 Pinning overview TEA1523

Pin	Symbol	Description
2	Gnd	This pin is Ground of the IC.
3	V_cc	This pin is connected to the supply voltage. An internal current charges the V_cc capacitor (2532), and the start-up sequence is initiated when this voltage reaches a level of 9.5 V. Note: The output power is disabled when the voltage gets below 9 V (UVLO). Operating range is between 0 to 40 V.
5	RC	Frequency setting
6	REG	This pin is connected to the feedback loop. The pin contains two functions: 1) Between 1 to 1.425 V it controls the "on" time. 2) Above the threshold of 3.5 V, it is possible to initiate "burst mode" standby.
11	Demag	This pin is connected to the V_cc winding of 5531. It has three functions: 1) During Magnetisation, the input voltage is sensed to compensate OCP level for OPP. 2) During demagnetisation, the output voltage is sensed for OVP and 3) A comparator is used to prevent continuous conduction when output is overloaded.
12	Sense	This pin contains three different functions.: 1) Dectection of soft start, protection levels of 2) OCP, and 3) SWP.
14	Drain	This pin is connected to the drain of the switch or center tap of the transformer. It contains three functions: 1) M-level (mains-dependent operation-enabling level), 2) Supply for start-up current, and 3) Valley detection.

As C2532 of IC7531 is charged, it will also start to charge the V_cc capacitor (C2511) of IC7511. Via resistor R3519 and C2511, the TEA1506 starts to switch as soon as the V_cc voltage reaches the V_cc start level of is about 11 V. The V_cc voltage is automatically taken over by the main transformer L5512 (winding 2-3) when the V_cc is high enough (when this voltage is even higher than the voltage on C2511, there is no current flow from C2532 to C2511 due to diode D6512).

Table 9-2 Pinning overview TEA1506

Pin	Symbol	Description
2	Vcc	This pin is connected to the supply voltage. When this voltage is high (Vcc_start level, about 11 V), the IC will start switching. When the voltage is lower than Vcc_uvlo (about 8.7 V), the IC will stop switching.Note: This pin is not self supplied by internal source like in TEA1507
3	Gnd	This pin is Ground of the IC.
6	Ctrl	This pin is connected to the feedback loop. The pin will control the "on" time between 1 V to 1.5 V.
7	Demag	This pin is connected to the Vcc winding of 5512. It contains three functions: 1) During magnetisation, the input voltage is sensed to compensate OCP level for OPP, 2) During demagnetisation, the output voltage is sensed for OVP and 3) a comparator is used to prevent continuous conduction when the output is overloaded.
9	Sense	This pin contains three different functions: 1) dectection of soft start, protection levels of 2) OCP, and 3) SWP.
11	Driver	This pin will drive the (MOSFET) switch.
12	HVS	This is High Volt Spacer (n.a.)
14	Drain	Connected to the Drain of the external MOSFET switch, this is the input for valley sensing and initial internal supply.

9.2.4 Standby Mode

In this mode, IC7511 (TEA1506) will be totally disabled. So there is no voltage on the main transformer output. But IC7531 (TEA1523) will still work and will provide the necessary output voltages (6V -> 5V, 3.3V, 3V -> 1.8V) to the Hercules (IC7200).

Table 9-3 PSU voltage overview

Voltage	Normal operation	Stdby mode
V_batt	130 - 143 V	0 V
V_audio	+/- 15.5 V	0 V
+6V	6 V	6 V
+3V	3 V	3 V
Stdby_con	0 V	3.3 V

9.3 Deflection

9.3.1 Synchronization

Before the Hercules (IC7200) can generate horizontal drive pulses, the +3.3V supply voltages must be present. After the start up command of the microprocessor (via I2C), the Hercules outputs the horizontal pulses. These horizontal pulses begin "initially" with double line frequency and then change "gradually" to line frequency in order to limit the current in the line stage (slow-start).

The VDRA and VDRB signals are the balanced output currents (sawtooth shaped) of the frame oscillator (pins 106 and 107 of the Hercules). These output signals are balanced, so they are less sensitive to disturbances.

There is a current source inside the UOC at pin 102. This pumps energy in the capacitor connected to this pin producing a pure saw tooth. The vertical drive signals and the E/W correction signal are derived.

Pin 108 is the East-West drive (or AVL), and it is a single ended current output. The correction for "horizontal width for changed EHT" from this pin is available by setting the HCO bit to "1".

The Phase-2 Compensation available at pin 113 gives frame correction for high beam currents. The phase compensation signal is used to correct the phase of the picture from the horizontal drive signal.

Pin 63 is the SANDCASTLE output (contains all sync info) and also HORIZONTAL FLYBACK (HFB) input.
Pin 97 is the EHT tracking/over-voltage protection pin. The HCO bit can switch on the tracking on EW. If the voltage at pin 97 exceeds 3.9 V, the over-voltage protection will be activated and the horizontal drive is switched "off" via a slow stop.

9.3.2 Horizontal Deflection

There are several executions (depending on the CRT):

- **Sets with no East-West correction.** The principle of the horizontal deflection is based on the quasi-diode modulation circuit. This horizontal deflection circuit supplies the deflection current and auxiliary voltages from the LOT.
- **Sets with East-West correction.** The principle of the horizontal deflection is based on a diode modulator with east-west correction. This horizontal deflection circuit supplies the deflection current and auxiliary voltages from the LOT.
- **Sets with dynamic East-West correction.** The principle of the horizontal deflection is based on a diode modulator with dynamic east-west correction for picture tubes with inner pincushion. This horizontal deflection circuit supplies the deflection current and auxiliary voltages from the LOT.

Basic Principle

During a scan period, either the Line Transistor or diode(s) conduct to ensure a constant voltage over the deflection coil (that results in a linear current). During the flyback period, the Line Transistor stops conducting, and the flyback capacitor(s) together with the inductance of the deflection coil creates oscillation.

First Part of Scan

Pin 62 of the UOC delivers the horizontal drive signal for the Line Output stage. This signal is a square pulse of line frequency. L5402 is the flyback drive transformer. This transformer de-couples the line output stage from the UOC. It has a direct polarization. The flyback drive circuit works with the start-up supply taken from +6V of the Aux supply (and subsequently taking from VlotAux+9V). When the H-drive is high, TS7404 conducts, and transformer L5402 starts to store energy. The base of the line transistor TS7405 is low and therefore blocks. The current in the deflection coil returns from diode D6404.

Second Part of Scan

When the H-drive is low, TS7404 does not conduct, and the energy that is stored in the transformer will transfer to the secondary, making the base of the Line Transistor high. Then the Line Transistor starts to conduct. The current in the deflection coil returns from the transistor in another direction.

Flyback

At the moment the H-drive becomes high, the base of the Line Transistor becomes low. Both the Line Transistor and the Flyback Diode will block. There is an oscillation between the flyback capacitor C2412 and the deflection coil. Because of the inductance of the LOT, the Line Transistor cannot stop conducting immediately. After the Line Transistor is out of conduction, the flyback pulse is created. The flyback capacitor charges until the current in the deflection coil reduce to zero. Then it discharges through the deflection coil and the deflection current increases from the other direction. The flyback diode conducts and is back to the first part of the scan.

Linearity Correction

Because the deflection coil has a certain resistance, a picture without any linearity issues cannot be expected. L5401 is the linearity coil to compensate for this resistance. It is a coil with a pre-magnetized core. This correction is called linearity correction.

Horizontal S-Correction

Because the electronic beam needs to travel a longer distance to both sides of the screen than the center, the middle of the screen would become narrower than both sides. To prevent this, a parabolic voltage is applied across the deflection coil during scan. To create this parabolic voltage, a capacitor called S-cap (C2417/C2418) is used as a voltage source during scan. The sawtooth current of the deflection through this capacitor creates the required parabolic voltage. This correction is called S-Correction.

Mannheim-Circuit

When the EHT is heavily loaded with a bright line, the flyback time can be increased a bit in this situation. As a result, the scan delays a bit causing a DC-shift to the right in the next line, which would create a small spike on the S-cap. This spike oscillates with the inductance of the deflection coil and the primary of LOT. The result is visible in vertical lines under horizontal white line. This is called the Mannheim-effect.

To prevent this from happening, a circuit called Mannheim-circuit is added. This consists of C2415, R3404, R3417 and D6406. During the scan, C2415 is charged via R3417. During the flyback, the S-correction parabola across the S-Cap C2417/C2418 is in its most negative, and D6406 conducts. Thus, C2415 is switched in parallel to C2417/C2418 during flyback. As C2415 is much larger than C2417/C2418, the voltage across C2415 reduces the Mannheim-effect oscillation.

Class D East-West Driver

To reduce the power loss of the normal used linear East-West amplifier, a class-D East-West circuit is used. To achieve this, the East-West parabola waveform EW_DRIVE from the Hercules (frame frequency) is sampled with a saw tooth (line frequency) taken from the line aux output. Then a series of width-modulated pulses is formed via two inverted phase amplifiers, filtered by an inductor, which then directly drive the diode modulated line circuit.

East-West Correction

To achieve a good geometry, **dynamic** S-correction is needed. The design is such that the tube/yoke needs East-West correction. Besides that, an inner pincushion is present after East-West correction. The line deflection is modulated with a parabolic voltage (frame frequency). In this way it is not so much at top and bottom, and much more in the middle.

Upon entering the picture geometry menu in the SAM mode, the following corrections will be displayed.

- EWW: East West Width.
- EWP: East West Parabola.
- UCP: Upper Corner Parabola.
- LCP: Lower Corner Parabola.
- EWT: East West Trapezium.

The East-West drive circuit realizes them all. The settings can be changed by a remote control. All changed data will be stored into the NVM after the geometry alignment.

Panorama
For Wide Screen sets, the S-correction of the picture has to adapt between the different picture modes. In particular, between 16:9 Wide Screen and 4:3 picture modes. This is achieved with the (separate) Panorama circuit (see diagram "G"). A signal (I2SDI1) from the UOC controls the state of TS7463. When in the normal 16:9 Wide Screen mode, the signal is "low" and therefore TS7463 is switched "off".
When the 4:3 mode is selected, this signal from the UOC is pulled "high", switching TS7463 "on". The relay 1463 on the Panorama panel is subsequently turned "on" and, in effect, paralleling capacitor C2475/C2474 to the S-Cap C2469/ C2470. This changes the overall effective S-correction. The relay is switched "on" in 4:3 and Superwide picture modes.

9.3.3 Auxiliary Voltages

The horizontal deflection provides various auxiliary voltages derived either directly or indirectly from the secondary pins of the LOT:

- +9V: This supplies the Hercules's flyback driver.
- +11V: This supplies the frame amplifier.
- -12V: This supplies the frame amplifier.
- 50V: This supplies the frame amplifier.
- Filament: This supplies the heater pins of the picture tube.
- VideoSupply (+200V from primary side of LOT): This supplies the RGB amplifier and Scavem circuit at the CRT panel.

Notes:

- The V_T voltage (to tuner) is drawn from V_batt.
- The EHT voltage is generated by the Line Output Transformer (LOT). The Focus and Vg2 voltages are created with two potentiometers integrated in the transformer.

9.3.4 Beam Current

The beam current is adjusted with R3451 and R3452. The components R3473, R3453 and C2451 determine the EHT_info characteristic. The voltage across C2412 varies when the beam current changes. This EHT_info is used to compensate the picture geometry via pin 97 of the Hercules when the picture changes rapidly, and compensate the phase 2 loop via pin 113 of the Hercules. Also from the EHT_info line, a BCL signal is derived and sent to the Hercules for controlling the picture's contrast and brightness.

When the picture content becomes brighter, it will introduce:

- Geometry distortion due to the impedance of the LOT causing the EHT to drop.
- Picture blooming due to the picture characteristics

Because of the above mentioned, we will need a circuit for Beam Current Limiter (BCL) and EHT compensation (EHT_info). These two circuits derive the signal from the picture tube current info through LOT pin 10.

BCL

- When the BCL pin voltage goes to 2.8 V, the Hercules will start to limit CONTRAST gain.
- When it reaches 1.7 V, then the BRIGHTNESS gain limit will start to react.
- When BCL pin voltage goes to 0.8 V, the RGB will be blanked.

Components TS7483, R3490, R3491, R3492, and C2483 are for fast beam current limiting (e.g. with a Black-to-White pattern).

Components R3454, D6451, D6450, C2453, R3493, and C2230 are for average beam current limiting. C2453 and R3493 also control the timing where average beam current limiting is more active or less active.

EHT_info
The "PHI2 correction" is to correct the storage time deviation of the Line Output Transistor, which is causing geometry distortion due to brightness change.
Line EHT_info is to correct the geometry distortion due to EHT deviation.
Both of them feedback through the EHTO and PH2LF pin, and correct the geometry through the East-West circuit.

Power Down
The power down connection is for EHT discharge during AC Power "Off" state. In the Hercules, if EHT_info > 3.9 V, it will trigger the X-ray protection circuit via a 2fH soft stop sequence. The Hercules bits OSO (Switch Off in Vertical Over scan) and FBC (Fixed Beam Current Switch Off) will discharge the EHT with 1mA cathode current at over-scan position.
During switch-off, the H_out frequency is doubled immediately and the duty cycle is set to 25% fixed, during 43 ms. The RGB outputs are driven "high" to get a controlled discharge of the picture tube with 1 mA during 38 ms. This will decrease the EHT to about half the nominal value (= safety requirement). When bit OSO is set, the white spot/flash during switch-off will be written in overscan and thus will not be visible on the screen. Careful application must guarantee that the vertical deflection stays operational until the end of the discharge period.

9.3.5 DAF

The Dynamic Astigmatic Focus (DAF) circuit is required by 34RF sets only. It provides vertical DAF and horizontal DAF. Both of the parabola signals are derived through integration by using chassis available signals:

- The vertical parabola is using RC integration (via R3403 and C2401) on the Frame sensing resistor saw tooth (Frame_FB).
- The horizontal parabola is obtained by 2 RC integration (R3409, R3410, C2402, C2403) on the +9V LOT output.

Both of the parabolas are added on the output stage through adder TS7402 and TS7403. The collector of TS7402 emitter-drives TS7401 and is amplified by pull up resistor R3411. D6401 and C2405 provide the rectified supply voltage.

9.3.6 X-ray Protection

The X-ray protection circuit rectifies the filament voltage and uses it to trigger TS7481 when the EHT is too high. TS7481 is biased at "off" condition by D6480, R3482, and R3483 during normal operation. When the EHT goes too high, the voltage across R3482 will tend to increase as well, while the voltage across D6481 is fixed. Up to certain level (triggering point), TS7481 will be "on" and will force the EHT_info > 3.9 V. The chassis will be shut down through a soft stop sequence.

9.3.7 Vertical Deflection

The Frame stage consists fully of discrete components. This has the advantage for better flash behavior than when an IC was used.

The Frame differential drive signal from the Hercules comes from a current source. Resistors R3460 and R3461 convert them into a voltage, and feed them into the differential amplifier TS7455 and TS7456. The output of TS7456 is input to the next amplification stage of TS7452. Finally, TS7451 and TS7453 deliver the Vertical yoke current to the coil and feedback through the sensing resistors R3471 and R3472.
D6458 and TS7454 are used to bias TS7451 and TS7453, to get rid of zero crossovers, which can cause horizontal lines at the screen center.
The negative supply is from -12V and the positive scanning supply is from +12V through D6459. The flyback supply is derived from D6455, D6456 and C2456. This circuit is a voltage doubler, which stores energy in C2456 during the Line flyback

period and delivers the energy to C2465 during the Line scanning period. Throughout the Frame period, the charging and discharging of C2456 works alternatively. However, at the first half of the Frame scanning, TS7451 is "on" and consumes all the charge from C2456. When entering 2nd half Frame period, TS7451 is "off", so C2456 will gradually charge up to the required flyback supply.

C2463, R3464 and D6457 are for boosting the base voltage of TS7451 during the flyback period and the 1st half Frame period as well. C2463 is charged by D6457 during the 2nd half scanning. R3467 and R3468 are for oscillation damping.

The V_guard protection is to protect the Frame stage if a fault condition happens. The V_guard will sense the pulse with voltage > 3.8 V and period < 900 us. Any signal out of this range will be considered as fault, and the chassis will be shut down.

9.3.8 Tilt and Rotation

The rotation control signal is a PWM output from the UOC. It is filtered by R3252, R3246, R3259 and C2259. The DC voltage after filtering at C2259 will be amplified by R3245 (Main Board) and R3390 (CRT panel).
The output stage functions similarly as in L01.1/M8 with rotation IC TDA8941P. TS7331/TS7382 and TS7332/TS7381 will function alternatively corresponding to the rotation setting.

9.3.9 CRT panel

The RGB amplifier stage is exactly the same as in L01.1/M8. However, the RGB amplifier IC has been changed to TDA6107AJF or TDA6108AJF. The "A" indication is with gain of "80" rather than "50" in L01.1/M8. The diode D6332 used in the former chassis, to solve the bright screen during start up, is not required because this IC has the error correction implemented.

Scavem
In certain versions, the Scavem feature is used to enhance the sharpness of the picture. The RGB signals are first differentiated and subsequently amplified before feeding to an auxiliary coil known as the SVM coil. The current, flowing through the SVM coil during the picture intensity transients, modulates the deflection field and thus the scan velocity.

During the first half of the intensity increase, the scan velocity is increased (thus decreasing the current density by spreading it on a wider area). During the second half of the intensity increase, the scan velocity is decreased (increasing the current density by concentrating it on a smaller area). The increasing current density transition is sharpened. A decreasing current density transition is processed in a similar way and is also sharpened.

In this chassis the SCAVEM signal is different from its predecessor because the Hercules generates the differential SCAVEM signal inside the IC.
The supply of the SCAVEM is taken from V_bat through a 1k5 / 5 W resistor. Compared with the L01.1/M8, this has the advantage of getting better performance for the pattern with tremendous SCAVEM current (like V_sweep). In this former chassis, because the supply was taken from the 200 V through a 8k2 / 5 W resistor, the supply dropped significantly during a large SCAVEM current. In this chassis, the drop due to the pattern will be less because of the lower supply voltage impedance.
In the Main Board, 1st stage amplification is taken care by 7208 with the pull up resistors (3361, 3387) located in the CRT panel.

TS7361 and TS7362 is the current buffer delivering the current to the output stage. The diode D6361 is to lightly bias these transistors, to get rid of the zero crossover of the stage.

After that, the signal is ac-coupled to TS7363 and TS7364 where the emitter resistors (R3364 and R3370) will determine the final SCAVEM current. TS7363 and TS7364 are biased by R3363, R3366, R3367 and R3368.
C2387, R3388, R3389, R3365, R3369, C2384, and C2385 are used for suppressing unwanted oscillations.
The function of TS7376 is to limit the SCAVEM current from going too high. It basically senses the voltage after R3373 and clamps the SCAVEM signal through D6367 and C2376.

9.4 Control

The Micro Controller is integrated with the Video Processor, and is called the Hercules. For dynamic data storage, such as SMART PICTURE and SMART SOUND settings, an external NVM IC is being used.
Another feature includes an optional Teletext/Closed Caption decoder with the possibility of different page storage depending on the Hercules type number.

The Micro Controller ranges in ROM from 128 kB with no TXT-decoder to 128 kB with a 10 page Teletext or with Closed Caption.

9.4.1 Block Diagram

The block diagram of the Micro Controller application is shown below.

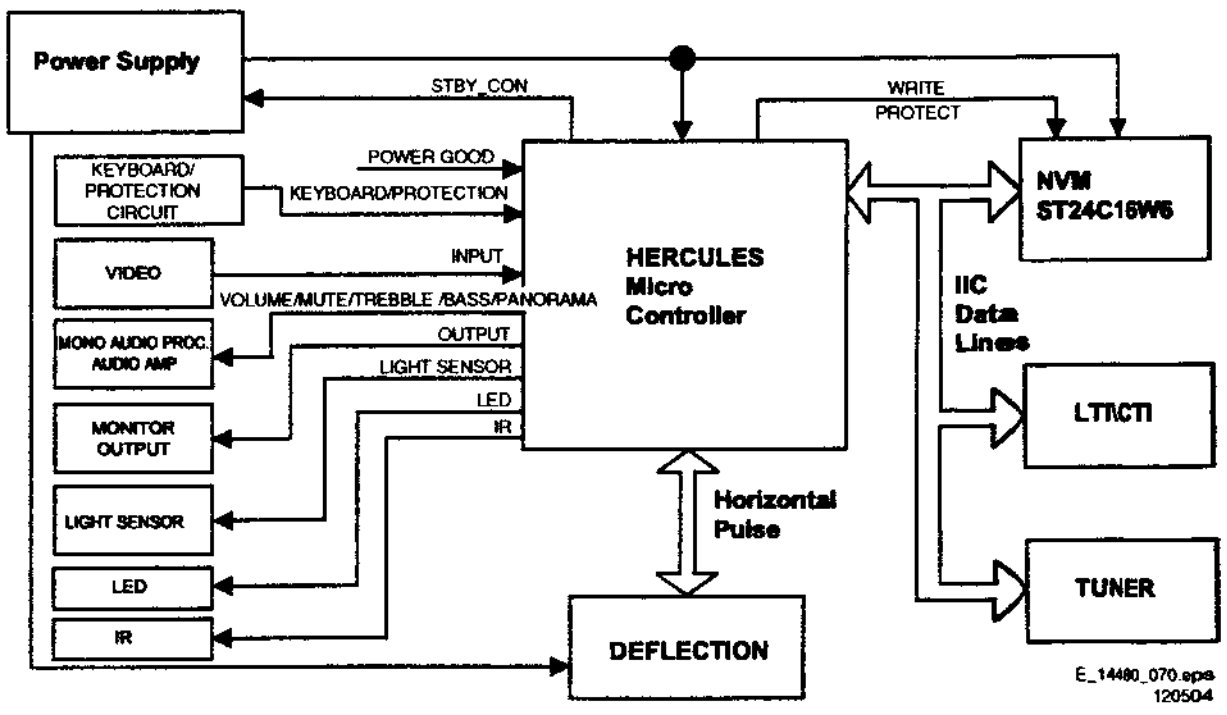

Figure 9-4 Micro Controller block diagram

9.4.2 Basic Specification

The Micro Controller operates at the following supply voltages:
- +3.3 V_dc at pins 33, 125, and 19.
- +1.8 V_dc at pins 126, 36, and 33.
- I2C pull up supply: +3.3V_dc.

9.4.3 Pin Configuration and Functionality

The ports of the Micro Controller can be configured as follows:
- A normal input port.
- An input ADC port.
- An output Open Drain port.
- An output Push-Pull port.
- An output PWM port.
- Input/Output Port

The following table shows the ports used for the L04 control:

Table 9-4 Micro Controller ports overview

Pin	Name	Description	Configuration
32	INT0/ P0.5	IR	INT0
31	P1.0/ INT1	PWRDOWN	INT1
30	P1.1/ T0	LED	P1.1
27	P0.4/ I2SWS	(for future use)	-
26	P0.3/ I2SCLK	(for future use)	-
25	P0.2/ I2SDO2	SEL_SC2_INTERFACE/ SDM	P0.2
24	P0.1/ I2SDO1	(for future use)	P0.1
23	P0.0/ I2SDI/O	Panorama	P0.0
22	P1.3/ T1	Write Protect	P1.3
21	P1.6/ SCL	SCL	SCL
20	P1.7/ SDA	SDA	SDA
18	P2.0/ TPWM	VOL_MUTE	P2.0
17	P2.1/ PWM0	ROTATION	PWM0
16	P2.2/ PWM1	SEL_LL'/M	P2.2
15	P2.3/ PWM2	STANDBY_CON	P2.3
14	P3.0/ ADC0	Light Sensor	ADC0
13	P3.1/ ADC1	(for future use)	-
10	P3.2/ ADC2	(for future use)	-
9	P3.3/ ADC3	KEYBOARD	ADC3
7	P2.4/ PWM3	A (for future use)	P2.4
6	P2.5/ PWM4	B (for future use)	P2.5
3	P1.2/ INT2	C (for future use)	INT2
2	P1.4/ RX	E (for future use)	-
1	P1.5/ TX	D (for future use)	-

The description of each functional pin is explained below:

- **LED.** This signal is used as an indication for the Standby, Remote and Error Indicator. Region diversity:
  - During protection mode, the LED blinks and the set is in standby mode.
  - During error conditions it blinks at a predefined rate.
  - After receiving a valid RC-5 or local keyboard command it flashes once.
  - For sets with error message indication, the LED blinks when message is active and the set is in standby mode.

Table 9-5 LED signal diversity

LED	Europe		AP/ LATAM		NAFTA	
0	LED brighter	Standby	LED lighted	Standby	LED lighted	Normal
1	LED dimmer	Normal	LED "off"	Normal	LED "off"	Standby

- **SCL.** This is the clock wire of the two-wire single master bi-directional I2C bus.
- **SDA.** This is the data wire of the two-wire single master bi-directional I2C bus.
- **STDBY_CON.** The Hercules generates this signal. This can enable the MAIN SMPS in normal operation and disable it during Standby. It is of logic "low" (0 V) under normal operation and "high" (3.3 V) during Standby.
- **IR.** This input pin is connected to an RC5 remote control receiver.
- **SEL-IF-LL'/ M-TRAP.** For AP: All L04 AP sets are Multi System QSS set. This is an output pin to switch the Video SAW filter between M system and other systems.
  - 0: NTSC M (default)
  - 1: PAL B/G, DK, I, L
- **Write Protect.** The global protection line is used to enable and disable write protection to the NVM. When write to the NVM is required, pin 7 of the NVM must be pulled to logic '0' first (via Write_Protect of the micro-controller pin) before a write is performed. Otherwise pin 7 of NVM must always be at logic "1"
  - 0: Disabled
  - 1: Enabled (default)
- **Mute.** This pin is use to MUTE the audio amplifier. It is configured as push pull.
- **Rotation.** This pin is configured as PWM for the Rotation feature. The output of the PWM is proportional to the feature control.
- **Light Sensor.** This pin is configured as ADC input for the Light Sensor.
- **Sel_SC2_Interface.** This pin is use to switch between the SC2_CVBS_OUT and the INTF_CVBS_OUT for the SCART_2_CVBS_OUT/ MONITOR_OUT signal.
  - 0: Hercules CVBS Output (default)
  - 1: Interface CVBS Output
- **PWRDOWN.** The AUX SMPS generates this signal. Logic "high" (3.3 V) under normal operation of the TV and goes "low" (0 V) when the Mains input voltage supply goes below 70 V_ac.
- **Keyboard.** Following are the Keyboard functions and the step values (8 bit) for it.

Table 9-6 Local keyboard values

Function	Voltage (V_dc)	Step values (8 bit)
NAFTA Standby	0	0 - 6
Ch +	0.43	7 - 33
Exit Factory (Ch- and Vol-)	0.69	34 - 53
Ch -	0.93	54 - 73
Menu (Vol - and Vol +)	1.19	74 - 96
Vol -	1.49	97 - 121
DVD Eject	1.8	122 - 147
Vol +	2.12	148 - 169

- **SDM.** This pin is configured as Open Drain during the cold start only. If this pin is shorted to ground during cold start, it will enter the SDM mode (for Service use).
- **ISP.** This pin is configured as Open Drain during the cold start only. If this pin is shorted to ground during cold start, it will enter the ISP mode (for Service use).
- **PANEL.** This pin is configured as Open Drain during the cold start only. If this pin is shorted to ground during that, then it will enter to the PANEL mode.
- **ResetEnabled.** This is an output pin to switch the control transistor (pos. TS7202) "high" or "low" for the reset of 1.8 V in case there is a corruption in the Hercules.

9.5 Tuner and IF

The tuner used in this chassis comes from two sources, from Philips and from Alps. Both tuner sources have the same pin configuration so they are 1 to 1 compatible except for the software, which will be selected by means of Option Settings.

Some features:

- Multi-Standard alignment free PLL-IF, including SECAM L/ L'.
- Integrated IF-AGC time constant.
- Integrated sound band-passes and traps (4.5 / 5.5 / 6.0 / 6.5 MHz).
- Group delay compensation (for NTSC and for PAL).
- QSS versions with digital Second-Sound-IF SSIF (AM demodulator for free).
- FM mono operation possible: Inter-Carrier or QSS.

9.5.1 Diversity

The following Tuners can be present (depending on the region and the set execution):

- Normal tuner without PIP.
- FM radio tuner without PIP.
- Normal tuner with PIP (main tuner with splitter).
- FM radio set with PIP (PIP tuner with splitter).

The SAW filter used, depends on the application concept (whether it is a QSS concept or an Intercarrier):

- OFWM3953M for QSS Video.
- OFWK9656M for QSS Audio.
- OFWM1971M for Intercarrier.

9.5.2 Pin Assignments and Functionality

Pin assignment of the Tuner:

Table 9-7 Pinning Tuner

Pin	Pin Description	DC Voltages
1	RF-AGC	4V for Maximum Gain < 4V for Strong Signal Condition
2	FM Radio Input or N.C	-
3	NC (Address Pin)	-
4	SCL	0 to 3.3 V_dc
5	SDA	0 to 3.3 V_dc
6/7	Supply Voltage	5 V_dc +/- 0.25 V
8	N.C	-
9	Tuning Supply Voltage	30 to 35 V_dc
10	FM Radio IF Output/Ground	-
11	TV IF Output	-

Pin assignment of the several SAW filters (depends on region/ execution):

Table 9-8 Pinning SAW filters

Pin	QSS Video (item 1002)	QSS Video (item 1003)	QSS Audio (item 1001)	Intercarrier (item 1002)
1	Input	Input	Input	Input
2	Input Ground	Input Ground	Switching Input	Input Ground
3	Ground	Ground	Ground	Ground
4	Output	Output	Output	Output
5	Output	Output	Output	Output
6	-	n.c.	-	-
7	-	n.c.	-	-
8	-	Ground	-	-
9	-	Free	-	-
10	-	Switching input	-	-

The table below shows the switching behavior of SAW filter.

Table 9-9 Switching behavior SAW filter

	Condition	
	High	Low
System	M	BG/DK/I/L

Note: The logic level is measured at the base of transistor 7001.

9.5.3 Option Settings

The option settings for the Tuner type can be found in Option setting 1 of the SAM mode. The Option settings for Option 1 are as follows:

- Option Byte 1
  - Bit 7: OP_PHILIPS_TUNER
  - Bit 6: OP_FM_RADIO
  - Bit 5: OP_LNA
  - Bit 4: OP_ATS
  - Bit 3: OP_ACI
  - Bit 2: OP_UK_PNP
  - Bit 1: OP_VIRGIN_MODE
  - Bit 0: OP_CHINA

For more details on the option settings, please refer to the chapter 8 "Alignments".

9.6 Source Select

For this chassis, the audio/video source selection is controlled via the Hercules.

The Audio/Video Source Select is one of the more complex functions due to its diversity and complex switching. The Audio/ Video Source Select comprises of the following components:

- The Hercules itself for Mono Audio and Video Source Selection.
- The HEF switch for Stereo Audio as well as Video Selection.

9.6.1 Options

The option settings for the Source Selection can be found in Option settings of the SAM mode. The Option settings for Option 5 are as follows:

- Option Byte 5
  - Bit 7: AV1
  - Bit 6: AV2
  - Bit 5: AV3
  - Bit 4: CVI
  - Bit 3: SVHS2
  - Bit 2: SVHS3
  - Bit 1: HOTEL MODE
  - Bit 0:

For more detail on the option settings, please refer to the chapter 8 "Alignments".

9.6.2 Diversity

The basic diversity of the Audio/Video Source Select is between the Mono and the Stereo sets and the number of Cinch/SCART's as specified in the product specification. The table below shows the Audio/Video Source Select diversity for all regions:

Table 9-10 AV Source Select diversity

Pin	Symbol	Remark
51	R/Pr IN3	AV1 (CVI)
50	G/Y IN3	
49	B/Pb IN3	
52	INSSW3	
74	CVBS2/Y2	
95	AUDIO IN5 L	
94	AUDIO IN5 R	
73	AUDIO IN3 L	AV2 (SVHS)
72	AUDIO IN3 R	
71	CVBS3/Y3	
70	C2/C3	
80	AUDIO IN4 L	Side (SHVS)
79	AUDIO IN4 R	
78	CVBS4/Y4	
77	C4	
81	IFVO/SVO/CVBSI	Monitor Out
67	AUD OUT HP L	
66	AUD OUT HP R	
69	AUD OUT LS L (AUD OUT/AM OUT)	HP/ LS Out
68	AUD OUT LS R	
59	V IN (R/Pr IN2/CX)	Interface
58	U IN (B/Pb IN2)	
57	Y IN (G/Y IN2/CVBS-Yx)	
54	U OUT (INSSW2)	
76	AUDIO IN2 L	
75	AUDIO IN2 R	
86	DVBO/IFVO/FMRO	N.C.
65	CVBSO/PIP	PIP application
56	Y SYNC	100 nF
55	Y OUT	100 nF
53	V OUT (SWO)	N.C.
93	AUD OUT S L	N.C.
92	AUD OUT S R	N.C.

Table 9-11 SCART Source Select diversity

Pin	Symbol	Remark
51	R/Pr IN3	SCART 1
50	G/Y IN3	
49	B/Pb IN3	
52	INSSW3	
74	CVBS2/Y2	
86	DVBO/IFVO/FMRO	
95	AUDIO IN5 L	
94	AUDIO IN5 R	
93	AUD OUT S L	
92	AUD OUT S R	
71	CVBS3/Y3	SCART 2
70	C2/C3	
81	IFVO/SVO/CVBSI	
73	AUDIO IN3 L	
72	AUDIO IN3 R	
67	AUD OUT HP L	
66	AUD OUT HP R	
80	AUDIO IN4 L	Side I/O
79	AUDIO IN4 R	
78	CVBS4/Y4	
77	C4	
69	AUD OUT LS L (AUD OUT/AM OUT)	LS/ HP/ MON OUT
68	AUD OUT LS R	
59	V IN (R/Pr IN2/CX)	Interface
58	U IN (B/Pb IN2)	
57	Y IN (G/Y IN2/CVBS-Yx)	
54	U OUT(INSSW2)	
76	AUDIO IN2 L	
75	AUDIO IN2 R	
65	CVBSO/PIP	for PIP
56	YSYNC	100 nF
55	YOUT	100 nF
53	VOUT(SWO)	N.C.

9.6.3 Audio Source Selection

The signals coming out of the DEMDEC (internal demodulator/ decoder block of the Hercules) are selectable and consist of the following (depending on the transmission):

- DEC L/R (Can be NICAM, FM 2CS, or BTSC Stereo).
- Mono (Refers to fallback/forced Mono in Stereo Transmission).
- SAP.

For L04, the assigned I/O with respect to the Hercules is as follows:

- SCART1 or AV1 Input assigned to **Audio In 5**.
- SCART2 or AV2 Input assigned to **Audio In 3**.
- Side AV Input assigned to **Audio In 4**.
- External Interface Input assigned **to Audio In 2**.
- SCART1 Output assigned to **SCART Output**.
- SCART2 Output (EU) or Monitor Output (LA/NA/AP) assigned to **Headphone Output**.
- Constant Level Output assigned to **Loudspeaker Output**.

9.6.4 Video Source Selection

Video source selection is done inside the Hercules. Therefore it provides a video switch with 3 external CVBS inputs and a CVBS output. All CVBS inputs can be used as Y-input for Y/C signals. However, only 2 Y/C sources can be selected because the circuit has 2 chroma inputs.
All input signals are converted to YUV, and looped through an external interface. This to enable picture improvement features (like LTI/CTI) or PIP.

9.7 Video Processing

The Video Processor is basically the Hercules and the TDA9178 (CTI/LTI). Video processing is done in these two chips such as the Brightness Control, Contrast Control and so on.

Some features:

- Full YUV-loop interface (alternative functions: DVD, RGB or Y/C).
- Internal OSD insertion (not Saturation or Contrast controlled).
- Double window implementation.
- Linear / non linear scaling for 16:9 sets.
- Tint (hue) on UV signals (including DVD).
- Peaking, Coring, Black \ Blue \ White-stretch.
- Transfer-Ratio and Scavem (also on TXT).

9.7.1 Features

The features included in the Hercules are as follows:

- Brightness Control.
- Contrast Control.
- Saturation Control.
- Sharpness Control.
- Peak White Limiter.
- Beam Current Limiter.
- Black Stretch (Contrast Plus).

For sets with the TDA9178, there are two extra features:

- Luminance Transient Improvement (LTI).
- Color Transient Improvement (CTI).

9.7.2 Block Diagram

Following diagram is the block diagram of the video processing part:

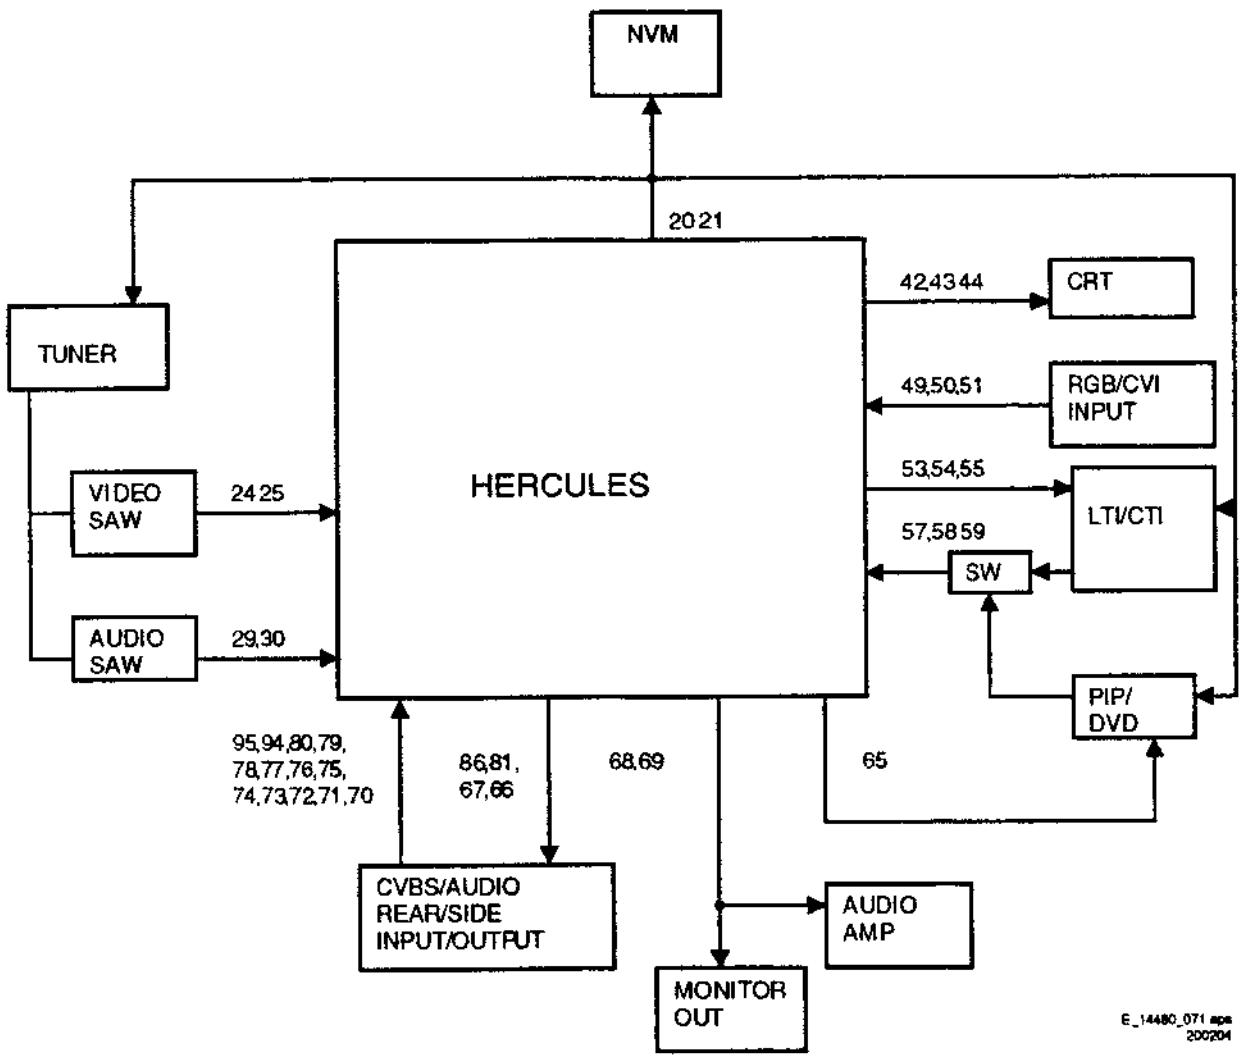

Figure 9-5 Video processing block diagram

9.7.3 LTI/CTI

The TDA9178 is an I2C-bus controlled IC (INCREDIBLE chip) with YUV interface. This IC can do mainly histogram processing, color transient improvement (CTI) and line transient improvement (LTI).

- Luminance Vector Processing involves histogram function, which provides scene dependent contrast improvement, adaptive black and white point stretching.
- Color Vector Processing involves skin tone correction, green enhancement and blue stretch.

- Spectral Processor involves step improvement processing, contour processing, smart sharpness control, color dependant sharpness and Color Transient Improvement.
- Noise detector, feature mode detector and cue flash functions.
- Demonstration mode shows all the improvement features in one picture.

Table 9-12 Pinning overview TDA9178

Pin	Symbol	Description
1	SC	Sandcastle input pin
2	n.c.	Not connected pin
3	ADEXT1	External AD-conversion #1 input pin
4	ADEXT2	External AD-conversion #2 input pin
5	ADEXT3	External AD-conversion #3 input pin
6	Y in	Luminance input pin
7	ADR	Address selection input pin
8	U in	-(B-Y) signal input pin
9	V in	-(R-Y) signal input pin
10	TP	Testpin, connected to ground
11	SCL	I2C-bus: clock input pin
12	n.c.	Not connected pin
13	n.c.	Not connected pin
14	SDA	I2C-bus: data input pin
15	DECDIG	Decoupling digital supply
16	V out	-(R-Y) signal output pin
17	U out	-(B-Y) signal output pin
18	V ee	Ground pin
19	Y out	Luminance output pin
20	V cc	Supply-voltage pin
21	S out	Luminance output for SCAVEM
22	CF	Cue-flash output pin
23	n.c.	Not connected pin
24	n.c.	Not connected pin

9.7.4 Options

The option settings allow for process of the video as per set specification. The option settings can be found in “Option 2” and “Option 6” in the SAM mode. The option settings are as follows:

- Option Byte 2
  - Bit 7:
  - Bit 6 :OP_GREEN_UI
  - Bit 5: OP_CHANNEL_NAMING,
  - Bit 4: OP_LTI,
  - Bit 3: OP_TILT,
  - Bit 2: OP_FINE_TUNING
  - Bit 1: OP_PIP_PHILIPS_TUNER,
  - Bit 0: OP_HUE,
- Option Byte 6
  - Bit 7: OP_PERSONAL_ZAPPING,
  - Bit 6:
  - Bit 5: OP_FMTRAP
  - Bit 4: OP_COMBFILTER
  - Bit 3: OP_ACTIVE_CONTROL
  - Bit 2: OP_VIDEO_TEXT
  - Bit 1 :OP_LIGHT_SENSOR,
  - Bit 0: OP_DUAL_TEXT

For more details on the option settings, please refer to the chapter 8 “Alignments”.

9.8 Audio Processing

The audio decoding is done entirely via the Hercules. The IF output from the Tuner is fed directly to either the Video-IF or the Sound-IF input depending on the type of concept chosen. There are mainly two types of decoder in the Hercules, an analog decoder that decodes only Mono, regardless of any standards, and a digital decoder (or DEMDEC) that can decode both Mono as well as Stereo, again regardless of any standards.

In this chassis, the analog decoder is used in two cases:

- It is used for AM Sound demodulation in the Europe SECAM LL’ transmission.
- It is used for all FM demodulation in AP AV-Stereo sets.

9.8.1 Diversity

The diversity for the Audio decoding can be broken up into two main concepts:

- The Quasi Split Sound concept used in Europe and some AP sets.
- The Inter Carrier concept, used in NAFTA and LATAM.

The UOC-III family makes no difference anymore between QSS- and Intercarrier IF, nearly all types are software-switchable between the two SAW-filter constructions.

Simple data settings are required for the set to determine whether it is using the Inter Carrier or the QSS concept. These settings are done via the “QSS” and “FMI” bit found in SAM mode. Due to the diversity involved, the data for the 2 bits are being placed in the NVM location and it is required to write once during startup.

On top of that, it can be further broken down into various systems depending on the region. The systems or region chosen, will in turn affect the type of sound standard that is/are allowed to be decoded.

- For the case of **Europe**, the standard consists of BG/DK/I/LL’ for a Multi-System set. There are also versions of Eastern Europe and Western Europe set and the standard for decoding will be BG/DK and I/DK respectively. FM Radio is a feature diversity for the Europe sets. The same version can have either FM Radio or not, independent of the system (e.g. sets with BG/DK/I/LL’ can have or not have FM radio).
- For the case of **NAFTA** and **LATAM**, there is only one transmission standard, which is the M standard. The diversity then will be based on whether it has a dBx noise reduction or a Non-dBx (no dBx noise reduction).
- For the case of **AP**, the standard consists of BG/DK/I/M for a Multi-System set. The diversity here will then depends on the region. AP China can have a Multi-System and I/DK version. For India, it might only be BG standard.

9.8.2 Functionality

The features available in the Hercules are as follows:

- Treble and Bass Control.
- Surround Sound Effect that includes:
  - Incredible Stereo.
  - Incredible Mono.
  - 3D Sound (not for AV Stereo).
  - TruSurround (not for AV Stereo).
  - Virtual Dolby Surround, VDS422 (not for AV Stereo).
  - Virtual Dolby Surround, VDS423 (not for AV Stereo).
  - Dolby Pro-Logic (not for AV Stereo).
- Bass Feature that includes:
  - Dynamic Ultra-Bass.
  - Dynamic Bass Enhancement.
  - BBE (not for AV Stereo).
- Auto-Volume Leveler.
- 5 Band Equalizer.
- Loudness Control.

All the features stated are available for the Full Stereo versions and limited features for the AV Stereo

9.8.3 Audio Amplifier

The audio amplifier part is very straightforward.It uses the integrated power amplifier TDA2616Q, and delivers a maximum output of 2 x 10 W_rms.
The maximum operating condition for this amplifier is 21 V unloaded. Normal operating supply is from 7.5 V to 16 V.

Muting is done via the VOLUME_MUTE line connected to pin 2 of the amplifier-IC and coming from the UOC.

The following table shows pin functionality of the Audio Amplifier:

Table 9-13 Pinning overview TDA2616

Pin	Pin Name	Normal Operation
1	Input Left	Input AC signal
2	Mute	16 V_dc
3	Ground	0 V
4	Output L Channel	AC waveform
5	Supply Voltage (negative)	-16 V_dc
6	Output R Channel	AC waveform
7	Supply Voltage (positive)	+ 16 V_dc
8	Inverting inputs L and R	0 V
9	Input Right	Input AC signal

9.9 Picture in Picture (PIP)

The PIP application has two tuners, one with a splitter on the main chassis and another with "phono" input on the PIP panel. The same signal is injected to both tuners, so that it does not need separate auto tuning for the PIP tuner.

The TDA9887TS (item 7201) is an alignment free multi-standard vision and sound IF signal PLL demodulator for positive and negative modulation, including sound AM and FM processing.

The SDA9489 (item 7242) is a multi system color decoder with many features such as: half screen size PIP, selectable YUV or YPbPr, 16:9 application, WSS detection, Closed Caption, and OSD display for PIP window etc.

The PIP power supply is based on the step down converter principle. The +9V input voltage is converted to +5V and +3.3V via the regulator (item 7501).

9.10 Abbreviation list

2CS	2 Carrier (or Channel) Stereo
ACI	Automatic Channel Installation: algorithm that installs TV sets directly from cable network by means of a predefined TXT page
ADC	Analogue to Digital Converter
AFC	Automatic Frequency Control: control signal used to tune to the correct frequency
AFT	Automatic Fine Tuning
AGC	Automatic Gain Control: algorithm that controls the video input of the feature box
AM	Amplitude Modulation
AP	Asia Pacific region
AR	Aspect Ratio: 4 by 3 or 16 by 9
ATS	Automatic Tuning System
AV	External Audio Video
AVL	Automatic Volume Leveler
BCL	Beam Current Limitation
B/G	Monochrome TV system. Sound carrier distance is 5.5 MHz
BTSC	Broadcast Television Standard Committee. Multiplex FM stereo sound system, originating from the USA and used e.g. in LATAM and AP-NTSC countries
CC	Closed Caption
CCC	Continuous Cathode Calibration
ComPair	Computer aided rePair
CRT	Cathode Ray Tube or picture tube
CSM	Customer Service Mode
CTI	Color Transient Improvement: manipulates steepness of chroma transients
CVBS	Composite Video Blanking and Synchronization
CVI	Component Video Input
DAC	Digital to Analogue Converter
DBX	Dynamic Bass Expander or noise reduction system in BTSC
D/K	Monochrome TV system. Sound carrier distance is 6.5 MHz
DFU	Direction For Use: description for the end user
DNR	Dynamic Noise Reduction
DSP	Digital Signal Processing
DST	Dealer Service Tool: special remote control designed for dealers to enter e.g. service mode
DVD	Digital Versatile Disc
EEPROM	Electrically Erasable and Programmable Read Only Memory
EHT	Extra High Tension
EHT-INFO	Extra High Tension information
EPG	Electronic Programming Guide
EU	Europe
EW	East West, related to horizontal deflection of the set
EXT	External (source), entering the set via SCART or Cinch
FBL	Fast Blanking: DC signal accompanying RGB signals
FILAMENT	Filament of CRT
FM	Field Memory or Frequency Modulation
H	Horizontal sync signal
HP	Headphone
I	Monochrome TV system. Sound carrier distance is 6.0 MHz
I2C	Integrated IC bus
IF	Intermediate Frequency

IIC	Integrated IC bus
ITV	Institutional TV
LATAM	Latin American countries like Brazil, Argentina, etc.
LED	Light Emitting Diode
L/L'	Monochrome TV system. Sound carrier distance is 6.5 MHz. L' is Band I, L is all bands except for Band I
LS	Large Screen or Loudspeaker
M/N	Monochrome TV system. Sound carrier distance is 4.5 MHz
NC	Not Connected
NICAM	Near Instantaneous Compounded Audio Multiplexing. This is a digital sound system, mainly used in Europe.
NTSC	National Television Standard Committee. Color system mainly used in North America and Japan. Color carrier NTSC M/N = 3.579545 MHz, NTSC 4.43 = 4.433619 MHz (this is a VCR norm, it is not transmitted off-air)
NVM	Non Volatile Memory: IC containing TV related data e.g. alignments
OB	Option Bit
OC	Open Circuit
OP	Option Byte
OSD	On Screen Display
PAL	Phase Alternating Line. Color system mainly used in West Europe (color carrier = 4.433619 MHz) and South America (color carrier PAL M = 3.575612 MHz and PAL N = 3.582056 MHz)
PCB	Printed Circuit board
PLL	Phase Locked Loop. Used for e.g. FST tuning systems. The customer can give directly the desired frequency
POR	Power-On Reset
PTP	Picture Tube Panel (or CRT-panel)
RAM	Random Access Memory
RC	Remote Control handset
RGB	Red, Green, and Blue video signals
ROM	Read Only Memory
SDAM	Service Default / Alignment Mode
SAP	Second Audio Program
SC	Sandcastle: pulse derived from sync signals
S/C	Short Circuit
SCL	Serial Clock
SDA	Serial Data
SECAM	SEequence Couleur Avec Memoire. Color system mainly used in France and East Europe. Color carriers = 4.406250 MHz and 4.250000 MHz
SIF	Sound Intermediate Frequency
SS	Small Screen
STBY	Standby
SVHS	Super Video Home System
SW	Software
THD	Total Harmonic Distortion
TXT	Teletext
uP	Microprocessor
UOC	Ultimate One Chip
V	Vertical sync signal
V_BAT	Main supply voltage for the deflection stage (mostly 141 V)
V-chip	Violence Chip
VCR	Video Cassette Recorder
WYSIWYR	What You See Is What You Record: record selection that follows main picture and sound
XTAL	Quartz crystal
YC	Luminance (Y) and Chrominance (C) signal

9.11 IC Data Sheets

This section shows the internal block diagrams and pin layouts of ICs that are drawn as "black boxes" in the electrical diagrams (with the exception of "memory" and "logic" ICs).

9.11.1 Diagram F, TDA9887 (IC7201)

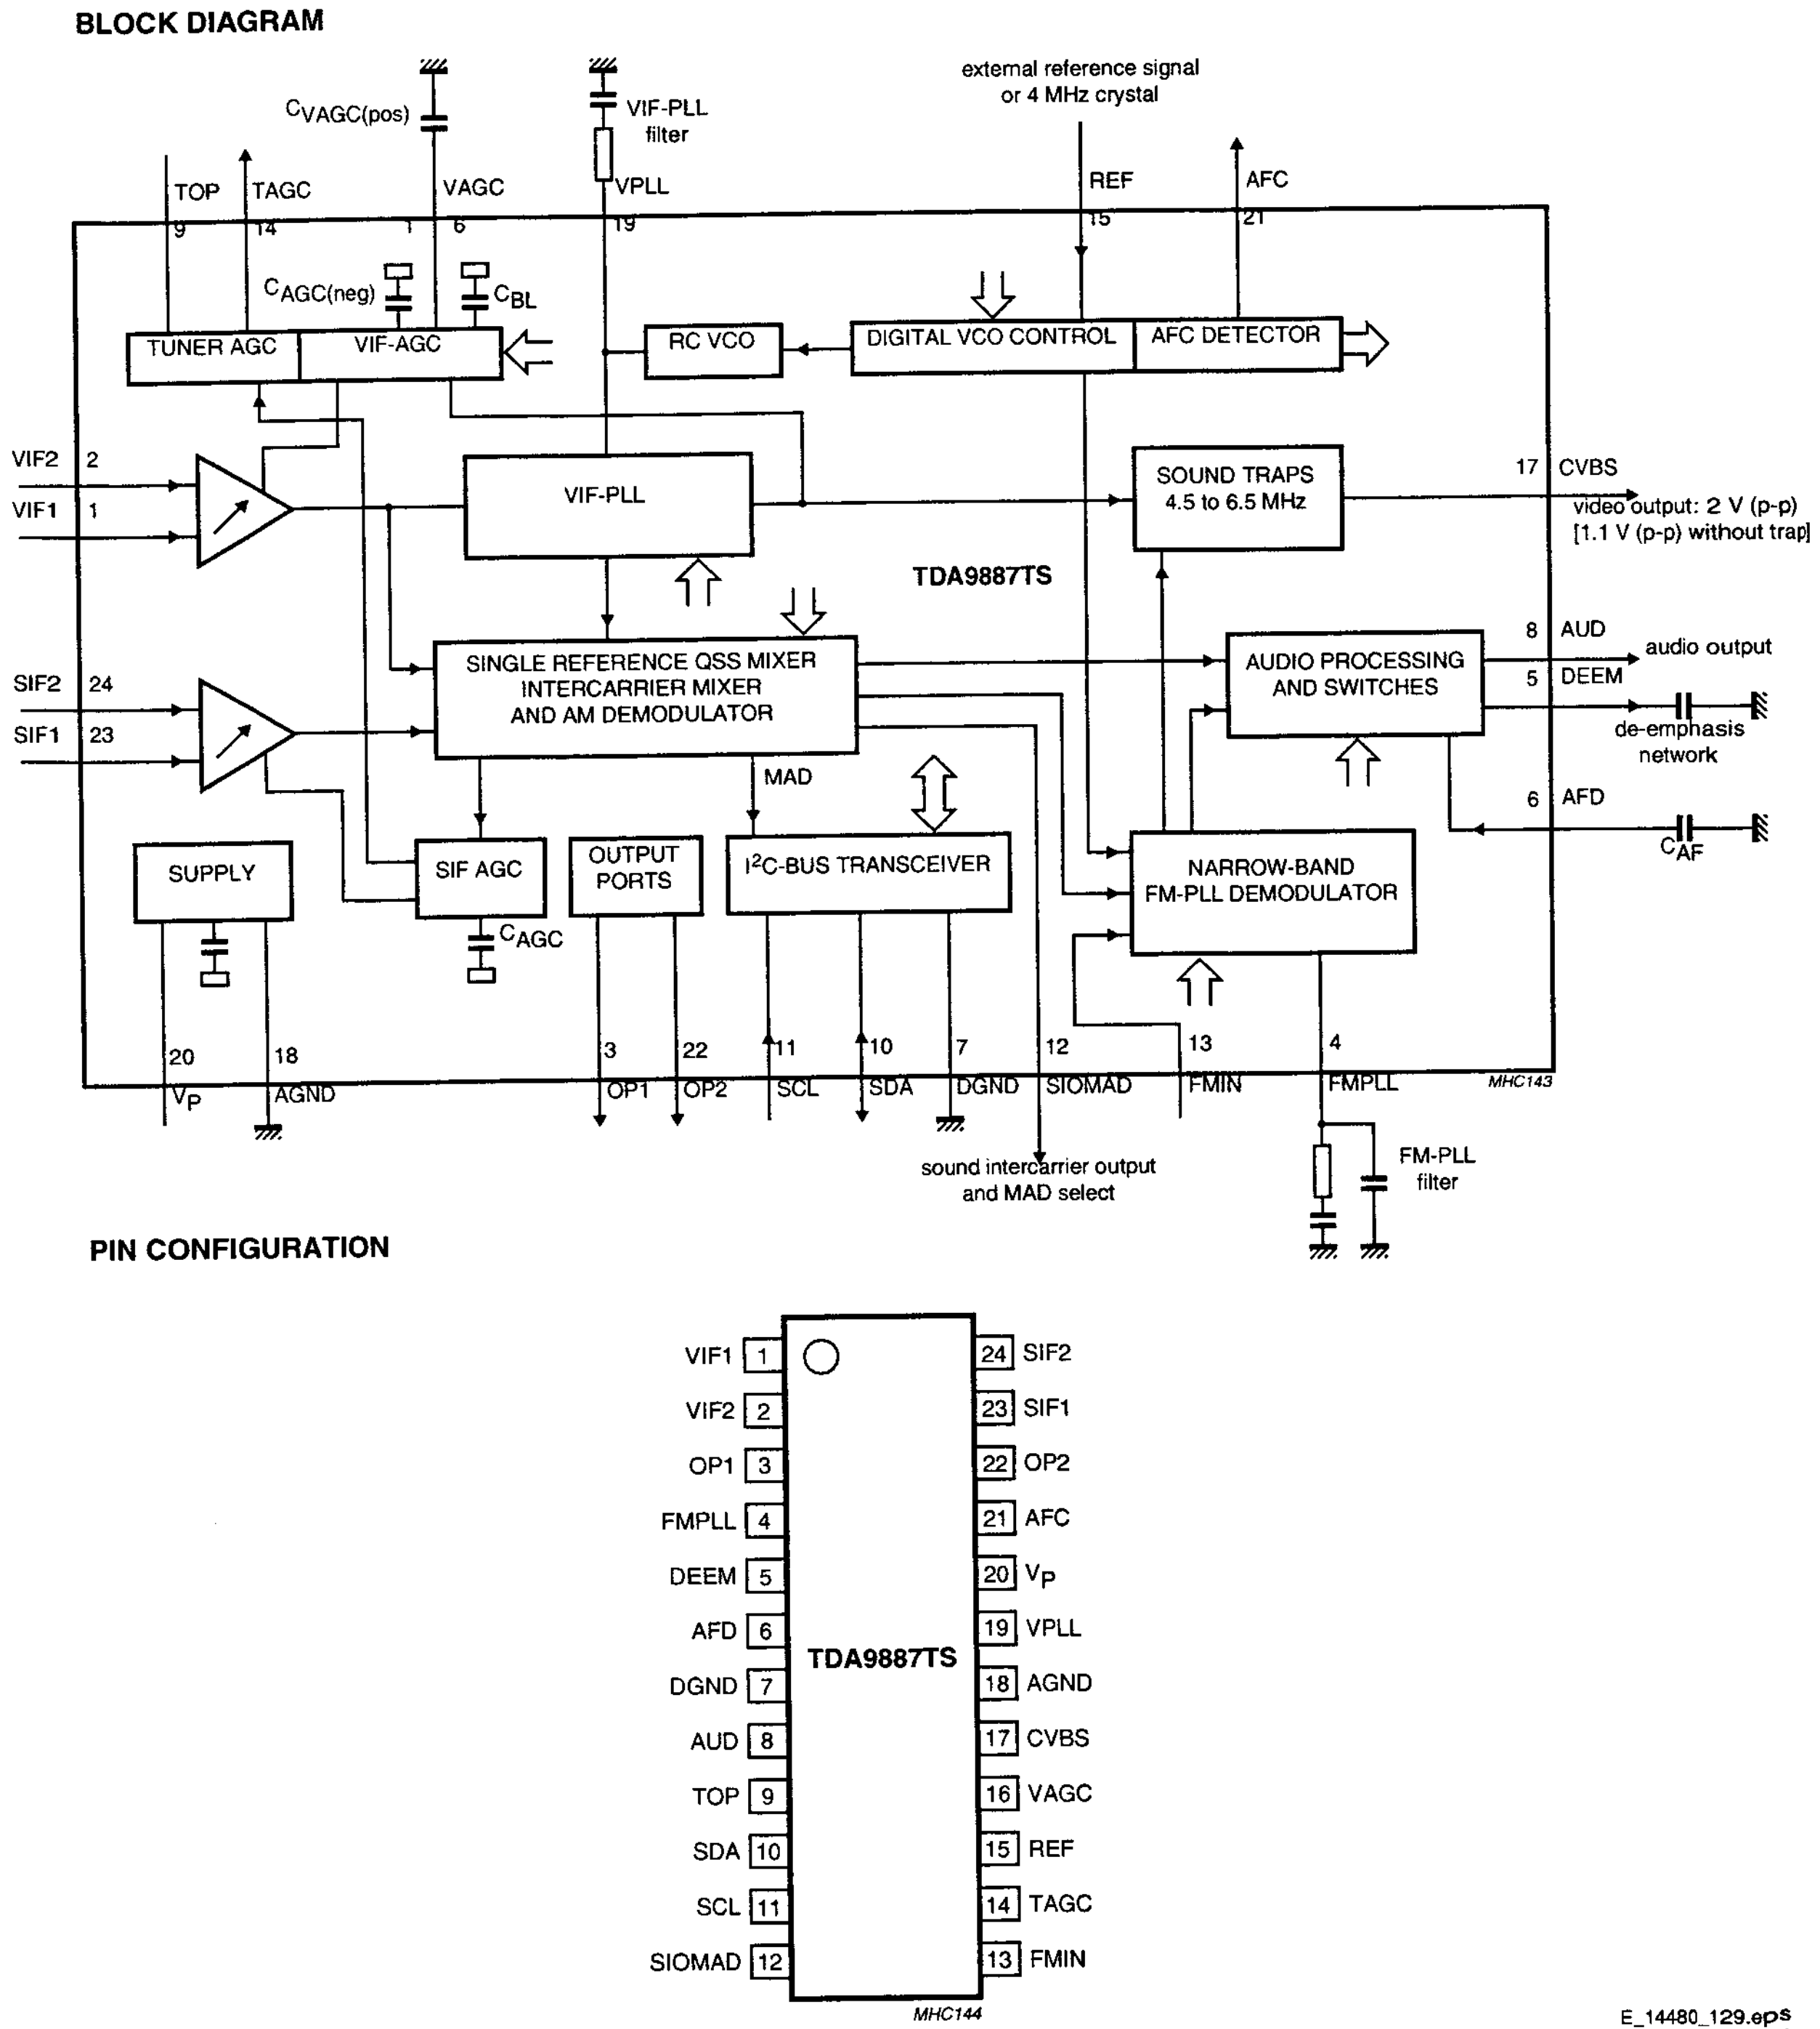
BLOCK DIAGRAM
$C_{VAGC(pos)}$
VIF-PLL filter
external reference signal or 4 MHz crystal
TOP
TAGC
VAGC
VPLL
REF
AFC
9
14
1
6
19
15
21
$C_{AGC(neg)}$
C_{BL}
TUNER AGC
VIF-AGC
RC VCO
DIGITAL VCO CONTROL
AFC DETECTOR
VIF2
VIF1
2
1
VIF-PLL
SOUND TRAPS 4.5 to 6.5 MHz
17
CVBS
video output: 2 V (p-p) [1.1 V (p-p) without trap]
TDA9887TS
SIF2
SIF1
24
23
SINGLE REFERENCE QSS MIXER INTERCARRIER MIXER AND AM DEMODULATOR
AUDIO PROCESSING AND SWITCHES
8
AUD
audio output
5
DEEM
de-emphasis network
6
AFD
C_{AF}
MAD
SUPPLY
SIF AGC
OUTPUT PORTS
I²C-BUS TRANSCEIVER
NARROW-BAND FM-PLL DEMODULATOR
C_{AGC}
20
18
3
22
11
10
7
12
13
4
V_P
AGND
OP1
OP2
SCL
SDA
DGND
SIOMAD
FMIN
FMPLL
MHC143
sound intercarrier output and MAD select
FM-PLL filter
PIN CONFIGURATION
VIF1 1
VIF2 2
OP1 3
FMPLL 4
DEEM 5
AFD 6
DGND 7
AUD 8
TOP 9
SDA 10
SCL 11
SIOMAD 12
24 SIF2
23 SIF1
22 OP2
21 AFC
20 V_P
19 VPLL
18 AGND
17 CVBS
16 VAGC
15 REF
14 TAGC
13 FMIN
TDA9887TS
MHC144

E_14480_129.eps
120504

Figure 9-6 Internal Block Diagram and Pin Configuration

9.11.2 Diagram H, TDA9178 (IC7610)

BLOCK DIAGRAM

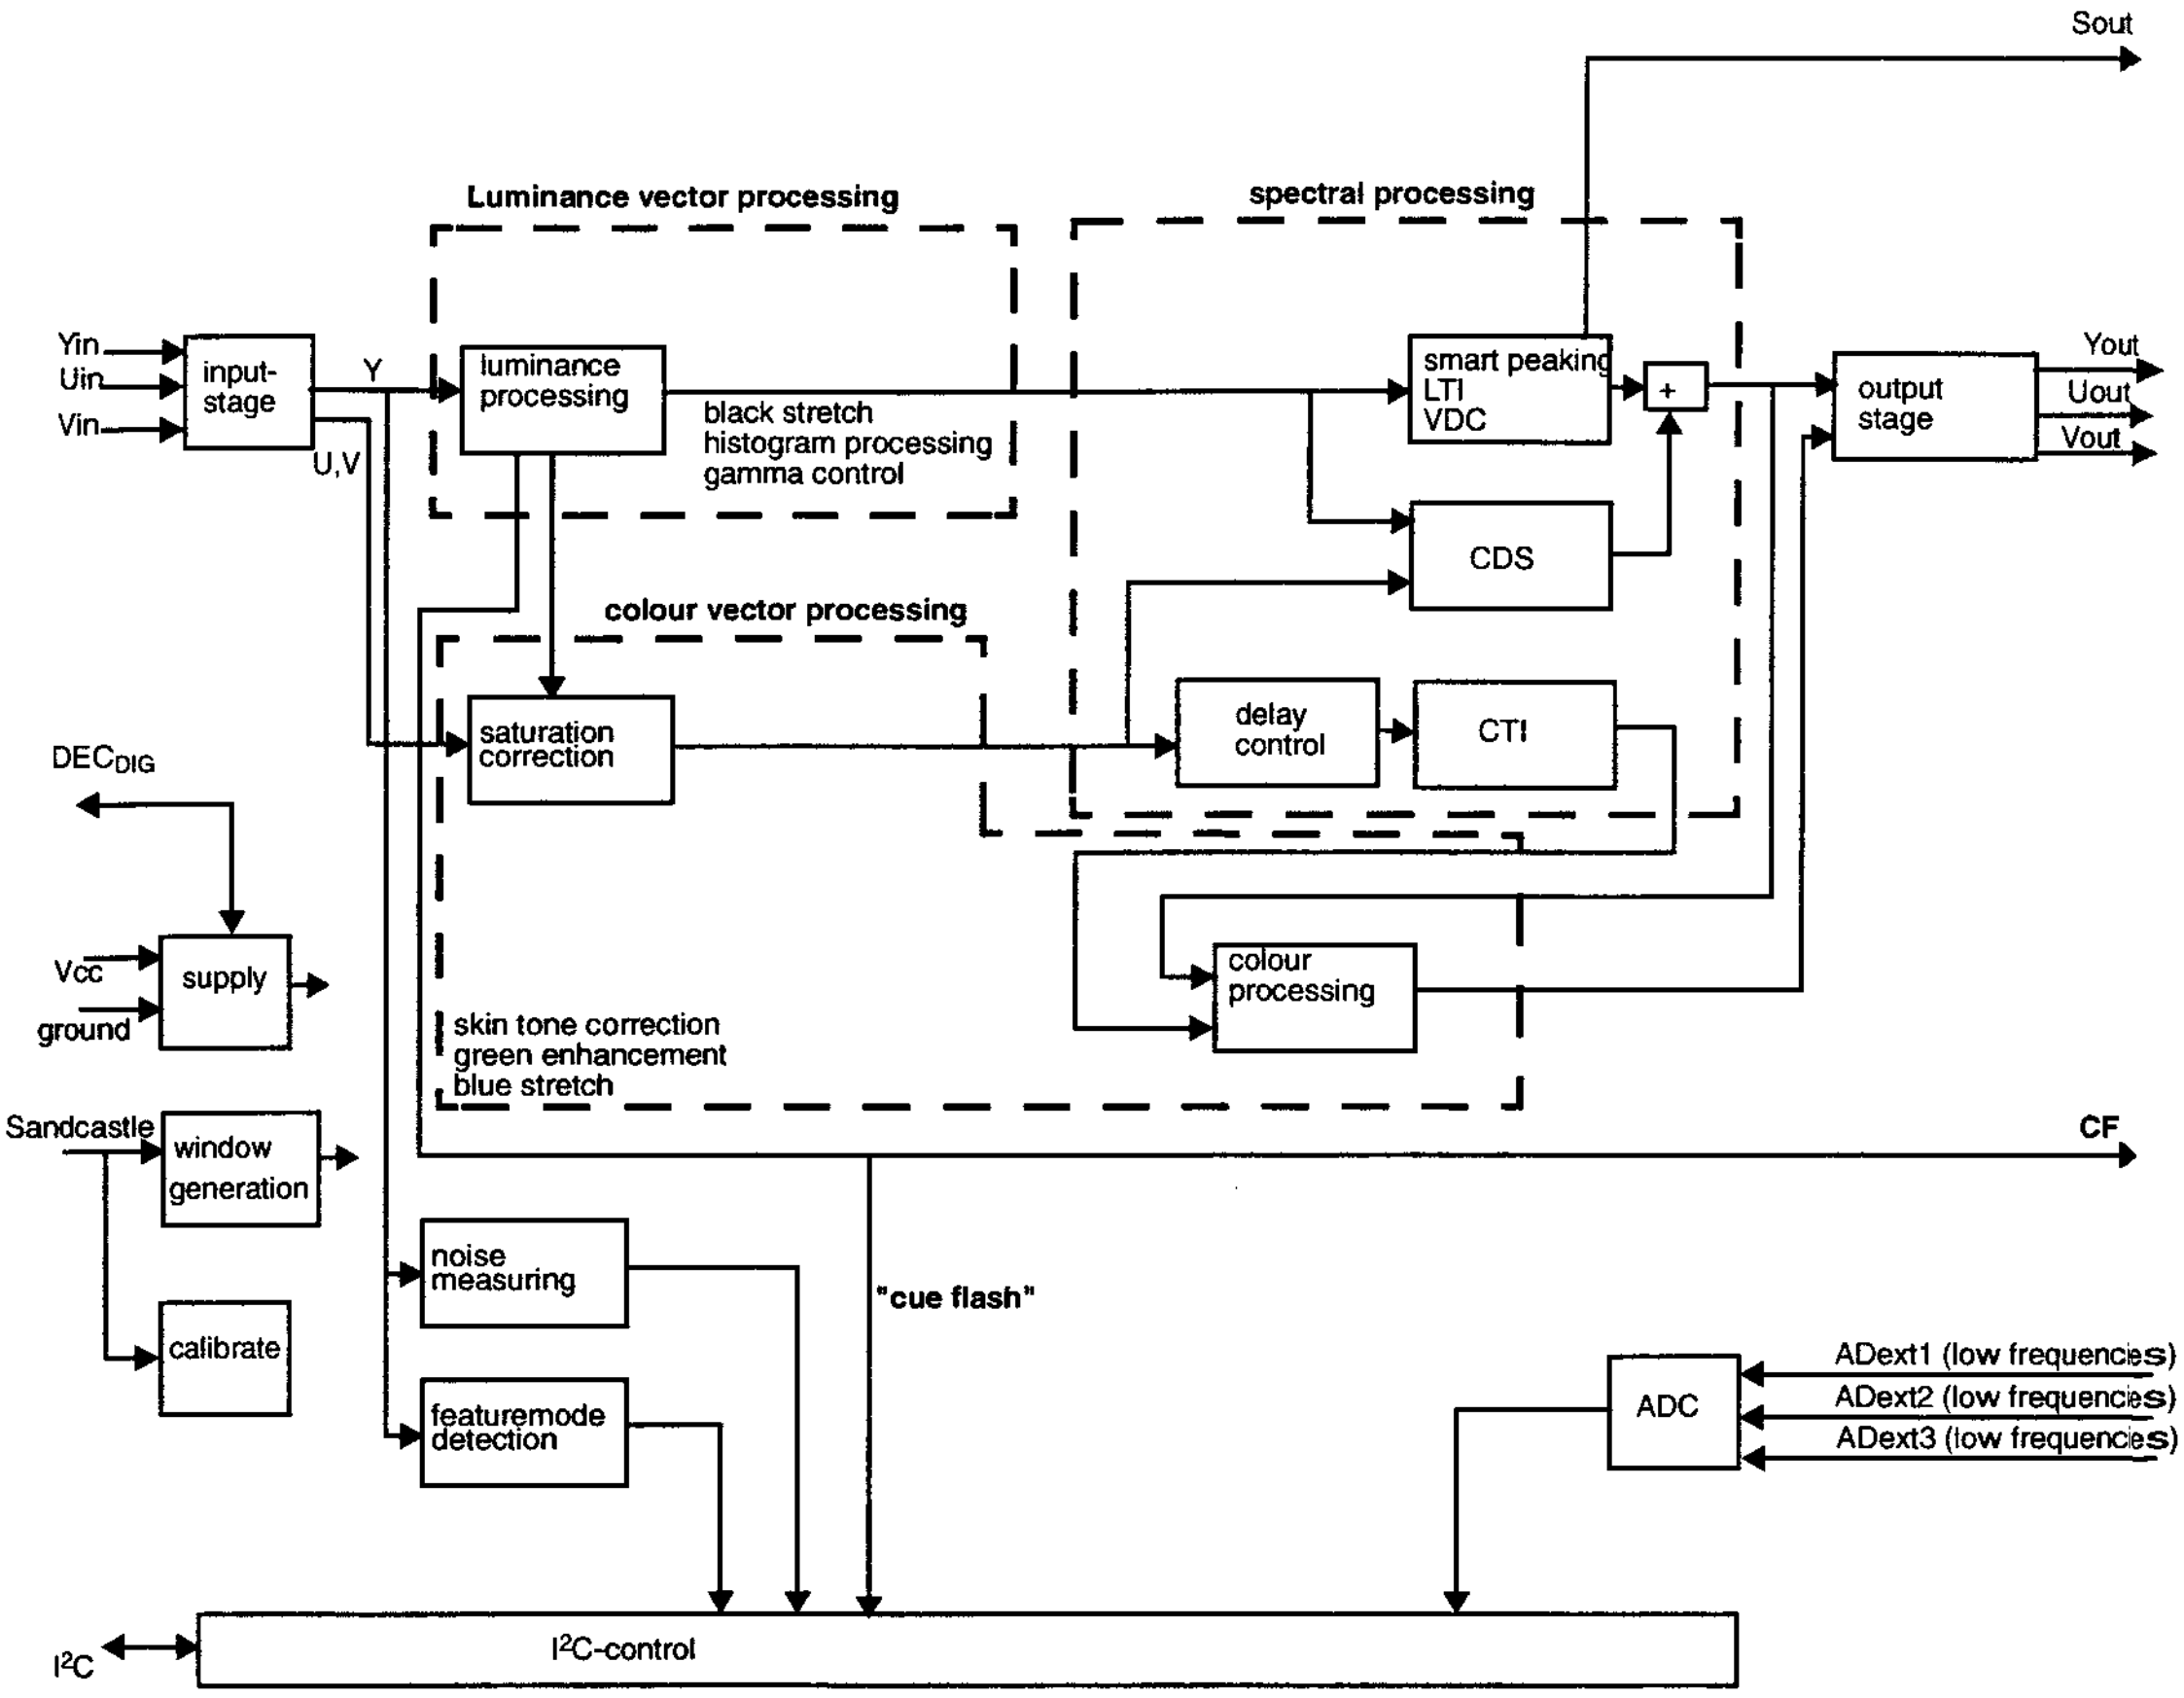
Sout
Luminance vector processing
spectral processing
Yin
Uin
Vin
input-stage
Y
U,V
luminance processing
black stretch
histogram processing
gamma control
smart peaking
LTI
VDC
+
output stage
Yout
Uout
Vout
CDS
colour vector processing
saturation correction
delay control
CTI
DECDIG
Vcc
ground
supply
colour processing
skin tone correction
green enhancement
blue stretch
Sandcastle
window generation
calibrate
CF
noise measuring
"cue flash"
featuremode detection
ADC
ADext1 (low frequencies)
ADext2 (low frequencies)
ADext3 (low frequencies)
I2C
I2C-control

PIN CONFIGURATION

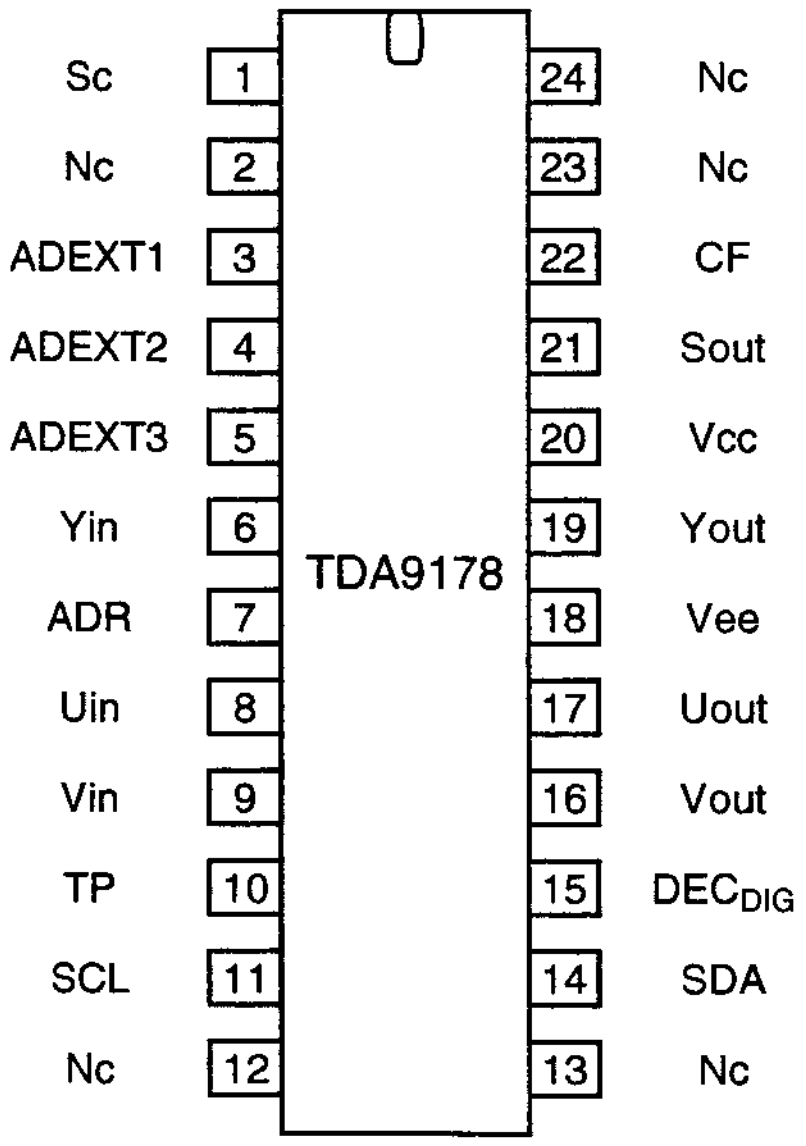
Sc 1
Nc 2
ADEXT1 3
ADEXT2 4
ADEXT3 5
Yin 6
ADR 7
Uin 8
Vin 9
TP 10
SCL 11
Nc 12
24 Nc
23 Nc
22 CF
21 Sout
20 Vcc
19 Yout
18 Vee
17 Uout
16 Vout
15 DECDIG
14 SDA
13 Nc
TDA9178

E_14480_075.eps
270204

Figure 9-7 Internal Block Diagram and Pin Configuration

10. Spare Parts List

Set Level

Various

0041	3139 124 32221	Lens
0291	3111 254 23481	Coil
8278	3104 311 03391	Cable 4P 1000mm
8278▲	3104 311 03841	Cable 4P

—∿—

5203▲	2422 549 45514	S100245 CU B

Mono Carrier [A]

Various

0041	3139 124 41421	Lens
1001	2422 549 44341	38.9 MHz
1002	4822 242 81436	Filter OFWK3953M
1005	4822 267 10748	Connector 3p
1204	4822 265 41113	7P
1205	2422 543 01421	Crystal 24.576Mhz
1206	2422 025 11244	Connector 7p m
1207	2422 025 11244	Connector 7p m
1212	2422 025 16052	12P Female
1280	4822 267 10734	Connector 5p
1401	4822 265 30735	Connector 5p
1404▲	4822 267 10966	Connector 2p
1451▲	2422 025 10646	Connector 2p m
1452▲	4822 071 51252	Fuse 1.25A
1454▲	4822 071 51252	Fuse 1.25A
1500▲	2422 086 10914	Fuse 4A 250V
1501	2422 090 01101	Soc Fuse 1P Female
1502	2422 090 01101	Soc Fuse 1P Female
1503▲	2422 132 07467	Relay 1p 12V 5A LKS1AF
1504	4822 267 10774	Connector 2p male (red)
1505	4822 265 20723	Connector 2p
1506▲	2422 128 03111	Switch
1600	4822 276 13775	Switch
1601	4822 276 13775	Switch
1602	4822 276 13775	Switch
1603	4822 276 13775	Switch
1682	2422 025 16382	Connector 3p m
1684	3139 131 04162	Cable 3P 100mm
1693	2422 025 12482	Connector 6p m
1729	4822 267 10735	Connector 3p
1734	2422 026 05466	Soc cinch 2P
1763	3139 131 03952	CABLE SIN 280mm
8204	3139 131 03591	Cable 7p 560mm
8401	3139 121 09041	Cable 5p 560mm

—⊣⊢—

2001	4822 122 33761	22pF 5% 50V
2002	4822 122 33761	22pF 5% 50V
2003	5322 126 11583	10nF 10% 50V 0603
2004	3198 024 44730	47nF 50V 0603
2005	4822 124 40769	4.7µF 20% 100V
2006	4822 124 80791	470µF 20% 16V
2007	2238 586 59812	100nF 20% 50V 0603
2008	2038 035 21307	68µ 25V
2008	4822 124 40433	47µF 20% 25V
2009	2238 586 59812	100nF 20% 50V 0603
2013	4822 122 33741	10pF 10% 50V
2014	3198 016 31020	1nF 25V 0603
2016	3198 016 31020	1nF 25V 0603
2203	4822 124 41584	100µF 20% 10V
2204	2238 916 15641	22nF 10% 25V 0603
2205	4822 126 13879	220nF +80-20% 16V
2206	4822 126 13879	220nF +80-20% 16V
2207	4822 126 13879	220nF +80-20% 16V
2208	4822 126 13879	220nF +80-20% 16V
2209	4822 126 13879	220nF +80-20% 16V
2210	4822 126 13879	220nF +80-20% 16V
2211	4822 126 13879	220nF +80-20% 16V
2212	4822 126 13879	220nF +80-20% 16V
2213	4822 126 13879	220nF +80-20% 16V
2214	2238 586 59812	100nF 20% 50V 0603
2215	4822 126 13879	220nF +80-20% 16V
2216	4822 126 13879	220nF +80-20% 16V
2217	4822 124 40207	100µF 20% 25V
2218	4822 124 40433	47µF 20% 25V
2222	2238 586 15633	5.6nF 50V
2223	2238 586 59812	100nF 20% 50V 0603
2224	4822 124 40207	100µF 20% 25V
2225	4822 126 13879	220nF +80-20% 16V
2226	4822 126 13879	220nF +80-20% 16V
2229	4822 126 13879	220nF +80-20% 16V
2230	4822 124 40769	4.7µF 20% 100V
2231	2238 586 59812	100nF 20% 50V 0603
2232	2238 586 59812	100nF 20% 50V 0603
2233	2238 586 59812	100nF 20% 50V 0603
2234	4822 124 40207	100µF 20% 25V
2235	5322 126 11582	6.8nF 10% 63V
2236	5322 126 11583	10nF 10% 50V 0603
2237	2238 586 59812	100nF 20% 50V 0603
2238	4822 126 13879	220nF +80-20% 16V
2239	4822 126 13879	220nF +80-20% 16V
2240	4822 124 41631	1.5µF 50V
2241	2238 916 15641	22nF 10% 25V 0603
2242	2238 586 59812	100nF 20% 50V 0603
2243	2238 586 59812	100nF 20% 50V 0603
2244	4822 126 14491	2.2µF 10V 0805
2245	3198 016 31020	1nF 25V 0603
2246	2238 586 59812	100nF 20% 50V 0603
2247	2238 586 59812	100nF 20% 50V 0603
2248	3198 016 31020	1nF 25V 0603
2249	2238 586 59812	100nF 20% 50V 0603
2250	4822 124 40207	100µF 20% 25V
2251	2022 318 00212	150nF 50V
2252	5322 126 11583	10nF 10% 50V 0603
2253	5322 126 11583	10nF 10% 50V 0603
2254	5322 126 11578	1nF 10% 50V 0603
2255	5322 126 11583	10nF 10% 50V 0603
2256	2238 586 59812	100nF 20% 50V 0603
2257	5322 126 11579	3.3nF 10% 63V
2260	2238 586 59812	100nF 20% 50V 0603
2261	2238 586 59812	100nF 20% 50V 0603
2262	5322 126 11583	10nF 10% 50V 0603
2263	2238 586 59812	100nF 20% 50V 0603
2264	4822 126 14249	560pF 10% 50V 0603
2265	4822 124 40207	100µF 20% 25V
2266	4822 126 14491	2.2µF 10V 0805
2267	4822 126 14491	2.2µF 10V 0805
2268	4822 122 33741	10pF 10% 50V
2269	4822 122 33741	10pF 10% 50V
2270	5322 126 11578	1nF 10% 50V 0603
2271	5322 126 11578	1nF 10% 50V 0603
2272	2238 586 59812	100nF 20% 50V 0603
2273	4822 124 40207	100µF 20% 25V
2274	2238 586 59812	100nF 20% 50V 0603
2275	4822 124 40248	10µF 20% 63V
2276	4822 126 14585	100nF 10% 0805 50V
2279	2020 552 94427	100pF 5% 50V
2280	3198 017 41050	1µF 10V 0603
2282	5322 126 11578	1nF 10% 50V 0603
2288	5322 126 11578	1nF 10% 50V 0603
2289	5322 126 11578	1nF 10% 50V 0603
2290	3198 017 41050	1µF 10V 0603
2404	4822 124 11936	47µF 20% 160V
2406▲	4822 126 13185	680pF 10% 500V
2408	2020 552 94427	100pF 5% 50V
2409	2238 586 59812	100nF 20% 50V 0603
2410	4822 126 14585	100nF 10% 0805 50V
2411▲	4822 126 12263	220pF 10% 2kV
2412▲	4822 121 70637	8.2nF 5% 1600V
2413▲	4822 121 70365	39nF 10% 400V
2414	3198 017 41050	1µF 10V 0603
2415	2022 031 00172	2.2µF 160V
2418▲	2222 479 90016	270nF 5% 250V
2419	2222 468 90324	2.2µF 100V
2420	3198 017 41050	1µF 10V 0603
2425	3198 017 33330	33nF 20% 16V 0603
2427	4822 121 51305	15nF 10% 50V
2428	3198 017 33330	33nF 20% 16V 0603
2451	2222 365 85154	150nF 10% 100V
2453	4822 126 14043	1µF +80-20% 16V 0805
2454	4822 124 80791	470µF 20% 16V
2456	4822 122 32542	47nF 10% 63V
2457	2022 031 00137	4.7µF 20% 250V
2459▲	4822 122 31177	470pF 10% 500V
2460	2022 031 00139	470µF 20% 16V
2461	3198 016 31020	1nF 25V 0603
2462	3198 016 31020	1nF 25V 0603
2463	2020 021 91677	100µF 20% 50V
2464	4822 126 13881	470pF 5% 50V
2465	5322 124 40641	10µF 20% 100V
2467	4822 121 70162	10nF 5% 400V
2468	4822 126 13883	220pF 5% 50V
2469	4822 126 13879	220nF +80-20% 16V
2470	2222 601 55649	100nF 10% 100V 1206
2486	2252 508 08255	27pF 500V
2487	5322 126 10465	3.9nF 10% 50V
2488	2020 557 00002	33pF 200V
2489	5322 126 11583	10nF 10% 50V 0603
2490	4822 122 32542	47nF 10% 63V
2493	4822 124 81151	22µF 50V
2500▲	2022 330 00053	470nF 275V
2503▲	4822 126 14153	2.2nF 10% 1kV
2504▲	4822 126 14153	2.2nF 10% 1kV
2505	2020 024 90771	220µF 20% 400V
2508▲	2022 330 00049	100nF 275V
2509▲	2252 811 95022	1.5nF 20% 250V
2511	4822 124 81151	22µF 50V
2512	2238 586 59812	100nF 20% 50V 0603
2513	4822 126 13881	470pF 5% 50V
2514▲	4822 126 13862	1.5nF 10% 2kV
2515	4822 126 13881	470pF 5% 50V
2516	2238 586 59812	100nF 20% 50V 0603
2517	5322 126 11578	1nF 10% 50V 0603
2528	4822 121 51252	470nF 5% 63V
2530	2020 557 00005	330pF 100V
2531	4822 126 13881	470pF 5% 50V
2532	2020 552 96823	10µF 16V
2533	4822 126 13193	4.7nF 10% 63V
2534	2020 558 90261	68pF 1kV
2535	4822 124 40184	1000µF 20% 10V
2536	2020 012 93728	2200µF 20% 10V
2538	4822 126 13881	470pF 5% 50V
2539▲	4822 122 31177	470pF 10% 500V
2541	4822 124 40433	47µF 20% 25V
2542▲	2252 811 95021	1nF 10% 250V
2543▲	4822 126 10206	2.2nF 10% 500V
2549	2020 552 94427	100pF 5% 50V
2550	2020 557 00002	33pF 200V
2551▲	4822 126 13449	1nF 10% 2kV
2552	2022 031 00165	100µF 160V
2553	4822 126 14508	180pF 5% 50V 0603
2561▲	4822 122 31175	1nF 10% 500V
2562	4822 124 12417	2200µF 20% 25V
2562	4822 124 80061	1000µF 20% 25V
2563	4822 124 12417	2200µF 20% 25V
2563	4822 124 80061	1000µF 20% 25V
2564	4822 126 14585	100nF 10% 0805 50V
2565▲	4822 122 31175	1nF 10% 500V
2570▲	2252 811 95017	470pF 10% 250V
2571	3198 017 31530	15nF 20% 50V 0603
2572	5322 126 11583	10nF 10% 50V 0603
2573	2020 552 96683	220nF 10% 50V
2601	3198 016 31020	1nF 25V 0603
2611	4822 124 40433	47µF 20% 25V
2617	2238 586 59812	100nF 20% 50V 0603
2620	2238 586 59812	100nF 20% 50V 0603
2621	4822 124 40207	100µF 20% 25V
2622	2222 867 15339	33pF 5% 50V 0603
2623	2238 586 59812	100nF 20% 50V 0603
2624	4822 124 40207	100µF 20% 25V
2625	2022 552 05615	2.2µF 10% 6.3V 0805
2630	4822 051 30008	Jumper 0603
2631	4822 124 41796	22µF 20% 16V
2691	4822 124 40196	220µF 20% 16V
2702	4822 126 14241	330pF 0603 50V
2703	4822 124 40248	10µF 20% 63V
2705	4822 126 14241	330pF 0603 50V
2706	4822 126 14491	2.2µF 10V 0805
2708	4822 126 14241	330pF 0603 50V
2709	4822 124 40248	10µF 20% 63V
2711	4822 126 14241	330pF 0603 50V
2712	4822 126 14491	2.2µF 10V 0805
2732	4822 126 14241	330pF 0603 50V
2733	4822 124 40248	10µF 20% 63V
2735	4822 126 14241	330pF 0603 50V
2736	3198 017 41050	1µF 10V 0603
2738	4822 126 14241	330pF 0603 50V
2739	4822 124 40248	10µF 20% 63V
2741	4822 126 14241	330pF 0603 50V
2742	3198 017 41050	1µF 10V 0603
2751	4822 126 14241	330pF 0603 50V
2752	4822 124 40248	10µF 20% 63V
2753	4822 126 14241	330pF 0603 50V
2754	4822 124 40248	10µF 20% 63V
2755	5322 126 11579	3.3nF 10% 63V
2756	5322 126 11579	3.3nF 10% 63V
2759	2222 867 15339	33pF 5% 50V 0603
2760	2238 586 59812	100nF 20% 50V 0603
2917	3198 032 27190	100µF 6.3V
2985	4822 126 14508	180pF 5% 50V 0603
2986	2238 586 59812	100nF 20% 50V 0603
2987	2238 586 59812	100nF 20% 50V 0603
2988	2238 586 59812	100nF 20% 50V 0603
2989	3198 017 41050	1µF 10V 0603
2990	4822 126 14241	330pF 0603 50V
2991	4822 126 14508	180pF 5% 50V 0603

2992	3198 017 41050	1µF 10V 0603
2993	4822 126 14241	330pF 0603 50V
2994	2238 916 15641	22nF 10% 25V 0603
2995	2238 916 15641	22nF 10% 25V 0603
2996	3198 024 44730	47nF 50V 0603
2997	3198 024 44730	47nF 50V 0603

-WW-

3002	4822 051 30103	10kΩ 5% 0.062W
3003	4822 051 30223	22kΩ 5% 0.062W
3005	4822 051 30101	100Ω 5% 0.062W
3006	4822 051 30103	10kΩ 5% 0.062W
3007	4822 051 30222	2.2kΩ 5% 0.062W
3008	4822 051 30682	6.8Ω 5% 0.062W
3009	4822 051 30222	2.2kΩ 5% 0.062W
3010	4822 051 30331	330Ω 5% 0.062W
3014	4822 051 30102	1kΩ 5% 0.062W
3016	4822 117 13632	100kΩ 1% 0603 0.62W
3018	4822 051 30221	220Ω 5% 0.062W
3019	4822 051 30154	150kΩ 5% 0.062W
3201	4822 050 11002	1kΩ 1% 0.4W
3202	4822 051 30332	3.3Ω 5% 0.062W
3203	4822 051 30154	150kΩ 5% 0.062W
3204	4822 051 30332	3.3Ω 5% 0.062W
3205	4822 051 30102	1kΩ 5% 0.062W
3206	4822 051 30562	5.6kΩ 5% 0.063W 0603
3207	4822 051 30109	10Ω 5% 0.062W
3208	4822 051 30273	27kΩ 5% 0.062W
3209	4822 117 12917	1Ω 5% 0.062W
3210	4822 117 12917	1Ω 5% 0.062W
3211	4822 051 30273	27kΩ 5% 0.062W
3212	4822 051 30101	100Ω 5% 0.062W
3214	4822 051 30109	10Ω 5% 0.062W
3215	4822 116 52283	4.7kΩ 5% 0.5W
3216	4822 051 30109	10Ω 5% 0.062W
3217	4822 051 30103	10kΩ 5% 0.062W
3218	4822 051 30101	100Ω 5% 0.062W
3219	4822 051 30103	10kΩ 5% 0.062W
3220	4822 051 30151	150Ω 5% 0.062W
3221	4822 051 30271	270Ω 5% 0.062W
3222	4822 051 30331	330Ω 5% 0.062W
3224	4822 116 52298	680k 5% 0.5W
3225	4822 051 30471	47Ω 5% 0.062W
3226	4822 051 30101	100Ω 5% 0.062W
3227	4822 051 30101	100Ω 5% 0.062W
3228	4822 051 30101	100Ω 5% 0.062W
3229	4822 051 30152	1.5Ω 5% 0.062W
3230	4822 116 52175	100Ω 5% 0.5W
3231	4822 116 52175	100Ω 5% 0.5W
3232	4822 051 30562	5.6kΩ 5% 0.063W 0603
3233	4822 051 30101	100Ω 5% 0.062W
3234	4822 116 52175	100Ω 5% 0.5W
3235	4822 051 30102	1kΩ 5% 0.062W
3236	4822 051 30101	100Ω 5% 0.062W
3237	4822 051 30102	1kΩ 5% 0.062W
3238	4822 051 30472	4.7Ω 5% 0.062W
3239	4822 116 52263	2.7kΩ 5% 0.5W
3240	4822 051 30223	22kΩ 5% 0.062W
3241	4822 050 23903	39k 1% 0.6W
3242	4822 117 12925	47kΩ 1% 0.063W 0603
3244	4822 051 30101	100Ω 5% 0.062W
3247	4822 051 30391	390Ω 5% 0.062W
3248	4822 051 30101	100Ω 5% 0.062W
3249	4822 116 52175	100Ω 5% 0.5W
3250	4822 051 30222	2.2kΩ 5% 0.062W
3251	4822 051 30123	12kΩ 5% 0.1W
3253	4822 051 30101	100Ω 5% 0.062W
3255	4822 051 30101	100Ω 5% 0.062W
3256	4822 051 30101	100Ω 5% 0.062W
3257	4822 051 30101	100Ω 5% 0.062W
3258	4822 116 52175	100Ω 5% 0.5W
3260	4822 116 52175	100Ω 5% 0.5W
3261	4822 051 30472	4.7Ω 5% 0.062W
3262	4822 051 30101	100Ω 5% 0.062W
3263	4822 051 30101	100Ω 5% 0.062W
3265	4822 051 30101	100Ω 5% 0.062W
3266	4822 051 30101	100Ω 5% 0.062W
3267	4822 051 30101	100Ω 5% 0.062W
3269	4822 051 30101	100Ω 5% 0.062W
3270	4822 116 52219	330Ω 5% 0.5W
3271	4822 051 30101	100Ω 5% 0.062W
3272	4822 117 12968	820Ω 5% 0.62W
3273	4822 051 30102	1kΩ 5% 0.062W
3274	4822 116 52175	100Ω 5% 0.5W
3275	4822 116 52175	100Ω 5% 0.5W
3276	4822 116 52175	100Ω 5% 0.5W
3277	4822 116 52175	100Ω 5% 0.5W
3278	4822 116 52175	100Ω 5% 0.5W
3279	4822 051 30472	4.7Ω 5% 0.062W
3280	4822 051 30472	4.7Ω 5% 0.062W
3282	4822 051 30472	4.7Ω 5% 0.062W
3283	4822 051 30472	4.7Ω 5% 0.062W
3284	4822 051 30472	4.7Ω 5% 0.062W
3285	4822 051 30102	1kΩ 5% 0.062W
3287	4822 051 30101	100Ω 5% 0.062W
3289	4822 051 30101	100Ω 5% 0.062W
3291	4822 050 11002	1kΩ 1% 0.4W
3292	4822 117 12925	47kΩ 1% 0.063W 0603
3293	4822 051 30273	27kΩ 5% 0.062W
3295	5322 117 13056	8.2kΩ 1% 0.063W 0603
3296	4822 051 30562	5.6kΩ 5% 0.063W 0603
3297	4822 051 30223	22kΩ 5% 0.062W
3298	4822 051 30101	100Ω 5% 0.062W
3401	4822 050 24703	47kΩ 1% 0.6W
3402	4822 050 11002	1kΩ 1% 0.4W
3404▲	4822 117 11151	1Ω 5%
3412	4822 050 11002	1kΩ 1% 0.4W
3414	2322 194 63109	10Ω 5% 2W
3415	4822 116 52175	100Ω 5% 0.5W
3416	4822 051 30479	47Ω 5% 0.062W
3417	4822 053 11153	15kΩ 5% 2W
3418	4822 116 52175	100Ω 5% 0.5W
3419	4822 051 30682	6.8Ω 5% 0.062W
3420	4822 117 10833	10kΩ 1% 0.1W
3422▲	4822 117 11151	1Ω 5%
3423▲	4822 117 11151	1Ω 5%
3425	4822 050 21004	100kΩ 1% 0.6W
3427	4822 117 11449	2.2kΩ 5% 0.1W 0805
3428	4822 051 20332	2.3kΩ 5% 0.1W
3430	4822 053 20334	330kΩ 5% 0.25W
3431	4822 050 28203	82kΩ 1% 0.6W
3432	4822 053 11159	15Ω 5% 2W
3433	4822 050 21008	1Ω 1% 0,6W
3434	4822 050 21008	1Ω 1% 0,6W
3440	4822 116 52226	560Ω 5% 0.5W
3441	4822 053 20334	330kΩ 5% 0.25W
3442	3198 013 04720	4.7kΩ 0.5W
3443	3198 013 04720	4.7kΩ 0.5W
3445	4822 051 20479	47kΩ 5% 0.1W
3446	4822 051 30101	100Ω 5% 0.062W
3447	4822 116 52269	3.3kΩ 5% 0.5W
3451	4822 050 21204	120kΩ 1% 0,6W
3452	4822 051 30183	18kΩ 5% 0.062W
3453	4822 051 30333	33kΩ 5% 0.062W
3454	4822 116 83884	47kΩ 5% 0.5W
3456▲	4822 117 11151	1Ω 5%
3458▲	4822 052 11478	4.7Ω 5% 0.5W
3459▲	4822 117 11151	1Ω 5%
3460	4822 116 52256	2.2kΩ 5% 0.5W
3461	4822 116 52256	2.2kΩ 5% 0.5W
3462	4822 051 30222	2.2kΩ 5% 0.062W
3463	4822 051 30102	1kΩ 5% 0.062W
3464	4822 051 30391	390Ω 5% 0.062W
3465	4822 051 30391	390Ω 5% 0.062W
3466▲	4822 052 11108	1Ω 5% 0.5W
3467	4822 116 83872	220Ω 5% 0.5W
3468	4822 116 83872	220Ω 5% 0.5W
3469	4822 051 30102	1kΩ 5% 0.062W
3470	4822 116 52186	22Ω 5% 0.5W
3471	4822 050 23308	3.3Ω 1% 0.6W
3472	4822 050 23908	3.9Ω 1% 0.6W
3473	4822 051 30474	470kΩ 5% 0.062W
3474	4822 051 30153	15kΩ 5% 0.062W
3475	5322 117 13056	8.2kΩ 1% 0.063W 0603
3484▲	4822 052 10108	1Ω 5% 0.33W
3485▲	4822 052 10108	1Ω 5% 0.33W
3489	4822 051 20479	47kΩ 5% 0.1W
3490	4822 051 30223	22kΩ 5% 0.062W
3491	4822 117 12864	82kΩ 5% 0.6W
3493	4822 051 30222	2.2kΩ 5% 0.062W
3495	4822 051 20334	330kΩ 5% 0.1W
3497▲	4822 052 11338	3.3Ω 5% 0,5W
3498	4822 051 30472	4.7Ω 5% 0.062W
3499	4822 051 20684	680kΩ 5% 0.1W
3500▲	4822 053 21335	3.3MΩ 5% 0.5W
3501▲	4822 053 21335	3.3MΩ 5% 0.5W
3502	4822 116 83872	220Ω 5% 0.5W
3503	4822 252 11215	DSP301N-A21F
3504▲	4822 053 21155	1.5MΩ 5% 0.5W
3505▲	2122 550 00171	1mΩ 612V
3506▲	4822 053 21335	3.3MΩ 5% 0.5W
3507▲	2122 663 00021	9Ω 265V
3510▲	2122 612 00055	4.7Ω 3W
3511	4822 050 24708	4.7Ω 1% 0.6W
3512	4822 117 11817	1.2kΩ 1% 0.0625W
3513▲	4822 052 10222	2.2kΩ 5% 0.33W
3514▲	4822 052 10479	47Ω 5% 0.33W
3515	4822 050 11002	1kΩ 1% 0.4W
3516	4822 116 83303	0.1Ω 2W
3517	2322 704 63004	300KΩ
3518	4822 051 30332	3.3Ω 5% 0.062W
3519	4822 116 52244	15kΩ 5% 0.5W
3520	4822 117 11342	0.33Ω 5% 2W
3521	4822 116 52269	3.3kΩ 5% 0.5W
3522	4822 051 30563	56kΩ 5% 0.062W
3524	4822 117 12925	47kΩ 1% 0.063W 0603
3527	4822 117 12925	47kΩ 1% 0.063W 0603
3528	4822 051 20105	1MΩ 5% 0.1W
3529	4822 053 20225	2.2MΩ 5% 0.25W
3530	4822 051 30221	220Ω 5% 0.062W
3531	4822 116 52234	100kΩ 5% 0.5W
3532▲	4822 052 10478	4.7Ω 5% 0.33W
3533	5322 117 13056	8.2kΩ 1% 0.063W 0603
3534	4822 116 52175	100Ω 5% 0.5W
3537	4822 051 30222	2.2kΩ 5% 0.062W
3538	4822 051 20188	1.8Ω 5% 0.1W
3541	4822 117 12925	47kΩ 1% 0.063W 0603
3563	4822 116 83872	220Ω 5% 0.5W
3565	4822 051 30153	15kΩ 5% 0.062W
3571	4822 116 83872	220Ω 5% 0.5W
3572	4822 051 30221	220Ω 5% 0.062W
3573	4822 051 30153	15kΩ 5% 0.062W
3574	4822 116 52245	150kΩ 5% 0.5W
3575	4822 050 28203	82kΩ 1% 0.6W
3576	5322 117 13026	4.7kΩ 1% 0.063W 0603
3577	4822 116 52243	1.5kΩ 5% 0.5W
3578	4822 051 30471	47Ω 5% 0.062W
3579	4822 051 30222	2.2kΩ 5% 0.062W
3601	4822 051 30472	4.7Ω 5% 0.062W
3604	4822 051 30101	100Ω 5% 0.062W
3605	4822 051 30101	100Ω 5% 0.062W
3606	4822 116 52291	56kΩ 5% 0.5W
3607	4822 051 30103	10kΩ 5% 0.062W
3608	4822 051 30273	27kΩ 5% 0.062W
3609	4822 051 30331	330Ω 5% 0.062W
3614	4822 051 30101	100Ω 5% 0.062W
3616	4822 116 52175	100Ω 5% 0.5W
3617	4822 116 52175	100Ω 5% 0.5W
3618	4822 116 52175	100Ω 5% 0.5W
3634	4822 051 30102	1kΩ 5% 0.062W
3635	4822 117 12925	47kΩ 1% 0.063W 0603
3637	4822 051 30479	47Ω 5% 0.062W
3639	4822 116 52186	22Ω 5% 0.5W
3681	5322 117 13057	820Ω 1% 0.063W 0603
3684	5322 117 13036	1.2kΩ 1% 0.063W 0603
3685	4822 051 30151	150Ω 5% 0.062W
3686	4822 051 30391	390Ω 5% 0.062W
3687	5322 117 13046	1.8kΩ 1% 0.063W 0603
3690	4822 051 30221	220Ω 5% 0.062W
3691	4822 117 11817	1.2kΩ 1% 0.0625W
3692	4822 051 30272	2.7kΩ 5% 0.062W
3693	4822 051 30221	220Ω 5% 0.062W
3694	4822 051 30472	4.7Ω 5% 0.062W
3701	4822 116 83868	150Ω 5% 0.5W
3702	4822 117 12891	220kΩ 1%
3703	4822 116 52257	22kΩ 5% 0.5W
3704	4822 117 12925	47kΩ 1% 0.063W 0603
3705	4822 116 83868	150Ω 5% 0.5W
3706	4822 117 12891	220kΩ 1%
3707	4822 116 52257	22kΩ 5% 0.5W
3708	4822 117 12925	47kΩ 1% 0.063W 0603
3709	4822 116 52201	75Ω 5% 0.5W
3711	4822 051 30333	33kΩ 5% 0.062W
3712	4822 051 30682	6.8Ω 5% 0.062W
3713	4822 116 52201	75Ω 5% 0.5W
3715	4822 116 52201	75Ω 5% 0.5W
3717	4822 116 52201	75Ω 5% 0.5W
3718	4822 116 52219	330Ω 5% 0.5W
3719	4822 051 30689	68Ω 5% 0.063W 0603
3720	4822 051 30102	1kΩ 5% 0.062W
3721	4822 116 52201	75Ω 5% 0.5W
3731	4822 116 83868	150Ω 5% 0.5W
3732	4822 117 12891	220kΩ 1%
3733	4822 116 52257	22kΩ 5% 0.5W
3734	4822 117 12925	47kΩ 1% 0.063W 0603
3735	4822 116 83868	150Ω 5% 0.5W
3736	4822 117 12891	220kΩ 1%
3737	4822 116 52257	22kΩ 5% 0.5W
3738	4822 117 12925	47kΩ 1% 0.063W 0603
3739	4822 050 23303	33kΩ 1% 0.6W
3740	4822 051 30682	6.8Ω 5% 0.062W
3741	4822 116 52201	75Ω 5% 0.5W
3743	4822 116 52199	68Ω 5% 0.5W
3745	4822 116 52201	75Ω 5% 0.5W
3751	4822 116 83868	150Ω 5% 0.5W
3752	4822 117 12891	220kΩ 1%
3753	4822 116 83868	150Ω 5% 0.5W
3754	4822 117 12891	220kΩ 1%
3758	4822 116 52195	47Ω 5% 0.5W
3767	4822 117 11817	1.2kΩ 1% 0.0625W
3769	4822 117 11817	1.2kΩ 1% 0.0625W
3975	4822 053 11101	100Ω 5% 2W
3985	4822 051 30563	56kΩ 5% 0.062W
3988	4822 051 30103	10kΩ 5% 0.062W
3989	4822 051 30109	10Ω 5% 0.062W
3991	4822 051 30563	56kΩ 5% 0.062W
3992	4822 051 30103	10kΩ 5% 0.062W
3993	4822 051 30109	10Ω 5% 0.062W
3994	4822 051 30683	68kΩ 5% 0.062W
3995	4822 051 30472	4.7Ω 5% 0.062W

3996	4822 051 30681	680Ω 5% 0.062W
3997	4822 117 13632	100kΩ 1% 0603 0.62W
3998	4822 051 30103	10kΩ 5% 0.062W
4000	4822 051 30008	Jumper 0603
4001	4822 051 30008	Jumper 0603
4002	4822 051 30008	Jumper 0603
4011	4822 051 30008	Jumper 0603
4013	4822 051 30008	Jumper 0603
4015	4822 051 30008	Jumper 0603
4209	4822 051 30008	Jumper 0603
4212	4822 051 30008	Jumper 0603
4214	4822 051 30008	Jumper 0603
4221	4822 051 30008	Jumper 0603
4222	4822 051 30008	Jumper 0603
4223	4822 051 20008	Jumper 0805
4226	4822 051 30008	Jumper 0603
4227	4822 051 30008	Jumper 0603
4240	4822 051 30008	Jumper 0603
4241	4822 051 30008	Jumper 0603
4437	4822 051 30008	Jumper 0603
4470	4822 051 30008	Jumper 0603
4471	4822 051 30008	Jumper 0603
4472	4822 051 30008	Jumper 0603
4473	4822 051 30008	Jumper 0603
4474	4822 051 30008	Jumper 0603
4492	4822 051 30008	Jumper 0603
4533	4822 051 20008	Jumper 0805
4534	4822 051 30008	Jumper 0603
4535	4822 051 30008	Jumper 0603
4537	4822 051 30008	Jumper 0603
4581	4822 051 20008	Jumper 0805
4602	4822 051 30008	Jumper 0603
4604	4822 051 30008	Jumper 0603
4610	4822 051 30008	Jumper 0603
4612	4822 051 20008	Jumper 0805
4620	4822 051 30008	Jumper 0603
4631	4822 051 30008	Jumper 0603
4635	4822 051 30008	Jumper 0603
4637	4822 051 30008	Jumper 0603
4642	4822 051 30008	Jumper 0603
4644	4822 051 20008	Jumper 0805
4645	4822 051 30008	Jumper 0603
4646	4822 051 30008	Jumper 0603
4648	4822 051 30008	Jumper 0603
4649	4822 051 30008	Jumper 0603
4691	4822 051 30008	Jumper 0603
4692	4822 051 30008	Jumper 0603
4694	4822 051 30008	Jumper 0603
4696	4822 051 30008	Jumper 0603
4730	4822 051 30008	Jumper 0603
4910	4822 051 30008	Jumper 0603
4914	4822 051 20008	Jumper 0805
4915	4822 051 20008	Jumper 0805
4916	4822 051 20008	Jumper 0805
4917	4822 051 20008	Jumper 0805
4921	4822 051 20008	Jumper 0805
4992	4822 051 20008	Jumper 0805

5001	2422 549 42896	Bead 120Ω 100MHz
5002	3198 018 34770	0.47µH 10% 0805
5201	4822 526 10704	Bead 100MHz
5202	2422 549 42896	Bead 120Ω 100MHz
5203	2422 549 42896	Bead 120Ω 100MHz
5205	2422 549 42896	Bead 120Ω 100MHz
5206	2422 549 42896	Bead 120Ω 100MHz
5207	2422 549 42896	Bead 120Ω 100MHz
5208	4822 526 10704	Bead 100MHz
5209	2422 549 42896	Bead 120Ω 100MHz
5210	2422 549 42896	Bead 120Ω 100MHz
5211	2422 549 42896	Bead 120Ω 100MHz
5212	2422 549 42896	Bead 120Ω 100MHz
5213	2422 549 42896	Bead 120Ω 100MHz
5214	2422 549 42896	Bead 120Ω 100MHz
5215	2422 549 42896	Bead 120Ω 100MHz
5216	4822 526 10704	Bead 100MHz
5217	4822 157 11835	4,7µH 5%
5295	4822 526 10704	Bead 100MHz
5401▲	2422 536 00425	Linearity coil 21"
5402	2422 531 02617	PSD12-205B B
5405	2422 536 00846	SC15334-00 B
5408	4822 157 11711	Choke coil
5410	4822 157 11737	22µH 10%
5500▲	4822 157 10476	DMF-2820H
5501▲	4822 157 11523	Line filter 5mH/2A
5511	4822 526 10704	Bead 100MHz
5512▲	2422 531 02634	SS42315-01 B
5531▲	2422 531 02631	SS22220-03 B
5551	4822 526 10704	Bead 100MHz
5552	4822 157 71401	27µH
5561	4822 526 10704	Bead 100MHz
5562	4822 526 10704	Bead 100MHz
5602	4822 157 11835	4,7µH 5%

6001	4822 130 34142	BZX79-B33
6003	4822 130 11397	BAS316
6004	4822 130 11525	1SS356
6006	4822 130 34382	BZX79-B8V2
6203	4822 130 11397	BAS316
6204	9322 128 70685	SMSS14
6205	9340 548 69115	PDZ27B
6207	4822 130 11397	BAS316
6209	4822 130 80622	BAT54
6403	4822 130 10871	SBYV27-200
6404	9322 169 61687	DMV1500M
6406	9334 939 60673	RGP10G
6407	9322 197 45703	BAV21WS
6408	9322 197 45703	BAV21WS
6410	5322 130 31559	BY448
6441	9322 150 20685	BZX384-C68
6442	9322 150 20685	BZX384-C68
6443	4822 130 11551	UDZS10B
6450	4822 130 11397	BAS316
6451	4822 130 11148	UDZ4.7B
6452	4822 130 10871	SBYV27-200
6453	9334 939 60673	RGP10G
6454	9334 939 60673	RGP10G
6455	9334 939 60673	RGP10G
6456	4822 130 11045	PBYR10100
6457	4822 130 11397	BAS316
6458	4822 130 11397	BAS316
6459	9334 939 60673	RGP10G
6482	4822 130 11416	PDZ6.8B
6483	9322 197 45703	BAV21WS
6484	9322 197 45703	BAV21WS
6486	4822 130 30842	BAV21
6488	4822 130 11397	BAS316
6489	9340 548 71115	PDZ33B
6490	4822 130 11397	BAS316
6511	4822 130 31607	RGP10D
6512	4822 130 80622	BAT54
6514	4822 130 11397	BAS316
6531	4822 130 11522	UDZ15B
6532	9322 197 45703	BAV21WS
6533	9322 171 80685	BZX384-B6V8
6534	9322 199 75685	BZX384-B3V9
6535	9965 000 01541	SB160
6536	9322 198 25673	SB180
6538	4822 130 11397	BAS316
6541	9340 548 61115	PDZ12B
6551	9322 198 41687	STTH8L06D
6562	9322 161 78682	SB360L-7024
6563	9322 161 78682	SB360L-7024
6564	4822 130 11397	BAS316
6565	4822 130 11551	UDZS10B
6566	4822 130 11397	BAS316
6571	5322 130 34331	BAV70
6572	9340 548 54115	PDZ6.2B
6573	4822 130 30862	BZX79-B9V1
6575	4822 130 31878	1N4003G
6602	5322 130 34337	BAV99
6691	9322 050 99682	LTL-10224WHCR
6694	9340 548 52115	PDZ5.1B
6733	3198 020 55680	BZX384-C5V6
6990	4822 130 11397	BAS316

7001	4822 130 63732	MMUN2212
7003	5322 130 42718	BFS20
7200	9352 747 92557	TDA12020H1/N1B10
7200	9352 747 93557	TDA12021H1/N1B10
7201	4822 130 62343	IMX1
7202	4822 130 11155	PDTC114ET
7203	4822 130 41246	BC327-25
7204	4822 130 41246	BC327-25
7207	5322 130 60159	BC846B
7208	5322 130 60159	BC846B
7209	9340 547 13215	BSH103
7210	9340 547 13215	BSH103
7404	9340 547 13215	BSH103
7405	9340 550 92127	BU4508DX
7406	9322 197 37676	KTC3228Y
7408	5322 130 60159	BC846B
7410	4822 130 60373	BC856B
7411	4822 130 60373	BC856B
7451	9322 195 14687	KTD600KY
7452	9322 197 37676	KTC3228Y
7453	9322 195 05687	KTB631KY
7454	5322 130 60159	BC846B
7455	4822 130 60373	BC856B
7456	4822 130 60373	BC856B
7482	3198 010 44010	PDTA114ET
7483	4822 130 60373	BC856B
7484	5322 130 60159	BC846B
7485	5322 130 60159	BC846B
7511	9352 720 43118	TEA1506T/N1
7512	9322 174 27687	FQPF7N80
7513▲	8238 274 02070	TCET1103G
7514	5322 130 60159	BC846B
7531	9352 739 52112	TEA1620P/N1
7532	4822 130 60373	BC856B
7541	4822 130 60373	BC856B
7561	9340 547 00215	PDTC143ZT
7571	4822 130 40959	BC547B
7573	4822 130 11155	PDTC114ET
7601	9322 147 25682	M24C16-WBN6
7603	4822 209 16978	LF33CV
7604	5322 130 60159	BC846B
7605	4822 130 41246	BC327-25
7606	5322 130 60159	BC846B
7701	5322 130 60159	BC846B
7702	5322 130 60159	BC846B
7703	5322 130 60159	BC846B
7705	9322 058 40685	SM IMT 1A
7706	5322 130 60159	BC846B
7707	5322 130 60159	BC846B
7708	5322 130 60159	BC846B
7709	5322 130 60159	BC846B
7990	4822 209 32641	TDA2616Q
7991	5322 130 60159	BC846B
7992	5322 130 60159	BC846B
7993	5322 130 60159	BC846B
7994	5322 130 60159	BC846B

CRT Panel [B]

Various

1254▲	2422 500 80086	Soc CRT 12P Female
1331	4822 265 41113	7P
1351	4822 265 30735	Connector 5p
1361	4822 267 10735	Connector 3p

2330	4822 121 40518	100nF 10% 250V
2331	5322 126 11583	10nF 10% 50V 0603
2332	2020 558 90621	10nF 630V
2333	5322 126 11578	1nF 10% 50V 0603
2335	4822 122 32542	47nF 10% 63V
2351▲	2022 031 00241	10µ 250V
2352▲	4822 126 14505	4.7nF 10% 2KV
2363	4822 124 40764	22µF 100V
2364	4822 121 41664	22nF 10% 400V
2365	2238 916 15641	22nF 10% 25V 0603
2367	5322 121 42578	100nF 5% 250V
2368	4822 121 41664	22nF 10% 400V
2381	4822 124 40207	100µF 20% 25V
2388	4822 126 14241	330pF 0603 50V
2390	2238 586 59812	100nF 20% 50V 0603
2392	2238 586 59812	100nF 20% 50V 0603

3331	4822 116 52175	100Ω 5% 0.5W
3332	3198 013 01020	1kΩ 20% 0.5W
3333	4822 116 52175	100Ω 5% 0.5W
3334	3198 013 01020	1kΩ 20% 0.5W
3335	4822 116 52175	100Ω 5% 0.5W
3336	3198 013 01020	1kΩ 20% 0.5W
3351▲	4822 052 10101	100Ω 5% 0.33W
3354	3198 013 01520	1.5kΩ 20% 0.5W
3356	4822 050 21009	10Ω 1% 0.6W
3357	2122 552 00004	1mA 18V 0603
3361	4822 117 11817	1.2kΩ 1% 0.0625W
3362	4822 050 24708	4.7Ω 1% 0.6W
3363	4822 117 12968	820Ω 5% 0.62W
3364	2122 101 02091	2.7Ω
3366	4822 116 52291	56kΩ 5% 0.5W
3367	4822 051 30563	56kΩ 5% 0.062W
3368	4822 117 12968	820Ω 5% 0.62W
3371	4822 116 52175	100Ω 5% 0.5W
3372	2322 750 62708	2.7Ω 1206
3373	4822 117 12473	4.7kΩ 5% 5W
3374	4822 051 30181	180Ω 5% 0.062W
3388	4822 051 30109	10Ω 5% 0.062W
3389	5322 117 11726	10Ω 5%
3394	4822 051 30221	220Ω 5% 0.062W
3397	4822 051 30472	4.7Ω 5% 0.062W
3398	4822 051 30221	220Ω 5% 0.062W
4328	4822 051 30008	Jumper 0603
4329	4822 051 30008	Jumper 0603

4330	4822 051 30008	Jumper 0603
4336	4822 051 20008	Jumper 0805
4337	4822 051 30008	Jumper 0603
4362	4822 051 30008	Jumper 0603

-mm-

5330	4822 526 10704	Bead 100MHz
5351	4822 157 50961	22µH
5352	2422 535 94257	0.22 µF

-▷|-

6331	4822 130 30842	BAV21
6332	4822 130 30842	BAV21
6333	4822 130 30842	BAV21
6361	5322 130 34337	BAV99
6362	5322 130 34337	BAV99
6363	5322 130 34337	BAV99
6383	4822 130 31607	RGP10D

▭

7330	9352 636 45112	TDA6108AJF/N1C
7361	4822 130 40959	BC547B
7362	4822 130 44568	BC557B
7363	9322 166 55682	2SA1358
7364	9322 166 56682	2SC3421

Side A/V Panel + Headphone [D]

Various

1232	4822 267 51391	Connector Phone
1250	2422 026 05538	Soc cinch 3P
1251	2422 026 05494	7P Female
1252	2422 025 11244	Connector 7p m
1254	4822 267 10734	Connector 5p
1278	4822 267 10565	Connector 4p
1280	4822 267 10735	Connector 3p
1281	2422 025 16382	Connector 3p m
8254	3139 110 38861	Cable 5p/680/5p

-||-

2171	4822 126 13512	330pF 10% 50V
2172	4822 126 13512	330pF 10% 50V
2173	4822 126 13512	330pF 10% 50V
2174	4822 126 13512	330pF 10% 50V
2175	4822 124 22652	2.2µF 20% 50V
2176	2238 586 59812	100nF 20% 50V 0603
2178	4822 126 13881	470pF 5% 50V
2180	4822 124 22652	2.2µF 20% 50V

-WW-

3150	4822 116 83884	47kΩ 5% 0.5W
3151	4822 116 52257	22kΩ 5% 0.5W
3152	4822 116 83884	47kΩ 5% 0.5W
3153	4822 116 52257	22kΩ 5% 0.5W
3154	4822 116 52201	75Ω 5% 0.5W
3156	4822 116 52231	820Ω 5% 0.5W
3157	4822 116 52231	820Ω 5% 0.5W
3158	4822 116 52201	75Ω 5% 0.5W
3159	4822 116 52175	100Ω 5% 0.5W
3160	4822 116 52175	100Ω 5% 0.5W

Top Control [E]

Various

1010	2422 025 16601	Connector 3p m
1010	4822 267 10748	Connector 3p
1011	4822 276 13775	Switch
1012	4822 276 13775	Switch
1013	4822 276 13775	Switch
1014	4822 276 13775	Switch
1015	4822 276 13775	Switch
8010▲	3104 311 05101	Cable 3P 680mm
8010	3139 131 01771	Cable 3p 1000mm

-WW-

3011	4822 051 30151	150Ω 5% 0.062W
3012	4822 051 30391	390Ω 5% 0.062W
3013	5322 117 13046	1.8kΩ 1% 0.063W 0603
3014	4822 051 30008	Jumper 0603
3015	5322 117 13057	820Ω 1% 0.063W 0603
3016	4822 051 30008	Jumper 0603
3017	5322 117 13046	1.8kΩ 1% 0.063W 0603
3018	5322 117 13057	820Ω 1% 0.063W 0603

LTI/CTI Interface [H]

Various

1206	2422 025 11244	Connector 7p m
1212	2422 025 16219	12P Male
8206	3139 110 39021	Cable 7P 180mm
8207	3104 311 07361	Cable 7P/560/7P
8207	3104 311 07801	Cable 7P 400mm
8280	3104 311 01241	Cable 5P 400mm
8280	4822 320 12669	Cable 5P 280mm
8361	3139 110 38531	Cable 3P 180mm
8682	3104 311 01111	Cable 3P 400mm

-||-

2605	2238 586 59812	100nF 20% 50V 0603
2610	2238 586 59812	100nF 20% 50V 0603
2611	4822 124 12379	220µF 25V
2612	2238 586 59812	100nF 20% 50V 0603
2628	5322 126 11582	6.8nF 10% 63V
2630	2020 552 96305	4.7µF 20-80% 10V
2631	3198 017 41050	1µF 10V 0603
2634	4822 126 14221	68pF 5% 50V 0603 NP0
2638	3198 017 41050	1µF 10V 0603
2639	4822 122 33761	22pF 5% 50V
2643	2238 586 59812	100nF 20% 50V 0603
2645	2238 586 59812	100nF 20% 50V 0603

-WW-

3612	4822 050 11002	1kΩ 1% 0.4W
3613	4822 117 13632	100kΩ 1% 0603 0.62W
3614	4822 117 13632	100kΩ 1% 0603 0.62W
3615	4822 117 13632	100kΩ 1% 0603 0.62W
3616	4822 116 52175	100Ω 5% 0.5W
3617	4822 051 30101	100Ω 5% 0.062W
3626	4822 051 30102	1kΩ 5% 0.062W
3627	4822 051 30222	2.2kΩ 5% 0.062W
3628	4822 051 30102	1kΩ 5% 0.062W
3630	4822 051 30103	10kΩ 5% 0.062W
3631	4822 051 30103	10kΩ 5% 0.062W
3632	4822 051 30271	270Ω 5% 0.062W
3633	4822 117 11817	1.2kΩ 1% 0.0625W
3634	4822 051 30102	1kΩ 5% 0.062W
3635	4822 051 30101	100Ω 5% 0.062W
3637	4822 051 30105	1MΩ 5% 0.062W
3638	4822 051 30474	470kΩ 5% 0.062W
3639	4822 051 30479	47Ω 5% 0.062W
3640	4822 051 30102	1kΩ 5% 0.062W
3641	4822 051 30008	Jumper 0603
3642	4822 051 30102	1kΩ 5% 0.062W
3643	4822 051 30683	68kΩ 5% 0.062W
4610	4822 051 30008	Jumper 0603
4633	4822 051 20008	Jumper 0805
4634	4822 051 20008	Jumper 0805
4640	4822 051 30008	Jumper 0603
4641	4822 051 30008	Jumper 0603
4642	4822 051 30008	Jumper 0603
4680	4822 051 30008	Jumper 0603
4690	4822 051 30008	Jumper 0603

-mm-

5614	4822 157 10477	47µH

-▷|-

6610	4822 130 11397	BAS316
6611	4822 130 11416	PDZ6.8B
6625	9322 102 64685	UDZ2.7B
6633	4822 130 11397	BAS316
6635	4822 130 11397	BAS316
6636	4822 130 11397	BAS316

▭

7610	4822 209 17311	TDA9178T/N1
7627	4822 209 73852	PMBT2369
7630	5322 130 60159	BC846B
7636	4822 130 63732	MMUN2212
7637	5322 130 60159	BC846B

Front Interface [J]

Various

1211	2422 025 16268	Connector 2p m
1231	2422 128 03111	Switch
1505	2422 025 16268	Connector 2p m
1693	2422 025 10738	Connector 6p m
8505▲	3104 311 03011	Cable 2p/340/2p Bk
8693	3139 110 38940	Cable 6P 340mm

-||-

2691	4822 124 12379	220µF 25V
2698	5322 121 42386	100nF 5% 63V

-WW-

3500	4822 053 21335	3.3MΩ 5% 0.5W
3501	4822 053 21335	3.3MΩ 5% 0.5W
3691	4822 116 52207	1.2kΩ 5% 0.5W
3693	4822 116 83872	220Ω 5% 0.5W
3694	4822 116 52283	4.7kΩ 5% 0.5W

-▷|-

6691	9322 050 99682	LTL-10224WHCR

11. Revision List

First release.